

## Product Installation Instruction

**Product:** F1855986CP-US、F1855986BW-US、F1855986BTC-US、F1855986AP-US、F1855986RBG-US

### --Contact Us:

We recommend installation by a licensed plumber prior to installation. Please read the instructions thoroughly, confirm that all parts are included and visually inspect the unit for any defects. If you have any questions please contact us [support@bravat.com](mailto:support@bravat.com) before proceeding with installation.

 
### --Important Points:

- (1) Prior to beginning installation, please turn off the cold and hot water lines, open the hot and cold knobs on the old faucet to release pressure. While installing your new faucet, turn the connector nuts finger-tight, then use one wrench to anchor the fitting and a second wrench to tighten the nut. Connections that are too tight will reduce the integrity of the system and potentially cause product failure which could lead to water damage. Wrap all threaded connections with pipe tape available at your local hardware or plumbing supply store. Always wrap in a clockwise direction.
- (2) Not all necessary supplies to install your faucet are included. However, they are available wherever plumbing supplies are sold.
- (3) Prior to installing the faucet please FLUSH THE HOT AND COLD WATER SUPPLY LINES that are or will be connected to the new faucet to remove scale, solder or their impurities which could damage the faucet and potentially void the warranty.

### --Safety Tips:

If you use soldering for the installation of the faucet, seats, cartridges and washers will have to be removed before using flame. Damage caused by improper soldering will void the warranty. Protect your eyes with safety glasses while cutting or soldering water supply lines.

- ① Shut off water supply. Remove the old faucet and flexible hoses. Clean sink surface with a non-abrasive cleaner in preparation for the new faucet.

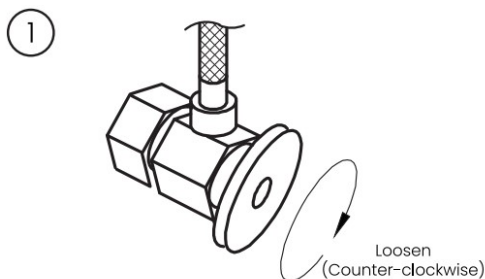


- ② Place new faucet in the position on the countertop. From under the sink, put rubber washer, metal ring, brass nut on to threaded pin. Tighten nut.

⚠ Ensure that parts are assembled in the order as depicted in the diagram to prevent damage to faucet and supply lines.



⚠ NOTE: If your sink has three holes or the countertop is uneven, install the included 6in. escutcheon cover over the faucet base before tightening the nut. This hides unused holes and conceals gaps.

 
②

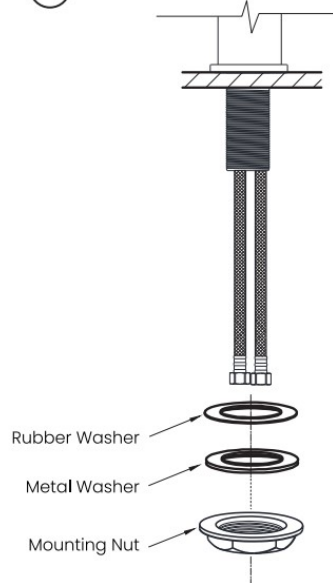

- ③ Attach the female connections of the flexible hoses to the cold and hot water supply.

⚠ Ensure that you use pipe tape and adjustable wrench, do not overtighten as this could cause product failure leading to water damage.

 ③

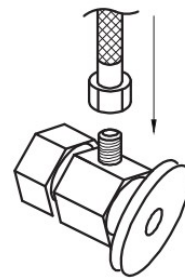

- ④ After installation is complete, turn on the water supply and allow both hot and cold water to run separately for at least two minutes each. While water is running, check for leaks. It is important to view the connections at the male and female flexible hose connections. If leaks are detected, refer back to the instructions and adjust accordingly. Tightening nuts slightly may stop any minor leaks.

④

