 
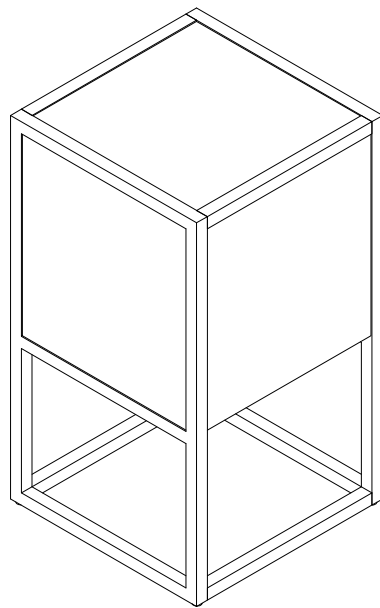 
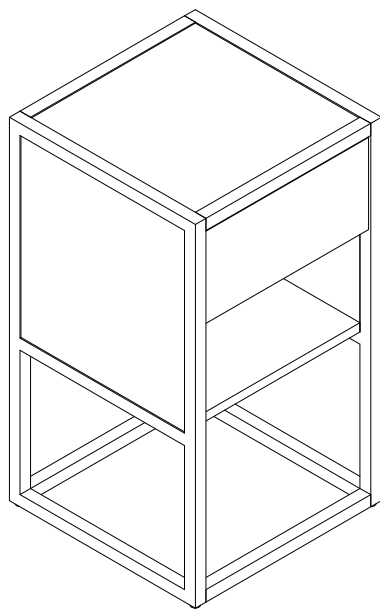 
 
 
 






Parts List


NO.	Drawing	Dimension	QTY
1		310*310*18mm	1
2		310*310*15mm	1
3		310*310*15mm	1
4		330*310*18mm	1
5		330*310*18mm	1
6		330*310*18mm	1
7		306*150*15mm	1

NO.	Drawing	Dimension	QTY
8		300*96*15mm	1
9		300*96*15mm	1
10		255*96*15mm	1
11		265*294*4mm	1
12		310*20*20mm	4
13		350*350*630mm	2

 
Hardware Fitting

NO.	Drawing	QTY
A		16
B		16
C	 3.5*14mm	8
D	 3.5*35mm	4

 NO.	Drawing	QTY
E		2
F	 6*25mm	4
G	 6*30mm	12
		1

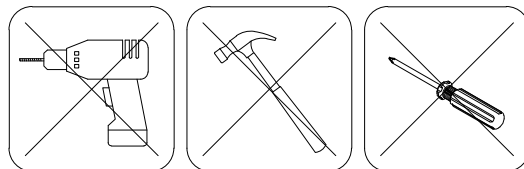 


Cam Coupling Using Methods

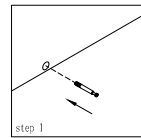 


Step1.

 Connect the cam coupling A as directed in the assembly instructions using hand.

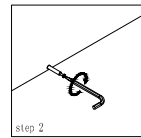


Step2.

 Screw the cam coupling A as directed in the assembly instructions.

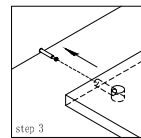


Step3.

 Push the cam coupling A into the entry hole.

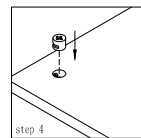


Step4.

 Insert the cam coupling B as shown in the instructions.

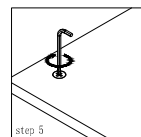


Step5.

 Turn the cam coupling B clockwise with a screwdriver

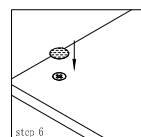

Step6.

 
Put on Beautycam.

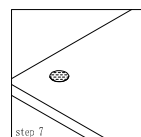



Step7.


Finished.

   
You should feel a click when the camlock is locked in place.
The joint is now secure.

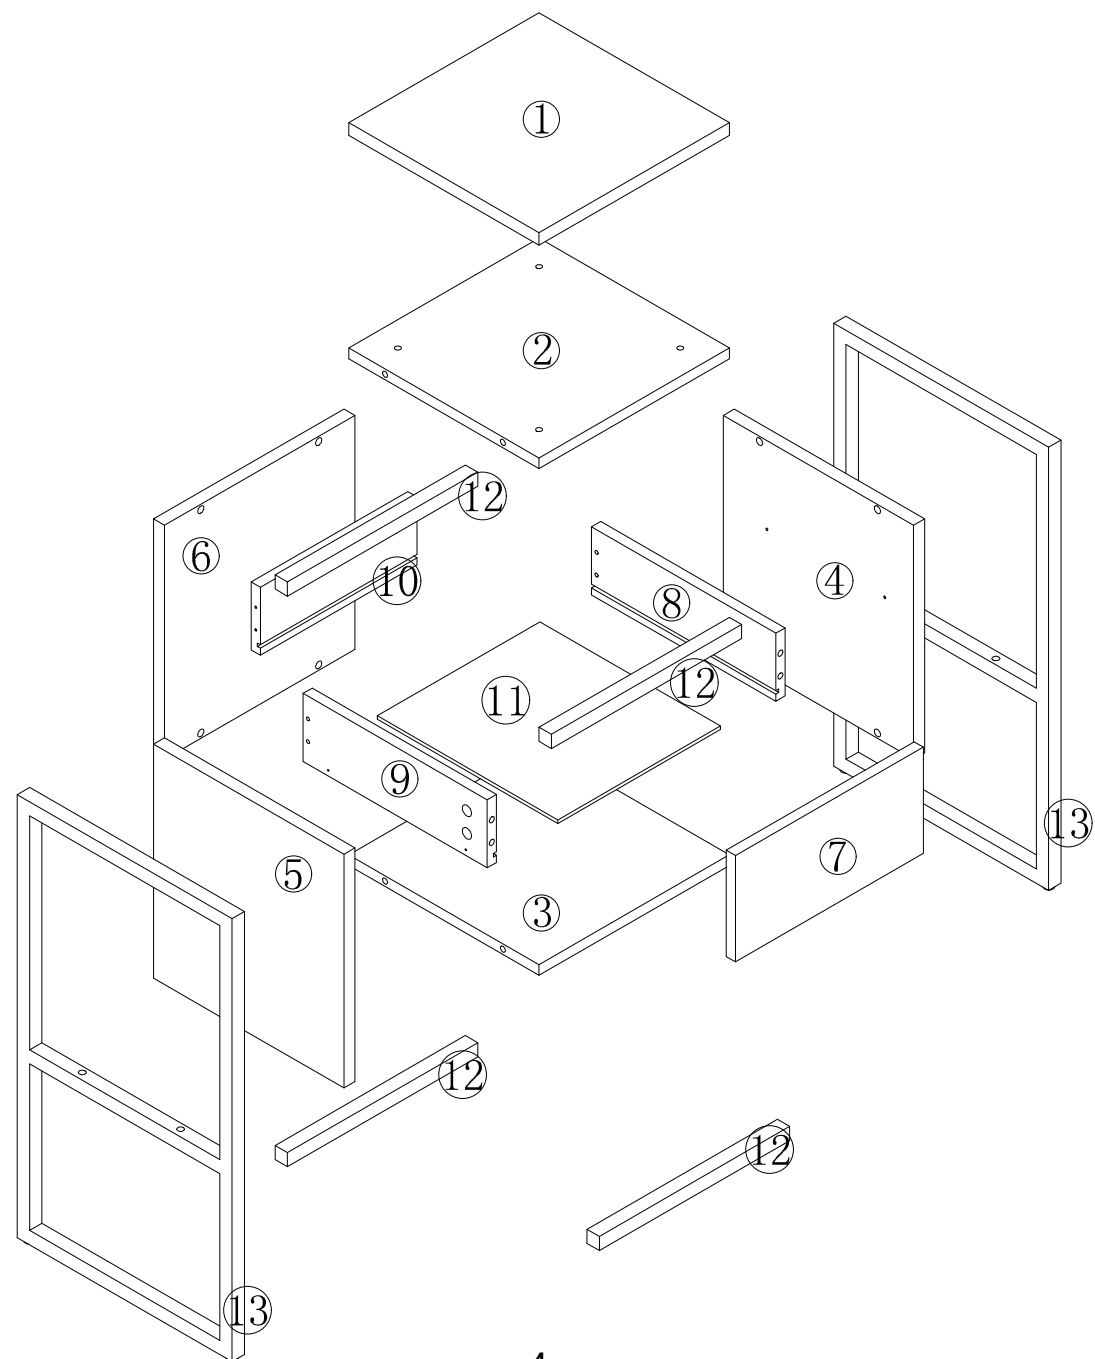





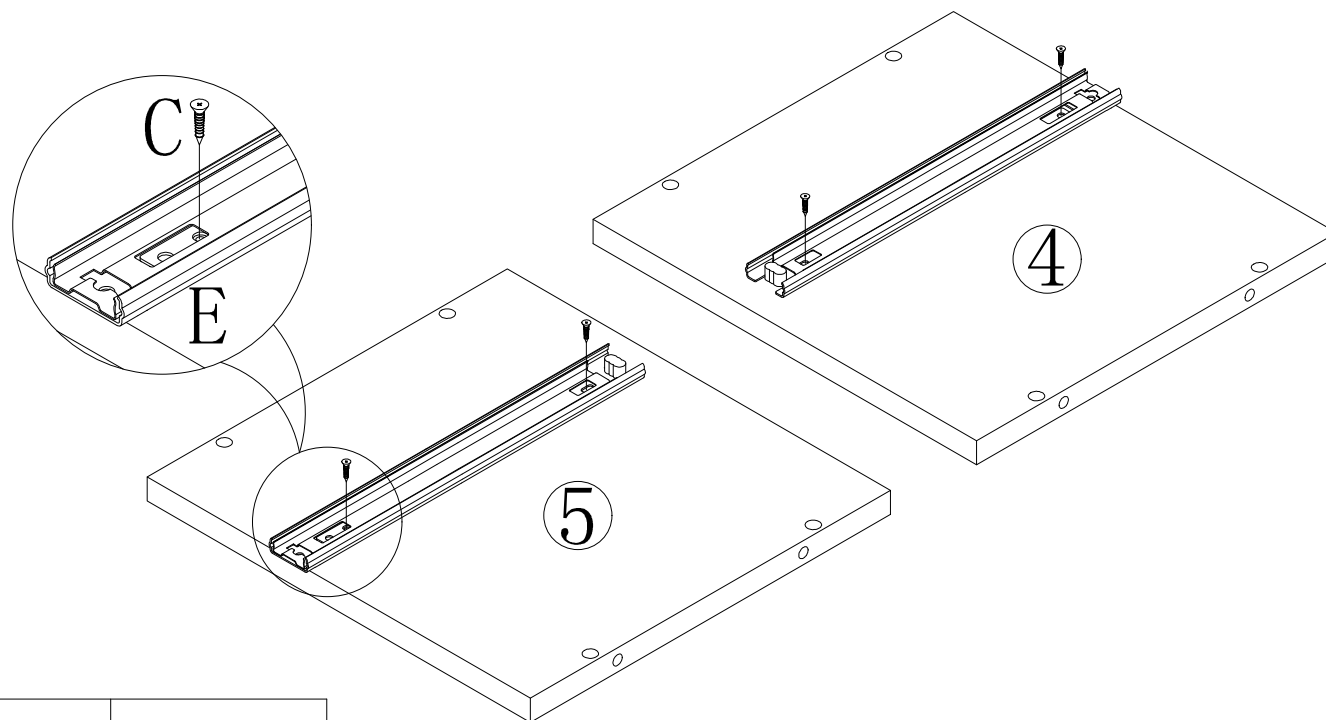


C	 3.5*14mm	4
E		2

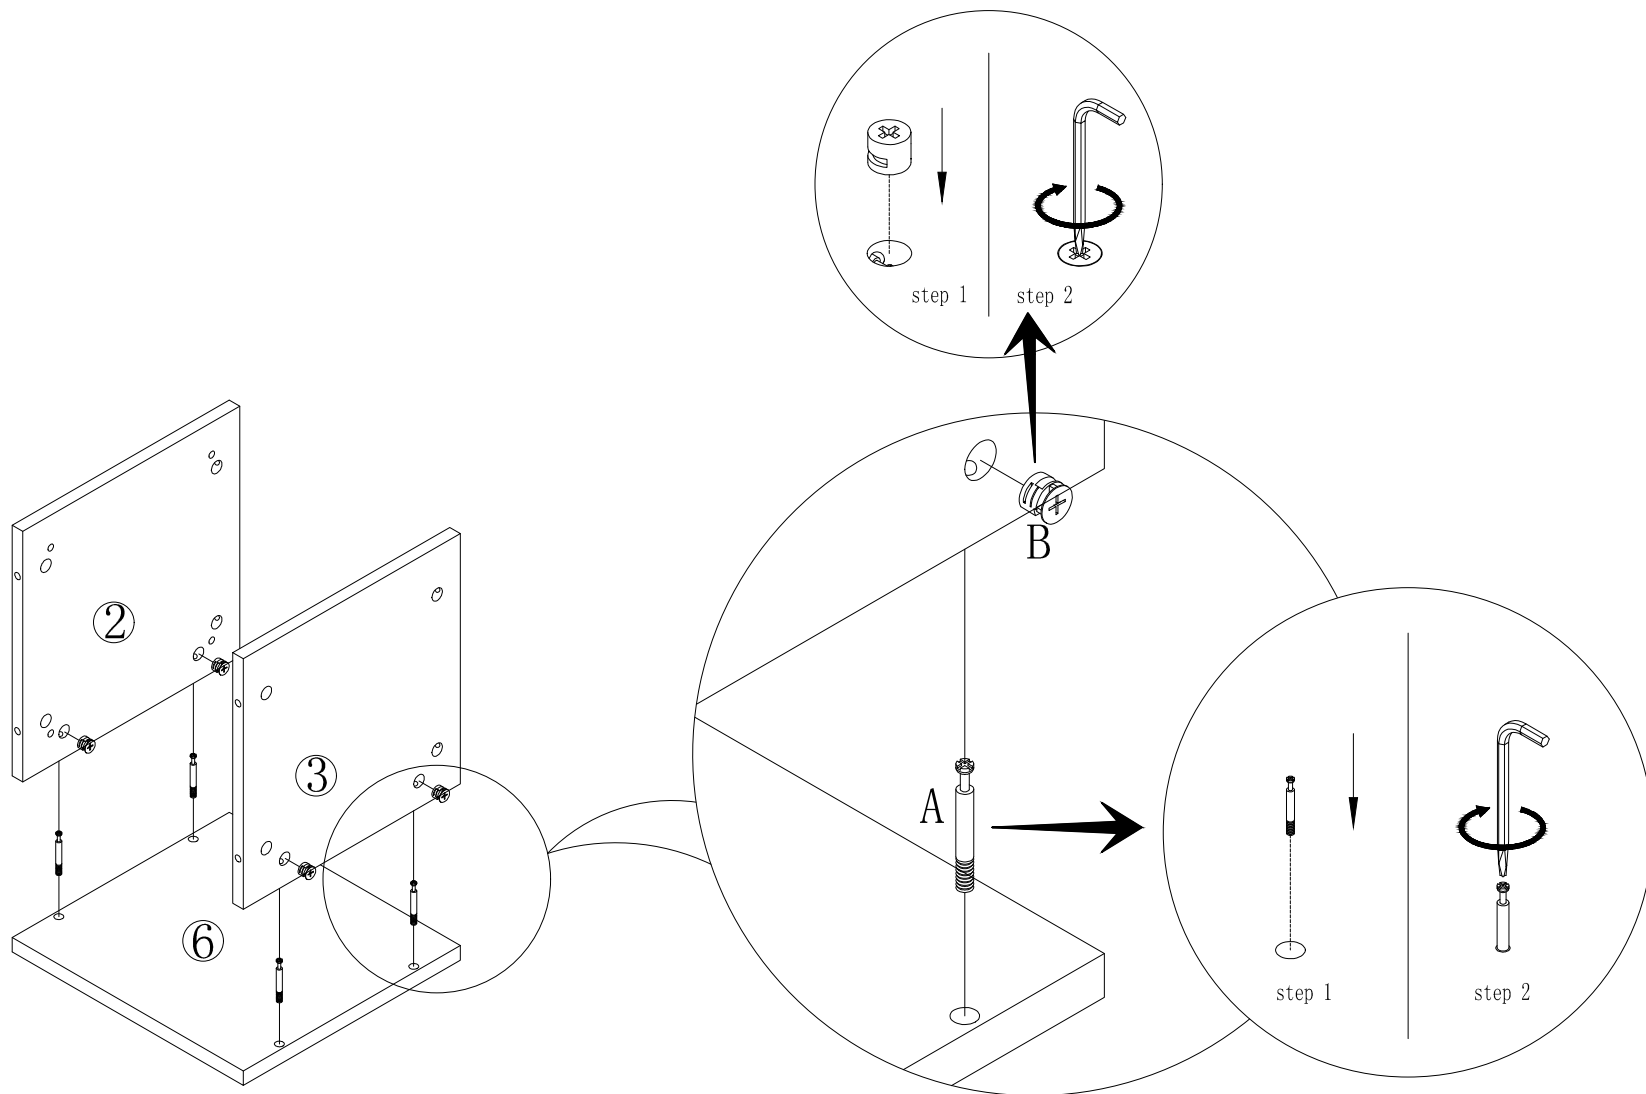 


 
A		4
B		4

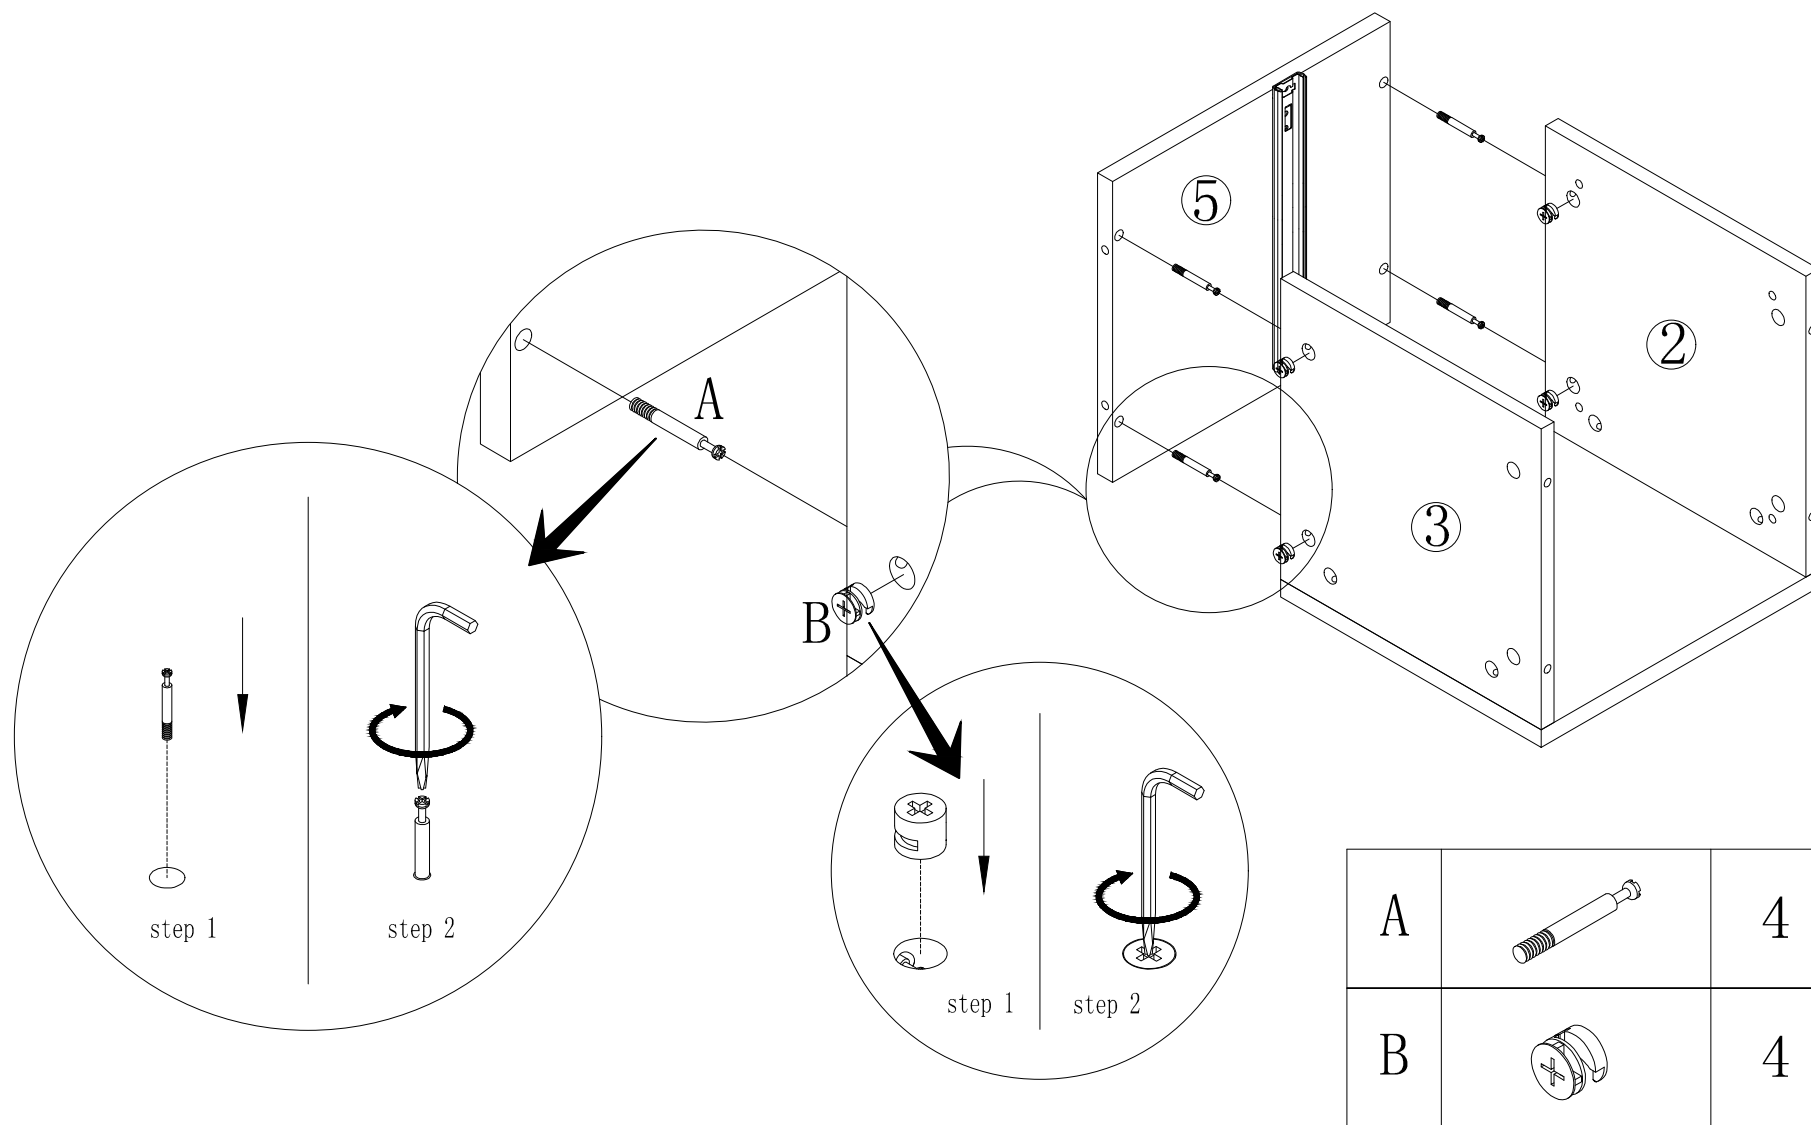 


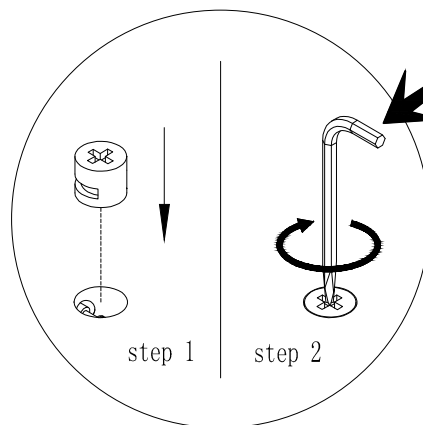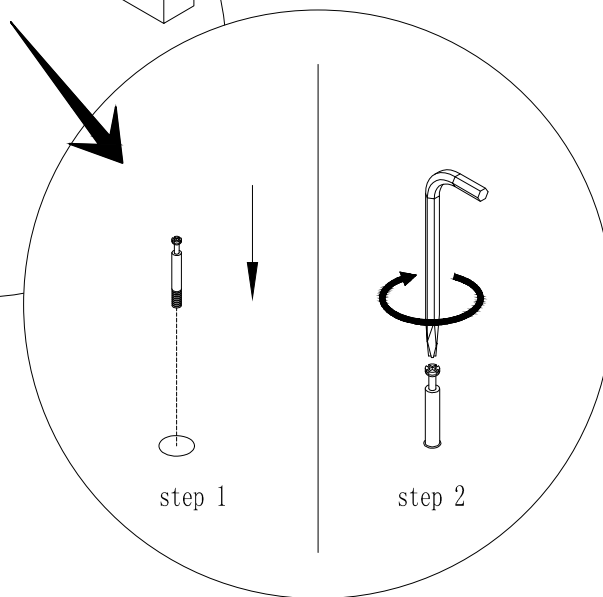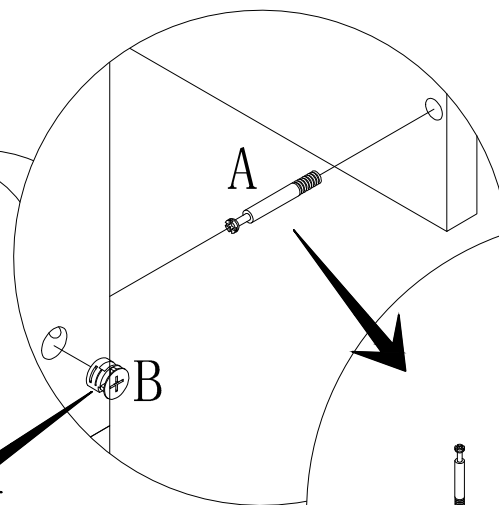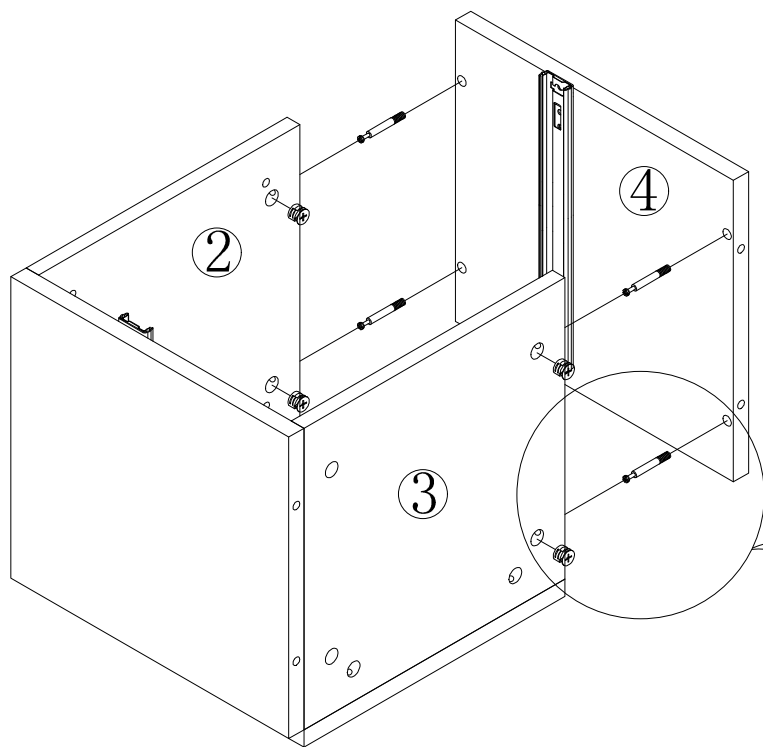    



A		4
B		4


F	 6*25mm	4
---	---	---



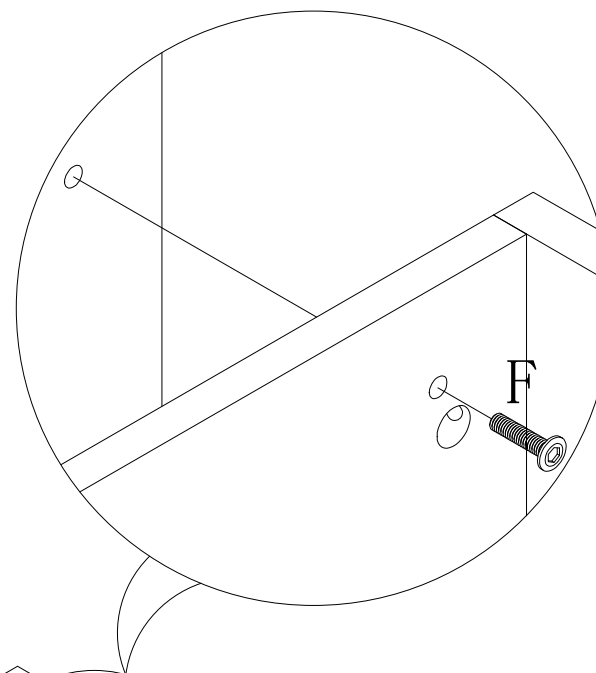 
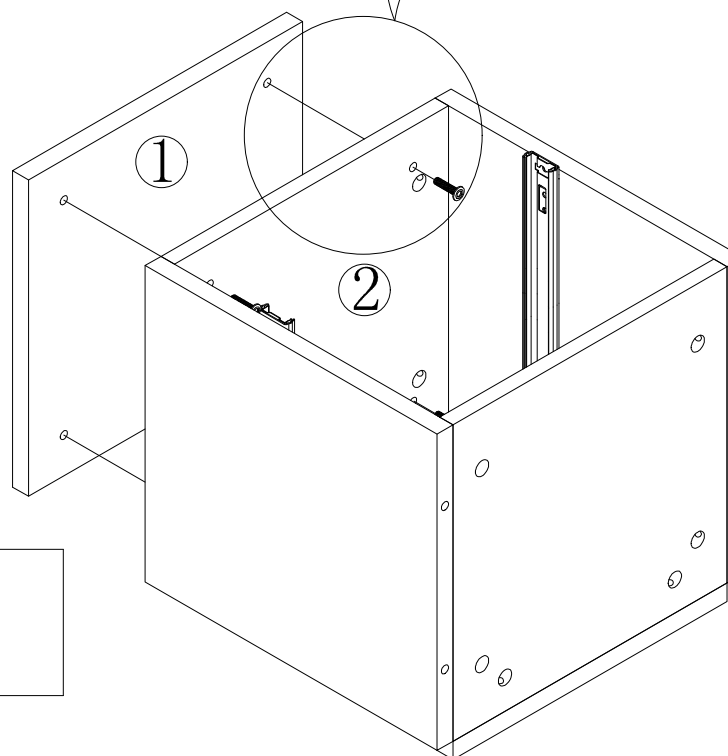 


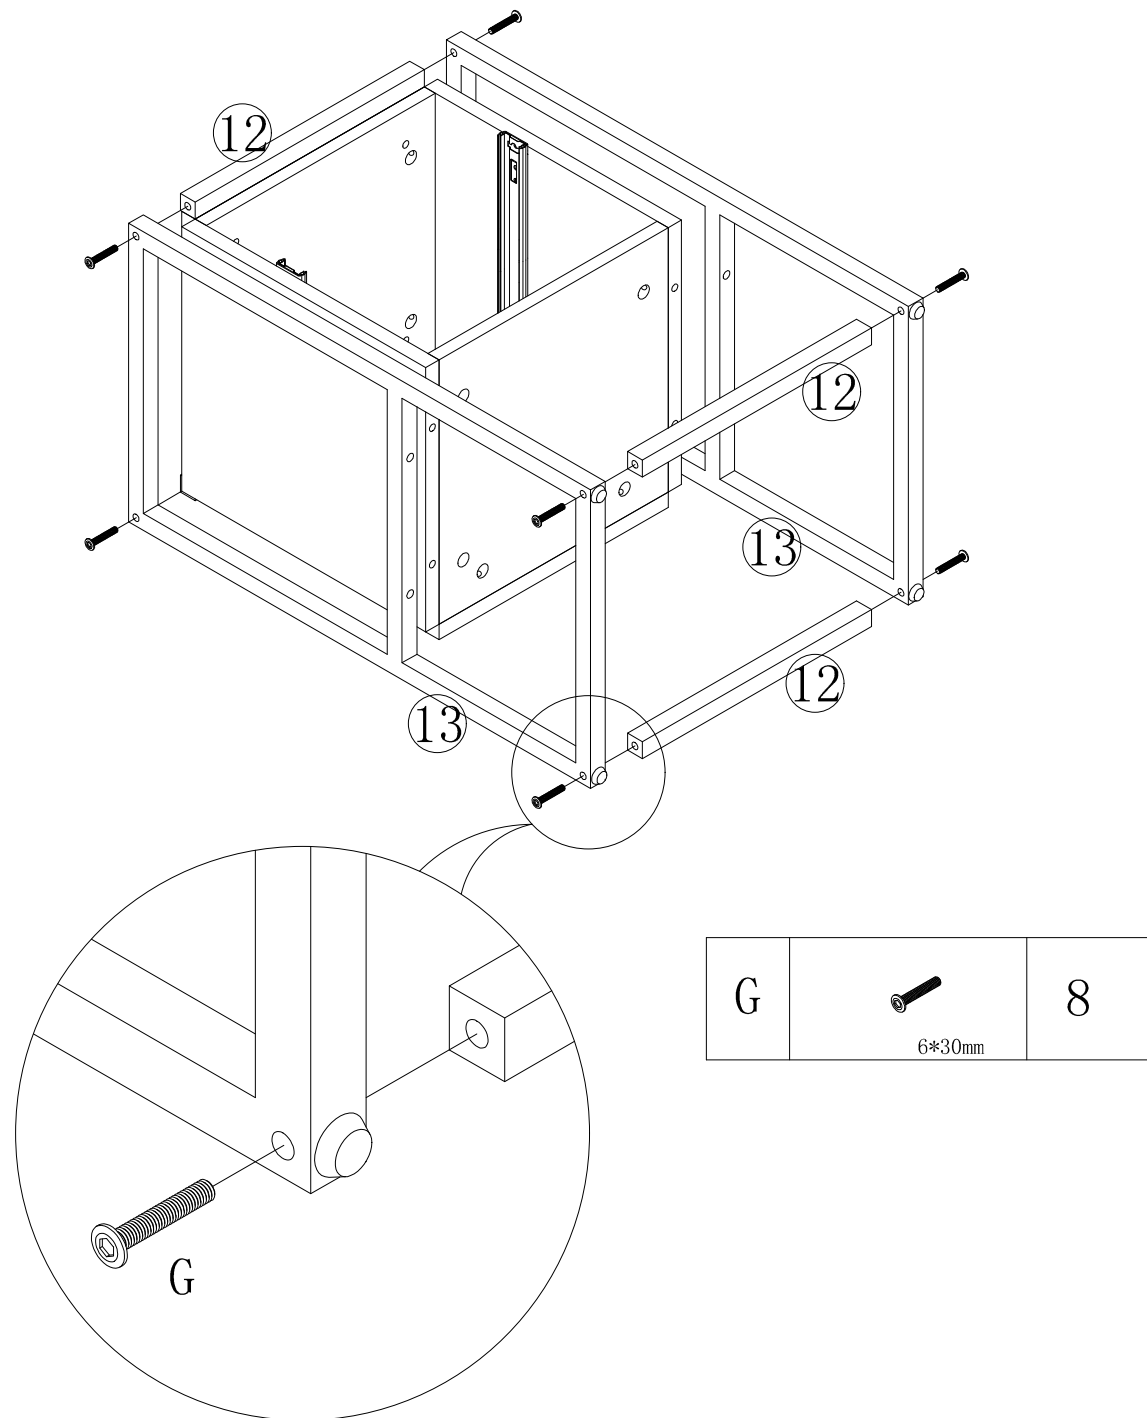 


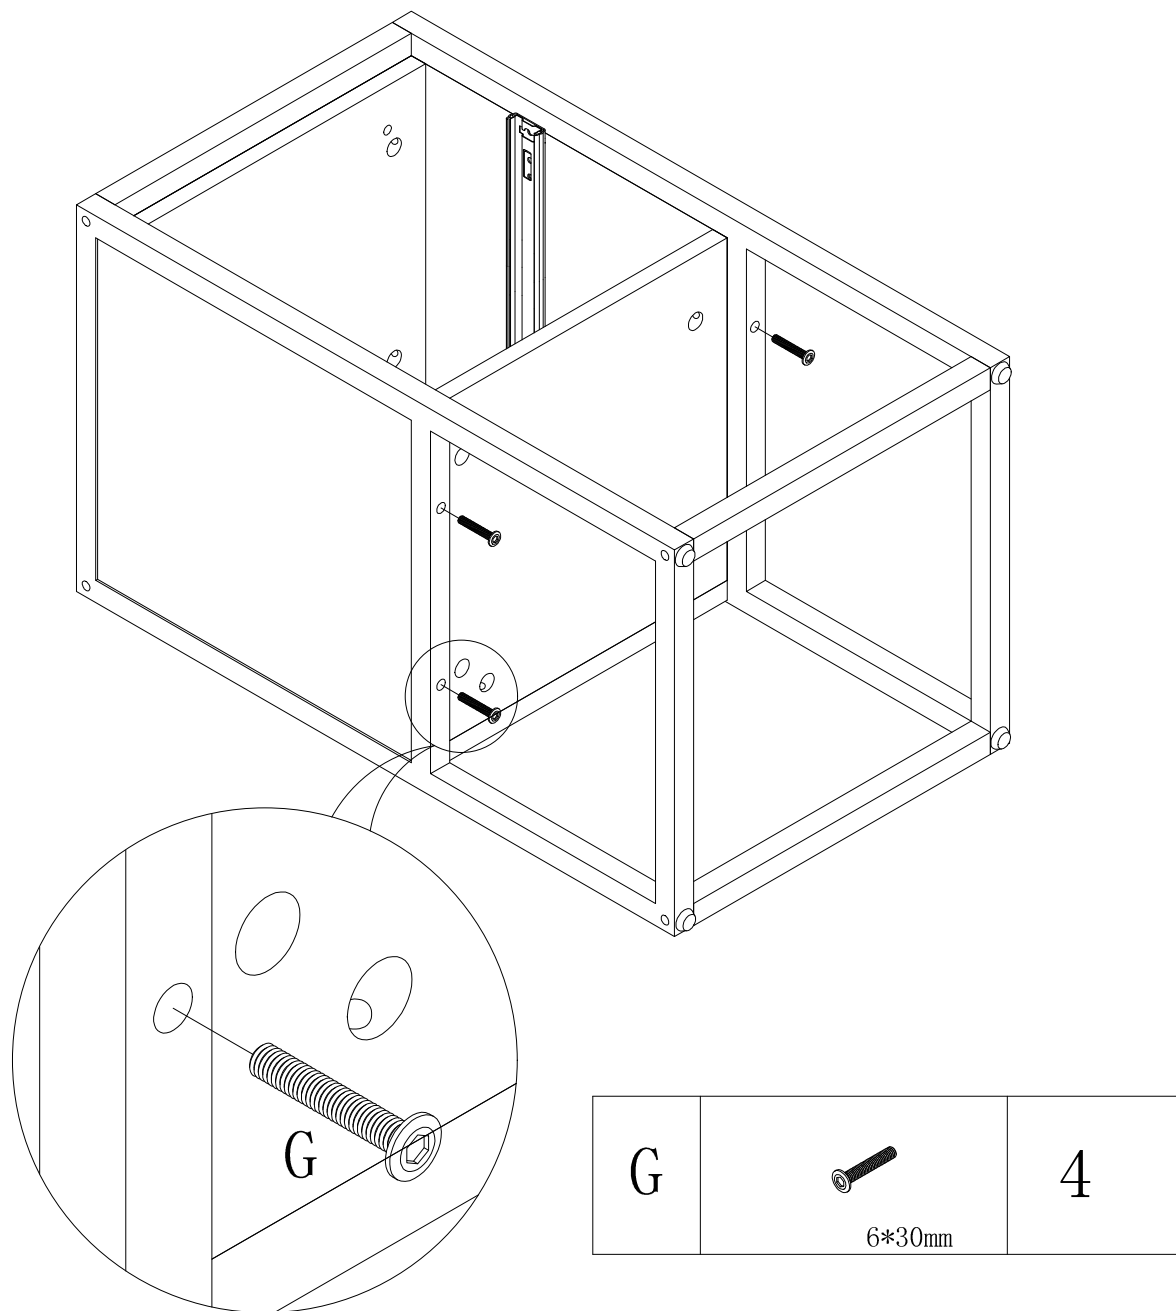 

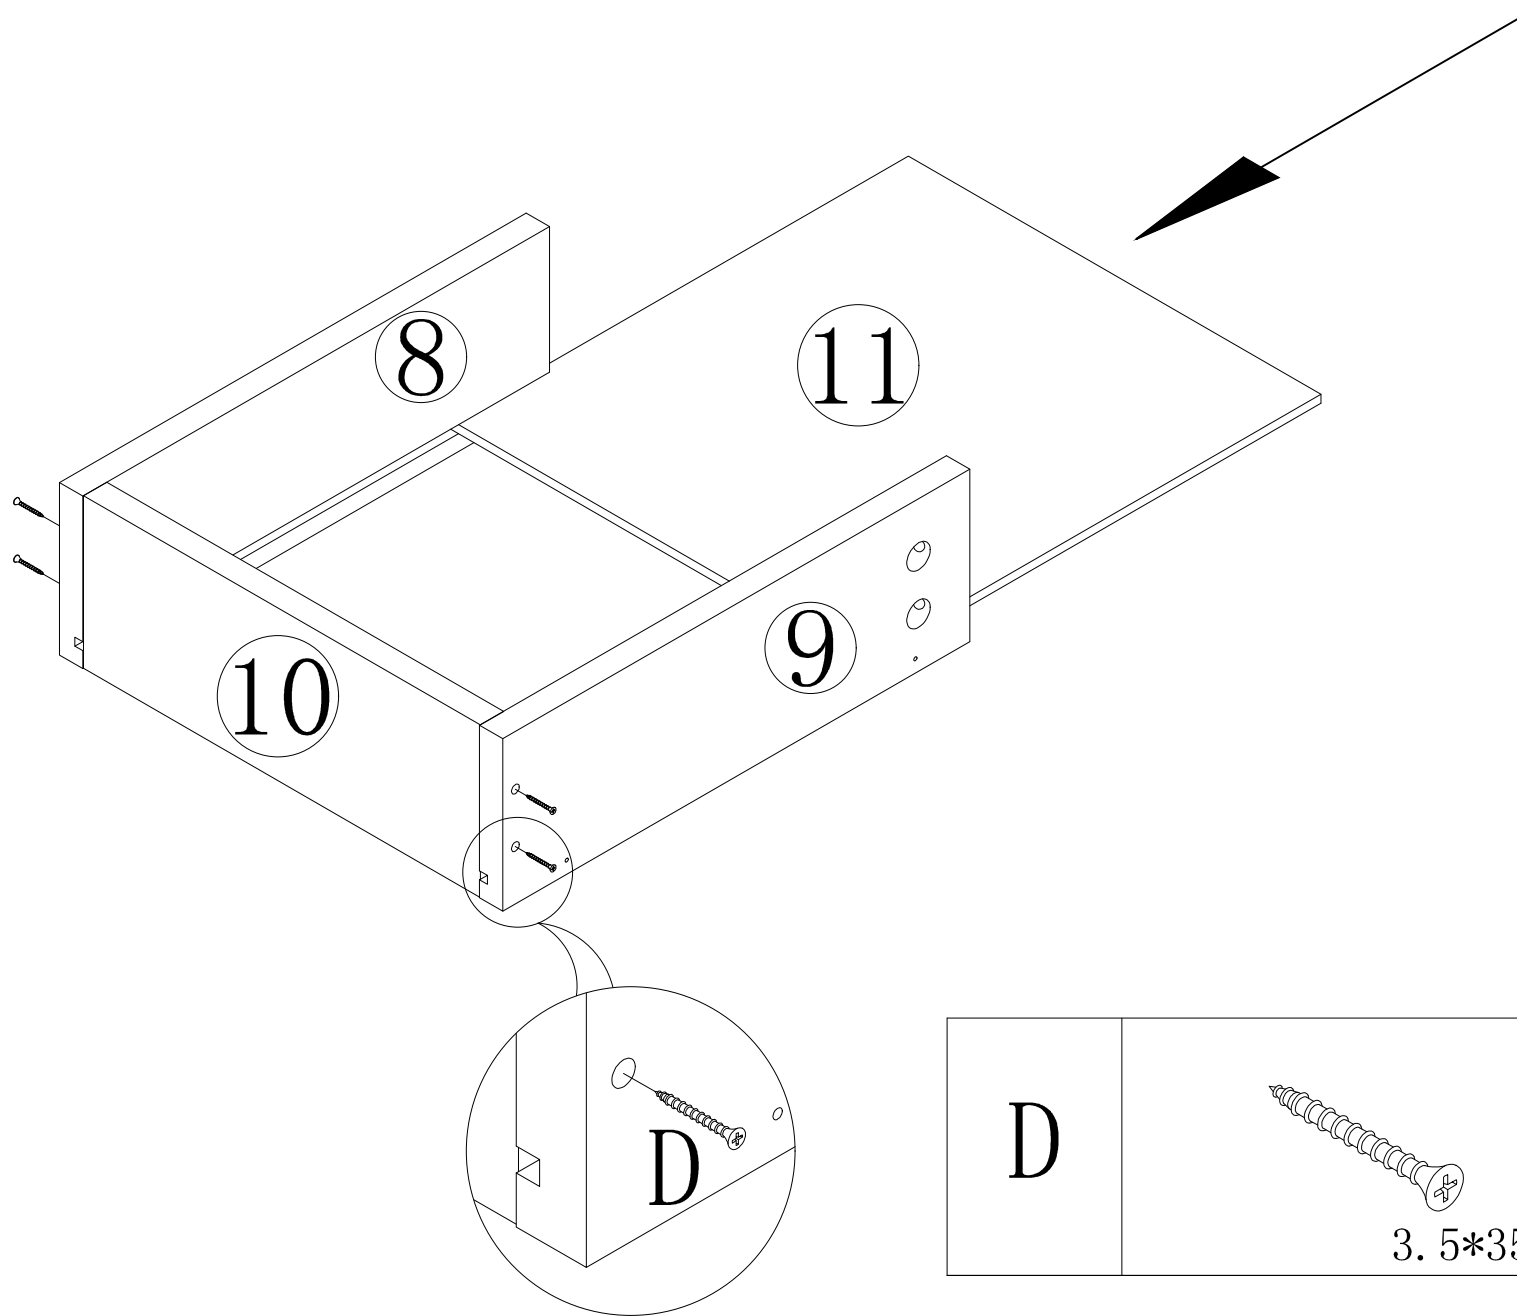 

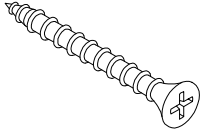 D	 3.5*35mm	4
---	---	---

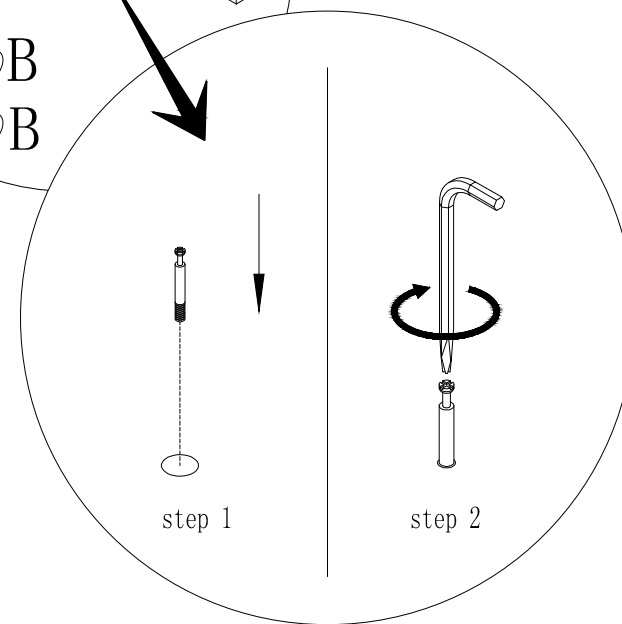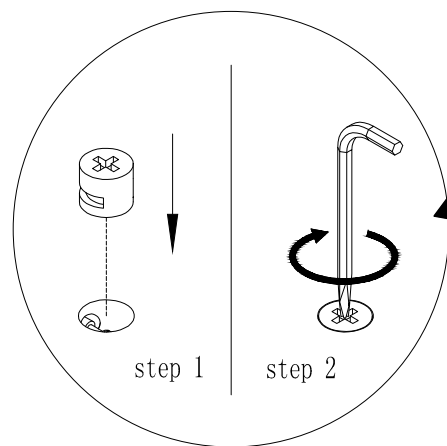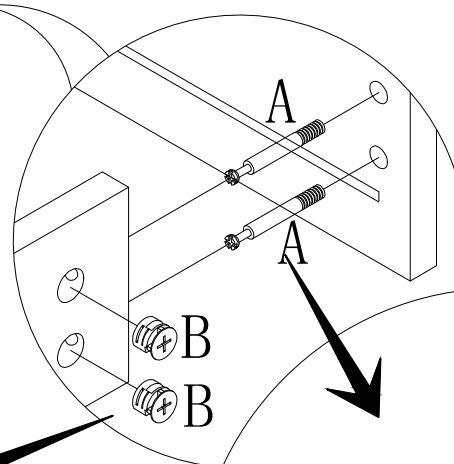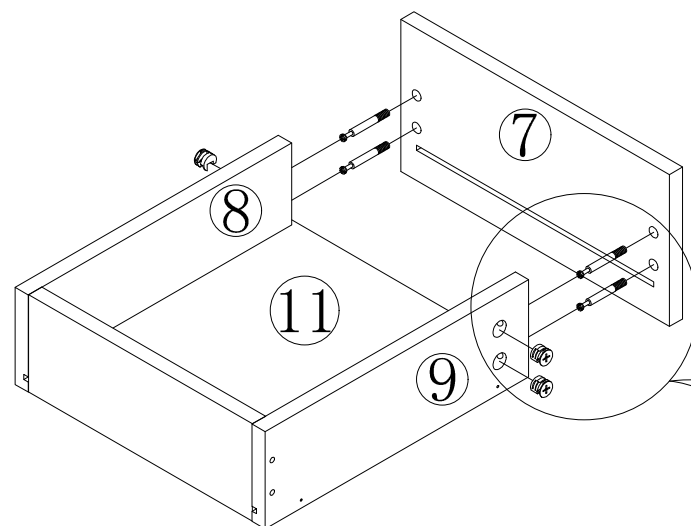    

 A		4
B		4

C	 3.5*14mm	4
E		2

