

PARENT'S BEST
HELPER

INSTRUCTION MANUAL



Baby Food Maker
MODEL:BL609

Customer service E-mail:

Tcustomerservice@hotmail.com

Contents

Important Safety Guide	3
Product Part name	4
Control Panel	5
How to use your Baby Food Maker	6
Auto Cooking	7
Steaming	8
Blend	9
Fruit Puree, Meat	10
Self-cleaning	10
Sterilize	11
Care and Maintenance	12
Descaling	12
Store	13
Technical Specification	13
Blending blade Disassembly and Assembling Instruction	13
Disassemble	13
Disassembly	13
Assembling	14
Recommended Cooking Time for Steam	14
Troubleshooting	15

Important Safety Guide

Please read this manual carefully before using this unit.

⚠ DANGER - Risk of Burns/Scalding:

- Never open lid during operation. Hot steam escapes instantly.
- Avoid contact with steam vents and hot surfaces. Use oven mitts when handling jar after cooking.

⚠ WARNING - Electric Shock Hazard:

- Do not immerse base unit, power cord, or plug in water.
- Unplug immediately if appliance falls into water.

⚠ CAUTION - Injury Prevention:

- Blades are extremely sharp. Handle cutting assembly only by its base.
- Keep hands/utensils away from blades during operation.

1.To avoid personal injury caused by improper use of appliances please strictly follow the operating instructions.

2.This appliance can only be used in a dry room.

3.Confirm whether the voltage range used is same with that marked on the nameplate, and ensure that the socket is well grounded.

4.Any accessories not recommended by the manufacturer should not be used to avoid damage to the unit.

5.This unit should not be used on or near high-temperature gas or electric stoves.

6.Do not hang the power cord on the edge of the table or on a hot surface. 7.When the power cord or socket is damaged, or any other electrical components are faulty, do not continue to use this unit, and send it to the manufacturer's dealer or your special service department for replacement or repair.

8.If the power cord is damaged, in order to avoid danger, it must be replaced by the manufacturer, its maintenance department or similar professionals

9.If the appliance cannot be used normally, please unplug the power plug and contact customer service immediately.

10.If the appliance is damaged (dropped, broken, etc.), please unplug the power plug and contact customer service immediately.


11.This appliance cannot be operated through an external timer switch or independent remote control system. 12.This unit should not be used by children.

13.The appliance is not intended to be used by people (including children)who have physical, sensory or mental deficiencies or lack experience and knowledge in use, unless someone responsible for their safety supervises or instructs them in relation to the use of the appliance

14.Children should be taken care of and ensure that they do not play with this appliance

15. Please use this appliance on a stable platform.
16. If you need to transport the assembled machine, you need to transport it through the base of the appliance, not through the handle of the blender jar.
17. When using the appliance, make sure that the power cord is not wet. The power cord should be put away to avoid being bundled or damaged.
18. This appliance cannot be used to chop hard or frozen food.
19. When cooking, only use water, do not use any other liquids.
20. Do not operate the appliance when there is no water in the blender jar.
21. The blender jar cannot be used in the microwave oven.
22. Food should not be heated for too long.
23. Please be careful when pouring cooked food out of the blender jar. 24. Pay attention to safety and be careful of burns-when cooking food, this appliance emits high-heat steam.
25. When you pour hot water into this appliance, because the steam is suddenly released, please be extra careful with the splashed hot water.
26. Do not open the lid before the end of cooking to avoid being splashed by hot water

Product Part name

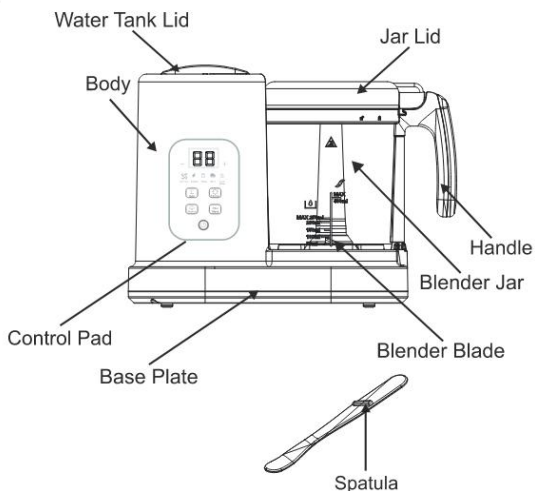

Control Panel



Button	Icon	Function
On/Off		Tap to turn on/off. Screen shows "00" in standby.
Function		Cycle through: Clean , Sanitize , Purée , Meat .
Auto Cook		Steam + blend in one cycle (25 min default).
Blend		Chop/mix food (1 min cycle).
Steam		Steam-only function (25 min default).

The functions on the top row introduction:

- 1)  **Self-Clean:** Use to clean the blander jar.
- 2)  **Sterilize:** Use to sterilize the blender jar.
- 3)  **Puree:** Use to make the fruit puree.
- 4)  **Meat:** Use to make Mashed meat.
- 5)  **Lack water:** If the water in the water tank has dried up, this indicator lights up and flashes and keeps beeping.

How to use your Baby Food Maker

First Use

⚠ Notice:

Check if there is any obvious damage to the packaging.

If the appliance is damaged due to packaging damage or transportation, please contact the after-sales service person.


1. Take out all parts from the packaging box.
2. Remove all packaging materials and protection film on the unit.
3. When using for the first time, add water to the tank to the maximum level (Max) and activate the steam function when there is no food. After the steam is finished, please rinse the blender jar and other accessories with hot water.

⚠ **Warning:** Do not let children play with packaging materials to avoid suffocation.

Note: Before use, it is necessary to clean the inside of the jar lid.

Disassemble the inner lid as following figure:


Insert the spatula into the hole of the jar lid and turn it to remove the inner lid as right figures.

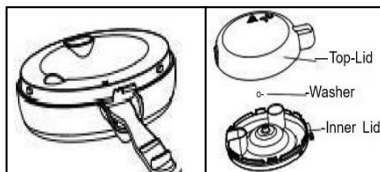

Installing the jar lid:

During installation, the triangular markings on the jar lid cover and inner lid should be aligned, as shown in the right figure.

⚠ **Warning:** Do not remove the inner lid by hand to avoid injuring your hands.

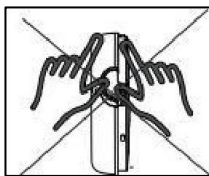

Notice for cooking before

- Please use this unit on a stable platform.
- Do not place this unit near heat sources such as induction cookers.
- When moving the unit, do not drag the handle of the blender jar to avoid dropping or causing damage.
- When starting cooking, be sure to add water to the water tank instead of the blender jar.
- Do not put the blender jar in the microwave.

Auto Cooking

Steps for Use

Step 1: Remove the lid of the water tank by turning it counter clockwise, add an appropriate amount of water to the water tank, the water volume should be between the minimum and maximum water levels, and never exceed the maximum water level. Please use pure drinking water that is free of food or other impurities. Then install the water tank lid by turning it clockwise (clockwise) (Fig. 1)

 **Warning:** To prevent steam leakage from the water tank from scalding hands, the lid must be securely in place.

Step 2: Remove the lid of the blender jar by turning it clockwise, put the food in the blender jar, and then put the lid on and close it by turning it counter clockwise (Fig 2).

Notice: Cut the food into cubes approximately 1cm x 1cm (0.4 inches x 0.4 inches) in size. Meat needs to be boneless and does not contain tendons. Do not cook frozen food.

Step 3: Put the blender jar back into the body food maker, turn it clockwise to trigger the safety switch, and you will hear a clicking sound. (Fig 3)

Step 4: Plug in the power and touch On/Off button  to turn on the unit. Unit enter standby mode.

Step 5: Touch the auto cooking button , The  and digital "25" will flash. The default cooking time is 25 minutes.

Step 6: Set the cooking time. The default cooking time is 25 minutes. Touch the "+" and "-" button to change the cooking time while it is flashing.

When the countdown is 2 minutes, end heating, blend for 19 seconds, stop for 1 second, and after 6 cycles, the time display screen shows 00, there will be 5 beeps, then the unit enter to the standby mode automatically. During the cooking process, the  light will keep on.

Note: The adjustable range of time is 5-30 minutes.



Fig. 1



Fig.2

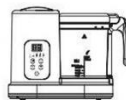


Fig.3

Step 7: Unplug the power plug, rotate the blender jar clockwise to remove it, and then remove lid of blender jar and pour the food into another container.

⚠ Notice:

- 1) This function is an automatic feature. After selecting this function, the unit will automatically steam and mash food.
- 2) The cooking time for this feature can be set between 5-30 minutes. It is not recommended to use this automatic function to cook meat. Using meat functions will be more efficient. No matter how long the cooking time is set, the blending time at the end of cooking is only 2 minutes. For example, if you set the cooking time to 8 minutes, it means that total cooking is 6 minutes of steaming + 2 minutes of blending.

Steaming

Steps for Use

Note: Before steaming food, cut the food into cubes with a size of approximately 1cmX1cm (0.4 inches * 0.4 inches). Meat needs to have no bones or tendons. Do not cook frozen food.

Step 1 ~ Step4: Follow **Steps 1 ~ 4** of “Auto cooking”.

Step 5: Touch the  button, the button light will be on. The unit will start to work after the cooking time on the display flashes 3 times. The default cooking time is 25 minutes. Touch the "+" and "-" button to change the cooking time while it is flashing. When cooking is end, there will be 5 beeps.

During the cooking process, the  light will keep on.

Note: For the cooking time of food, please refer to the appendix “**Recommended Cooking Time for Steam**”.

If the food is not cooked enough, you can increase the cooking time.

⚠ Notice:

- 1) Do not remove the lid before cooking to avoid being scalded by hot water
- 2) Do not interrupt cooking or turn off the unit before cooking is complete to prevent unused water from remaining in the blender jar.

Note:

The cooking ability is as follows:

- Meat should not exceed 100 grams,
- Fruits and vegetables should not exceed 250 grams.

The longer the cooking time, the easier it is to make a paste.

Step 6: Unplug the power plug, rotate the blender jar clockwise to remove it, and then remove lid of blender jar and pour the food into another container.

You can also use the blending function to puree the food before unplugging.

Warning: Hot steam will be emitted from the blender jar, and there is hot water in the blender jar. Please wear gloves during operation to avoid contact with steam or hot water.

Blend

Steps for Use

Step 1 ~ Step 3: Follow **Steps 2 ~ 4** of “Auto cooking”

Step 4: Touch the  button and unit start work. The blending time is 1 minute. After blending complete, it will automatically return to standby mode. If the mud is not enough, you can touch the blend button to blend again.

During the cooking process, the  light will keep on.

Step 5: Unplug the power plug, rotate the blender jar clockwise to remove it, and then remove lid of blender jar and pour the food into another container.

⚠ Notice:

- 1) It is forbidden to start the blend function with only hot water but no steamed food.
- 2) Before giving the cooked food to your baby, remember to check the temperature of the food.

Step 6: Clean the blender jar, blender jar lid.

Note: When cleaning the knife assembly, please disassemble the knife assembly and clean it thoroughly according to the operation described in the "knife disassembly and assembly instructions".

Fruit Puree, Meat

Steps for Use

Step 1 ~ Step4: Follow **Steps 1 ~ 4** of “Auto cooking”

Step 5: Touch the function button  to select  or  . The selected function icon will light up. The default cooking time of **Puree** is 20 minutes. Touch the "+" and "-" button to change the cooking time while it is flashing. Adjustable time range of 5-30 minutes.

The time for **Meat** is 30minutes. The cooking time is not adjustable.

During the steaming process, the unit will blend the meat in the blender jar multiple times. At the end of cooking, the meat has been steamed, cut and mashed into minced meat. When cooking is end, there will be 5 beeps and unit enter standby mode.

Notice:

Do not remove the lid before the fruit puree and meat functions are finished, so as not to be splashed by hot water.

Step 6: Unplug the power plug, rotate the blender jar clockwise to remove it, and then remove lid of blender jar and pour the food into another container.

Self-cleaning

Steps for Use

Ste 1: Remove the lid of the water tank by turning it counter clockwise, add an appropriate amount of water to the water tank, the water volume should be between the minimum and maximum water levels, and never exceed the maximum water level. Please use pure drinking water that is free of food or other impurities. Then install the water tank lid by turning it clockwise (clockwise) (Fig. 4)

 **Notice:** Please make sure that the steam outlet is not blocked.

Step 2: Remove the lid of the blender jar by turning it clockwise. Pour 400ml of pure water into the blender jar (Fig.5), and then put the lid on and close it by turning it counter clockwise. Put it back into the body, and turn it clockwise to trigger the safety switch (Fig.6).



Fig.4



Fig.5

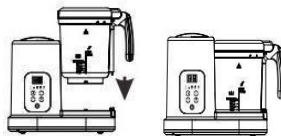


Fig.6

Step 3: Plug in the power and touch On/Off button  to turn on the unit. Unit enter standby mode.

Step 4: Touch the function button  to select  Self-Clean. The selected function icon will light up. The default leaning time is 10 minutes, and it is not adjustable.

The unit will automatically stir first, then steam, and stir again until the displayed time is 00, there will be 5 beeps and unit enter standby mode.

Step 5. Unplug the plug, remove the lid of the blender jar, remove blender jar from the body, pour out water, and wipe the jar with a clean cloth.

Note: The self-cleaning function can only clean the blender jar after blending fruits and vegetables. This function cannot be used to clean the blender jar used for blending meat, as meat is relatively greasy and has strong adsorption properties. Suggest manual cleaning for better cleaning results.

Sterilize

Steps for Use

Step 1: Follow Steps 1 of “Self-cleaning”

Step 2: Put the blender lid on and close it by turning it counter clockwise. Put it into the body, and turn it clockwise to trigger the safety switch.

Step 3: Plug in the power and touch On/Off button  to turn on the unit. Unit enter standby mode.

Step 4: Touch the function button  to select. The selected  Sterilize function icon will light up. The default sterilization time is 10 minutes. Touch the “+” and “-” button to change the cooking time while it is flashing. Adjustable time range of 5-30 minutes.

When sterilizing is end, there will be 5 beeps and unit enter standby mode.

Care and Maintenance

It is recommended to clean the unit after each use.

Notice:

- 1) After use, please unplug the electrical plug and allow the appliance to cool completely before starting to clean.
- 2) Do not immerse the device body in water or disassemble it to avoid electric shock.
- 3) It is recommended that you use hand to clean the removable parts: blender jar, blender jar lid, and knife assembly.

1. Remove the blender jar from the main body.
2. Remove the blender jar lid and take out the blending blade assembly.
3. Pour out the food from the mixing tank.
4. Disassemble the blending blade assembly according to the "The Blending Blade Assembly Disassembly and Assembly Instructions".
5. Rinse all parts with tap water, such as mixing tanks, blender jar lids, and knife assembly.

 **Warning:** Sharp blades can scratch hands. Be very careful when handling and cleaning the blending blade assembly.

6. Please wipe the water tank clean with a dry soft cloth. Do not use rough or abrasive cloths or detergents.

 **Warning:** Do not immerse the body in water or dishwasher for cleaning.

7. Wipe clean the outer surface of the fuselage with a soft damp cloth.

8. Dry the blender jar, blender jar lid and knife assembly, and then reassemble it according to related operations for the next use.

Descaling

The scale should be cleared for this unit every 1 week to maintain its 100% working efficiency. Please use distilled water or purified water when using the unit, which can help reduce the accumulation of scale. To remove particles and scale from the water tank, please follow the descaling instructions below:

Step 1. Add 150 ml of water and 50 ml of white vinegar (lower concentration acetic acid) to the water tank.

Step 2. Activate the **steam** function, steam for 5 minutes, and then disconnect the power supply of the unit.

Step 3. Pour out the aqueous solution from the water tank.

Step 4. Rinse the water tank and blender jar thoroughly with clean water several times.

Note:

1) Before processing food, please pour 100-200ml of water into the water tank. Use **steam** function to empty the tank for 10 minutes to remove any residual odor.

2) Try to keep the water tank dry to prevent bacterial growth.

Store

1.Cool down the appliance completely and store it.

2.Store the appliance in a dry place.

Technical Specification

Input voltage		220-240V~50Hz
Heating power		300W
Blending power		110W
Continuous running time of blender		1 min

Blending blade Disassembly and Assembling Instruction

Disassemble

⚠ **Danger:** Sharp blades can scratch hands. Be very careful when handling and cleaning the blending blade assembly.

Disassembly

Step1: Take the blender lade assembly out of the blender jar.(Fig.7)

Step2: Put the blender jar upside down, insert your left hand into the jar, hold the drive shaft, and hold the plastic nut on the bottom of the outside the jar with your right hand. Rotate counterclockwise to remove the plastic nut. (Fig.8)

Step3: Take the drive shaft out of the jar and remove the sealing ring(Fig.9).

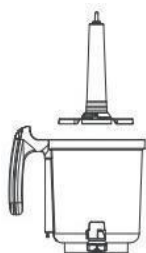


Fig.7



Fig.8



Fig.9

Assembling

Step1: Insert the drive shaft to the hole in blender jar bottom from inside (See Fig.10).

Step2: Install the plastic nut to the driving shaft (See Fig.11).

Step3: install the blending blade assembly to the driving shaft. (See Fig.12)



Fig.10



Fig.11

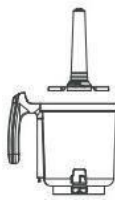


Fig.12

Recommended Cooking Time for Steam

Types of food	Ingredients	Steaming time (Min.)	Ingredients	Steaming time (Mins)
Fruits	Apple	15	Ayocado	15
	Pear	15	Orange	15
	Banana	10	Papaya	15
	Peach	10	Pineapple	15
Vegetables	Cauliflower	15	Potatoes	20
	Broccoli	15	Carrots	25
	Celery	15	Sweet Potato/Purple Potato	20
	Asparagus	15	Yam	20
	Cabbage	15	Tomato	15
	Spinach	15	Green beans/Pea	15
	Mustard	15	Pumpkin/Winte Melon	15
Fish/Seafood	Salmon/Cod	20	Shrimp and Crab	15
Meat	Chicken	30	Pork	30
	Beef	30	Mutton	30

Note:

1.The reference steaming time is for room temperature ingredients ONLY.

2.For refrigerated or frozen food, please defrost first or add extra 5-10 mins steaming time for better steaming, otherwise there will be chunks remain in puree.

Troubleshooting

Problem	Possible cause	Solution
Can not turn on the unit	The blender jar is not installed in place.	Please reinstall the blender jar place refer to user manual, only when blender jar and the cover installed right can the unit be turn on.
	The unit is not connected to the power supply.	Plug in power supply.
Stop working suddenly	Water in the water tank dry out, the water shortage protection is activated (E1).	Add distilled water into the water tank.
Unable to produce steam for cooking food.	Insufficient water in the water tank.	Add distilled water into the tank water
	The unit did not work normally.	Check if all accessories correctly were installed according to the instructions.
Steam leakage	Air inlet or outlet not sealed.	Please contact service person.
Blending function cannot be used normally/Chunks left after Blending	Too much food in the blender jar.	Unplug the power supply, reduce food volume
	The blender jar or blade is not installed in place.	Please reinstall the blender jar in place
	The food being stirred is sticky or hard.	Never stir sticky or hard food with this unit, stir cooked food or soft food.
Water leakage from blender jar	The sealing ring of the blade is not installed in place.	Reinstall the blade and sealing ring correctly according to user manual.
	The sealing ring is damaged.	Please replace the sealing ring.

MADE IN CHINA

Corporation:

Guangdong ShunDe JieTuo ShengHuoJiaDian Co., Ltd
NO.1,Chaoguinan Rd, Ronggui Shunde District, Gaojun Tech
Innovation Center 3-1105 Foshan Guangdong.