 


Assembly Instructions

CM4459E

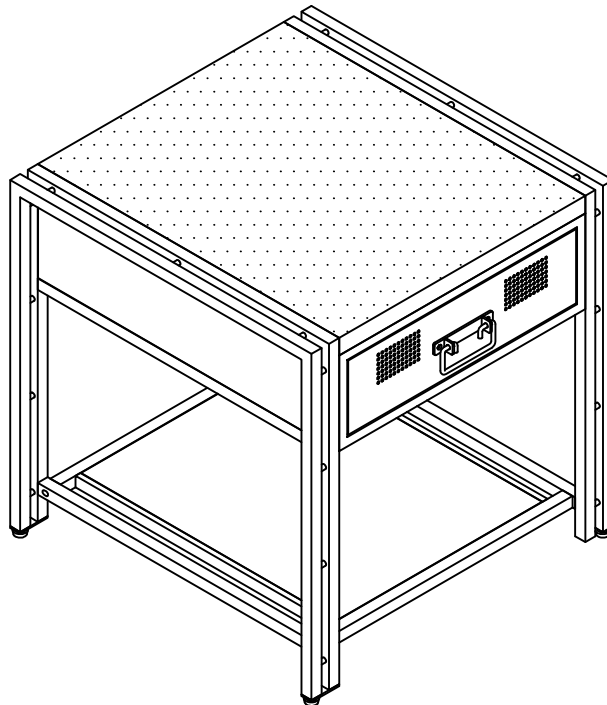

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY





DIFFICULT

Tools Required For Assembly:

Allen Wrench



Wrench

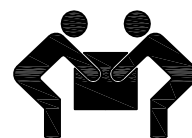  


2 PERSONS RECOMMENDED

ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

 BASIC ASSEMBLY TECHNIQUES

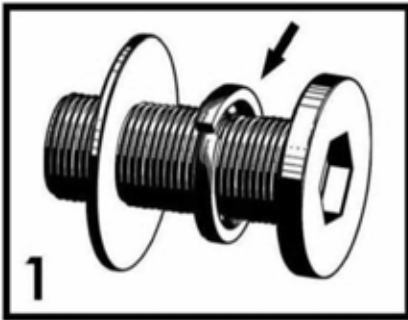


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.




Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.



 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

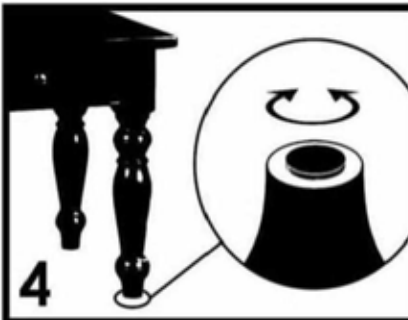

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

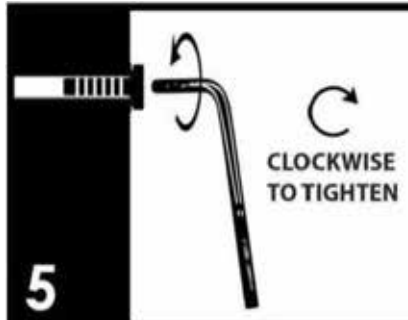


 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

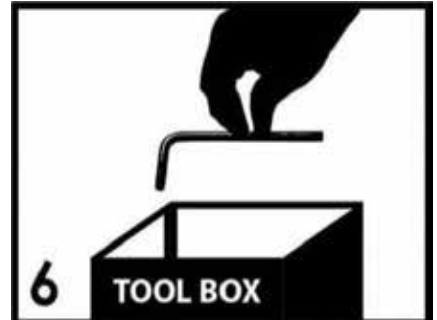

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

 IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

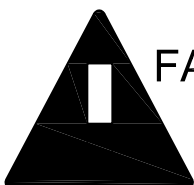


FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.




Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

 
Parts List



#1 x 2pcs
Side Panel

 

#2 x 1pc
Top Board With Base Frame

 


#3 x 1pc
Bottom Base Frame


Hardware List



 
#A x 4pcs
Bolt $\phi 1/4"$ x $1\frac{1}{8}"$




#B x 4pcs
Bolt $\phi 1/4"$ x $1\frac{3}{4}"$

 

#C x 8pcs
Flat Washer

 


#D x 4pcs
Leveler

 

#E x 1pc
8-10mm Wrench




 
#F x 1pc
4mm Allen Wrench

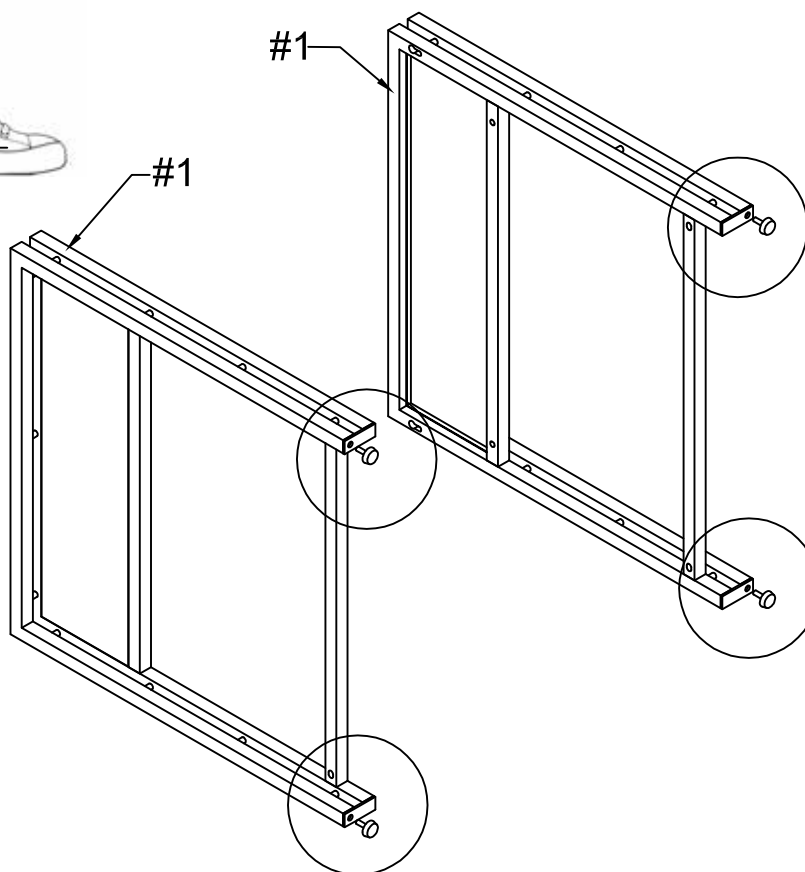

#D  4pcs

  Insert the levelers (#D),
then turn right to tighten.

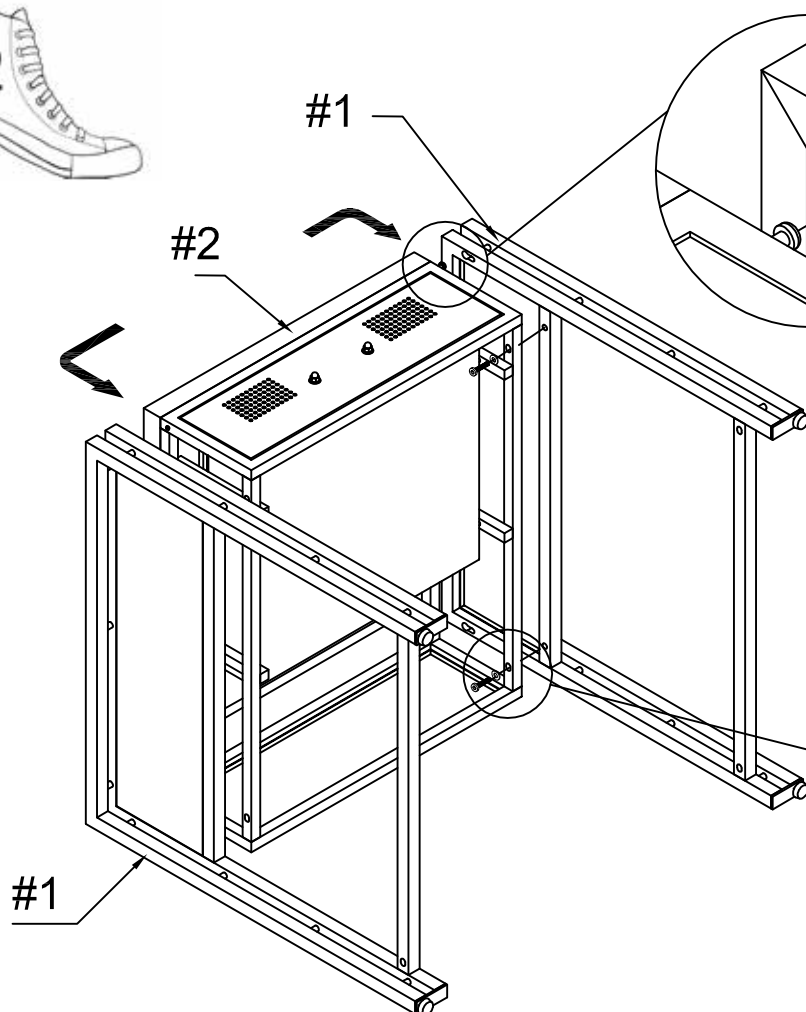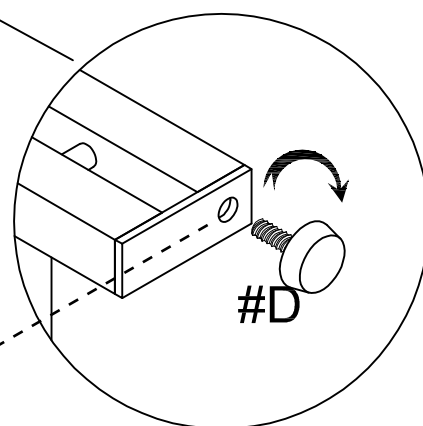


#A  4pcs

#C  4pcs

#F 

1. Insert each end of
(#2) into the holes
along the side panels
(#1), then slide down.

 2. Insert a bolt (#A) with
flat washer (#C) into
each hole from within.
Secure using the Allen
wrench (#F).

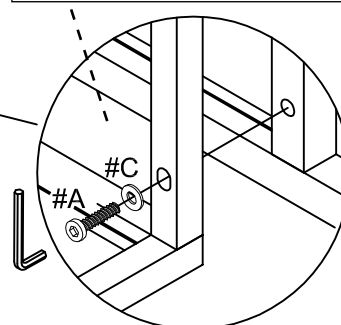




#B  4pcs

#C  4pcs

 
#F 

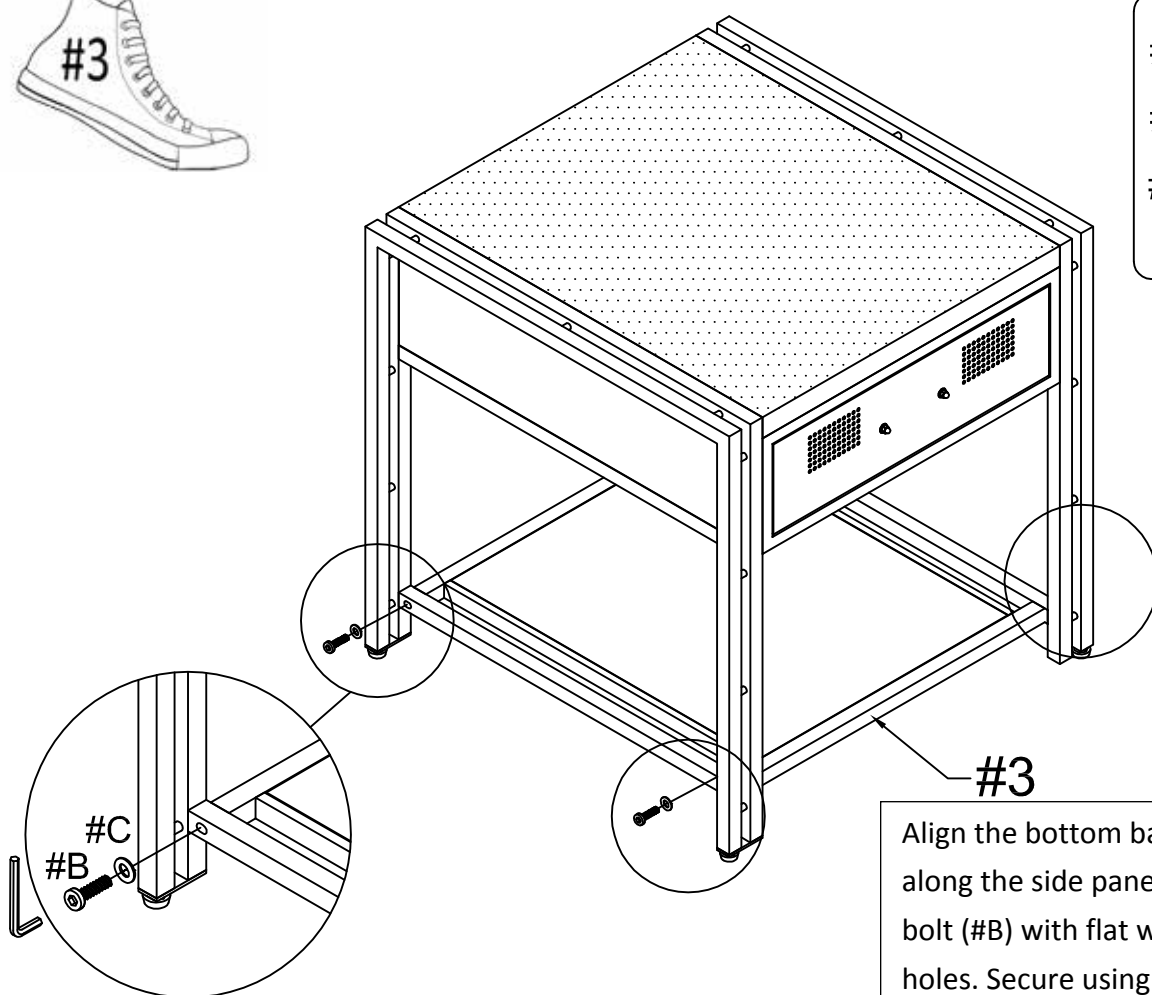


#3

 
Align the bottom base (#3) to the holes along the side panels (#1), then insert a bolt (#B) with flat washer (#C) into the holes. Secure using the Allen wrench (#F).




#E  1pc

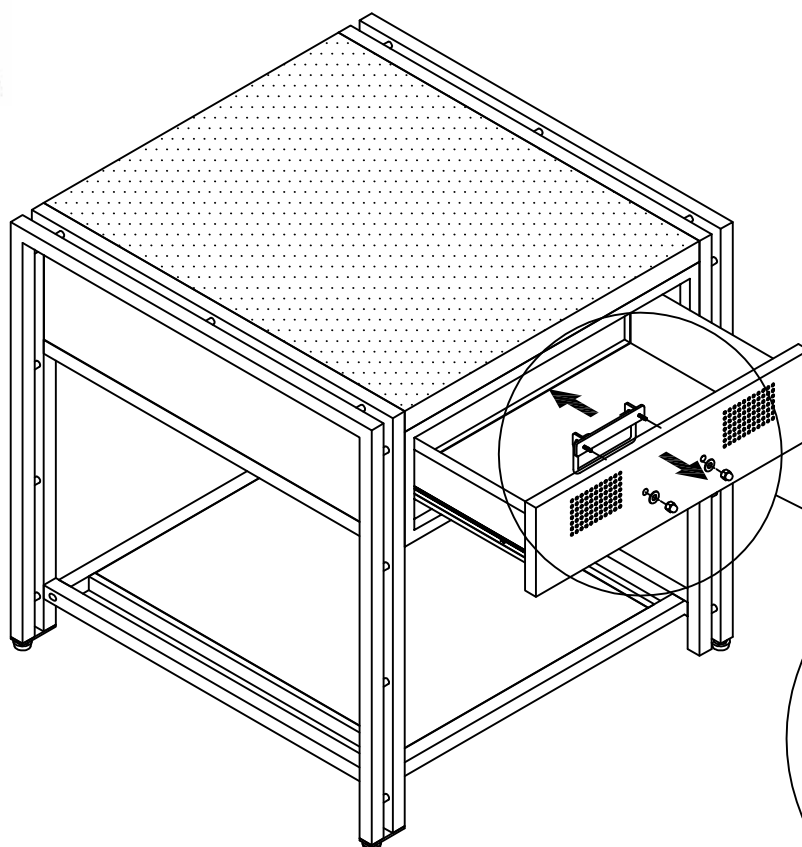 


  Remove the handles by using the wrench (#E).


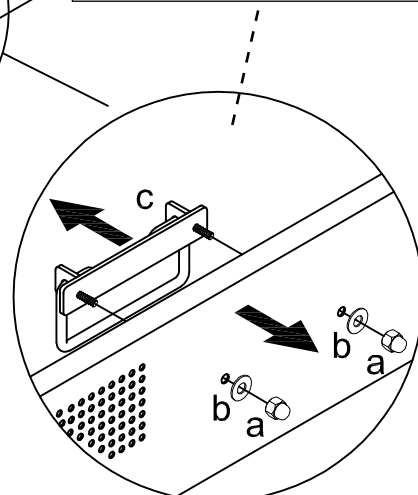




#E  1pc

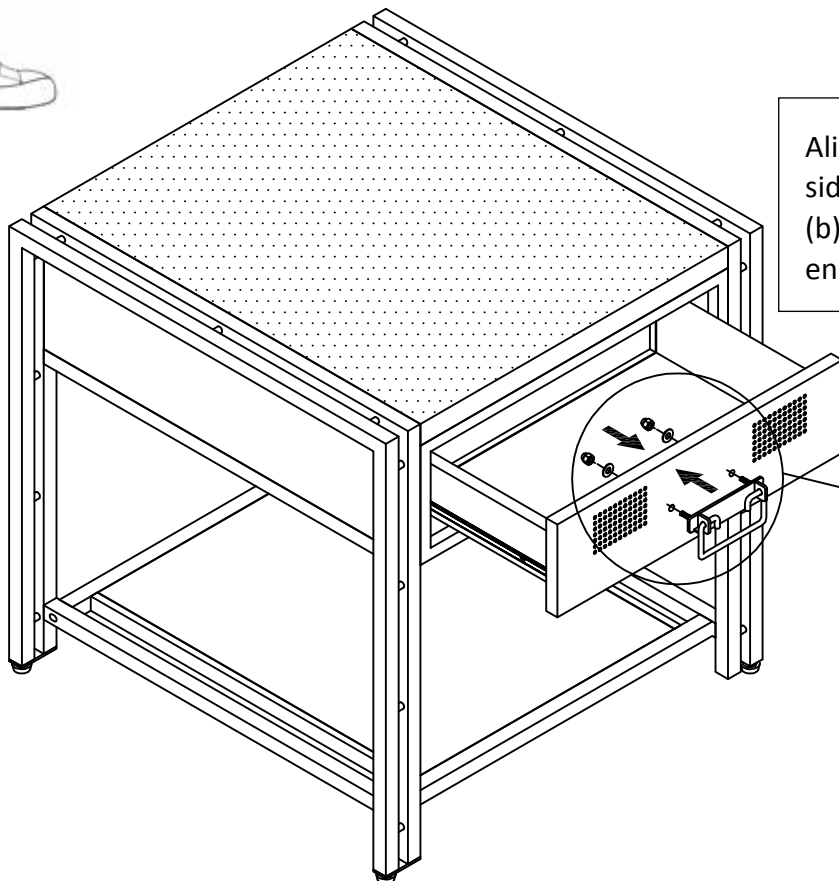 

  Align the handles to the outer sides, then apply a flat washer (b) and nut (a) onto each end. Secure using the wrench (#E).

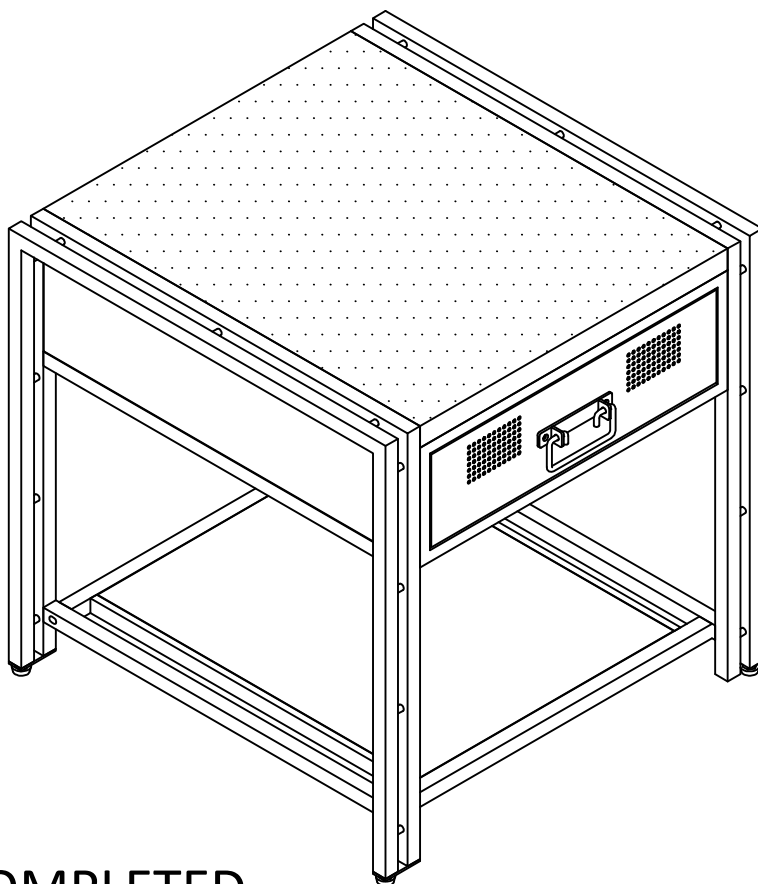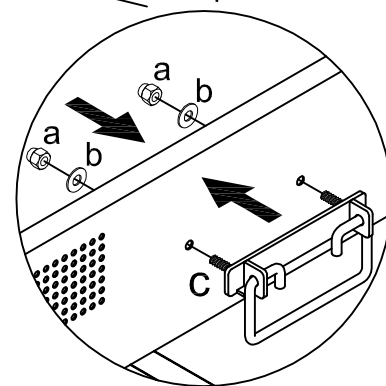

ASSEMBLY IS COMPLETED