


Installation Instructions

Thank you for purchasing Everyday Celebration cordless roller shades. Please check the package contents and read the installation steps carefully before installing the shade.

Package
contain

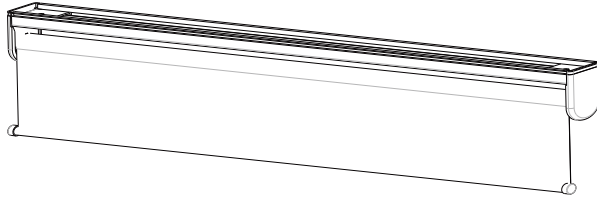



Ax2





Bx2





Cx2

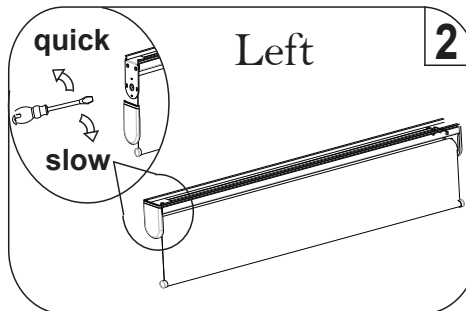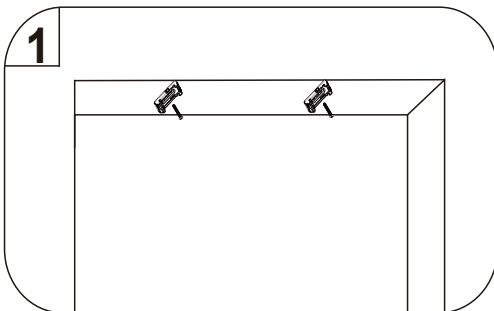

1. Fix part A on the top in parallel.

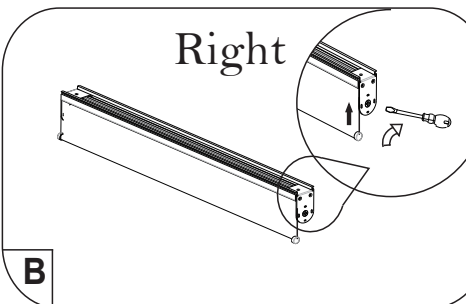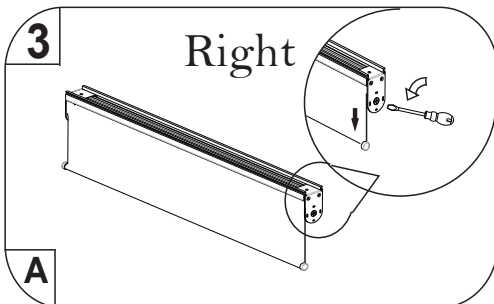

2. Adjust the tension by rotating the screw clockwise or counterclockwise. The lid at the side can be taken out by pushing down.

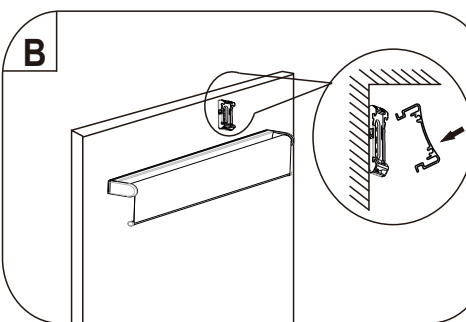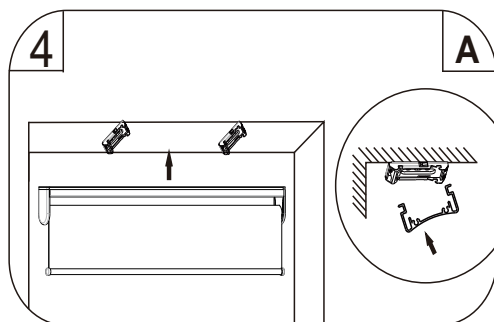

3. Same method. Adjust the position of shade as desired.

4. Choose wall or ceiling mount as your preference.

Care: Wipe the spot with a clean damp cloth, or gently scrub with cold water, not machine washable.

Finally, congratulations on completing the installation. If you are satisfied with our products, **"leave a reveiw"** is the best encouragement for us. And if you have any other questions about the product, please feel free to contact us.



service@northhillshome.com

Everyday Celebration