

Assembly Instructions



1 Reach inside the opening in the rear of the fountain pulling out the tubing/water pipe and internal L.E.D.cable(s)



2 Connect the tubing to the outlet of the pump and place it in the water reservoir through the opening in the rear of the fountain.



3 Connect the two ends of the L.E.D. lighting wires together and screw over the plastic collar. Push the cable with two pins into the transformer and screw over the plastic collar.



4 Place the pump and excess wires into the access cavity ensuring that the long pump wires extend out through the opening.





5 Carefully fill the fountain with sufficient water ensuring the pump is fully submerged.



6 Connect the plugs from the transformer/pump to your mains outlet.



-  Clock wise Full Flow
-  Anti-clock wise reduced Flow

PUMP FLOW: The pump flow can be adjusted with the regulator, this is found on the inlet of the pump. We recommend starting with the flow regulator fully open and then adjusting down if required.