


Electric height adjustable Standing desk

Assembly Instruction

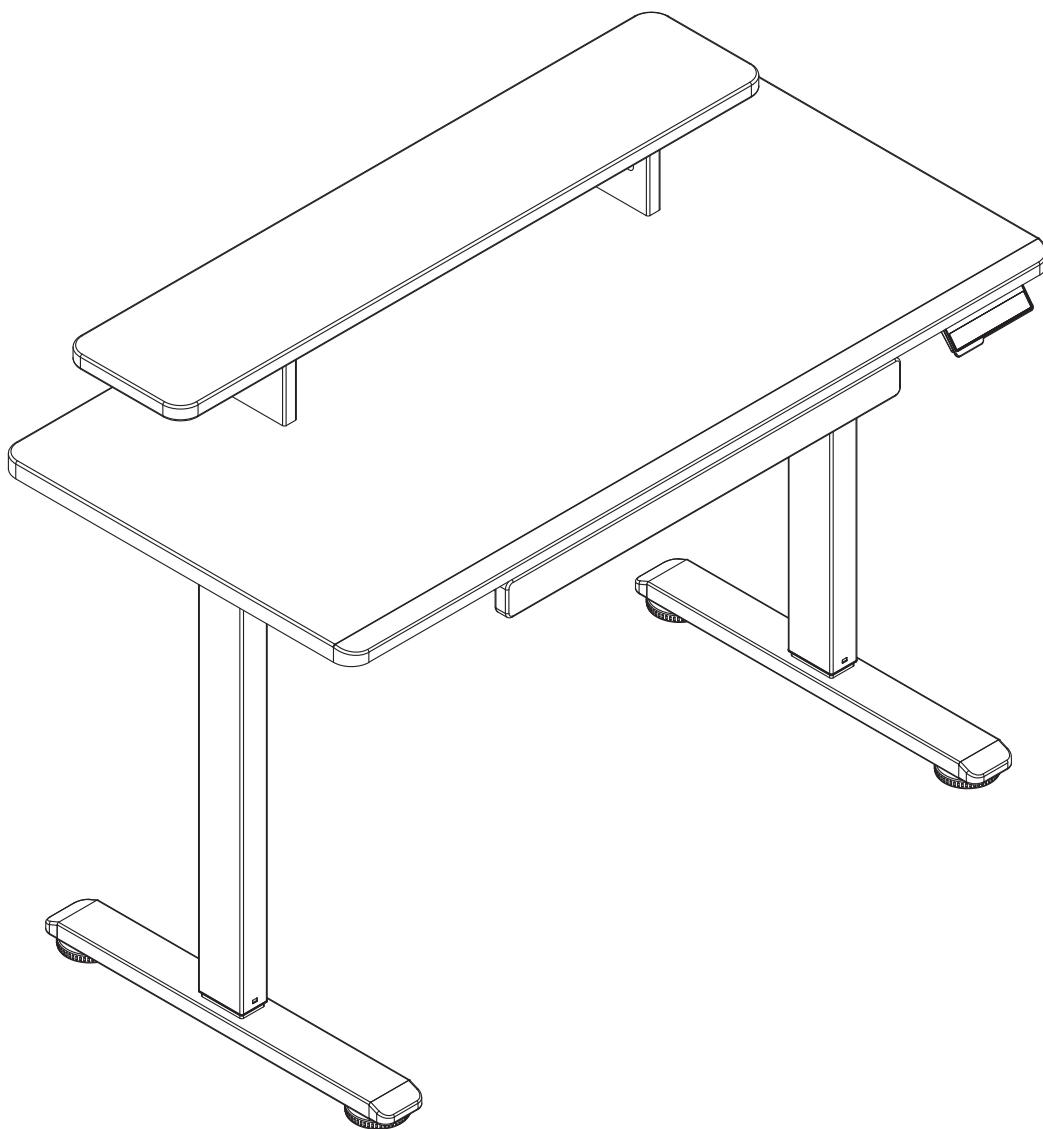

INTRODUCTION

Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.


PRECAUTIONS


1. There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.
2. Please install the product on a clean and soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
3. The main components of the product is relatively heavy. Please pay attention to safety during installation.
4. The product is not stable during installation. Please do not move it randomly before it is completely installed.
4. If you have any questions during installation, please contact the customer service in time.

*** PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECESSARY LOSSES CAUSED BY IMPROPER INSTALLATION.**

 

*** IF YOU NEED FURTHER ASSISTANCE, PLEASE CONTACT THE CUSTOMER SERVICE ONLINE.**


Parts List

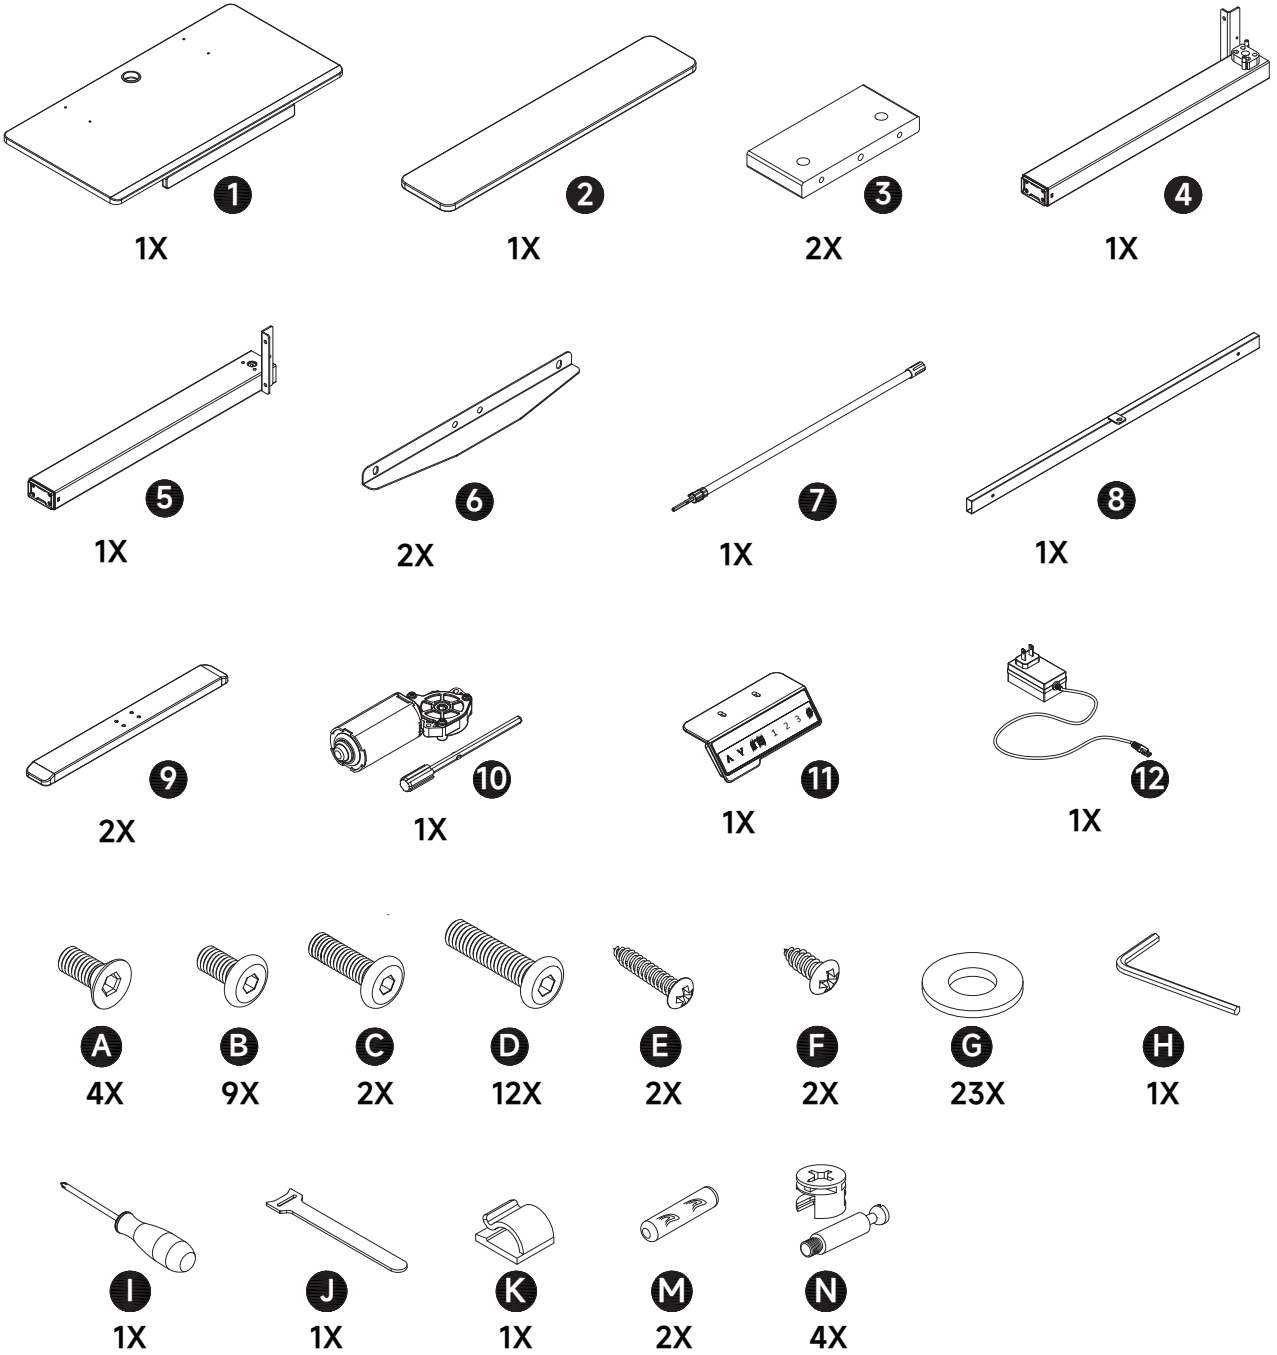

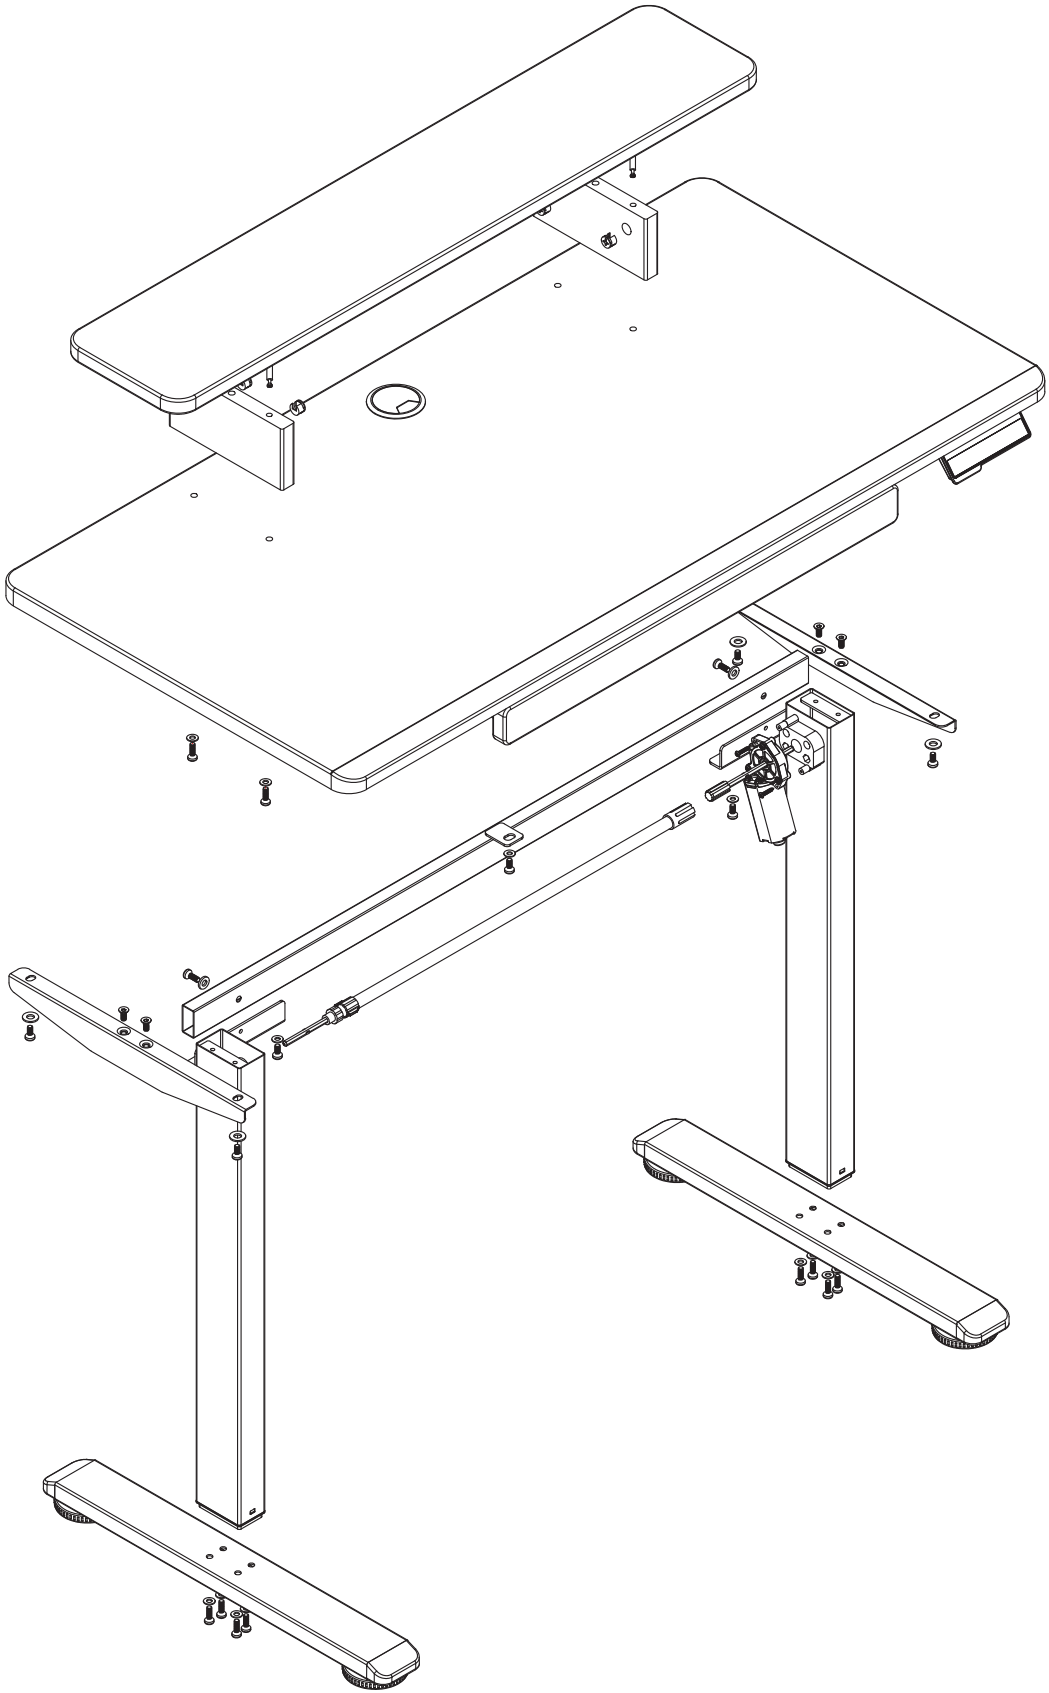

 



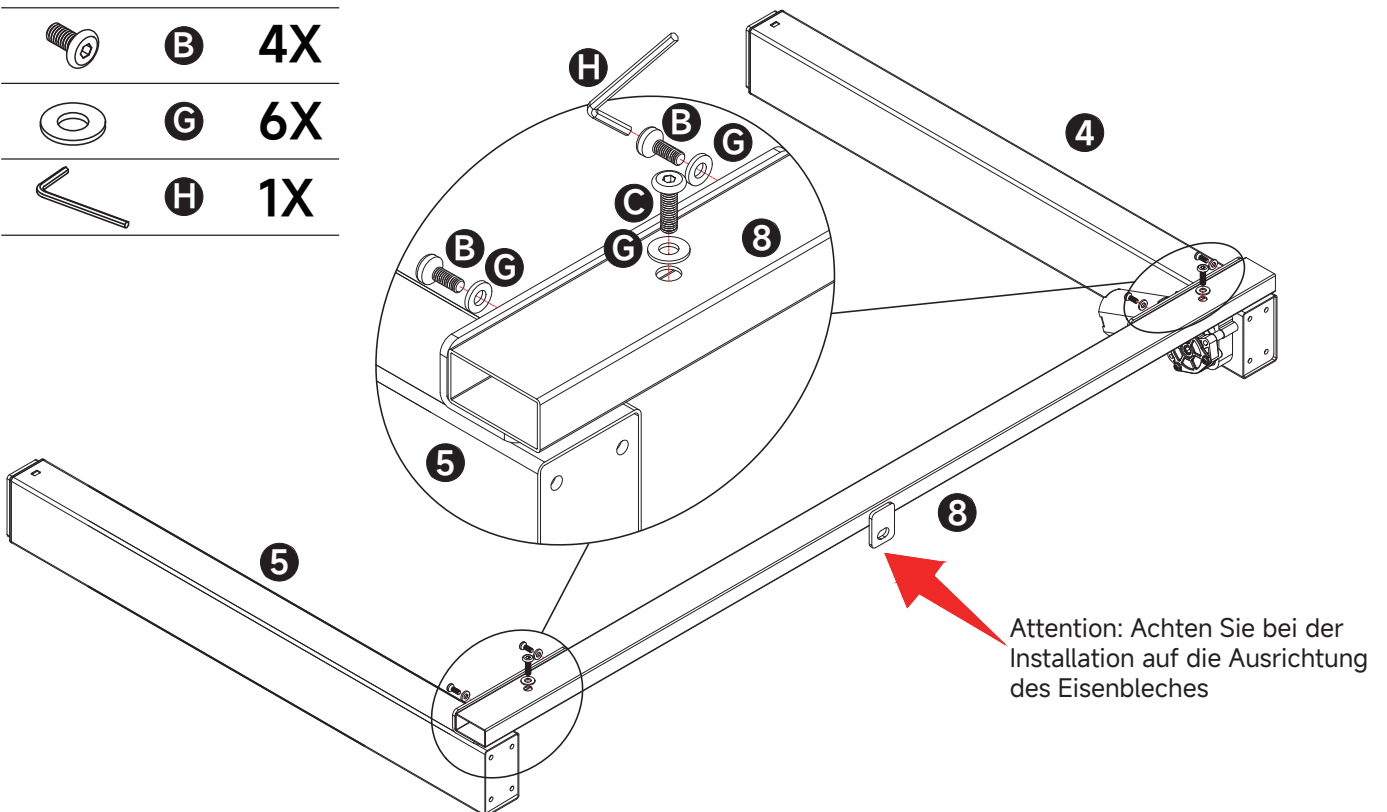
STEP 1
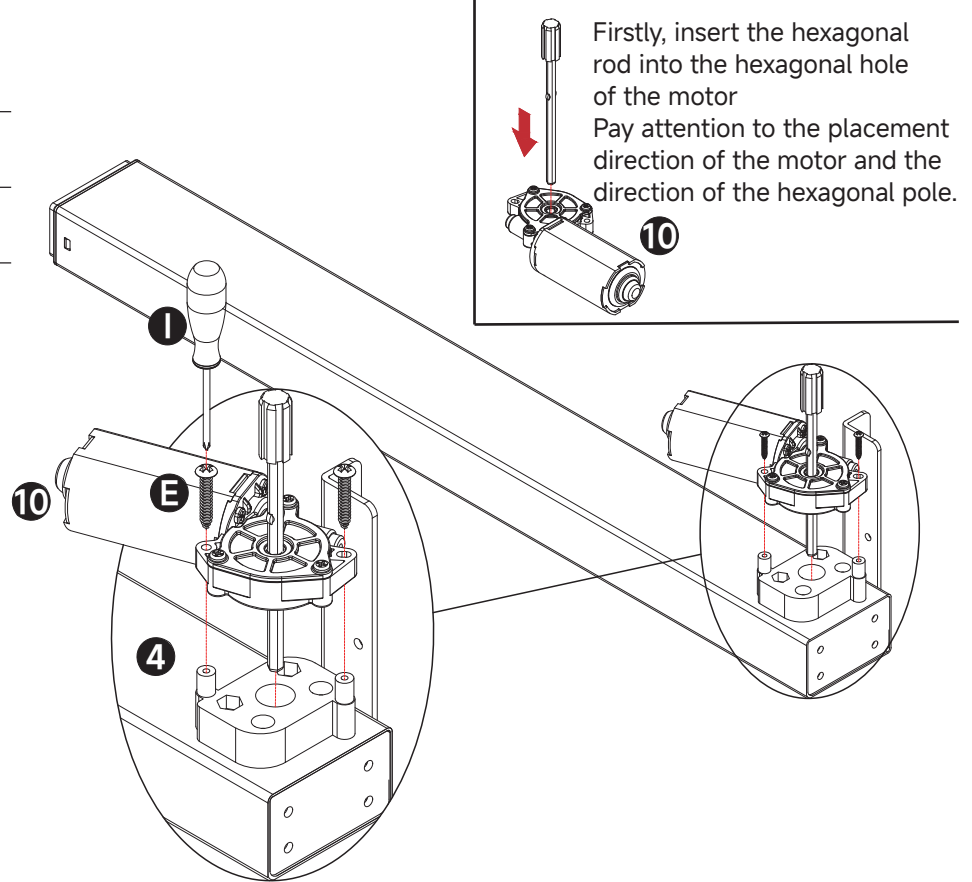
| | | |
|---|----------|-----------|
|  | E | 2X |
|  | I | 1X |


 



STEP 2

| | | |
|---|----------|-----------|
|  | C | 2X |
|  | B | 4X |
|  | G | 6X |
|  | H | 1X |



 



STEP 3
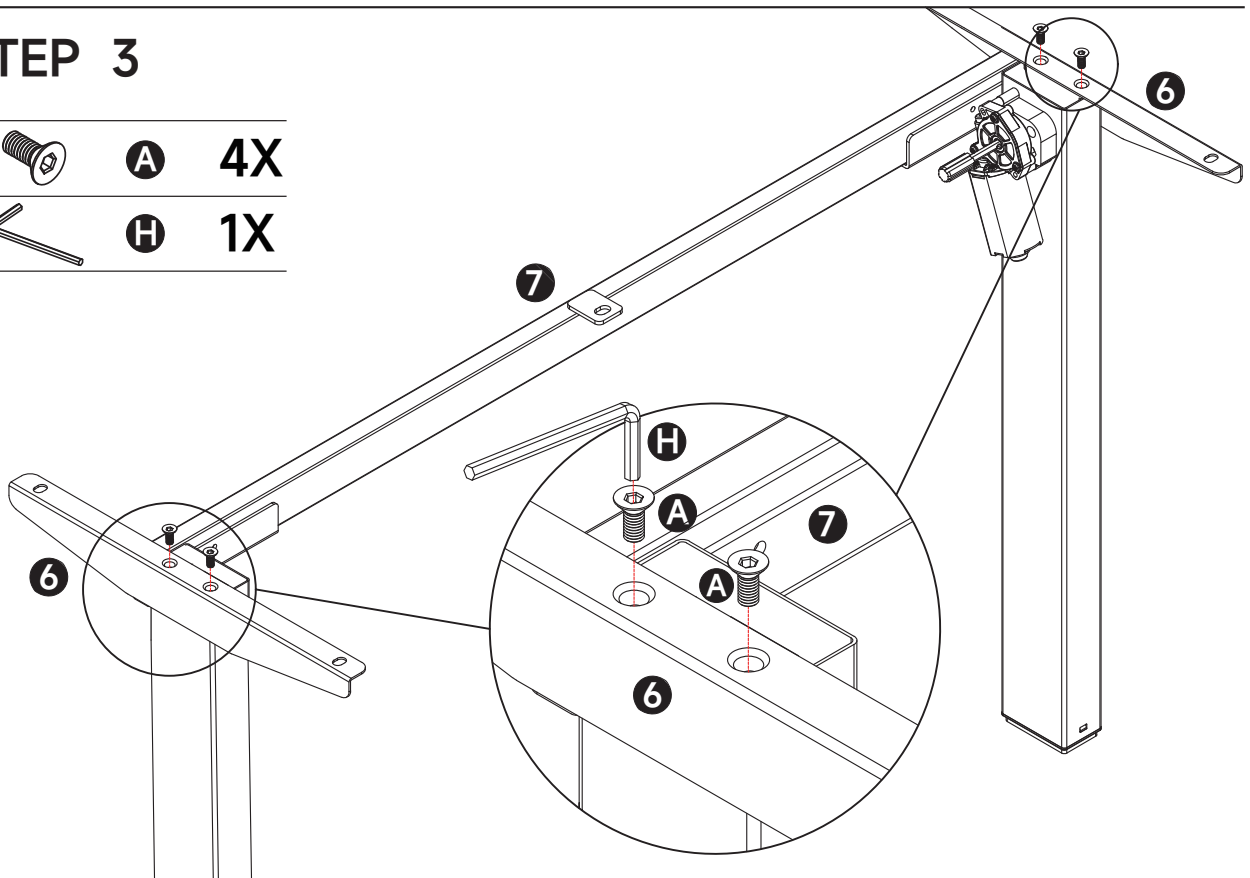
| | | |
|---|----------|-----------|
|  | A | 4X |
|  | H | 1X |




STEP 4

| | | |
|---|----------|-----------|
|  | B | 5X |
|  | G | 5X |
|  | H | 1X |

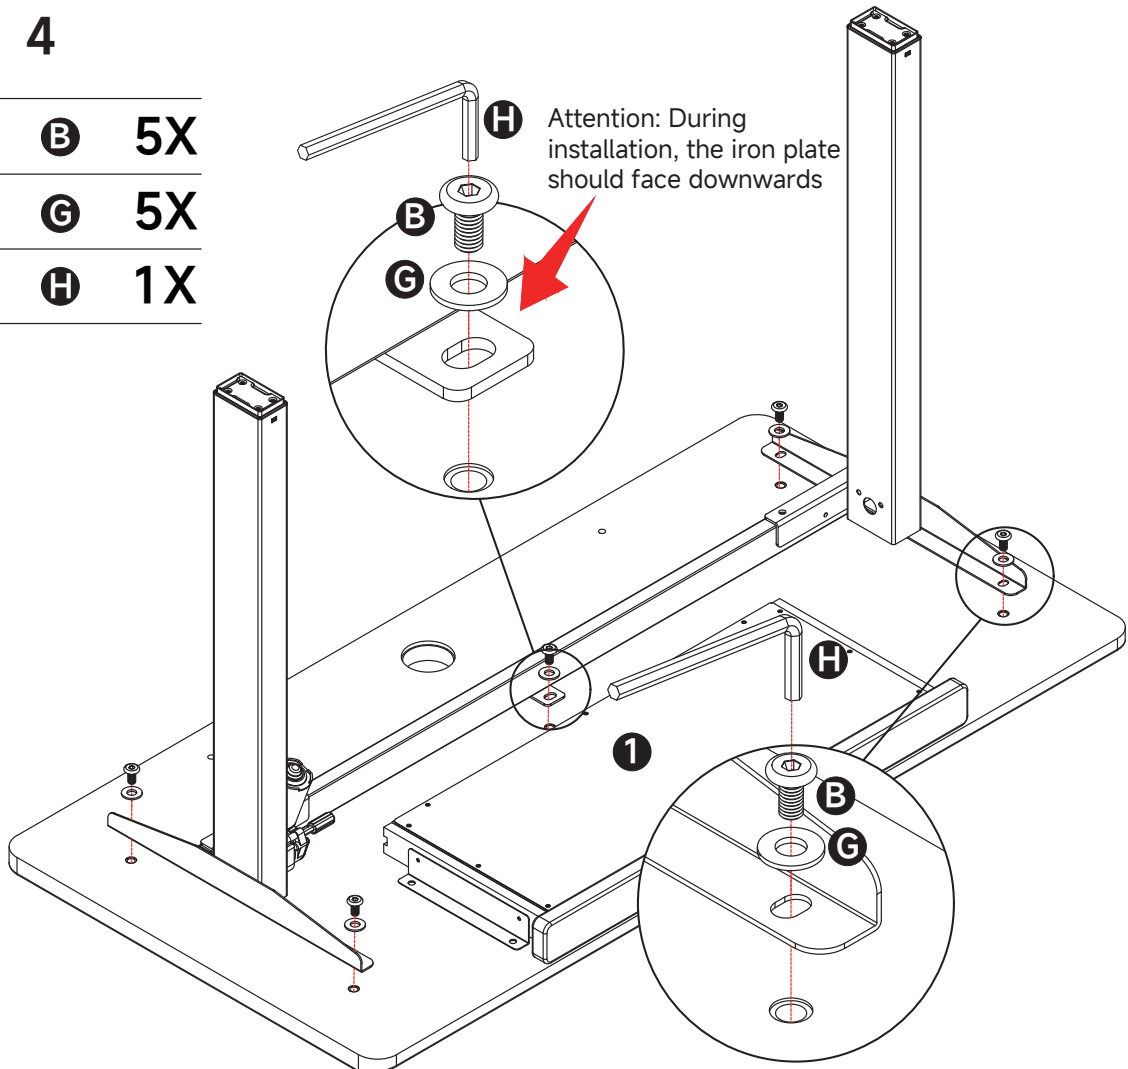

STEP 5

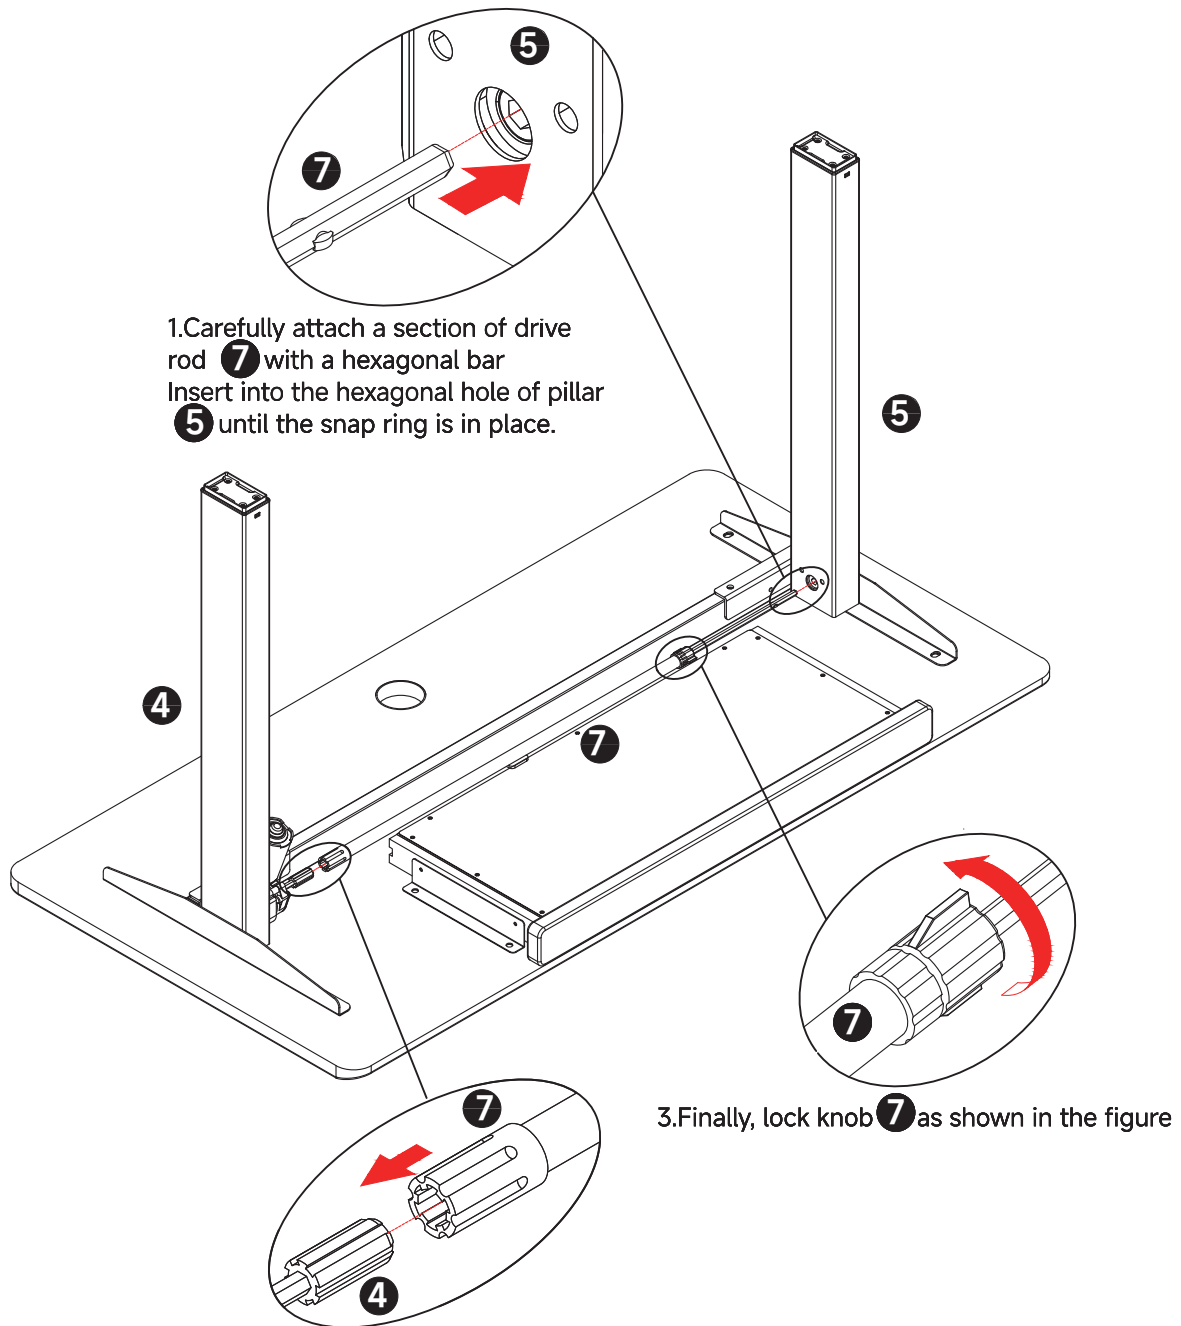




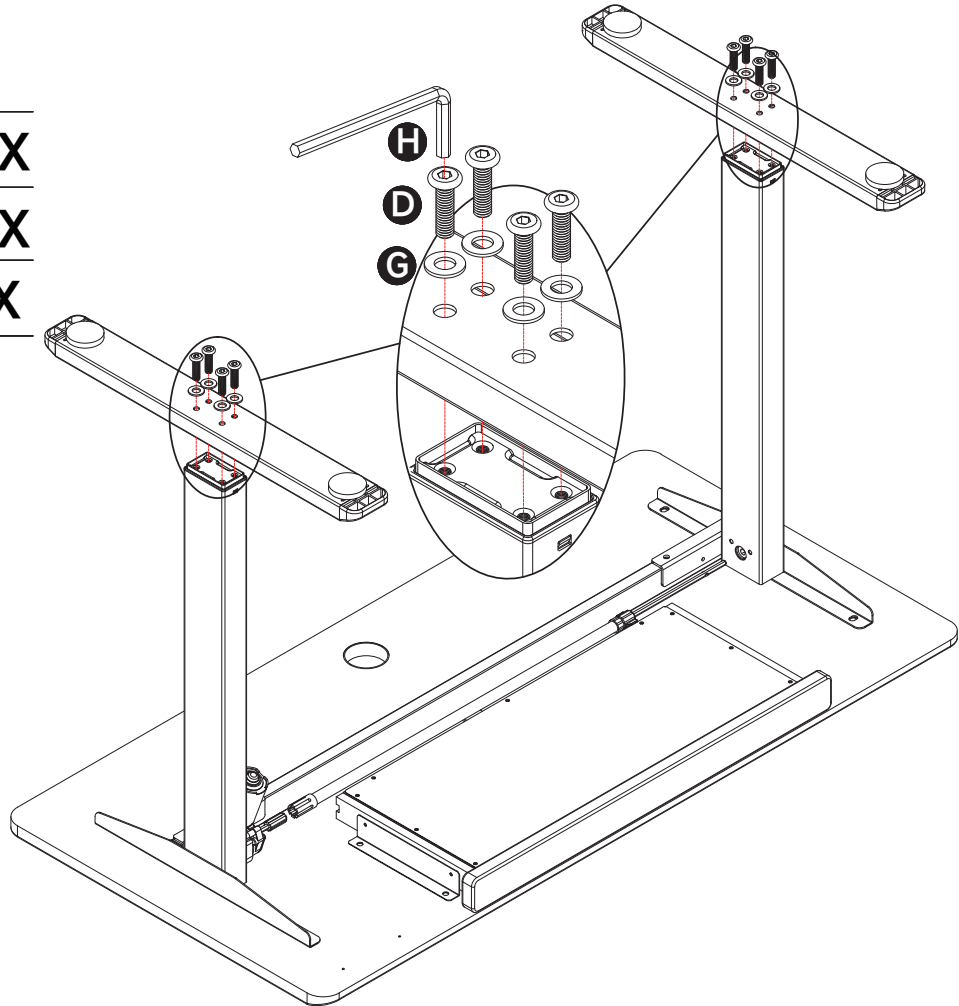
1. Carefully attach a section of drive rod **7** with a hexagonal bar **5** until the snap ring is in place.

3. Finally, lock knob **7** as shown in the figure





2. Align the other end of the transmission rod **7** with the hexagonal rod of the right lifting column **5** and insert it at least 6CM deep while ensuring that the height of the pipes inside the lifting columns on both sides is consistent. When inserting, please ensure that the hexagonal rod in the lifting column **4** will not slide out


STEP 6

| | | |
|---|----------|-----------|
|  | D | 8X |
|  | G | 8X |
|  | H | 1X |





 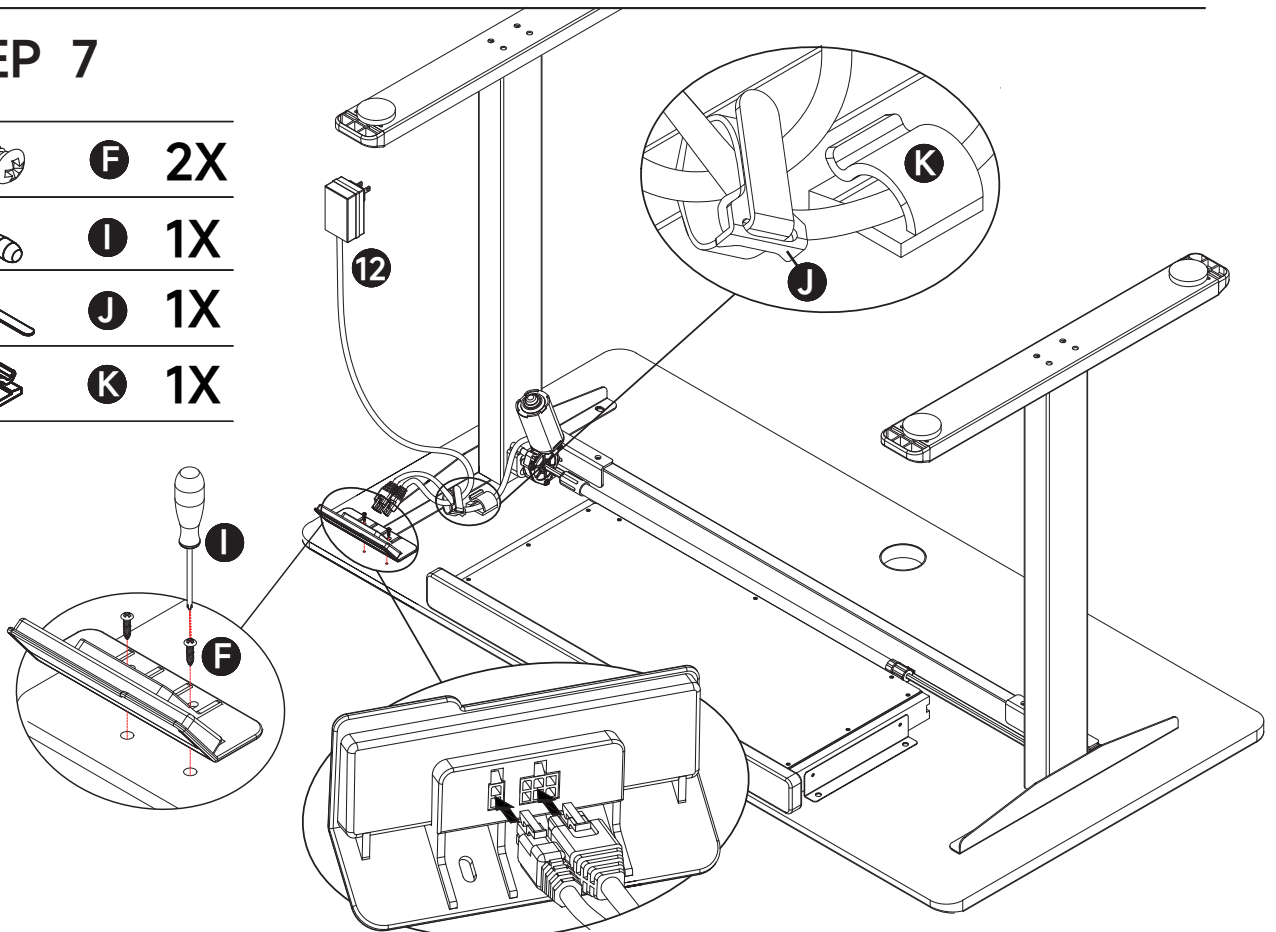



STEP 7

| | | |
|---|----------|-----------|
|  | F | 2X |
|  | I | 1X |
|  | J | 1X |
|  | K | 1X |




STEP 8


| | | |
|---|----------|-----------|
|  | D | 4X |
|  | G | 4X |
|  | H | 1X |
|  | M | 2X |
|  | N | 4X |
|  | I | 1X |


 
2.As shown in the figure, align the notch of the three in one nut with the direction of the screw and insert it into the wooden hole. Tighten it clockwise.

1.First, insert the wooden tenon and three in one screw into the hole of the wooden board.

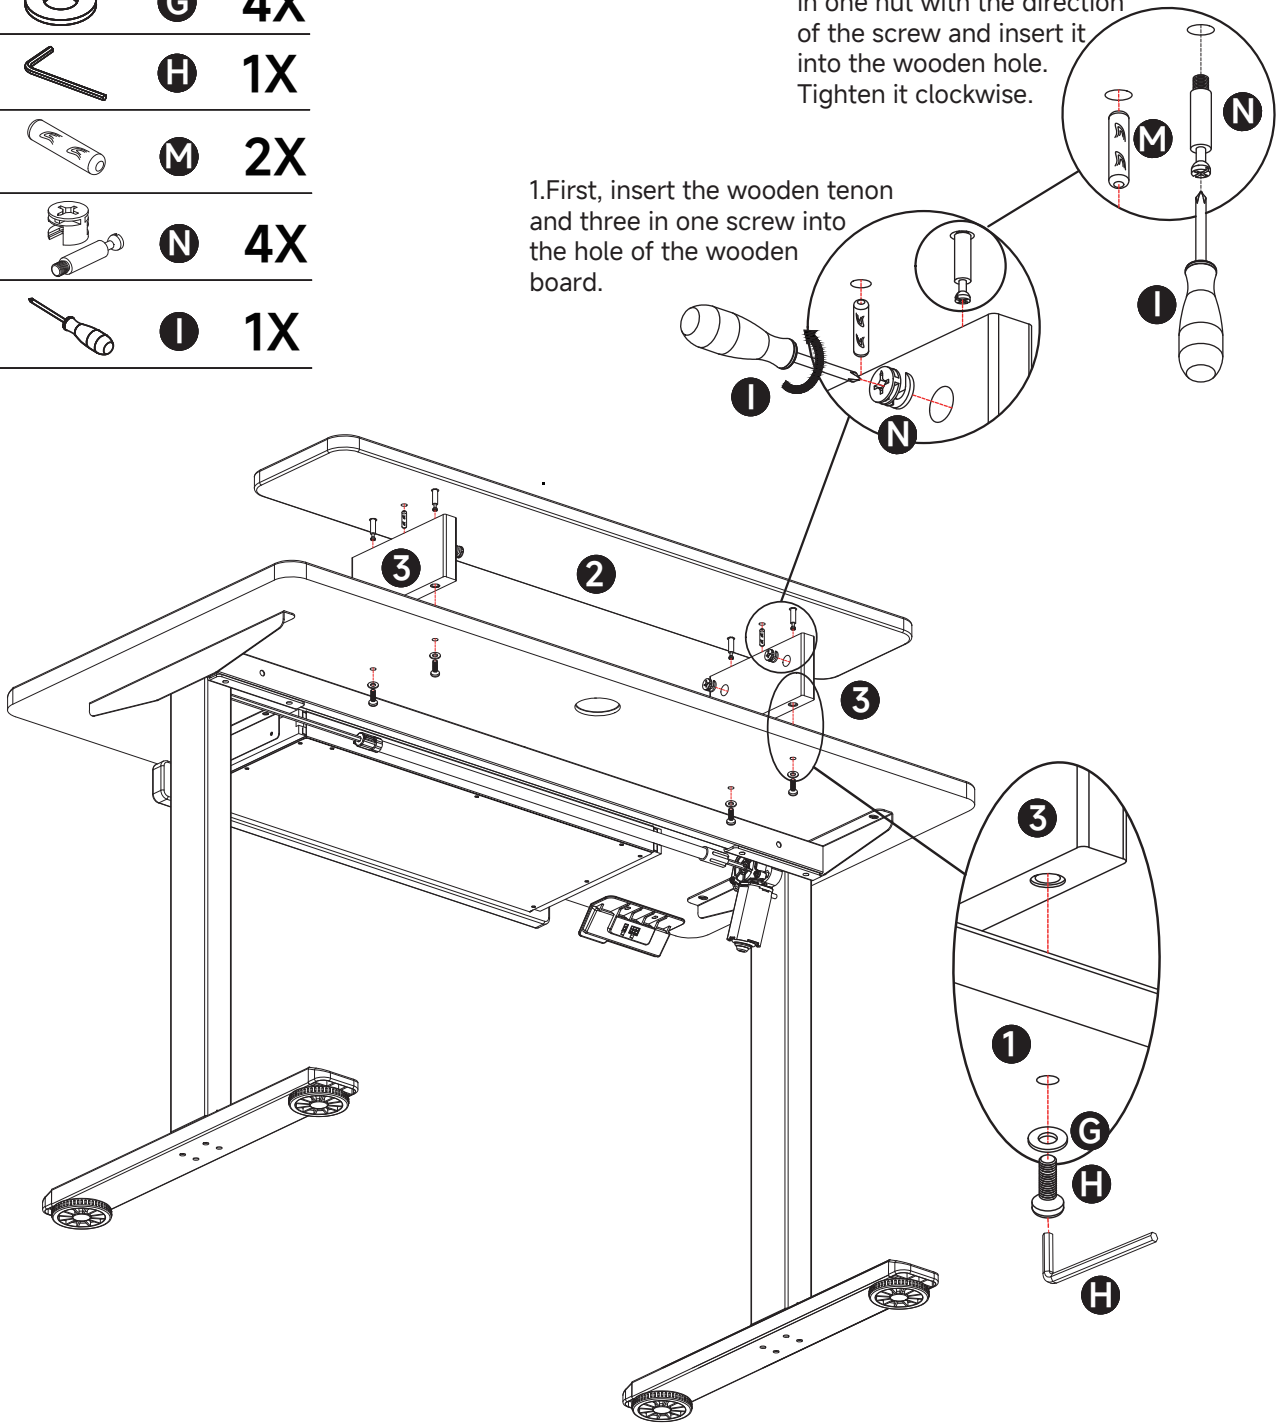


STEP 9

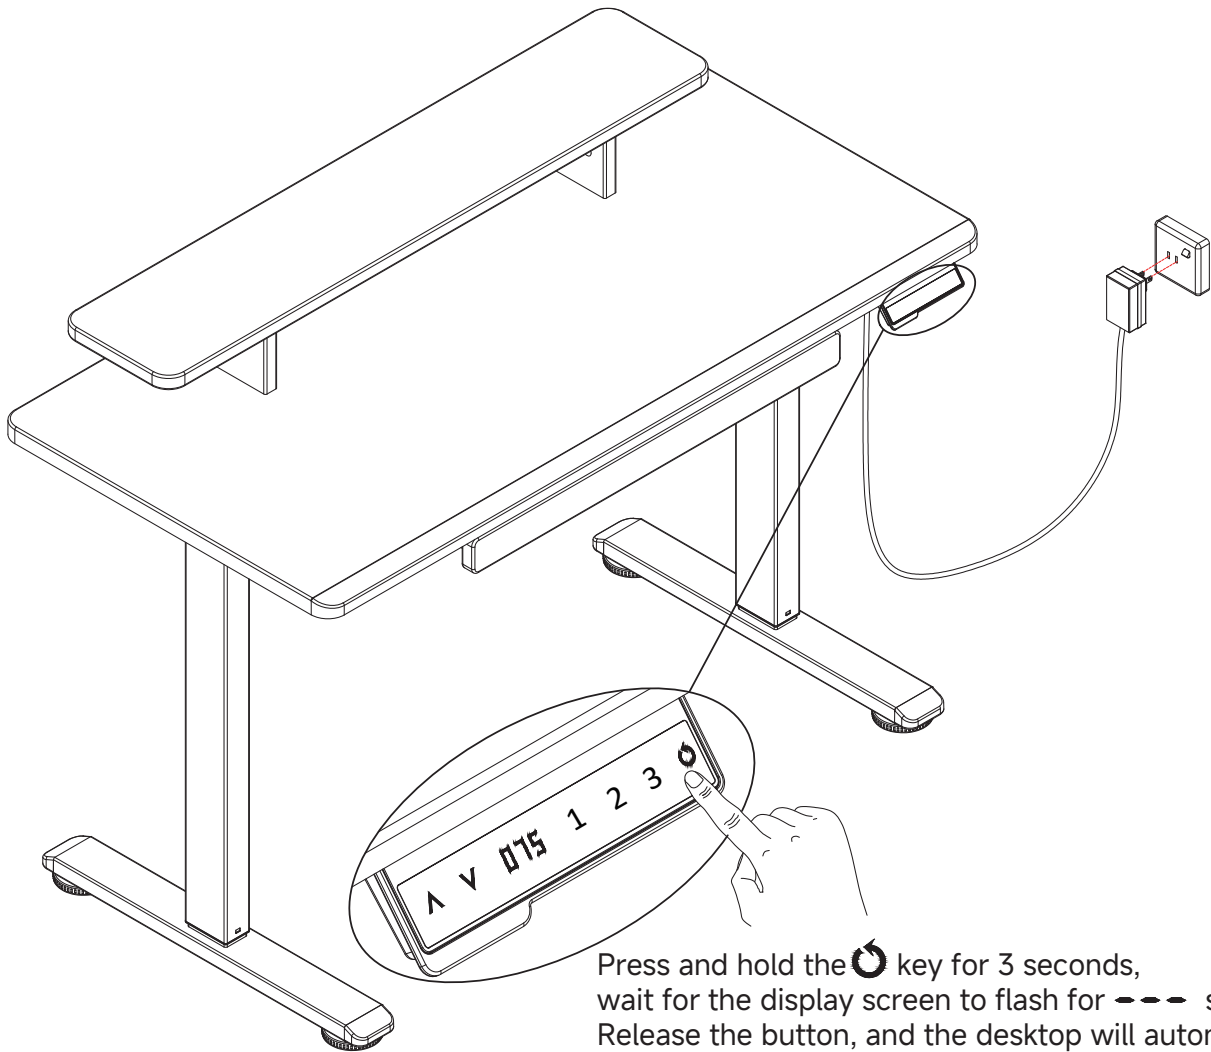

Press and hold the  key for 3 seconds, wait for the display screen to flash for  seconds. Release the button, and the desktop will automatically run down to its maximum position. Run a short distance upwards from the low position and then stop. The reset process has ended.

Operating instruction

Buttons introduction

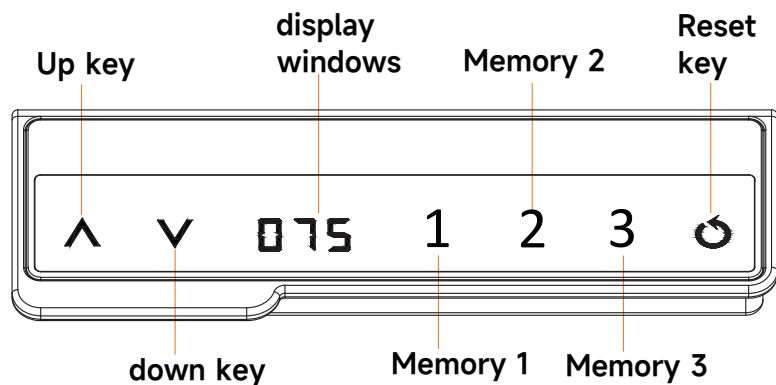

Display Windows

075 = Height

L = Locked

E** = See Trouble Shooting

Up and down operation

- ◆ Press and hold the **^** key and the desktop will run up automatically. When you release it, then it will stop.
- ◆ Press and hold the **v** key and the desktop will automatically run down. When you release it, then it will stop.
- ◆ Press the **^** key or **v** key, and the desktop will run a short distance to realize the click.

Highly memorized functional operation

- ◆ Location storage: 3 memory points can be memory. The storage method is as follows: when it reaches a specific point, long press **1 / 2 / 3** key until the digit flashes, and the current height is successfully memory to the corresponding label.
- ◆ Memory position operation: press **1 / 2 / 3** key, the display flashes the height of memory position for 2s, the desktop automatically runs to the height of memory position, in operation, any key can stop running.



Minimum limit setting

- ◆ The system supports limiting the minimum height of the desktop. The operation method is to let the desktop run to the position to be set. At the same time, hold down the **o + v** key for 5s. displaying **-da** to indicate successful memory of the highest position. When running to the lowest point, the display shows **-Lo**.
- ◆ Cancel the storage height,
Method 1: mechanical zero reset, the system automatically cancel.
Method 2: Let the desktop run to the lowest point, the monitor displays windows **-Lo**, while holding the **o + v** key for 5s, **-da** indicates successful cancellation.







Maximum limit setting

- ◆ The system supports limiting the maximum height of the desktop. The operation method is to let the desktop run to the position to be set. At the same time, hold down the **o + ^** keys for 5s. displaying **-uP** to indicate successful memory of the highest position. When running to the highest point, the monitor shows **-H**.
- ◆ Cancel the storage height,
Method 1: mechanical zero reset, the system automatically cancel.
Method 2: Let the desktop run to the highest point, the monitor displays windows **-H**, while holding down the **o + ^** keys for 5s, **-uP** indicates successful cancellation.


 







Initial reset

- ◆ Long press  for 3 seconds, release the button after the display  blinks, and the desktop will automatically run down to the lowest position and then up for a short distance and stop, the reset process is finished.




Child lock function

- ◆ Lock: Hold down  +  + 2 key for 5s at the same time. When the display windows displays , it indicates that the controller buttons is locked and cannot be operation.
- ◆ Unlock: Hold down the  +  + 2 key for 5s at the same time. When the display windows changes from  to a normal number, it indicates that the lifting system controller buttons has been unlocked.

Standing reminder (countdown mode)

- ◆ Countdown time: Provide 3 levels of time,  =30 minutes,  =45 minutes,  =60 minutes.
- ◆ Start countdown: Press  the display windows to display  /  /  at a time, choose a time and start in the countdown period.
- ◆ Exit countdown: 1. Short press , the display windows will display the number.
2. When the countdown time is up, the display windows will blink  for 1 minute. Press any key to stop the timing and exit.
3. If there is no operation, the time will be automatically quit after being reminded for 3 consecutive times at an interval of 5 minutes.

Restore factory Settings

- ◆ Method: Hold down the button  +  + 3 for 5s at the same time. The displays windows display , indicating that the parameter is successfully restored.

Use and maintenance advice

1. Place the furniture stably and avoid tilting, which will cause the legs of the furniture to break or the connection parts to become loose.
2. Before using the new furniture, put it in a ventilated place for half a month, which can eliminate the odor of the new furniture.
3. Do not push hard objects directly on the surface of the furniture to avoid scratching the surface of furniture. Heavier or harder items should be placed on the surface of the furniture with soft decorative tablecloth or felt pads to achieve protective effect.
4. Educate children not to play near the sharp corners of glass on the furniture to avoid accidental injury to the human body and furniture.
5. Flammable and oxidizing articles come into direct contact with the surface of furniture, which may cause damage to the paint decoration of furniture.
6. When dragging the drawer, use appropriate force. It is forbidden to open and close violently, causing the connection to loosen.

Error code table

| Display status | Explain | Process mode |
|----------------|---|---|
| E01 | A The column is not connected | Press the up button or down button again. It still exists. Please check the motor line of pillar A |
| E02 | B The column is not connected | Press the up button or down button again. It still exists. Please check the motor line of pillar B |
| E03 | A Column motor overcurrent | Press the up button or down button again. It still exists. Please replace the motor A or reduce the load |
| E04 | B Column motor overcurrent | Press the up button or down button again. It still exists. Please replace the motor B or reduce the load |
| E05 | A Hall failure of column motor | Press the up button or down button again, it still exists. Please check the connection or replace motor A |
| E06 | B Hall failure of column motor | Press the up button or down button again, it still exists. Please check the connection or replace motor B |
| E07 | Abnormal main power supply | Unable to eliminate after power, replace the power supply |
| E08 | A Column motor current is abnormal | Unable to eliminate after power loss need to return to the factory |
| E09 | B Column motor current is abnormal | Unable to eliminate after power loss need to return to the factory |
| E10 | A The power component of the column motor is broken | Unable to eliminate after power loss need to return to the factory |
| E11 | B The power component of the column motor is broken | Unable to eliminate after power loss need to return to the factory |
| E12 | Abnormal learning position | Relearn the position |
| E14 | A Column motor is stuck | Press the up key or down key again, it still exists, please replace motor A or reduce the load |
| E15 | B Column motor is stuck | Press the up key or down key again, it still exists, please replace motor B or reduce the load |
| E16 | Uneven position | Reinitialize the reset operation |
| h0f | Overtemperature protection | Wait for the temperature to drop, run for 2 minutes, stop for 18 minutes |
| r5f | illegal power failure | Load reduction |

Disposal



If disposal of this product becomes necessary, please do this in an environmentally responsible way. Contact your local government office or authority for suitable disposal or recycling options in your local area. Do not dispose of this product, or its components, with your general domestic waste.