

Assembly Instruction

Assembly Instructions

- Our clear, easy-to-follow, step-by-step instructions will guide you.
- Do not skip any steps. It is of utmost importance to assemble all of the parts according to the directions.
- Item identifications: For ease of identification, all parts are labelled to correspond to the step number in which the part is used.

Important

- Read the following instructions carefully before using the chair.
- Be aware that some parts are heavy and have sharp edges.
- Do not overtighten screws(insert all screws before tightening screws).
- Firmly secure all bolts, screws and nuts before use.
- Please do not exceed the weight limitations of this item.
Reconfirm that all bolts, screws, and nuts are secure every 90 days.

 
 
Care & Safety

- Always use on firm level ground.
- Keep all children and pets away from the assembly area. Children and pets should be supervised while the product is being assembled.
- Vacuuming picks up dust and reduces the need for professional cleaning.
- In case of fire, do not attempt to extinguish any burning polypro-pyleneene with water.
- Be very careful when assembling chairs to avoid smashing your hands or fingers.
- Please contact Customer Services if you have any problems or discover any missing parts.


Maintenance

- Wash the surface with a soft cloth soaked in mild detergent and warm water. Pay attention to drying the water in time. Do not use solvents or abrasive kitchen cleaners.
- Vacuum fabric as needed using an upholstery attachment.
- Do not use or store this item in the proximity of proximity of open flame or flammable/-combustible chemicals.
- Do not brush fabric or use a vacuum attachment with a rotary brush.
Brushing may permanently damage the nap or change the character of the fabric.


Accessories List

Item No.	Reference Image	Qty	Item No.	Reference Image	Qty	Item No.	Reference Image	Qty
A	Backrest 	1	I	Air Rod 	1	P	M6*20mm 	24
B	Seat Cushion 	1	J	Foot Rest 	1	Q	M8*25mm 	4
C	Armrest Pad 	2	K	Footrest Mounting 	2	R	M5*10mm 	1
D	Armrest Frame 	2	L	Steel Plate 	1	S	Hexagon Wrench 	1
E	Base Tube 	5	M	Base Plate 	1			
G	Central Base 	1	N	Cushion 	1			
H	Castors 	5	O	M6*30mm 	8			

Instructions for Use

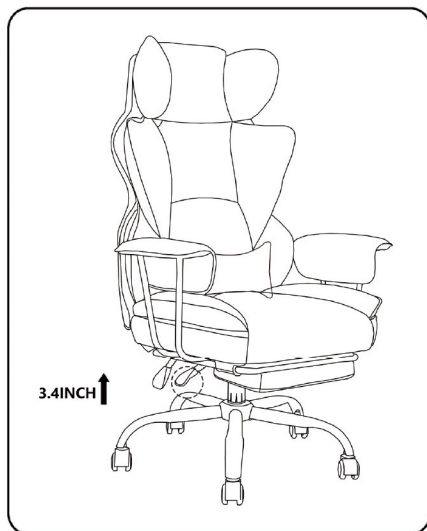


Upward Adjustment

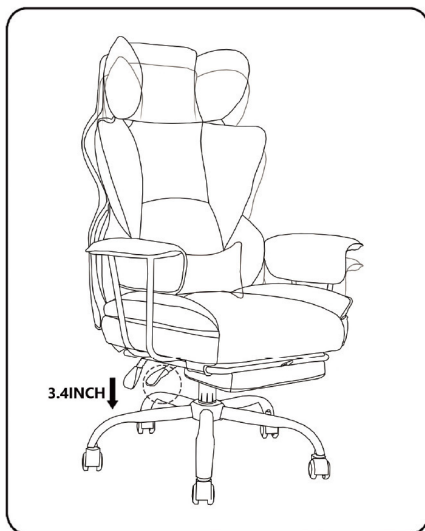

Downward Adjustment



With Footrest

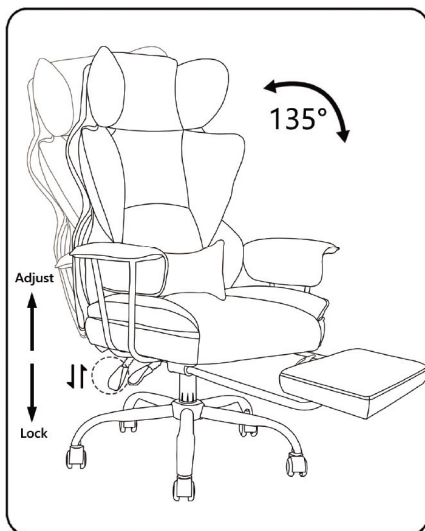

Backrest Adjustment


Thanks for purchasing our products. Please read this manual before assembly. And please assemble in order. After the assembly, keep the instruction properly. Make sure all the parts are concluded (19 kinds in total).

Assembly Instruction

Step 1

Insert 5 Base Tubes (E) into Central Base (G), align with the holes and tighten 10 M6*20mm screws(P).


Note: Please remove the central base buckle from the Central Base(G) first, then insert the Base Tube(E).

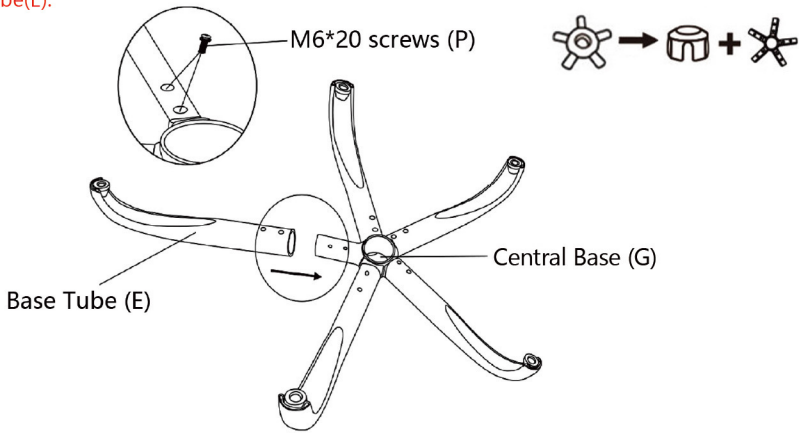

Step 2


Insert 5 Castors(H) into Base Tube(E), please make sure castors are securely installed before use.

Put Air Rod(I) through central base buckle into the hole of Central Base (G).

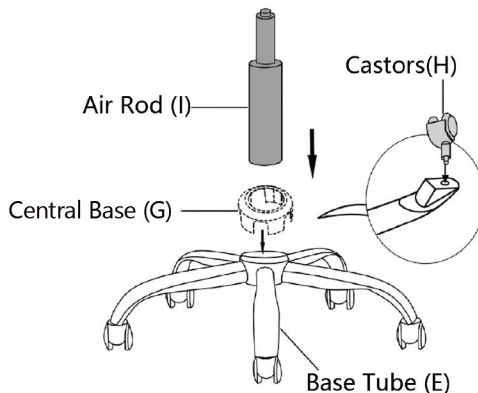


Step 3

Fix armrest pad (C) to armrest frame (D) with 4 M6*20 (P).

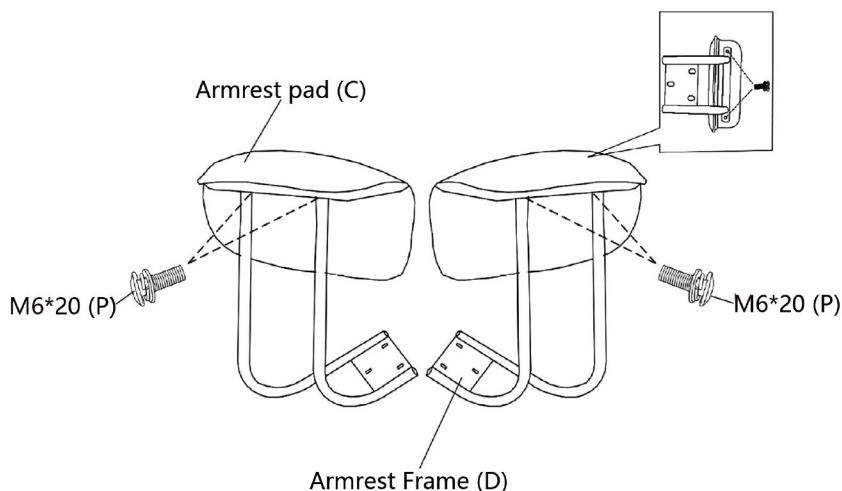


Step 4

Attach the base plate (M) to the seat cushion (B) with 4 M6*20 screws (P). Attach 2 footrest mounting (K) to the seat cushion (B) with 4 M6*30 screws (O).

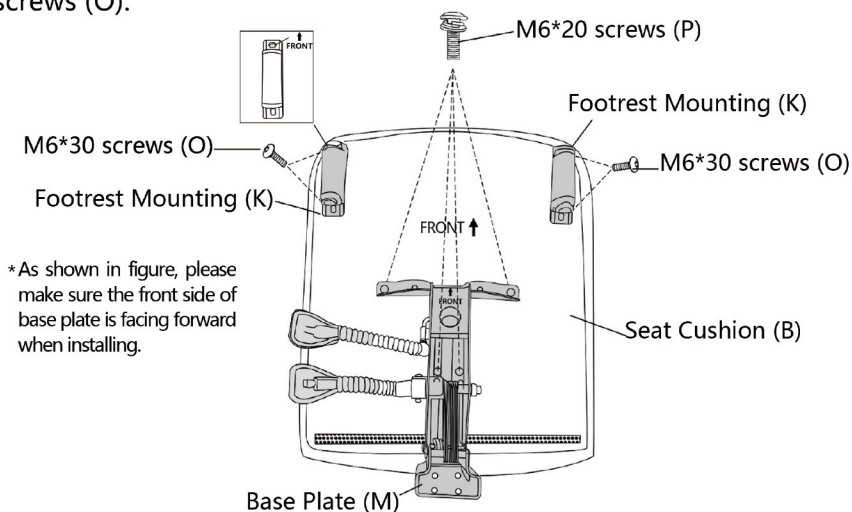


Step 5

Attach armrest frame(D) to the seat cushion(B) with 6 M6*20(P).

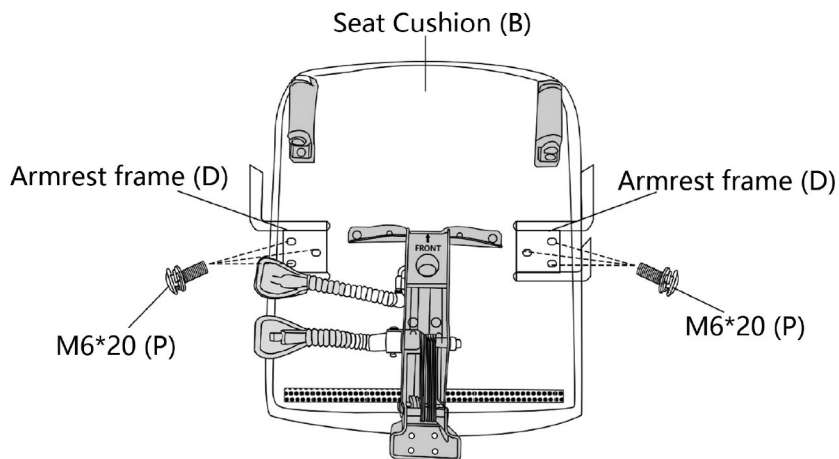

Step 6


Align the tube on both side of the footrest (J) with the hole of the footrest mounting (K), and then push it in M5*10 screw (R) to the side tube of the footrest.

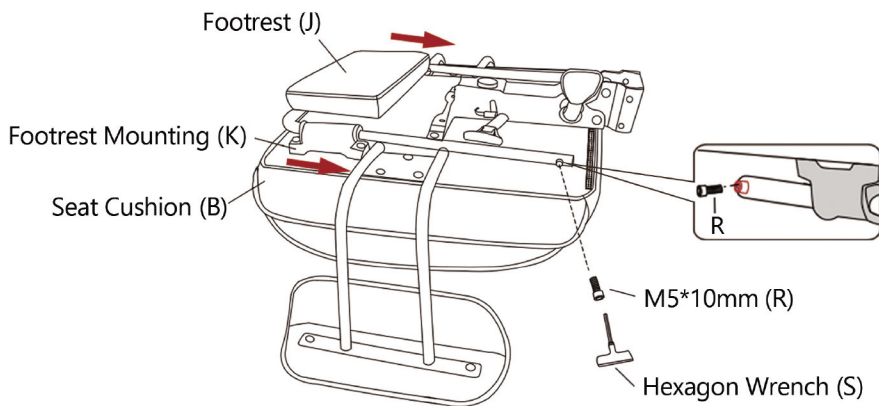

Step 7


Align the air rod (I) with the hole in the middle of the base plate (M), then place the seat cushion (B) on the air rod (I), and press the seat cushion (B) from the top down to fix on.

Seat Cushion (B)

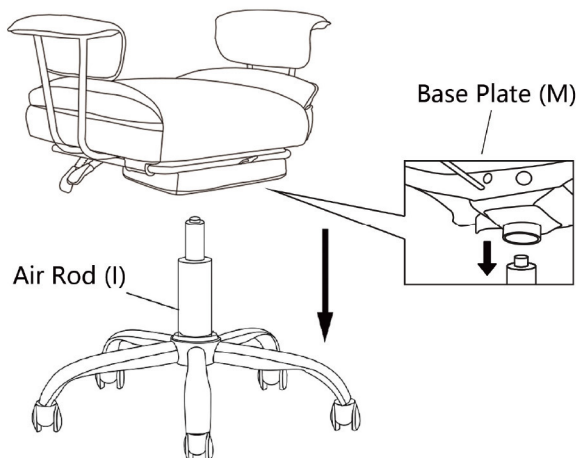


Step 8

Fix the steel plate (L) to backrest (A) with 4 M6*30 screws (O).

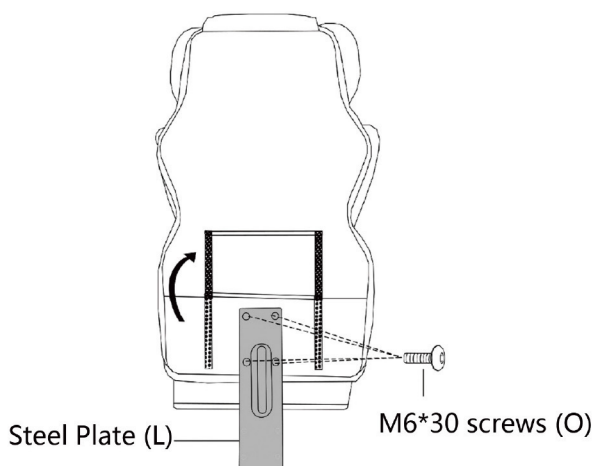

Step 9

After the steel plate is connected to the backrest (Step 8), place the backrest on seat cushion and insert the steel plate (L) into the base plate (M), then tighten 4 M8*25 screws (Q).

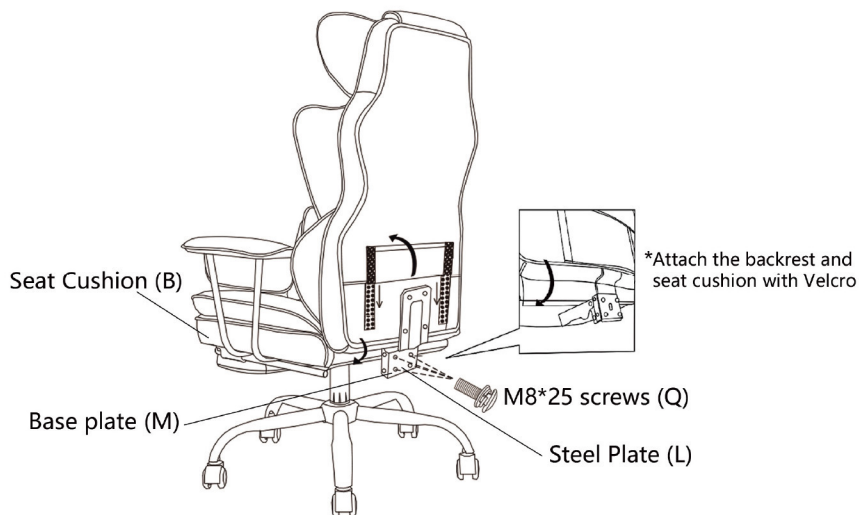

Step 10

Done!



Warranty

We offers a 1-year basic warranty on the ENTIRE OFFICE CHAIR from the date of purchase against defects in material and workmanship. During this period Aoradi will repair or replace, at our discretion, the defective component.

This warranty does not apply to improperly installed, handled, abused, or damaged by user error, nor to any unit which has been repaired or altered by unauthorized repair companies under no circumstances will the customer be entitled to warranty consequential or incidental damages. This limited 1-year basic warranty will only grant customers certain legal rights, customers may have other rights according to different state Laws.