 


## ASSEMBLY INSTRUCTIONS

 
### 5PC RIKA DINING SET ITEM # 98315

ASSEMBLY REQUIREMENTS:	2-Person Assembly	75 minutes Assembly Time (Approximate)	Tools Required: (Not Provided)	Phillips Screwdriver Mallet	
------------------------	-------------------	--	--------------------------------	--------------------------------	---

## Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

Email: [replacementparts@buylateral.com](mailto:replacementparts@buylateral.com)  
Within 30 days from delivery date

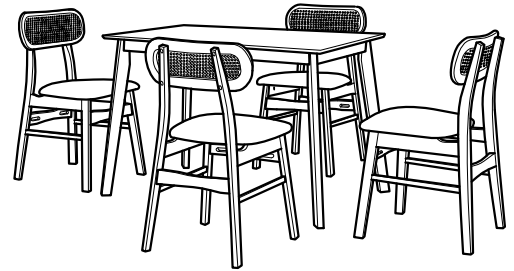

**PRODUCTS PURCHASED THROUGH OUR AUTHORIZED VENDORS ONLY ARE ELIGIBLE FOR REPLACEMENT PARTS.**

We appreciate your business!

**THIS PRODUCT IS FOR INDOOR AND HOUSEHOLD USE ONLY - NOT FOR COMMERCIAL USE.**

### ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are complete before assembly.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

### SAFETY PRECAUTION:

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

### TIPS FOR ASSEMBLY:

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

### CARE AND MAINTENANCE

- Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.
- Solid wood is impacted by heat and humidity fluctuations and may result in small joint separations or hairline cracks; place the furniture away from direct sunlight and air conditioning vents, heating vents or units to protect the furniture.

 
# ASSEMBLY INSTRUCTIONS

## 5PC RIKA DINING SET ITEM# 98315

 

 
 




### PARTS LIST

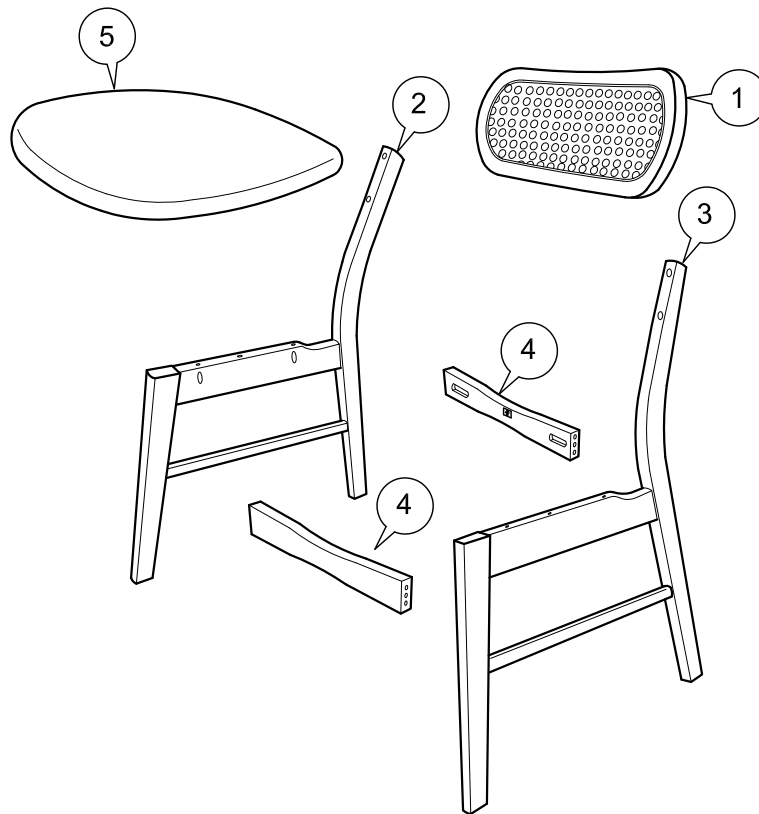Part#	Description	Qty
1	Chair Back	4pcs
2	Side Leg - Left	4pcs
3	Side Leg - Right	4pcs
4	Apron	8pcs
5	Seat	4pcs

### PARTS ASSEMBLY OVERVIEW



 
### Hardware List

DESCRIPTION	QTY	EXTRA	DESCRIPTION	QTY	EXTRA	DESCRIPTION	QTY	EXTRA
<b>A</b>  M6 x 35mm Bolt	16	2	<b>C</b>  5/16" Washer	16	2	<b>E</b>  M4 x 38mm Screw	16	-
<b>B</b>  M6 x 50mm Bolt	16	2	<b>D</b>  M8 x 30mm Wood Dowel	40	-	<b>F</b>  Allen Key	1	-
						<b>G</b>  Leg Pad	16	-
						<b>H</b>  14.5Ø	16	-

# ASSEMBLY INSTRUCTIONS

## 5PC RIKA DINING SET ITEM# 98315


### STEP 1

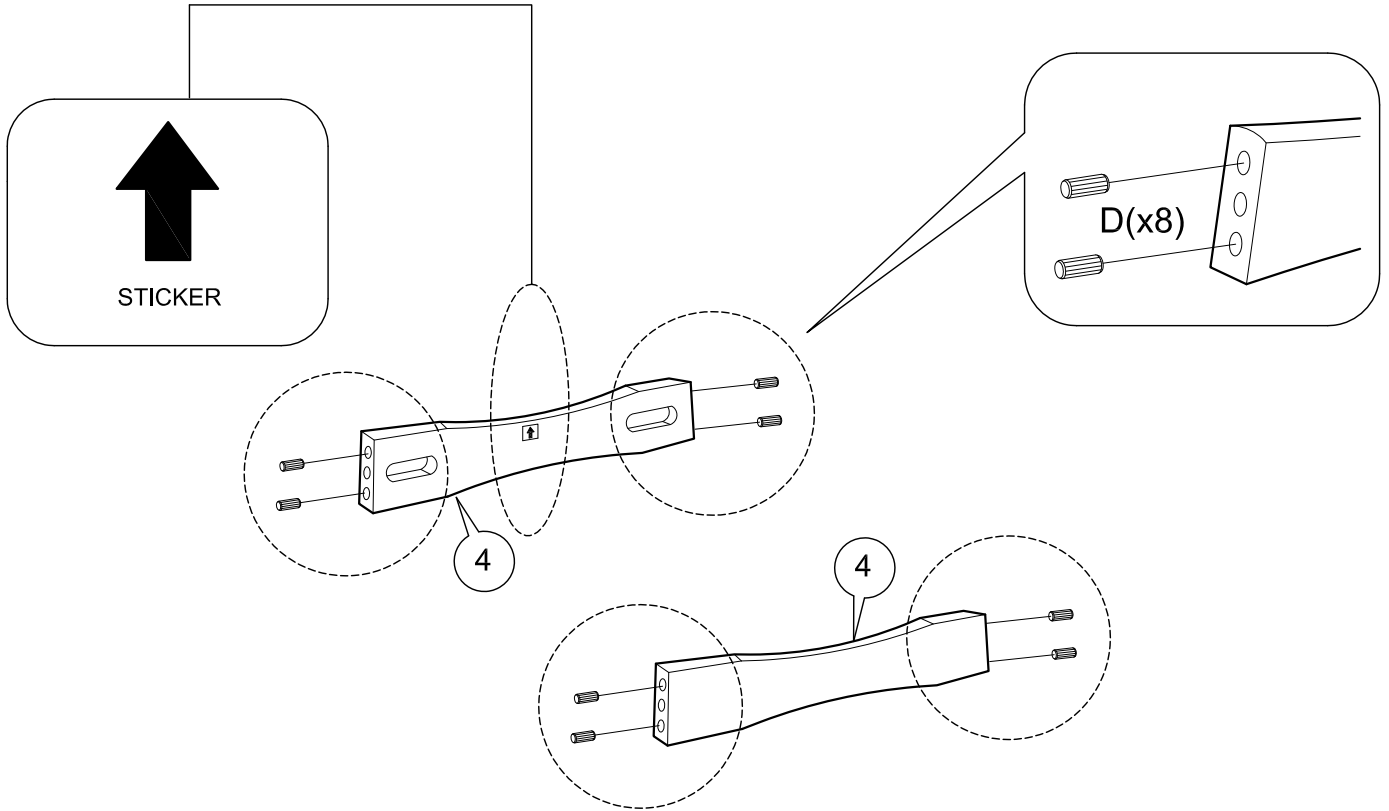

- a) Insert Wood Dowel (D) into the top and bottom holes on each end of Leg Apron (4). Use a mallet to tap in the wood dowel as needed.

ASSEMBLY INSTRUCTIONS  
5PC RIKA DINING SET ITEM# 98315

 
STEP 2

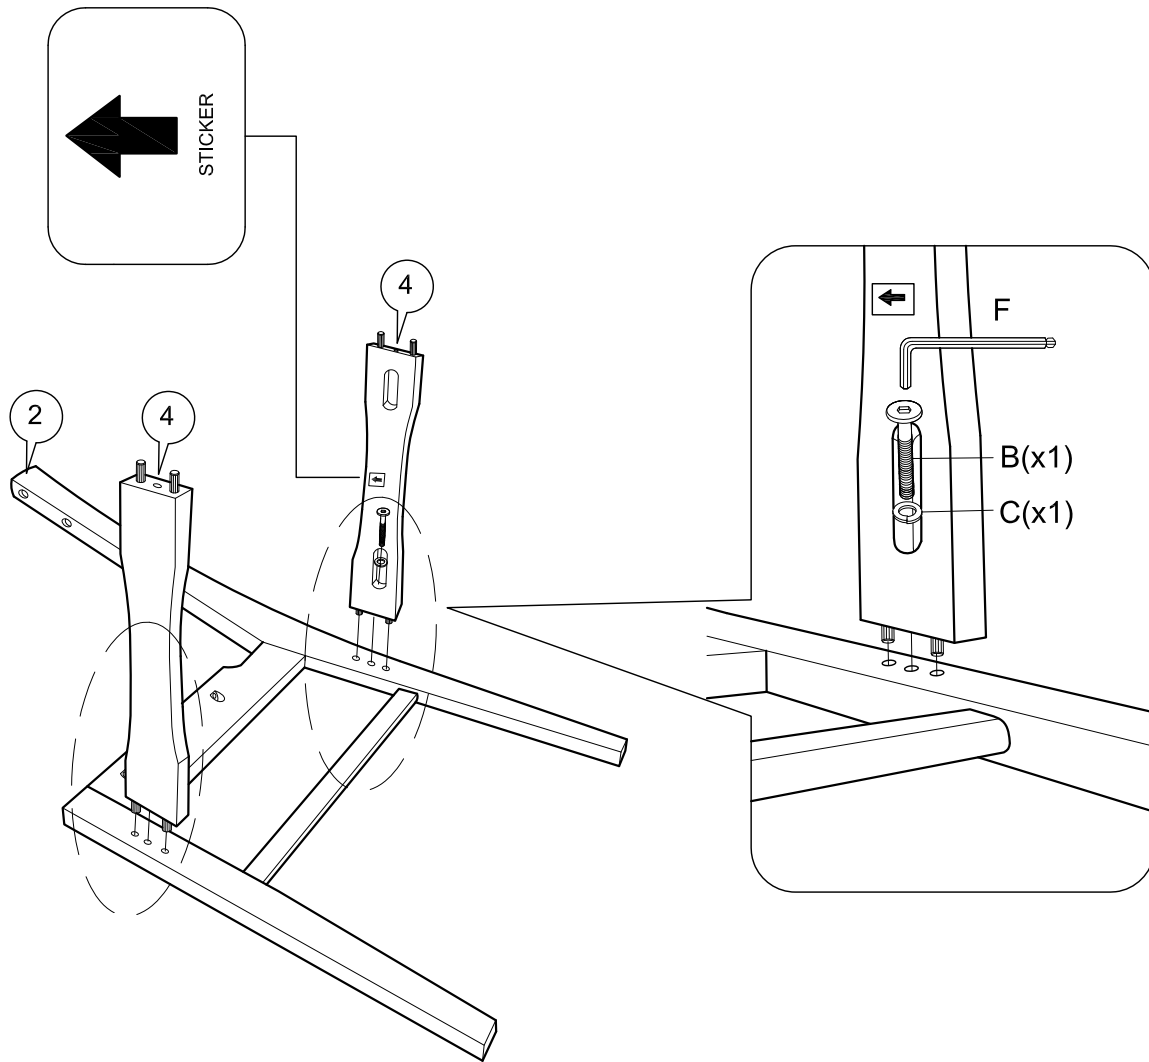

- Lay Side Leg - Left (2) as shown on a material that does not damage the part.
- Attach a Leg Apron (4) from STEP 1 to (2) via wood dowels on (4). Take note of orientation of (4) with respect to the direction of the arrow sticker.
- Insert Bolt (B) fitted with a Spring Washer (C) through the slot on (4) into the bolt hole on (2). Use Allen Key (F) to drive (B) to fasten (4) to (2). Do not tighten (B) completely at this time.
- Use the above procedure to install the second Leg Apron.

ASSEMBLY INSTRUCTIONS  
5PC RIKA DINING SET ITEM# 98315

 STEP 3

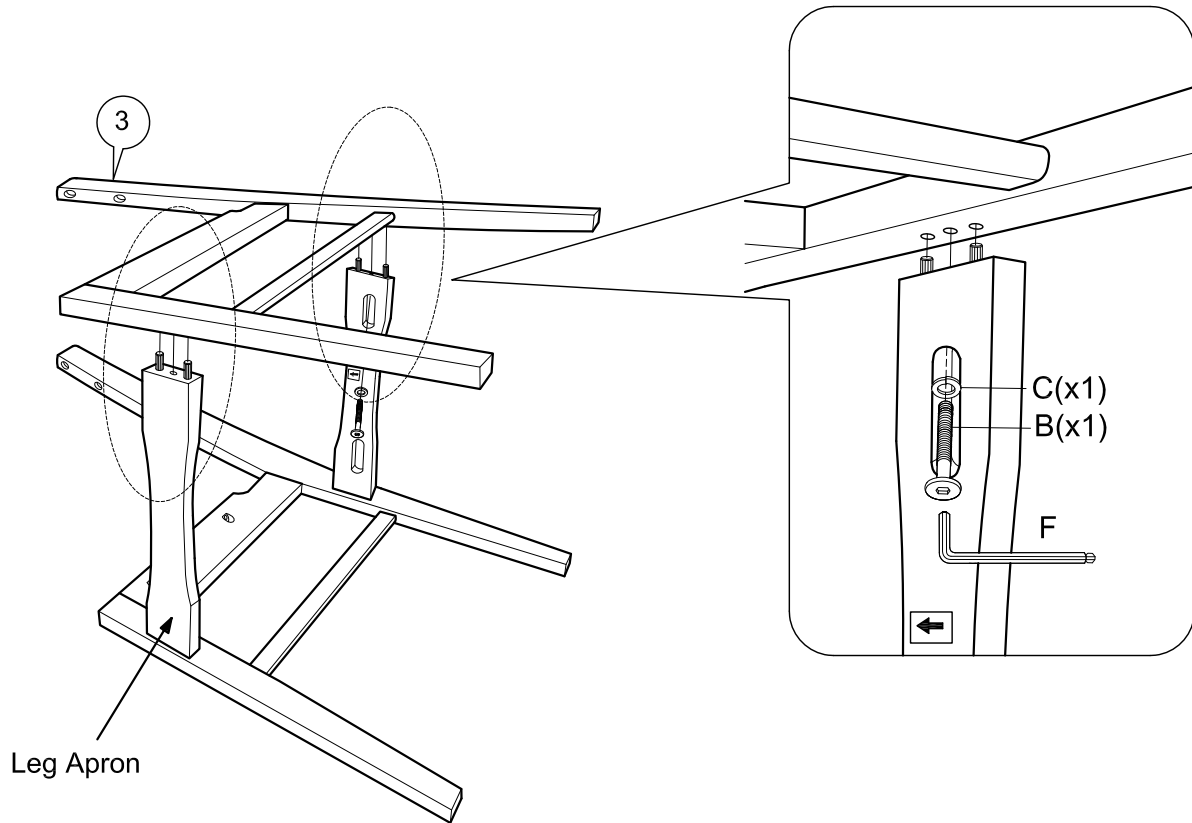


- a) Attach Side Leg - Right (3) to both Leg Apron (4) via wood dowels on (4).
- b) Insert Bolt (B) fitted with a Spring Washer (C) through the slot on Leg Apron into the bolt hole on (3). Use Allen Key (F) to drive (B) to fasten (3) to Leg Apron. Do not tighten (B) completely at this time.
- c) Use the above procedure to fasten the second Leg Apron to (3).

# ASSEMBLY INSTRUCTIONS
 
## 5PC RIKA DINING SET ITEM# 98315


### STEP 4

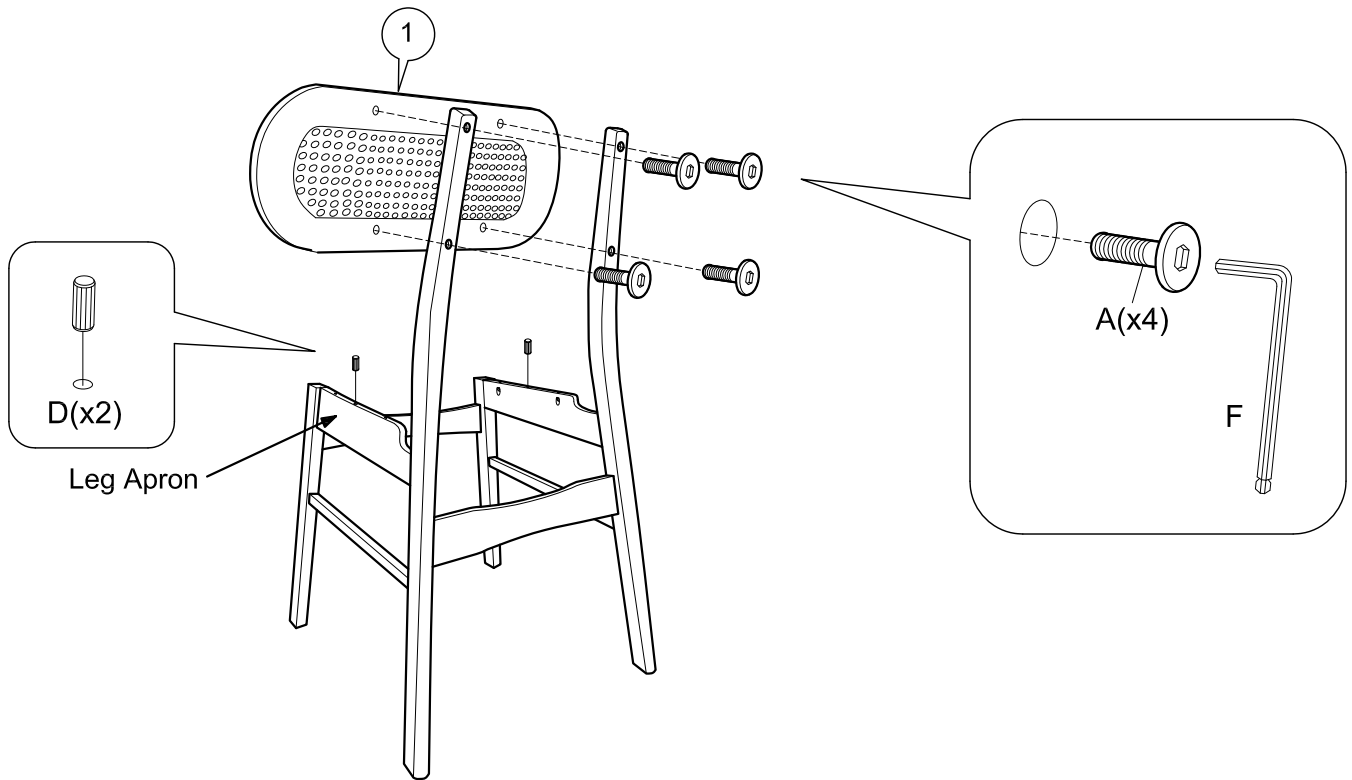

- Set the assembly from STEP 3 right-side up carefully.
- With assistance, position Chair Back (1) to align the bolt holes on (1) to the bolt holes on Left and Right Side Leg as shown.
- Insert Bolt (A) through the bolt hole on each Side Leg into the bolt hole on (1). Use Allen Key (F) to drive and tighten (A) to fasten (1) to each Side Leg. Do not tighten (A) completely at this time.
- Make sure all the legs are stable and contact with the floor, then fully tighten all screws. **DO NOT OVER-TIGHTEN.**
- Insert a Wood Dowel (D) into the designated hole on each Leg Apron.

ASSEMBLY INSTRUCTIONS  
5PC RIKA DINING SET ITEM# 98315

 STEP 5

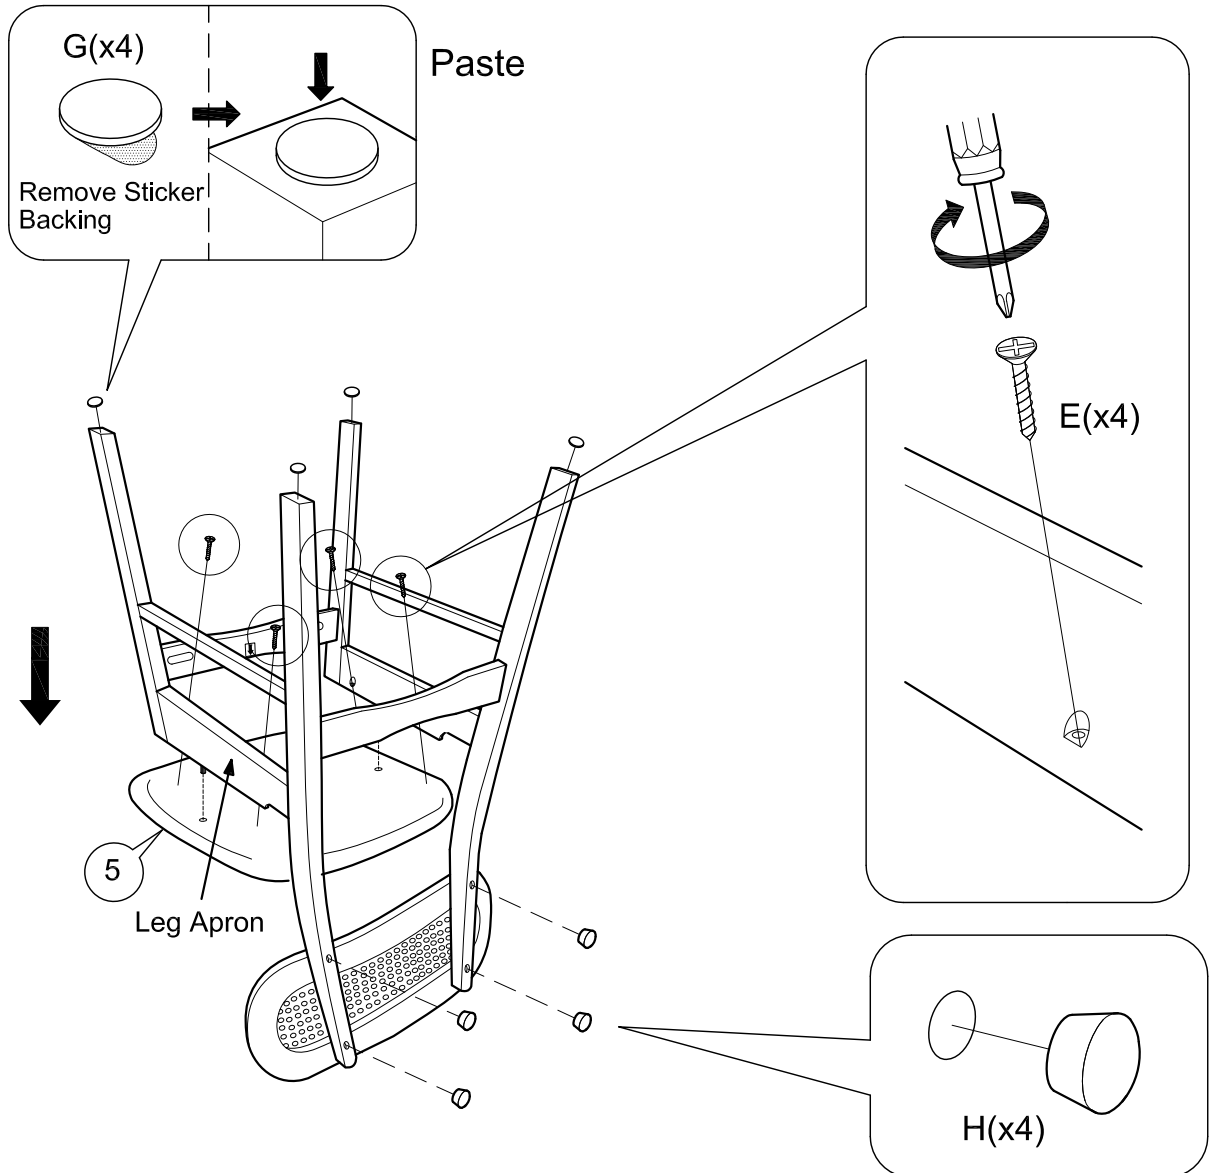

- Place Seat (5) bottom-side up on an elevated surface (e.g table top).
- Position the assembly (from STEP 4) with the legs facing up as shown and attach (5) to the wood dowel on Leg Apron.
- Use Screw (E) to fasten (5) to the Leg Apron. Use a Philips Screwdriver to drive and tighten the screws.
- Remove sticker backing on Leg Pad (G) and attach Leg Pad to the bottom of each leg.
- Insert Wood Plug (H) to conceal the bolt holes on Chair Back.

Set the chair right-side up. The assembly of the chair is complete.


# ASSEMBLY INSTRUCTIONS
 
## 5PC RIKA DINING SET ITEM # 98315






### PARTS LIST

Part#	Description	Qty
6	Table Top	1pc
7	Leg	4pcs
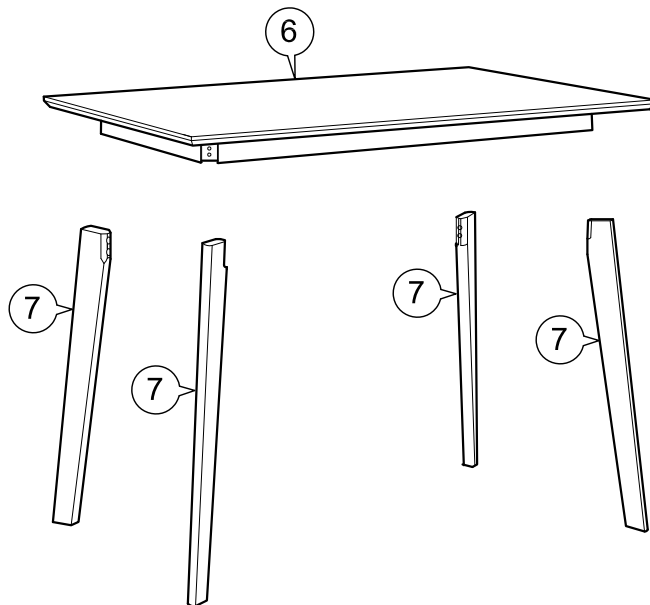
### PARTS ASSEMBLY OVERVIEW

 

### Hardware List

 
DESCRIPTION	QTY	EXTRA	DESCRIPTION	QTY	EXTRA	DESCRIPTION	QTY	EXTRA
<b>A</b>  M6 x 60mm Bolt	8	2	<b>C</b>  1/4" Washer	8	2	<b>E</b>  Leg Pad	4	2
<b>B</b>  1/4" Washer	8	2	<b>D</b>  Allen Key	1	-			

\* Extra hardware for spare use

# ASSEMBLY INSTRUCTIONS
 
## 5PC RIKA DINING SET ITEM# 98315

### STEP 1

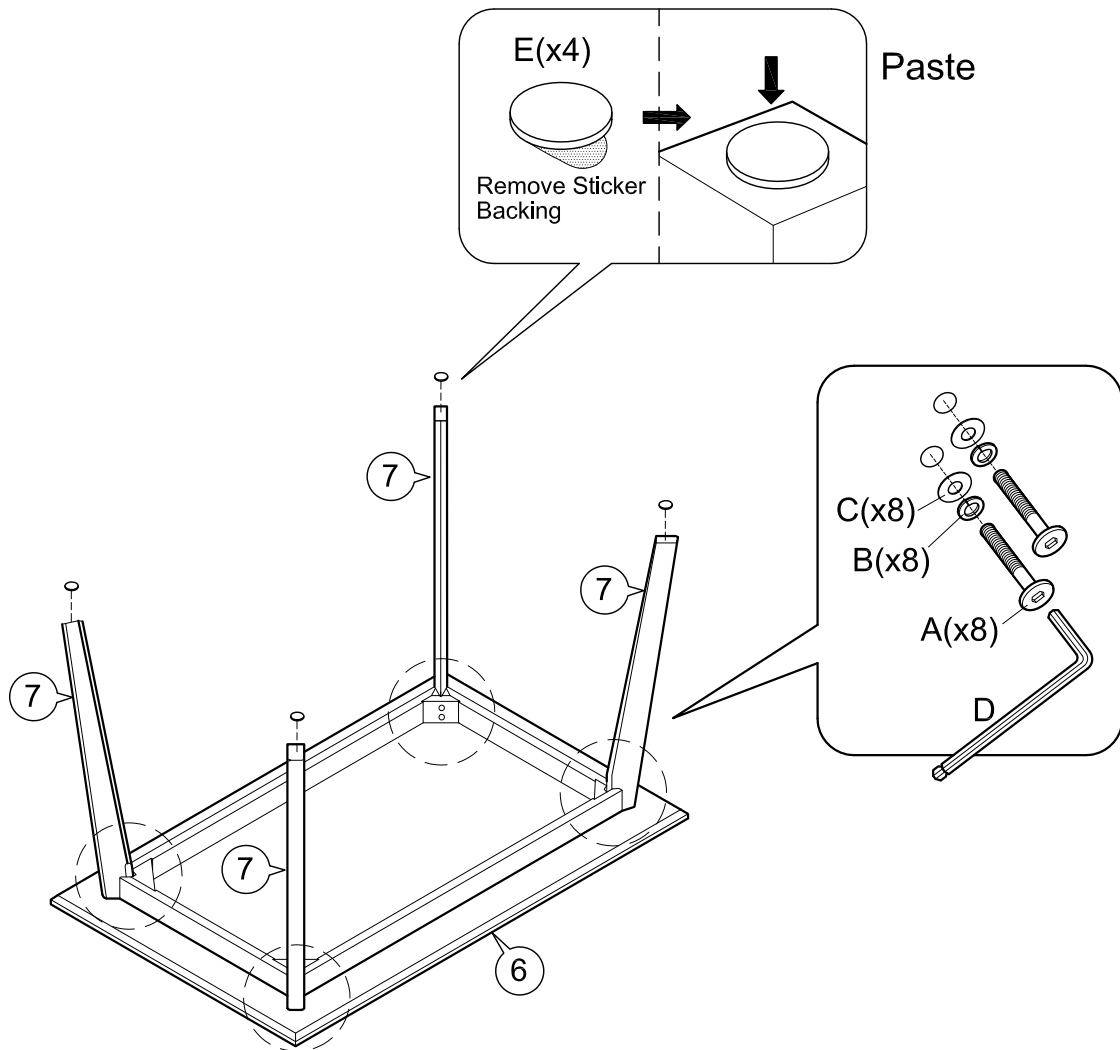

- With assistance, lay Table Top (6) bottom-side up flat on a material that does not damage the part.
- Position a Leg (7) against the corner of the table aprons and align the screw holes on (7) to the screw holes on the corner block.
- Insert Bolt (A) fitted with Spring Washer (B) and Flat Washer (C) through each hole on the corner block into the respective bolt hole on (7). Use Allen Key (D) to drive (A) to fasten (7) to corner block. Do not tighten (7) completely until both bolts are in place on each leg. Do not over-tighten.
- Repeat the above assembly procedure for the other three legs.
- Remove sticker backing on Leg Pad (E) and attach Leg Pad to the bottom of each leg.
- With assistance, set the table right-side up.  
The assembly of the table is complete.