

左上角

Instructions during use

1. Move the item gently to avoid collision.

2. Keep it away from direct sunlight.

3. Check to ensure that the center of gravity is on the hydraulic when in use.

4. Watch out your fingers when adjusting the backrest angle.

5. Use the handle adjuster under the seat to adjust the seat height. Do not press or pull the seat by force.

7. Do not place any heavy objects on the seat or armrests.

8. Keep the plastic parts away from direct sunlight.

9. Avoid abrasive cleaner for cleaning.

ASSEMBLY INSTRUCTIONS



8

-8-

1

-1-

右上角

Parts

Check and make sure you get the components on the list, contact us for any missing

A Backrest

B Seat

C Left armrest

C Right armrest

D Control unit ×1

E Allen Key ×1

F Central base tube

G Foot

H Casters

J M8*40

K M6*20

L Footrest pillow

M Gas lift

N Headrest

O Lumbar support

P Steel plate

R M8*25

S M5*10

T M6*20

U Plastic Caps

V Sliding Block

W M6*30

X Gasket

X 5

X 5

x 4

x 10

x 1

x 4

x 8

x 1


x 4

x 4

x 2


x 3

Reclining function

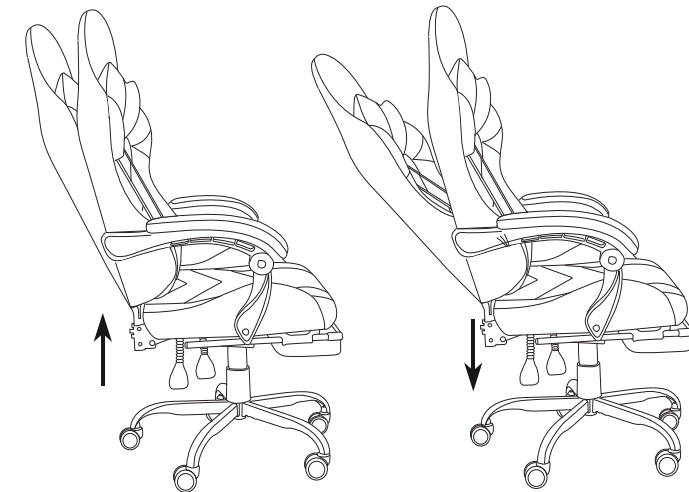

pull up on the rear control handle to adjust the reclining angle

pull down it to fix the backrest of the chair at the angle

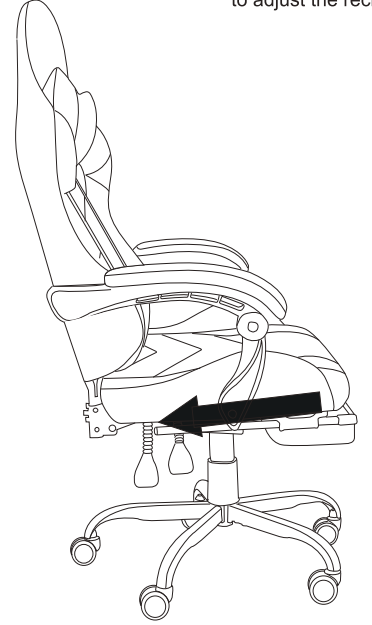

Adjustable degree:0°-135°

2


-2-

7


-7-

左上角

Function

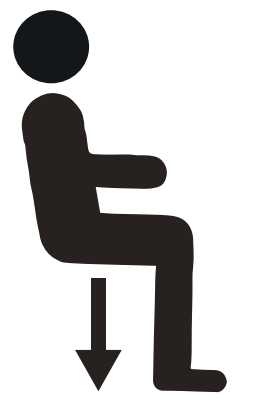

1 Load capacity up to 330lb

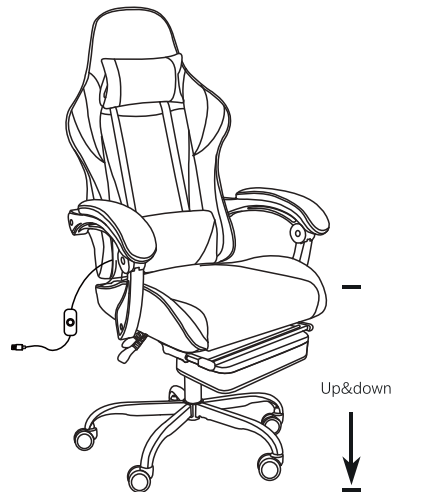

2 Seat Height adjustment (pull up on the control handle to adjust)



3 360 degree swivel

Assembly steps


1. Assemble five-star foot


2.Attach wheels

3. Insert the gas lift and plastic cover

4. Fix the control unit to the base of the seat

5.Insert the footrest into the anchor hole

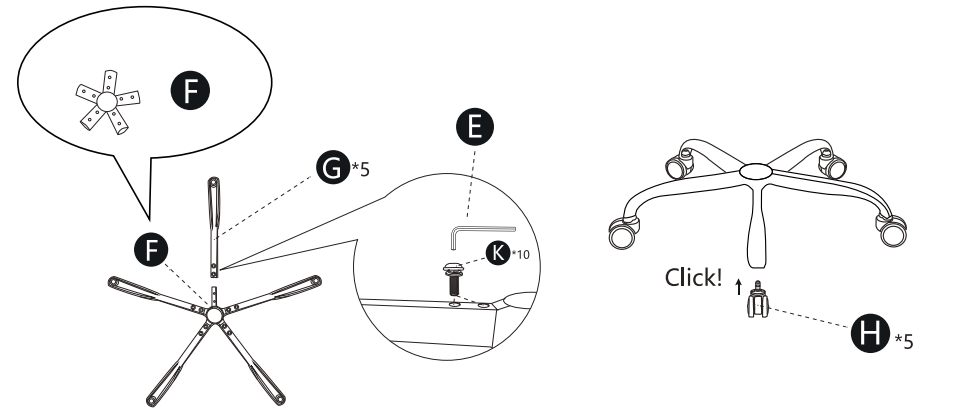

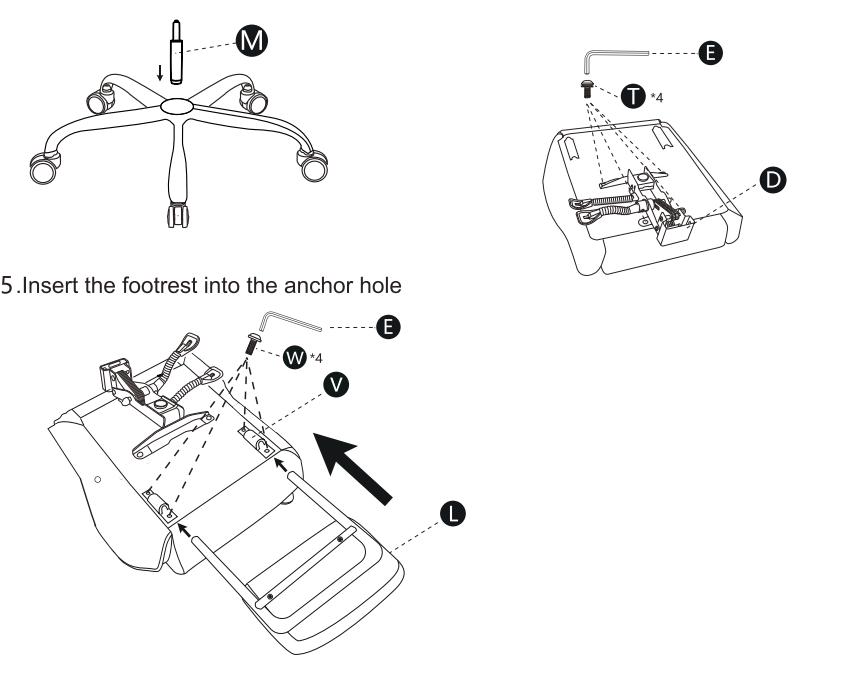

6

-6-


3


-3-

右上角4/5改

6.Fix the footrest

7.Insert the gas lift into the control unit

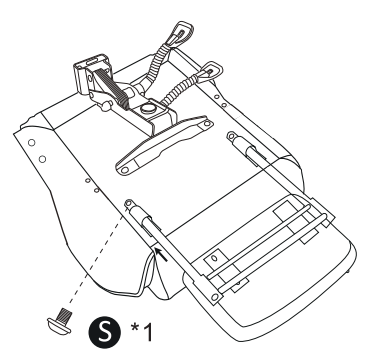


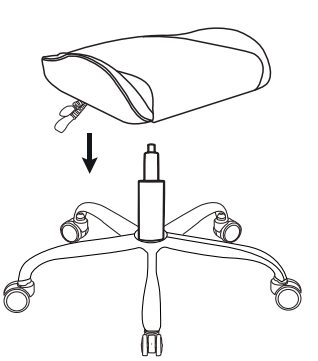



8.Mount the steel plate into the control unit, mount the back on the steel plate

9

10

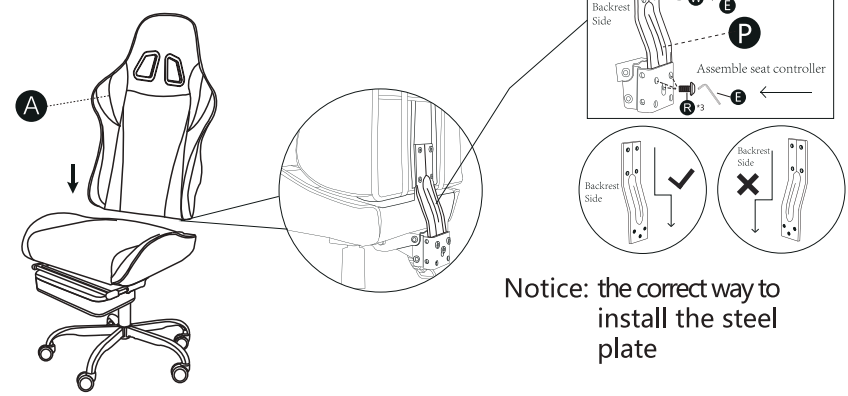

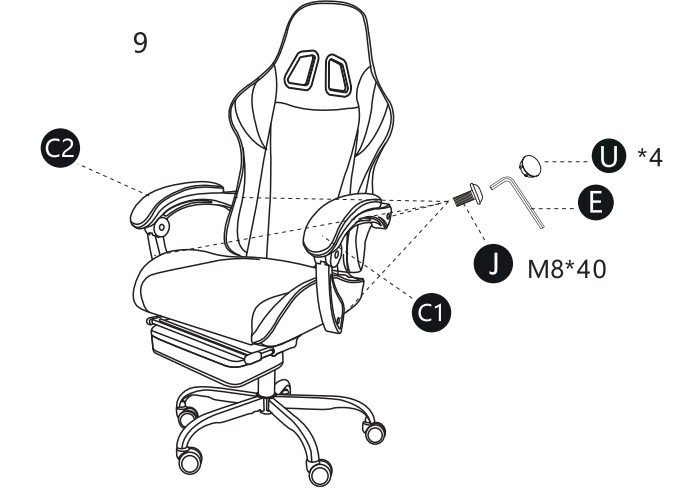

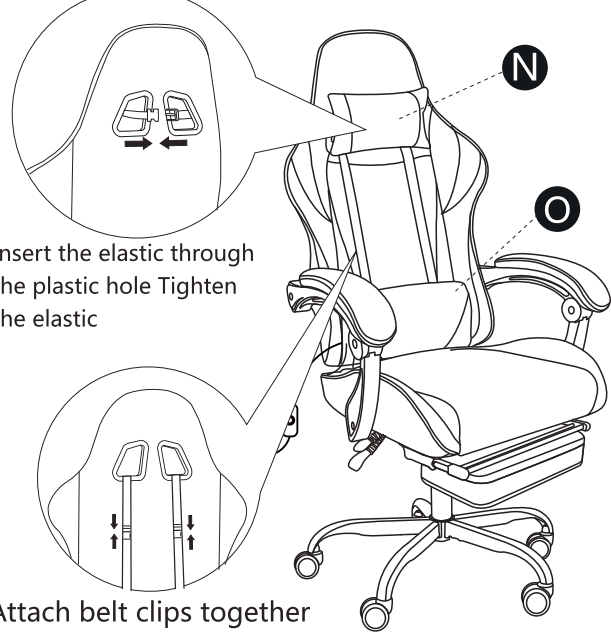

4

-4-

5

-5-