



ASSEMBLY INSTRUCTION

YF-AC04


Ax1

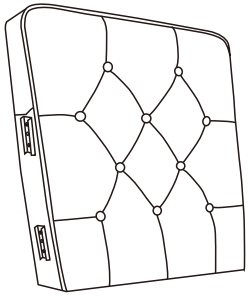


Bx1

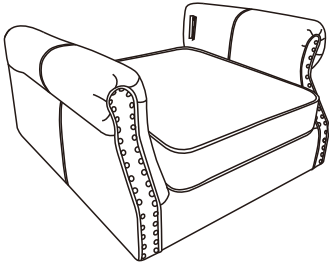


Cx1

 


Dx1

 


Ex2

 


Fx2

 

Gx12

 

Hx2

 


Ix1




①

FRONT

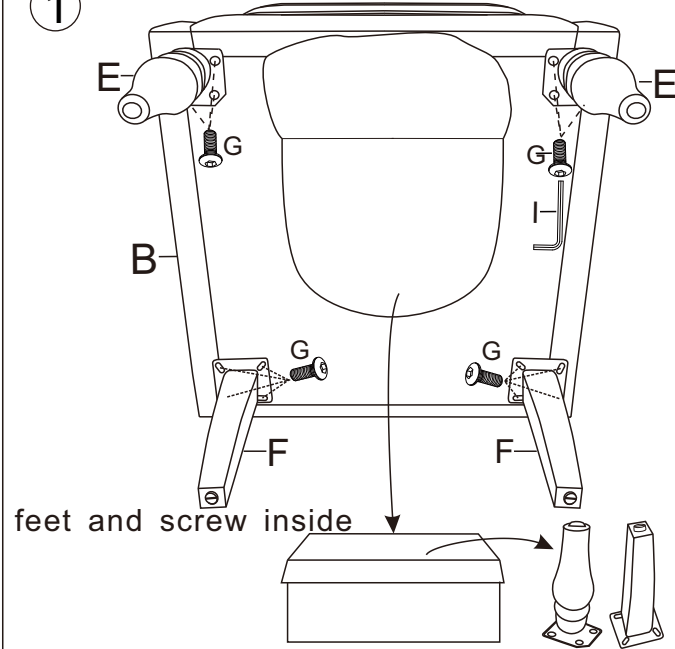

②

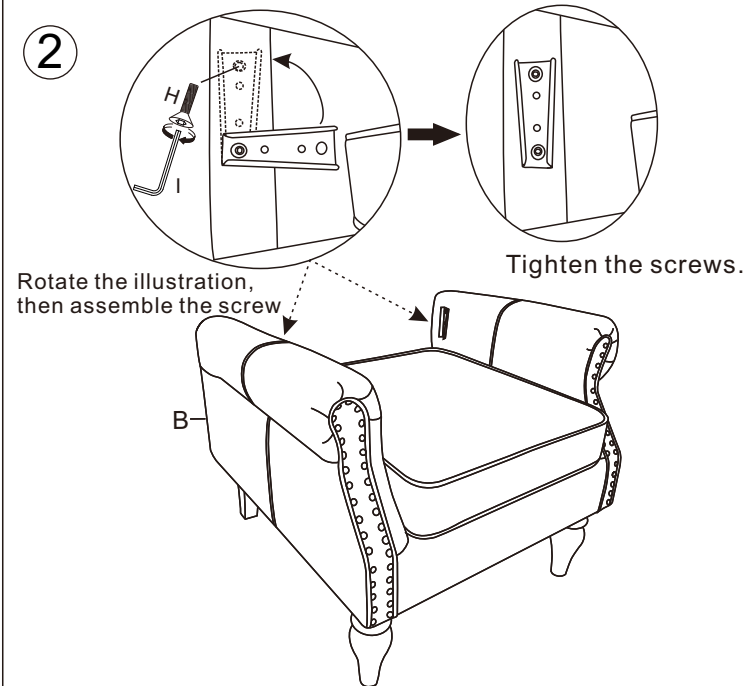

③

