

**USER'S MANUAL**  
**13'x13' Folding Outdoor**  
**Awning Canopy Tent**  
**OP3280**

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

**Please give us a chance to make it right and do better!**

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

**Follow Costway**

Visit us: [www.costway.com](http://www.costway.com)



# Contact Us!

## Do NOT return this item.


 
 
 
Contact our friendly customer service department for help first.






# Before You Start

- ⦿ Please read all instructions carefully.
- ⦿ Retain instructions for future reference.
- ⦿ Seperate and count all parts and hardware.
- ⦿ Read through each step carefully and follow the proper order.
- ⦿ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⦿ Always place the product on a flat, steady and stable surface.
- ⦿ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

# PARTS LIST

 Part A - 1 Piece	Part B - 1 Piece	Part C - 4 Pcs	Part D - 1 Piece
			
Small Canopy Fabric	Large Canopy Fabric	Leg Panels	Frame

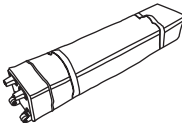Part E - 1 Piece	Part F - 8 Pcs	Part G - 4 Pcs
		
Wheeled Carry Bag	Stakes	Ropes

**This is a pop-up, non-permanent structure. It is designed for providing temporary sunshade only. It is not constructed to be left up for long periods of time and needs to be taken down in any type of wind or rain to avoid damage**

# ASSEMBLY INSTRUCTIONS

## WARNING:

Always read and follow the Assembly Instructions before use. Use caution to avoid pinching your hands or fingers in any of the moving parts as the frame opens and closes. This canopy is designed to provide shade only. Do not use the canopy in windy and rainy conditions. High winds and rain can damage the canopy and could result in injury to you and others.

Always stake or anchor your canopy once it is set up and in use. Keep flame and hot surfaces away from the canopy. The fabric is NOT FIREPROOF and will ignite if left in continuous contact with any flame source. The canopy is NOT designed as a permanent structure. DO NOT leave the canopy unattended. After each use, disassemble the canopy and store it in a covered, dry area. Set up of the canopy requires a minimum of two people. Please keep all children away from the assembly area.

## WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC

This canopy meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source, The application of any foreign substance to the canopy fabric may render the flame-resistant properties ineffective.

# ASSEMBLY INSTRUCTIONS


## SET-UP INSTRUCTIONS

**IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING SET-UP.**



**STEP1.** Stand frame upright beginning at the corners with each person standing on opposite sides of the frame. Grasp the two outer legs, lift frame slightly off of the ground and step backward, stopping at a full arms length.

**STEP 2 .**Unfold the fabric canopy pack and place the fabric top over the top frame. Use the Velcro pads to secure each corner of the cover to the frame under the plastic caps.

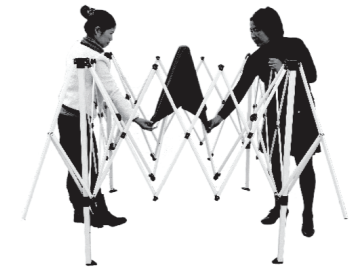

**STEP 3.** Each person should grasp the bottom of the cross beams (middle frame section) where it forms a "diamond" shape. Lift slightly off of the ground and slowly walk backward until the frame is fully extended. Be careful not to pinch your fingers. **DO NOT PULL BACKWARD TOO HARD, AS THIS MAY RESULT IN BENDING THE CROSS BEAMS.**

## ASSEMBLY INSTRUCTIONS



STEP 4: Engage the "auto slider" at each corner of the canopy by pulling out and up with one hand, while holding down the top of the leg section with the other hand. Repeat this step with the remaining corners until all snap buttons lock into place.

STEP 5. Use the Velcro straps to further secure the fabric to the frame.



STEP 6. Lift two adjacent outer legs of frame and pull out inner legs slightly until pin locks into place. Repeat this step on the remaining legs. The canopy offers 3 height levels. To adjust the height, lift the leg up, push the button at the knuckles of the leg and slowly pull the inner leg until you attain the desired height. Release the button until the auto-lock system snaps into position. Repeat this step on the remaining legs.


## ASSEMBLY INSTRUCTIONS

STEP 7. Anchor the canopy by driving the four (4) small stakes (provided) through the holes on each foot at the base of the frame. This will secure the unit from movement during mild weather conditions.



STEP 8: Secure the four (4) large stakes to the ground at a 45 degree angle. Tie one end of the rope to the iron ring located on the corners.

STEP 9: Tie the other end of each rope to the stakes on the ground. Make sure that the ropes have proper tension.

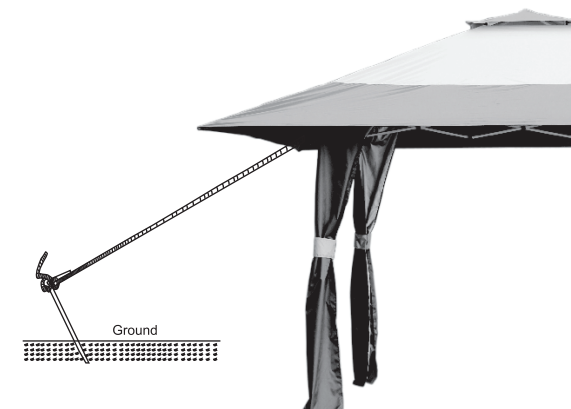



# ASSEMBLY INSTRUCTIONS

## DISASSEMBLY INSTRUCTIONS:


**IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING THE DISASSEMBLY OF THE POP-UP GAZEBO. PLEASE REMOVE THE ANCHORS AND ROPES BEFORE DISASSEMBLING THE UNIT.**

STEP 1. Each person must lift two adjacent outer legs slightly. Push in the knuckle buttons in and telescoping inner legs up into the outer leg portion. Disengage the Velcro straps from around the cross beams. Failure to do so may result in tearing the fabric during the disassembly of the Pop-Up Gazebo.



# ASSEMBLY INSTRUCTIONS

STEP 2: Release sliders at all four corners by gently depressing the push button and pushing the sliders down a bit. (CRITICAL STEP TO AVOID FRAME DAMAGE!)

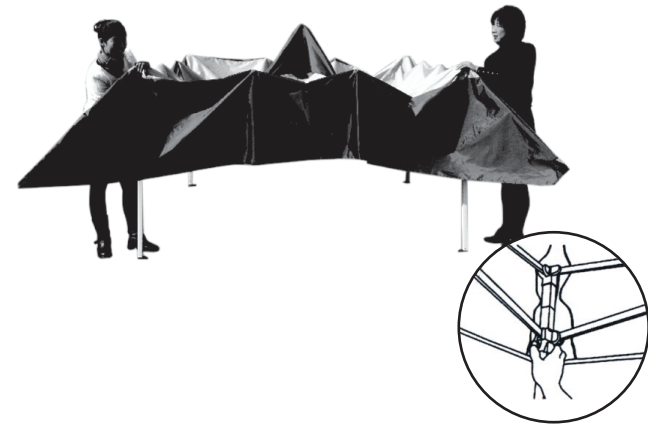

STEP 3: With one person on opposite sides of the pop-up gazebo, grasp the upper portion of the outer legs and lift up slightly. Gently shake the frame and step toward each other until the canopy portion is 3/4 of the way closed. Please do not push too hard.



## WARRANTY

### 90 day Limited Warranty

This product is warranted to the original purchaser against defects in workmanship and materials. If a products fails during the first 90 days from date of purchase under the terms of our limited warranty, please contact customer support. Manufacturer reserves the right in the case of discontinued or out of production models, to replace with an item of similar quality.

### Frames

Frames are warranted against defects in materials and workmanship from the date of original purchase. Damage to frame or welds due to commercial use, improper assembly, exposure to water and sub-freezing temperatures, and/or abuse are not covered.

### Fabric

The fabric is warranted against separation at the seams. Fading, mildew and/or discoloration due to exposure to the elements, chemicals and spills are not covered.

### Metal Finishes and/or Paint

The finish is warranted against blistering, peeling, or cracking. Fading resulting from exposure to elements, chemicals, and spills are not covered. Scratches and chips due to normal wear and use are not covered.

## WARRANTY

### Storage

Your new Gazebo was crafted from steel and treated with a powder coat finish to protect it from rust. Please periodically inspect your new Gazebo for any scratches or chips and touch up with a paint for metal from your local hardware store to insure many years of use. This product will rust if not protected. If you are dismantling and storing your Gazebo after use,store in dry place wiping down and drying off all metal parts.

**Note: You must retain original receipt to obtain warranty!**

### Exclusions

- Damage caused by acts of nature.
- Wind damage.
- Failure caused by unreasonable, unanticipated or abusive use.
- Normal fade of fabrics, upholstery or woven materials.
- Bursting or cracking of tubing due to exposure to water and freezing temperatures.
- Warranty will be void without original receipt.

**This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.**

## Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us!  
We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2019  
Great products so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, COSTWAY will be more consistent to offer you  
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- \* Reward Points
- \* Exclusive Customer Service
- \* Personalized Recommendations
- \* Permanent Shopping Cart
- \* Order History

## 5 Star Rating



We would like to extend our heartfelt thanks to  
all of our customers for taking time to assemble  
this product and giving us valuable feedbacks.

