 


TV Stand


DSG064 | Standard

Assembly Instructions

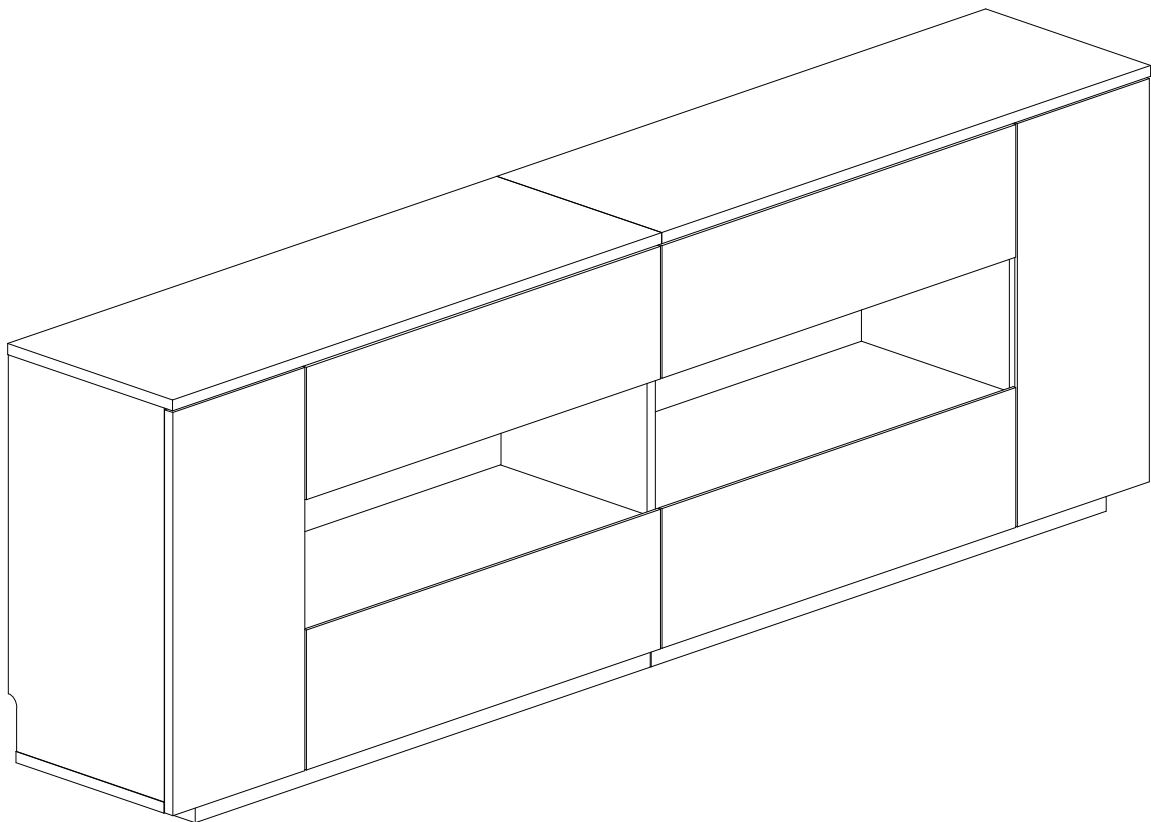


Assembly Diagram

DSG064 | Standard

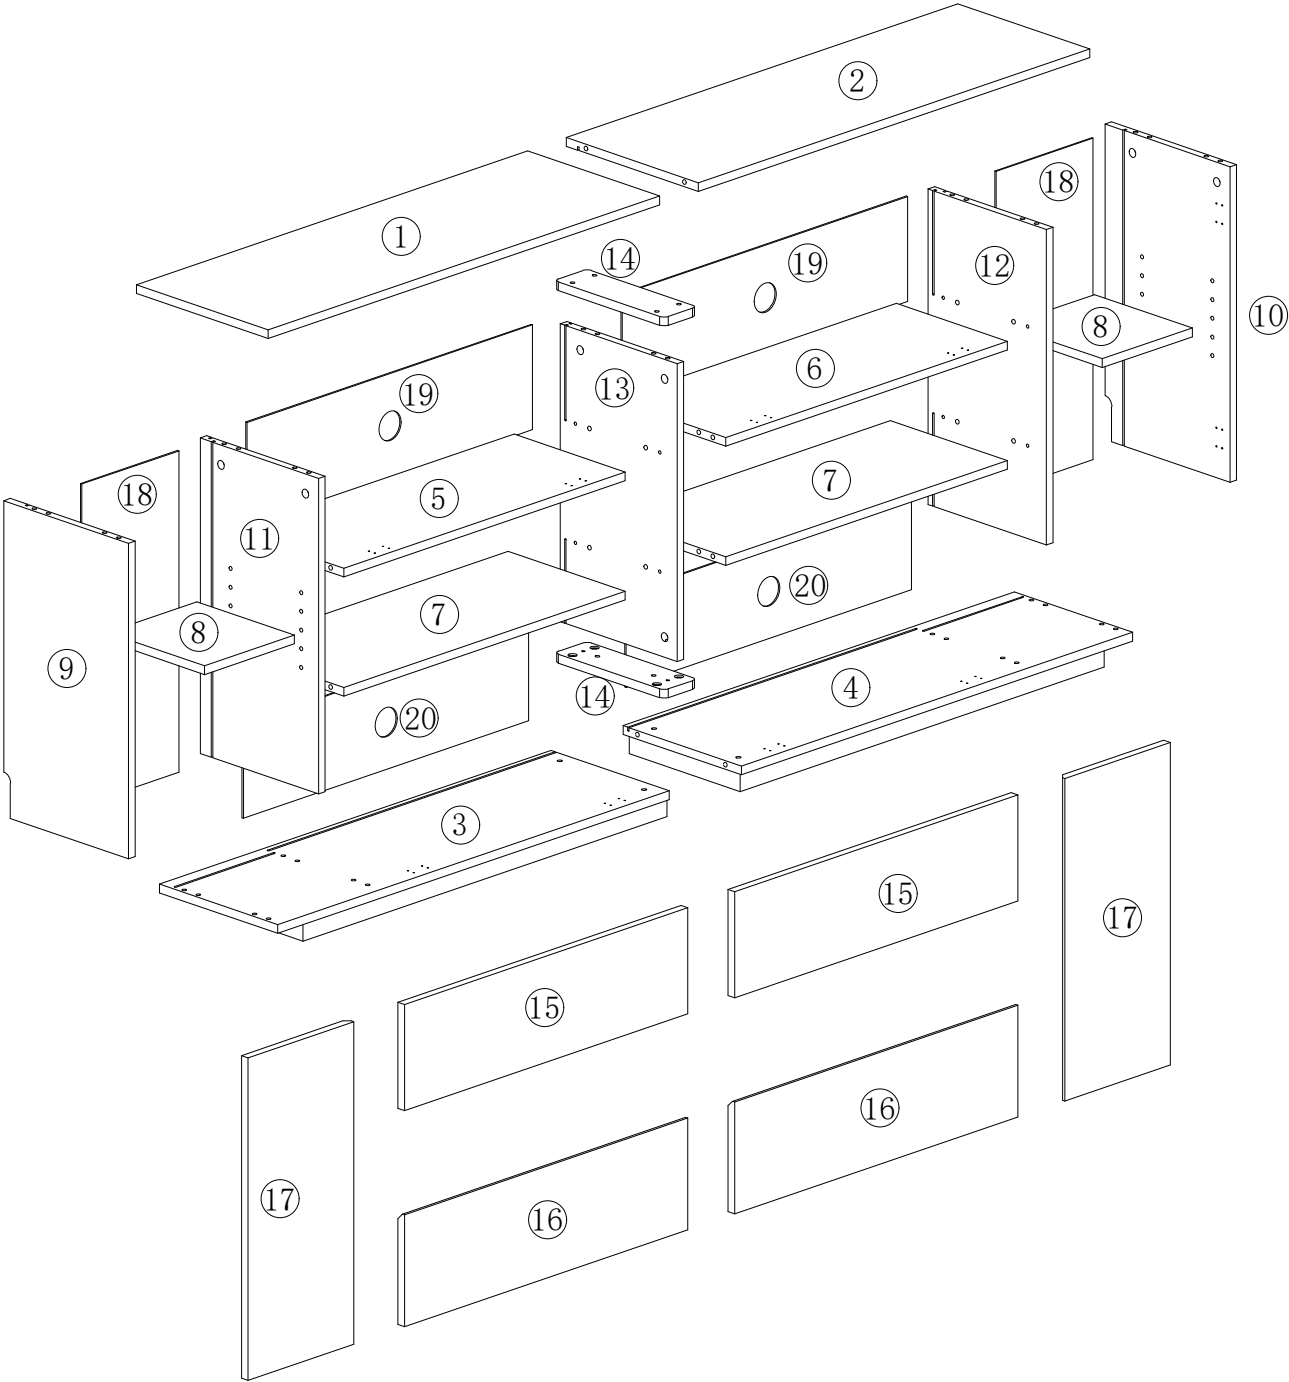 


Parts List

DSG064 | Standard

 


1 Left top panel

 Quantity: 1




2 Right top panel

 Quantity: 1



3 Left base panel

 Quantity: 1




4 Right base panel

Quantity: 1


Parts List

DSG064 | Standard

 

5 Upper left shelf

 Quantity: 1




6 Upper right shelf

Quantity: 1



7 Lower shelf

 Quantity: 2




8 Adjustable shelf

Quantity: 2


Parts List

DSG064 | Standard

 


9 Left outer side panel

 Quantity: 1




10 Right outer side panel

 Quantity: 2



11 Left inner side panel

 Quantity: 1




12 Right inner side panel

Quantity: 1


Parts List

DSG064 | Standard

 


13 Center divider

 Quantity: 1




14 Connecting plate

 Quantity: 2

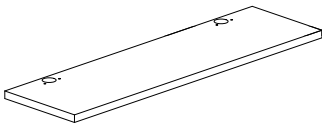

15 Upper door

 Quantity: 2

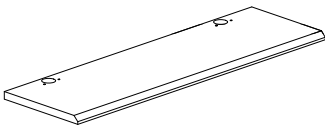


16 Lower door

Quantity: 2


Parts List

DSG064 | Standard

 


17 Side door

 Quantity: 2




18 Side back panel

 Quantity: 2

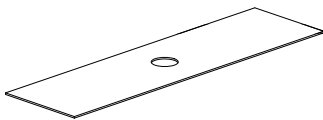

19 Upper back panel

 Quantity: 2




20 Lower back panel

Quantity: 2

Hardware & Tools


DSG064 | Standard

 

A Cam bolts

L=35MM

 
Quantity: 28 + 2

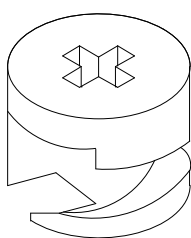

B Cam locks

Ø15MM

 
Quantity: 28 + 2

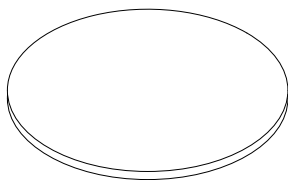

C Cover stickers

Ø20MM

 Quantity: 28 + 2




D Wood dowels

Ø8 × 30MM

Quantity: 40 + 4

Hardware & Tools


DSG064 | Standard

 

E Connector screws

M5 × 40MM

 
Quantity: 8 + 2

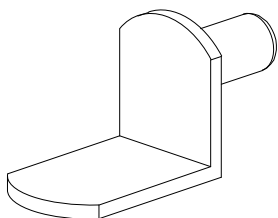

F L-shaped shelf supports

Ø6 × 20 × 16MM

 
Quantity: 8

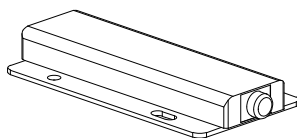

G Push-to-open latches

142 × 45MM

 Quantity: 2

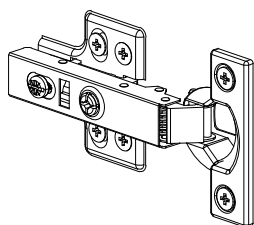


H Soft-close straight-arm hinges

Ø35MM

Quantity: 12

Hardware & Tools


DSG064 | Standard

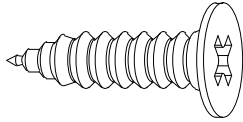 

I Wood screws

#3.5 × 15MM

 
Quantity: 80 + 5

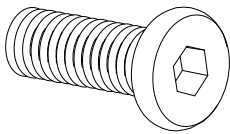

J Hex socket bolts

M6 × 25MM

 
Quantity: 8 + 1

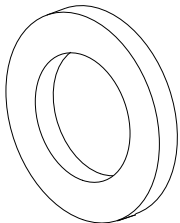

K Washers

M6 × Ø13MM

 Quantity: 8 + 1

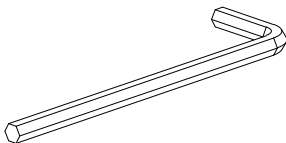

L Hex key


M4 × 100MM

Quantity: 2

Reusable tool

Hardware & Tools


DSG064 | Standard

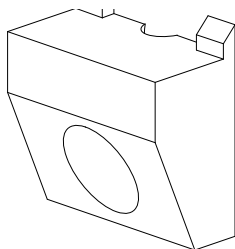 

M Back panel clips

13 × 13 × 9.5MM

 
Quantity: 28 + 2

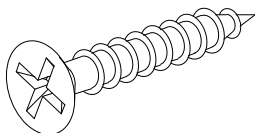

N Wood screws


Ø3 × 12MM

 Quantity: 28 + 2

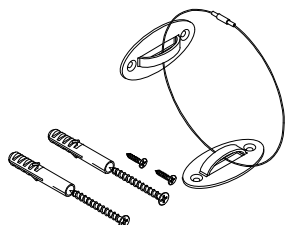

O Anti-tip hardware kit

 Quantity: 2 sets



P Ratchet screwdriver

M6 × 136MM

Quantity: 1

Reusable tool

Safety Warnings

DSG064 | Standard

Place the unit on a level surface, or level it with the included

hardware when applicable.

Do not sit or stand on the product. Do not allow children to climb, sit or stand on it.

For safety, the unit must be secured to the wall.

Do not use the unit without installing the tip restraint.

The unit can tip over and cause severe injury or death.

Do not exceed the recommended weight limits.

Distribute weight evenly on each level. Keep heavier loads at the bottom.


Before cutting, drilling or hammering into a wall or floor, check for electrical wiring, plumbing and gas lines. Cutting into them can cause serious injury.

Cam Lock Assembly


DSG064 | Standard

Illustration key: A = cam bolt; B = cam lock.

 
For this model, use Cam Bolts A and Cam Locks B.

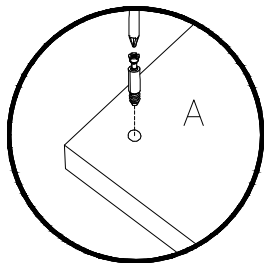

 
1. Screw the cam bolt into the panel.

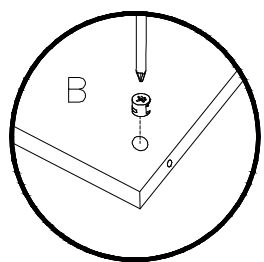

 
2. Insert the cam lock with its arrow pointing toward the panel edge.

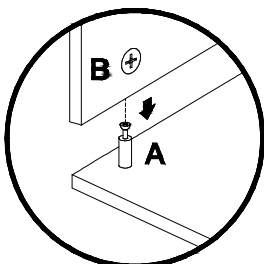

 3. Align the cam bolt and cam lock.
Insert fully into the cross-bored hole.

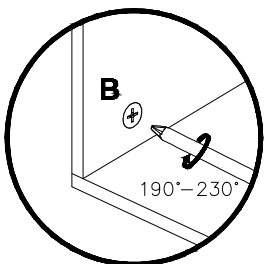

 4. Turn the cam lock clockwise
190°–230° to lock the panels.

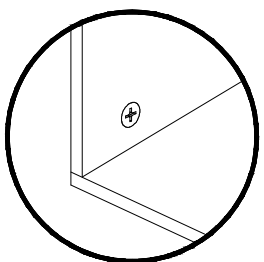

5. Check that the panels fit tightly
and the connection is rigid.

Generic Fitting Reference

DSG064 | Standard


 
 
 
Follow the insertion depths shown for the connector types illustrated.

Illustration labels A and C are generic reference labels.

Use the model-specific parts and hardware lists for assembly.

For a wood dowel, insert it at least halfway.

 
If necessary, tap gently with a rubber mallet.

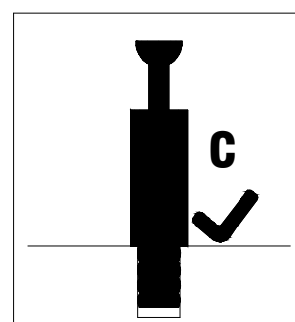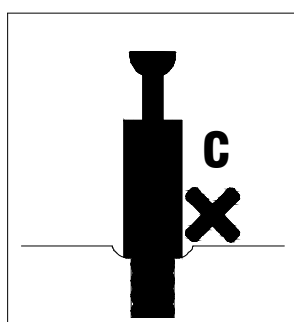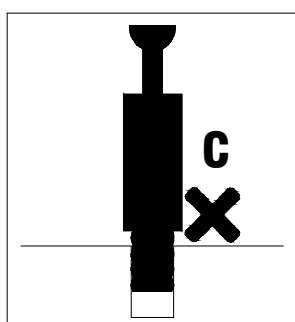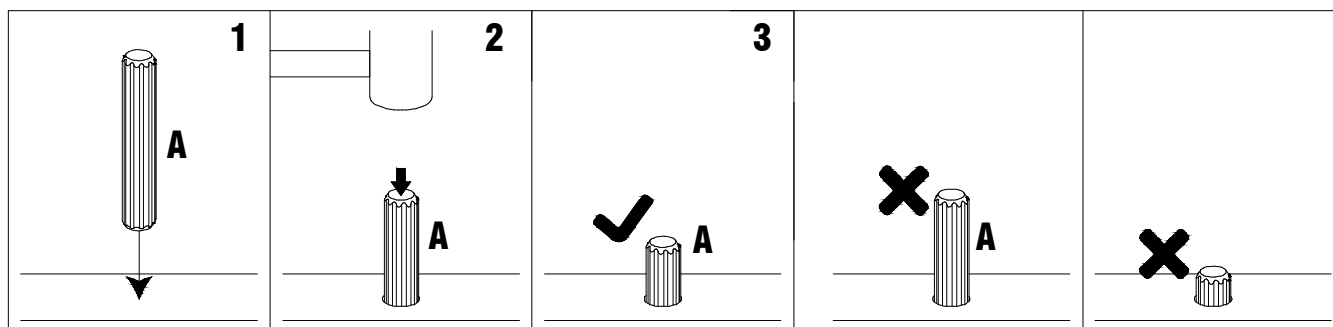

Ratchet Screwdriver

DSG064 | Standard

 
1. Manual operation.
2. Clockwise ratchet setting.
3. Left-hand ratchet setting.
4. Push to release the detachable and telescoping bit holder.

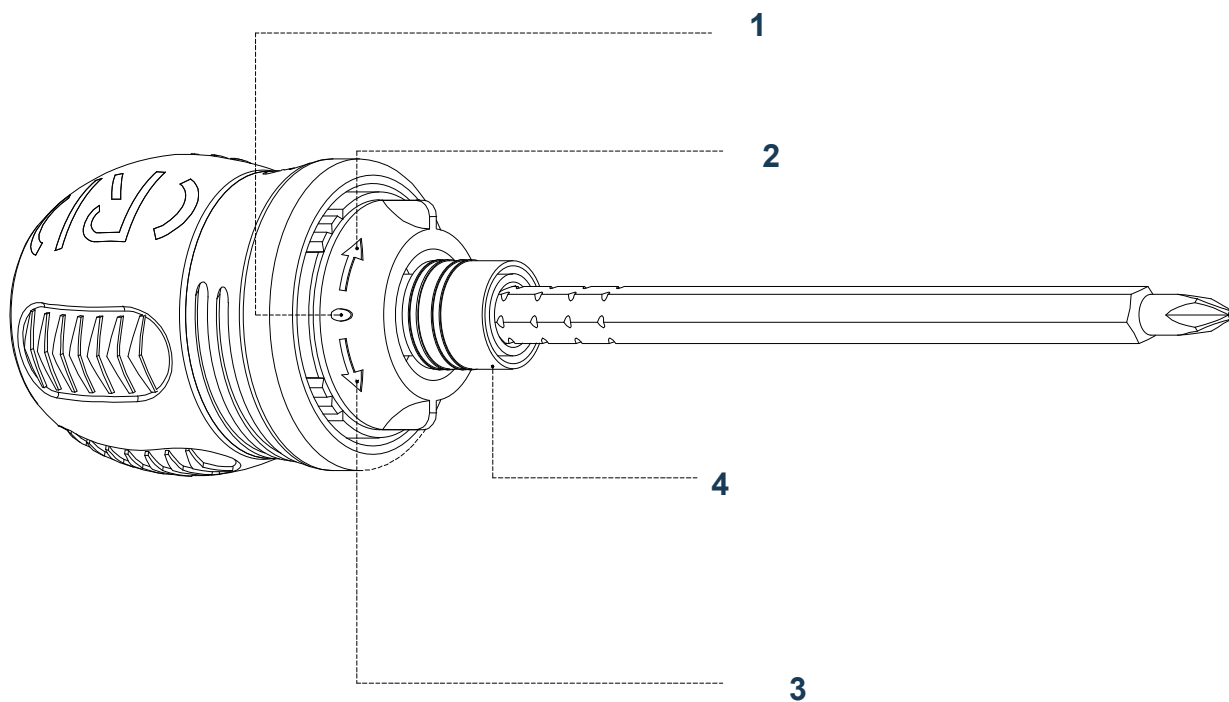


Hinge Adjustment

DSG064 | Standard

 
Height adjustment

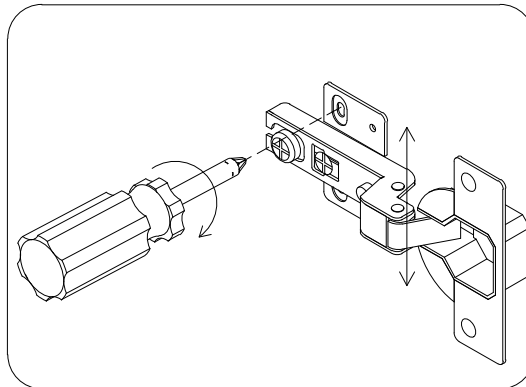

Side-to-side adjustment

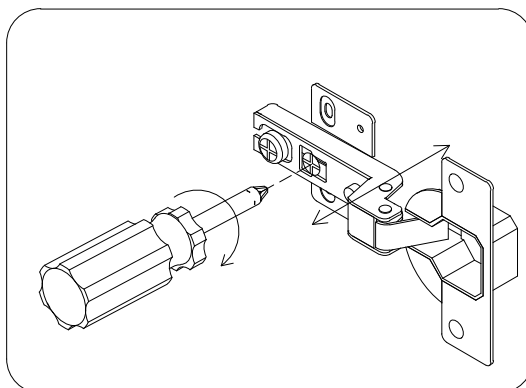 

Depth adjustment

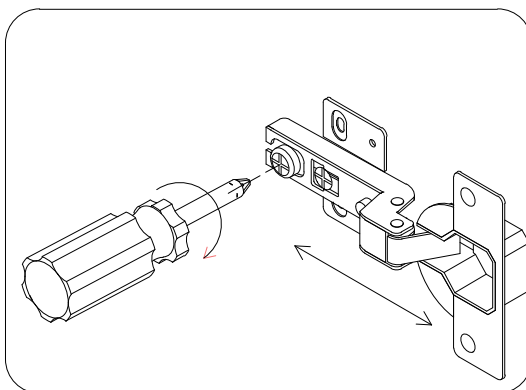 


Before Assembly

DSG064 | Standard


Check all parts against the parts and hardware lists before assembly.

Use the correct screws to avoid splitting or damaging the panels.

 
Tools L and P are reused throughout assembly.

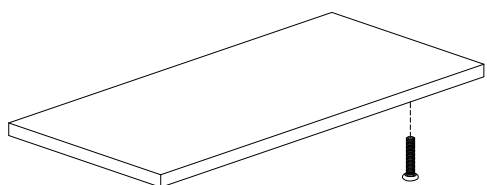

Example

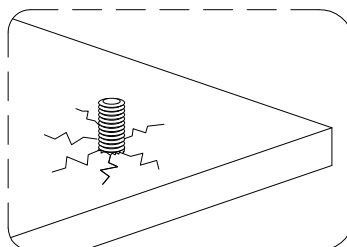 

Incorrect: oversized screw

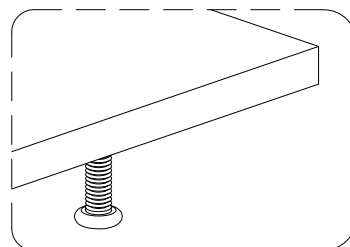 


Correct: matching screw

Step 1

DSG064 | Standard

Join Top Panels 1 and 2, and Base Panels 3 and 4, using Dowels D.

 Hardware: D × 4

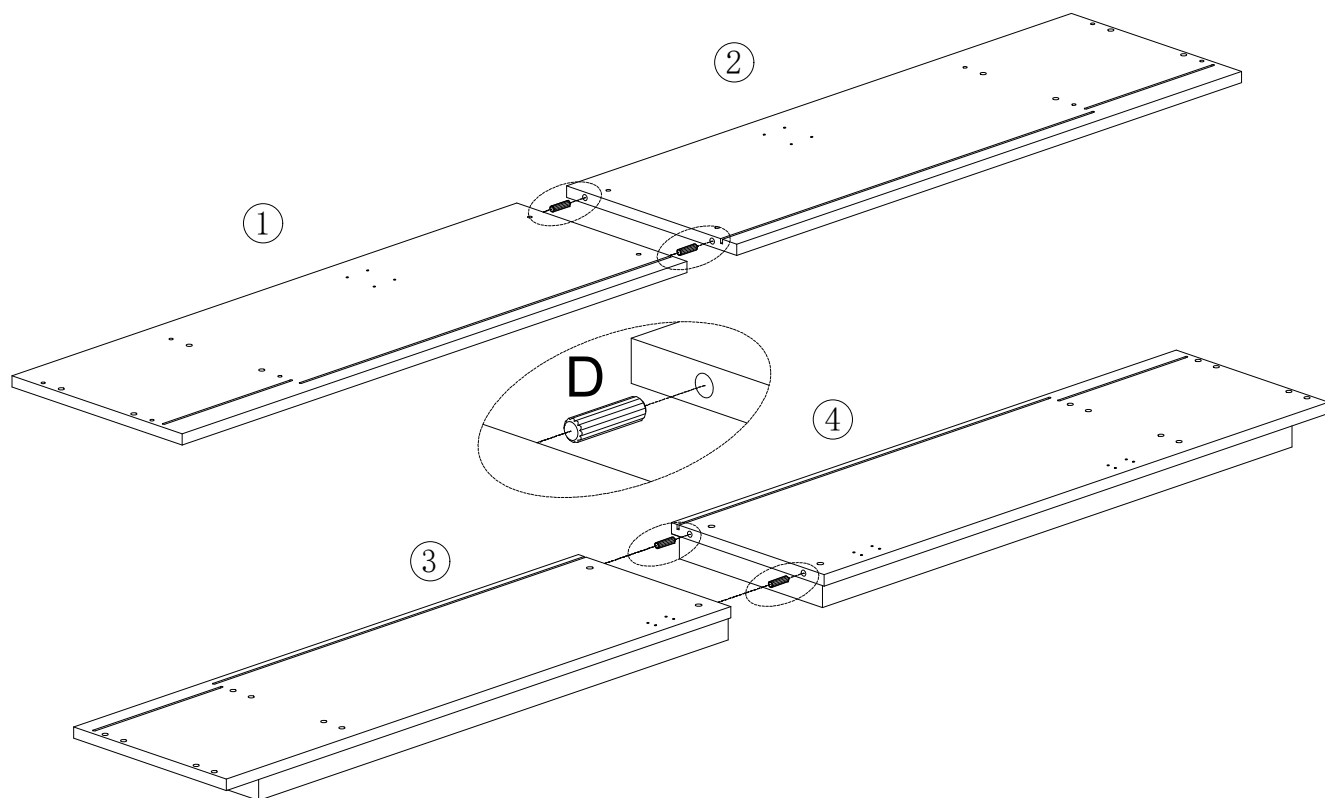


Step 2

DSG064 | Standard

Attach one Connecting Plate 14 across each panel joint from Step 1.

Use Bolts J and Washers K.

 Hardware: J × 8 K × 8 Tool: L (reuse)

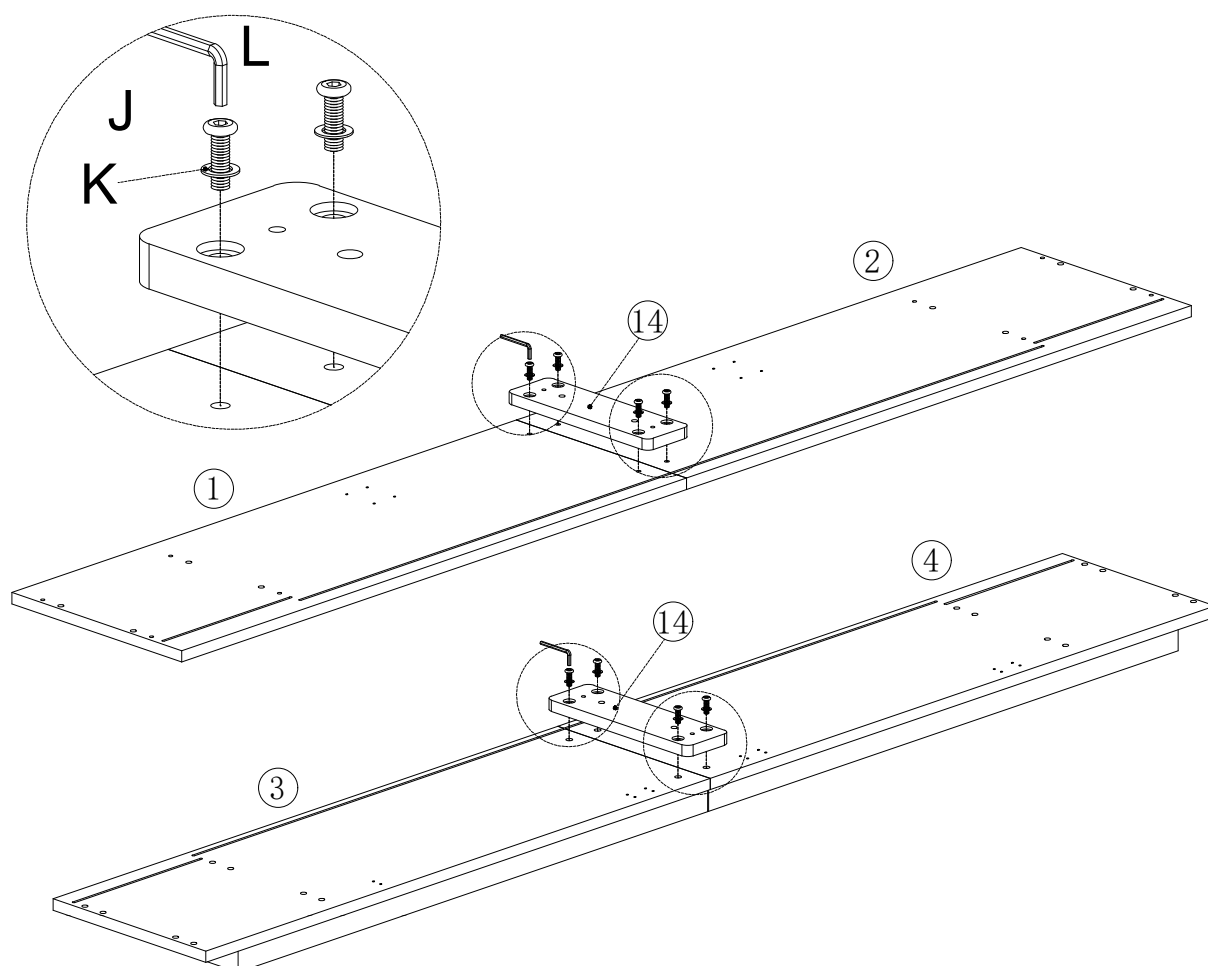


Step 3

DSG064 | Standard

Install Cam Bolts A in both panel assemblies from Step 1.

Attach both Latches G using Screws I in the positions shown.

 Hardware: A × 12 G × 2 I × 8 Tool: P (reuse)

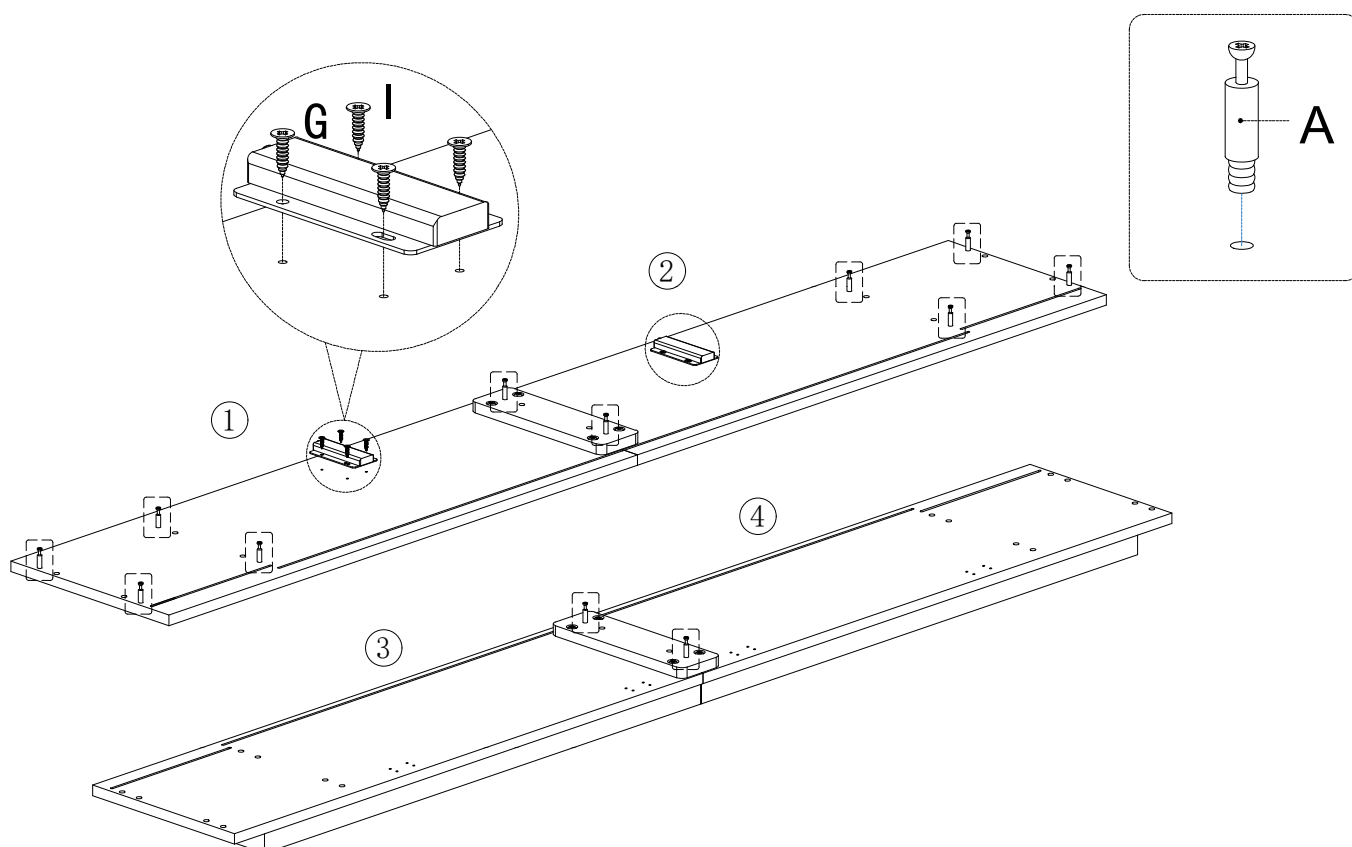


Step 4

DSG064 | Standard

Install Cam Bolts A in Panels 11, 12 and 13, as shown.

Check the left and right faces of Center Divider 13.

 Hardware: A × 16 Tool: P (reuse)

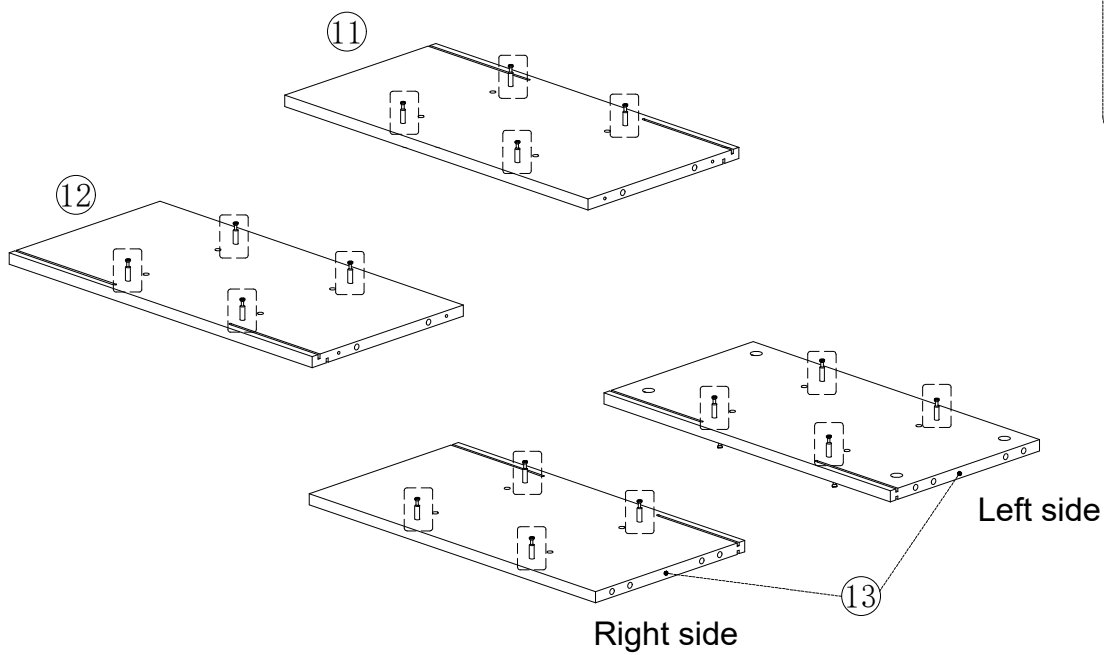


Step 5

DSG064 | Standard

Join Shelf 6, Lower Shelf 7, Panel 12 and Divider 13 as shown.

Orient the cam lock holes as indicated; apply Stickers C.

 Hardware: B × 8 C × 8 D × 8 Tool: P (reuse)

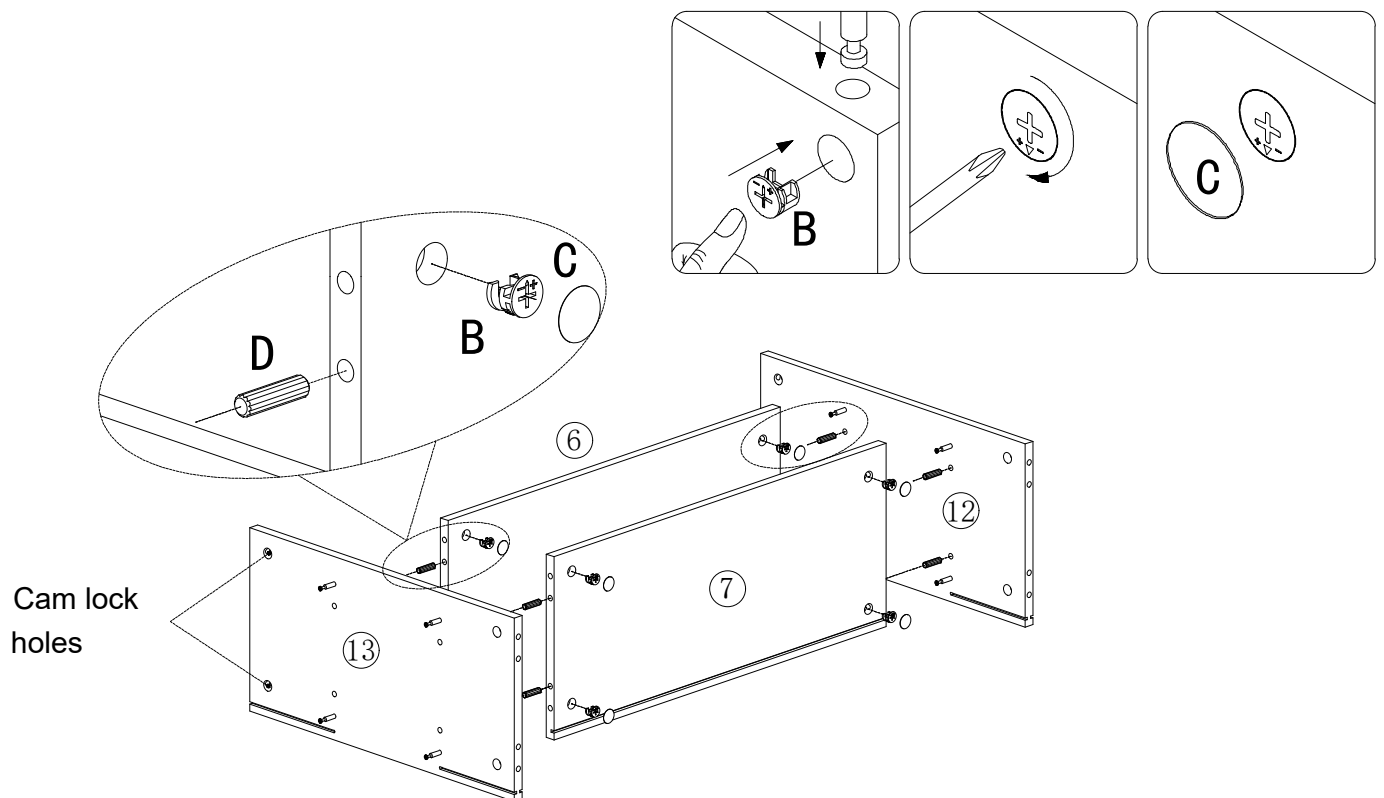


Step 6

DSG064 | Standard

Add Shelf 5, the other Lower Shelf 7 and Panel 11 to the assembly.

Use Cam Locks B and Dowels D; apply Stickers C.

 Hardware: B × 8 C × 8 D × 8 Tool: P (reuse)

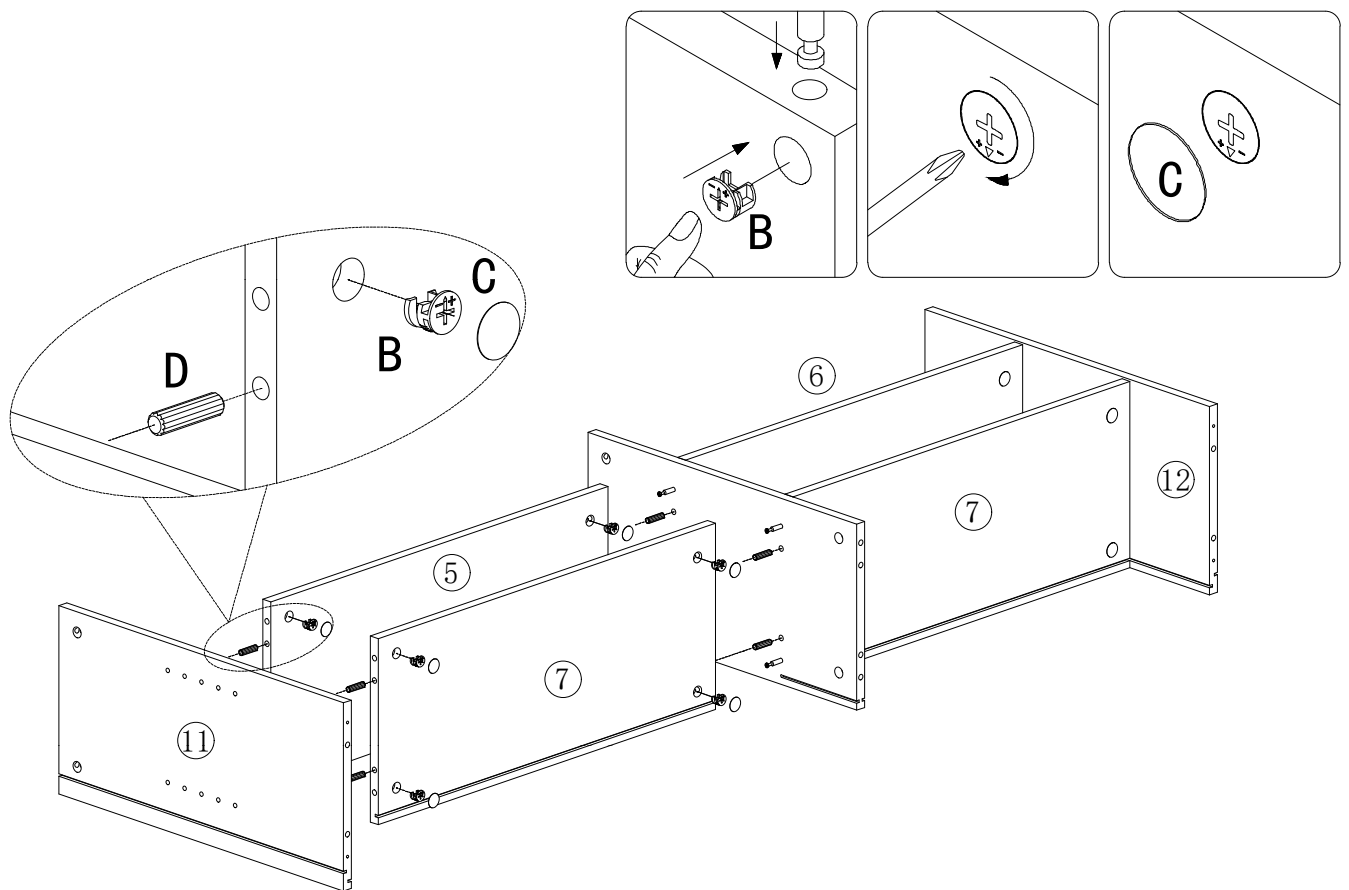


Step 7

DSG064 | Standard

Slide both Lower Back Panels 20 into the grooves shown.

Insert Dowels D in the indicated positions.


 
Hardware: D × 6

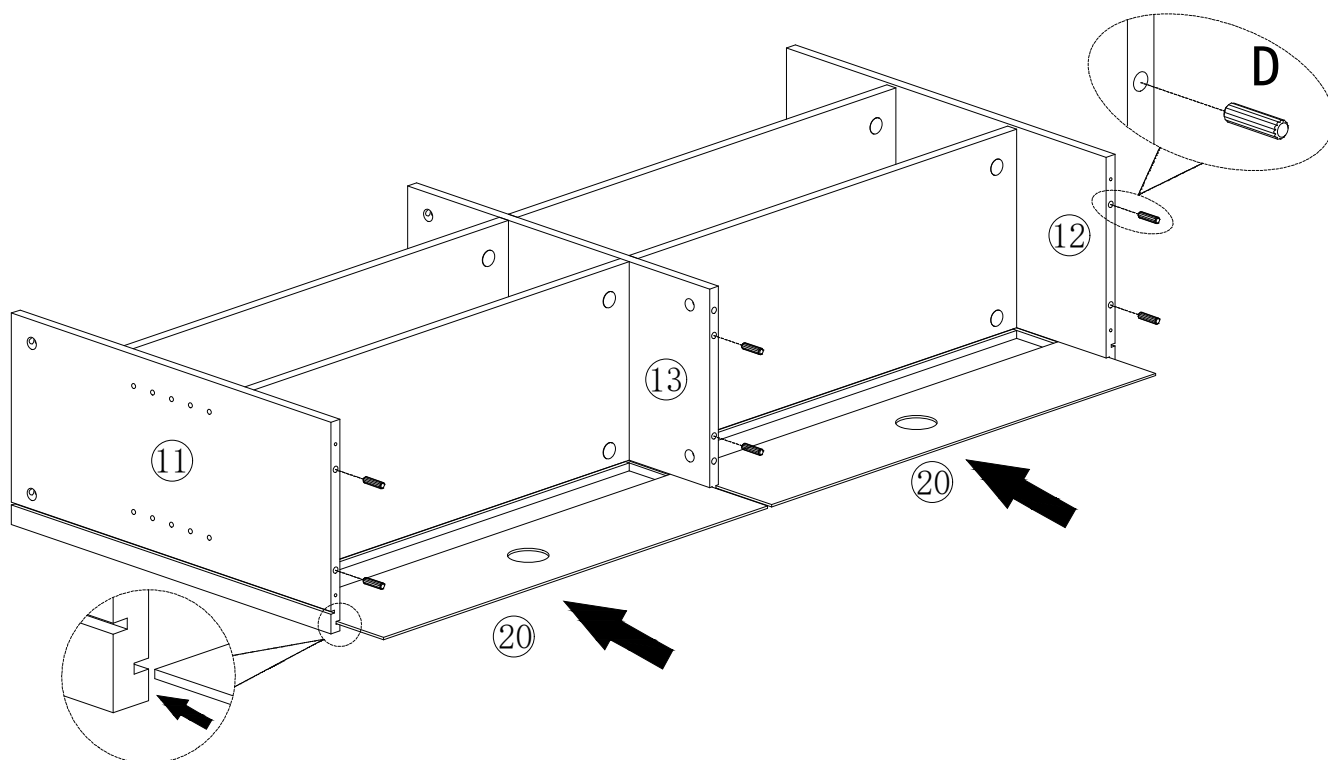

Step 8

DSG064 | Standard

  Attach the Base Panel 3/4 assembly from Step 3.
Use Cam Locks B and Screws E; apply Stickers C.
Hardware: B × 2 C × 2 E × 4 Tool: P (reuse)

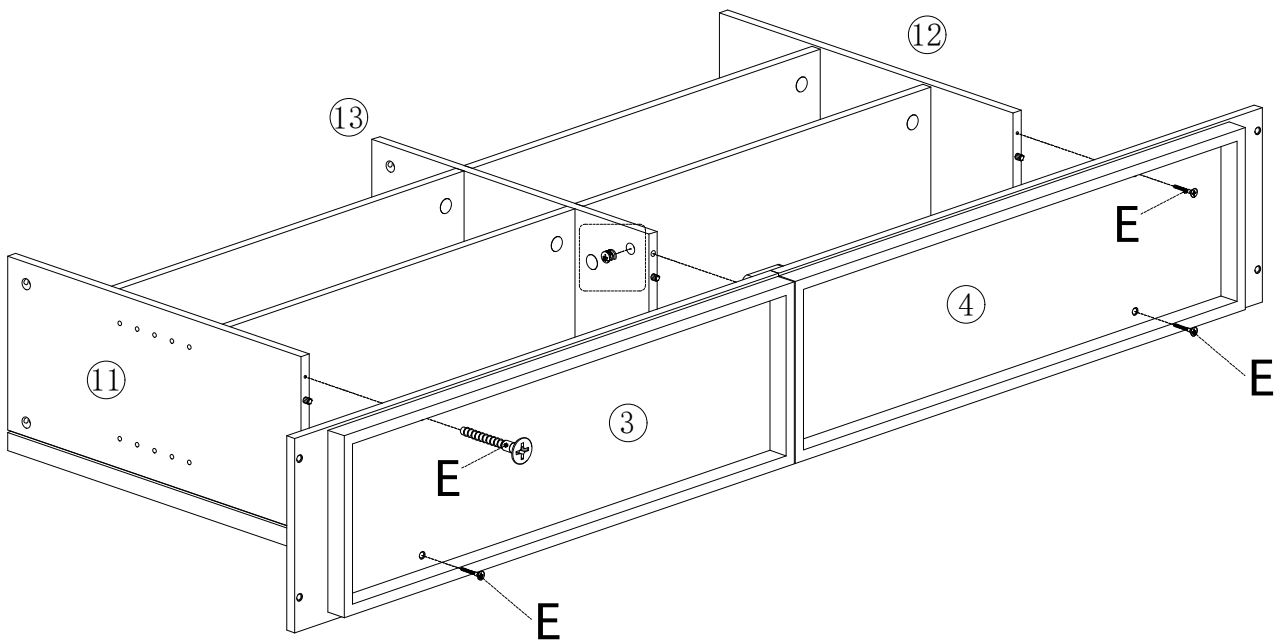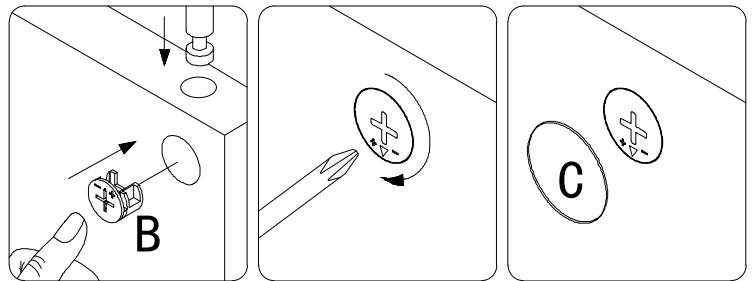


Step 9

DSG064 | Standard

Attach Outer Side Panels 9 and 10 to the assembly from Step 8.

Use Dowels D and Screws E in the positions shown.

 Hardware: D × 4 E × 4 Tool: P (reuse)

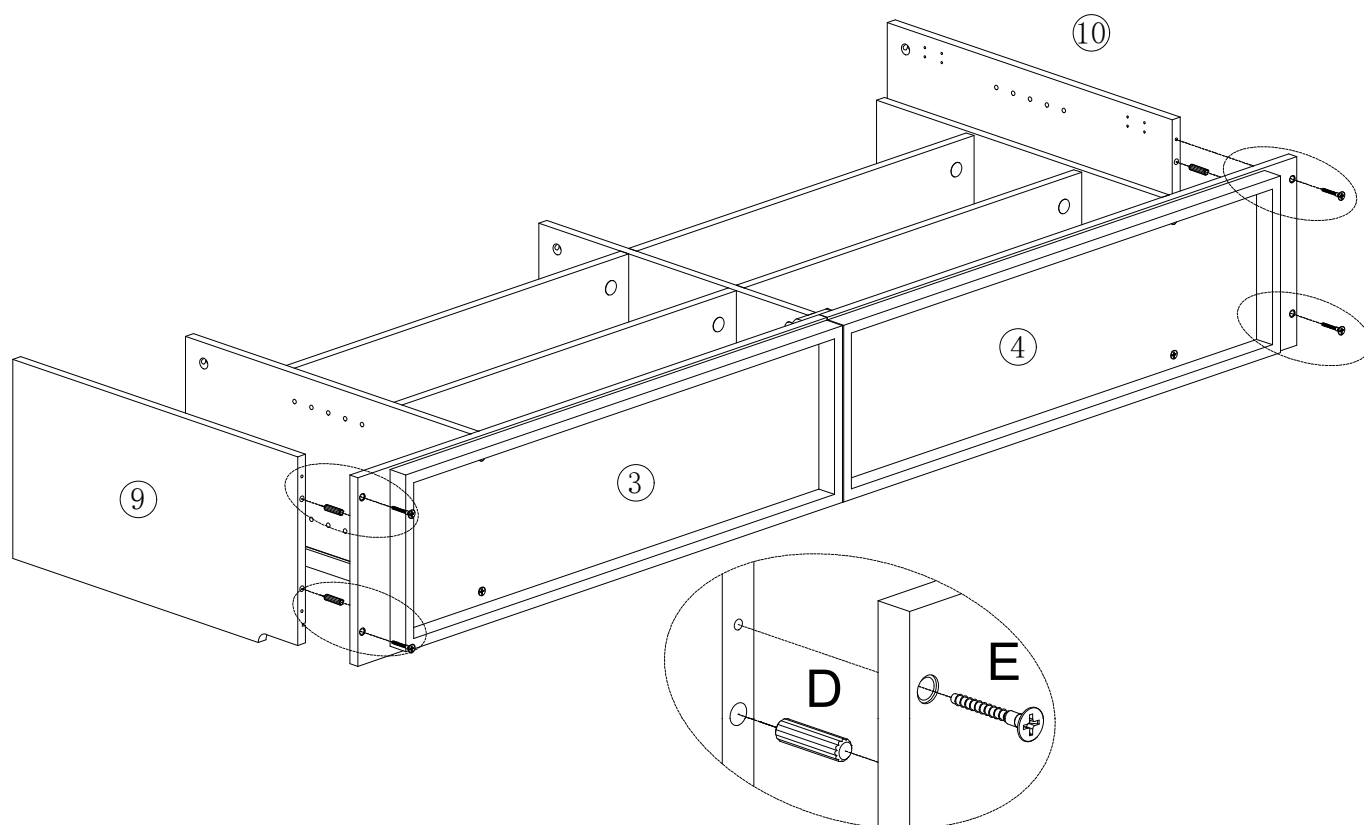


Step 10

DSG064 | Standard

Insert Side Back Panels 18 and Upper Back Panels 19 as shown.

Insert Dowels D in the indicated positions.

 Hardware: D × 10

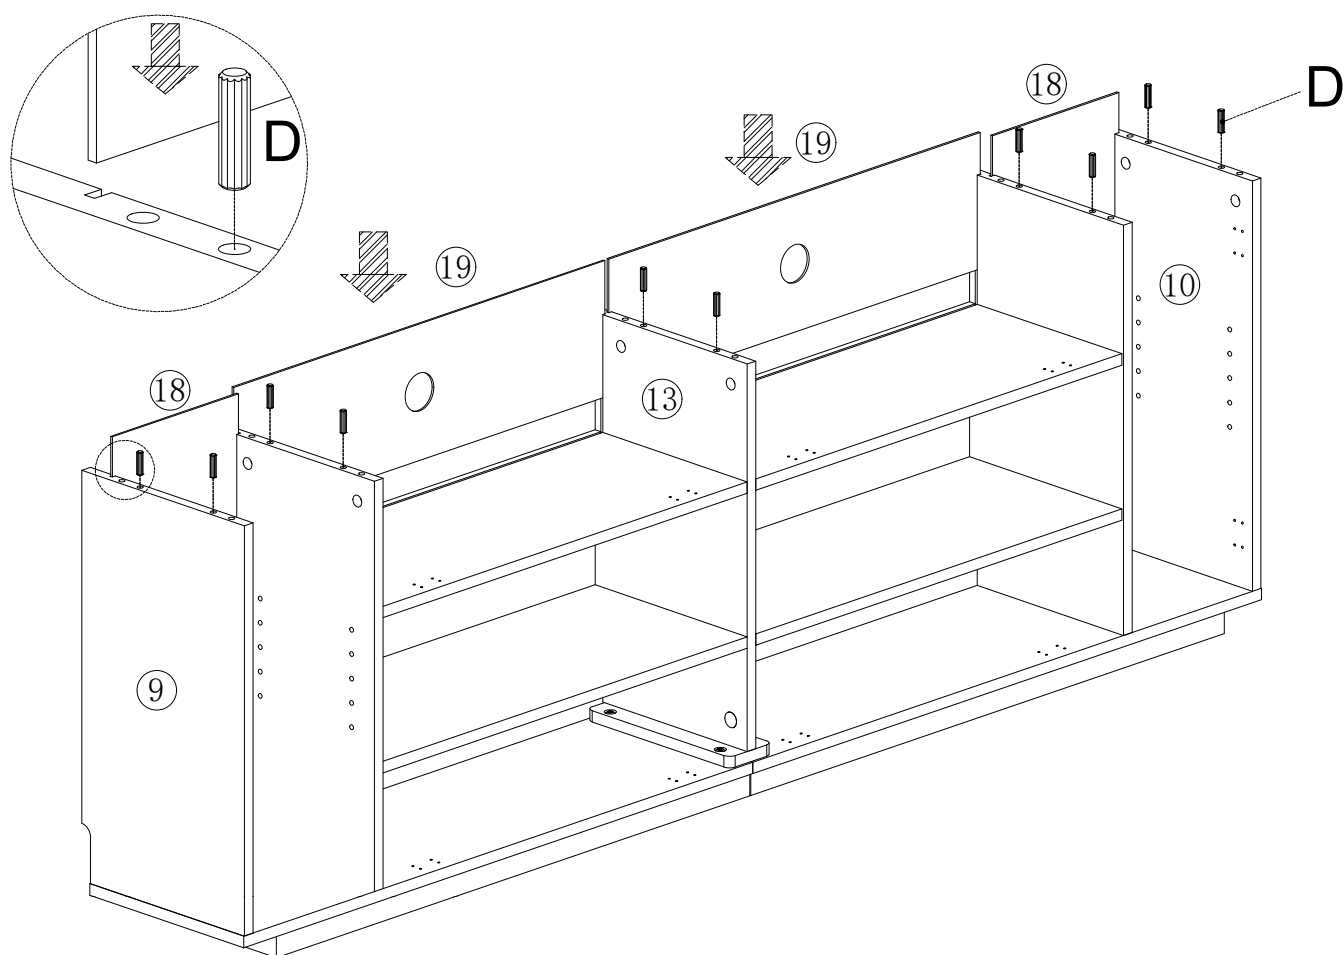



Step 11

DSG064 | Standard

Attach the Top Panel 1/2 assembly from Step 3 to the cabinet.

Tighten Cam Locks B and apply Stickers C.

  Hardware: B × 10 C × 10 Tool: P (reuse)

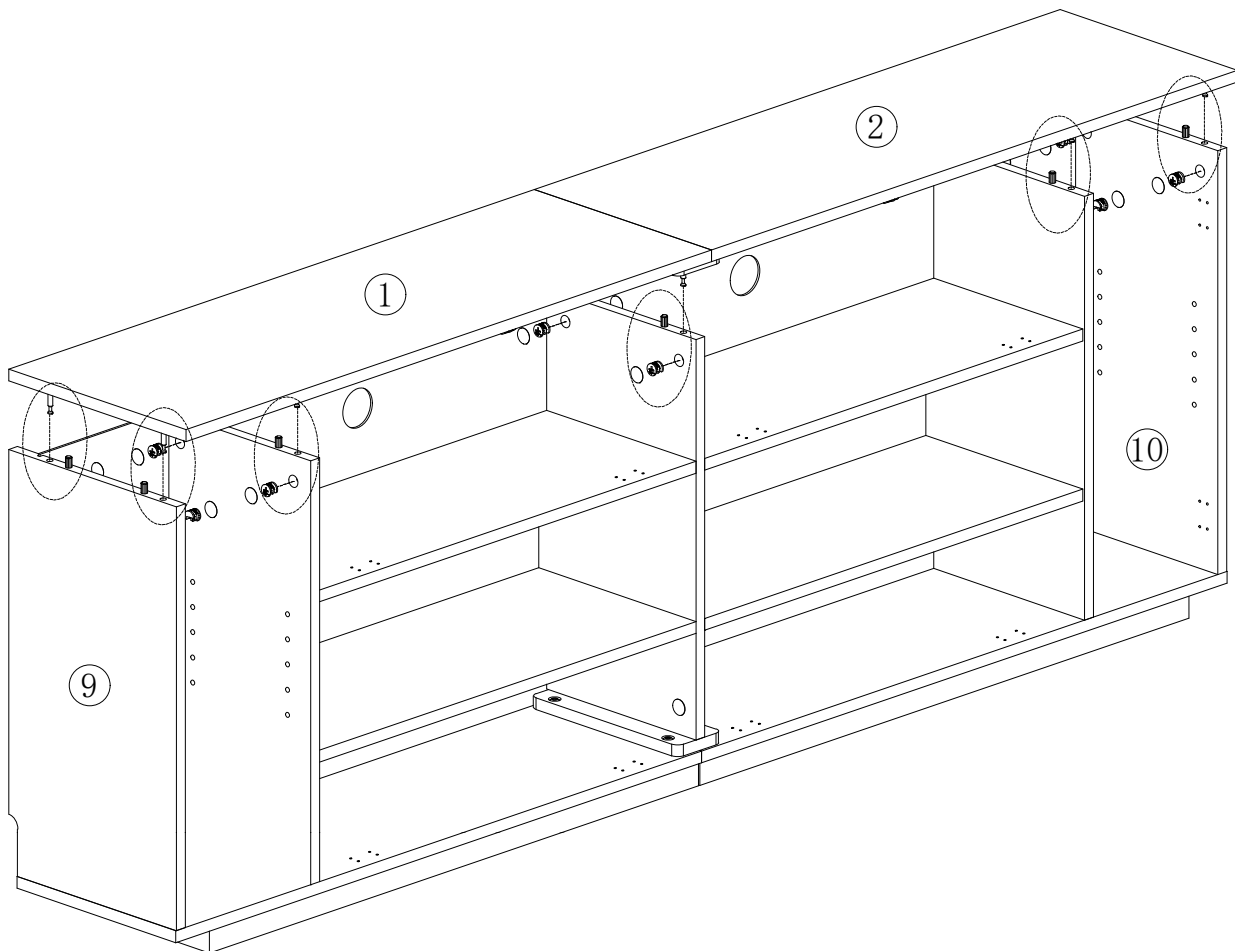
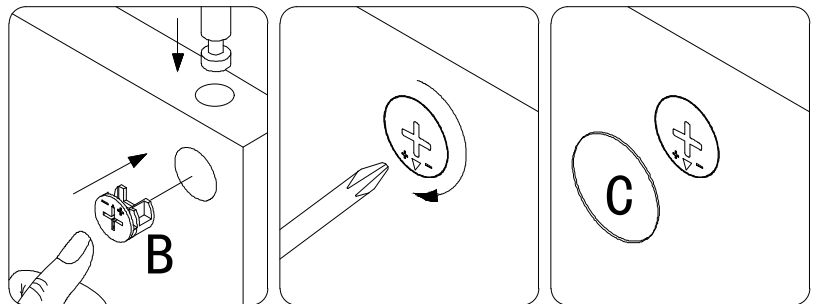


Step 12

DSG064 | Standard

Secure the back panels using Clips M and Screws N, as shown.

  Hardware: M × 28 N × 28 Tool: P (reuse)

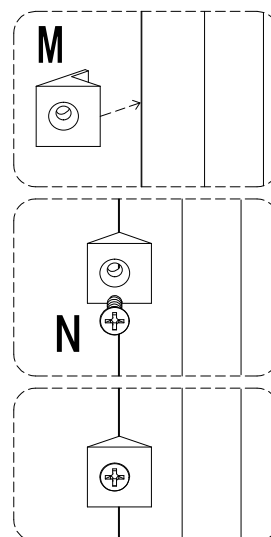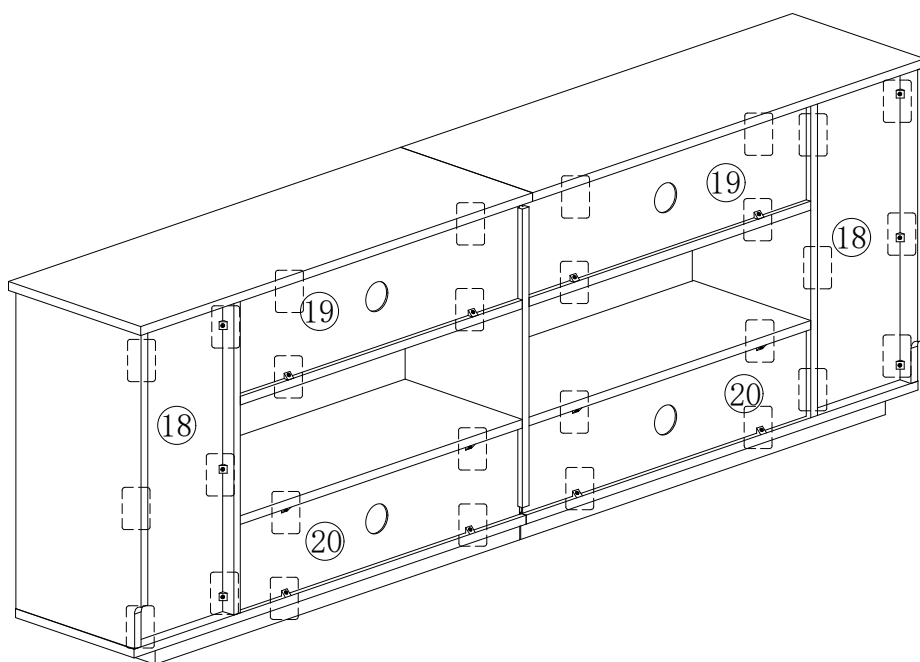



Step 13

DSG064 | Standard

Attach two Hinges H to each Door 15, 16 and 17 using Screws I.

There are two of each door. Follow the hinge positions shown.

  Hardware for all six doors: H × 12 I × 24 Tool: P (reuse)

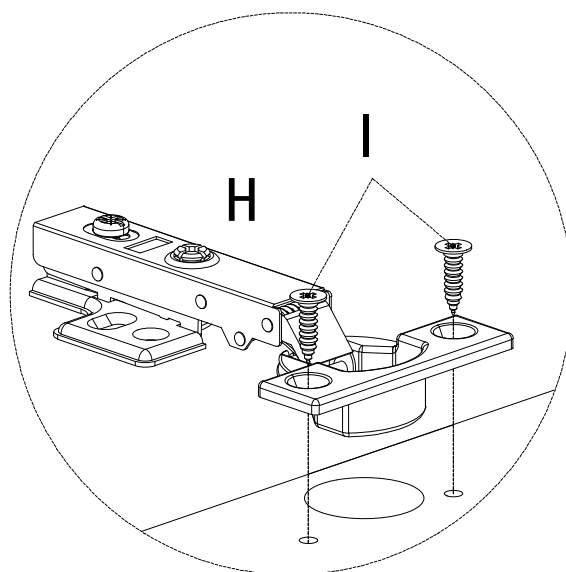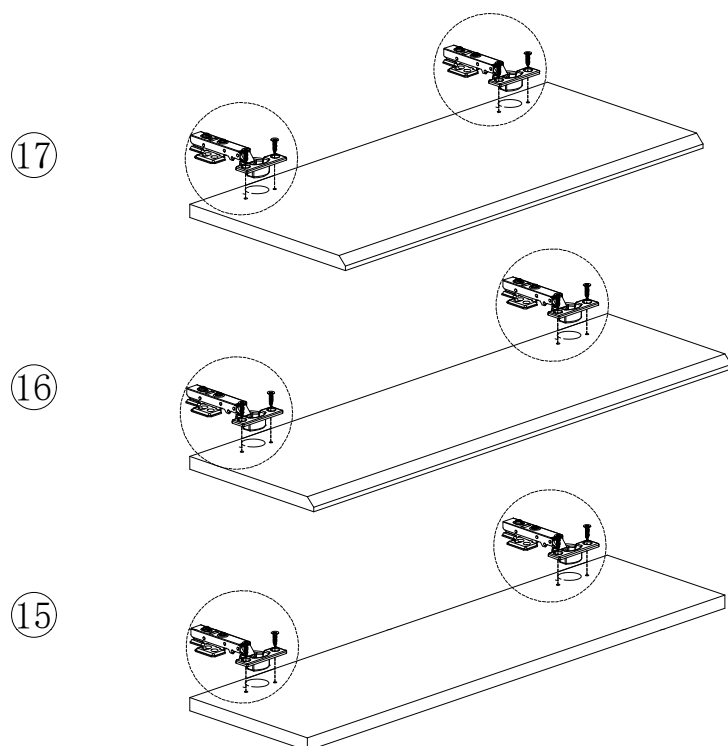


Step 14

DSG064 | Standard

Attach all six doors to the cabinet using Screws I, as shown.

Use the Hinge Adjustment reference to align the doors.

 Hardware: I × 48 Tool: P (reuse)

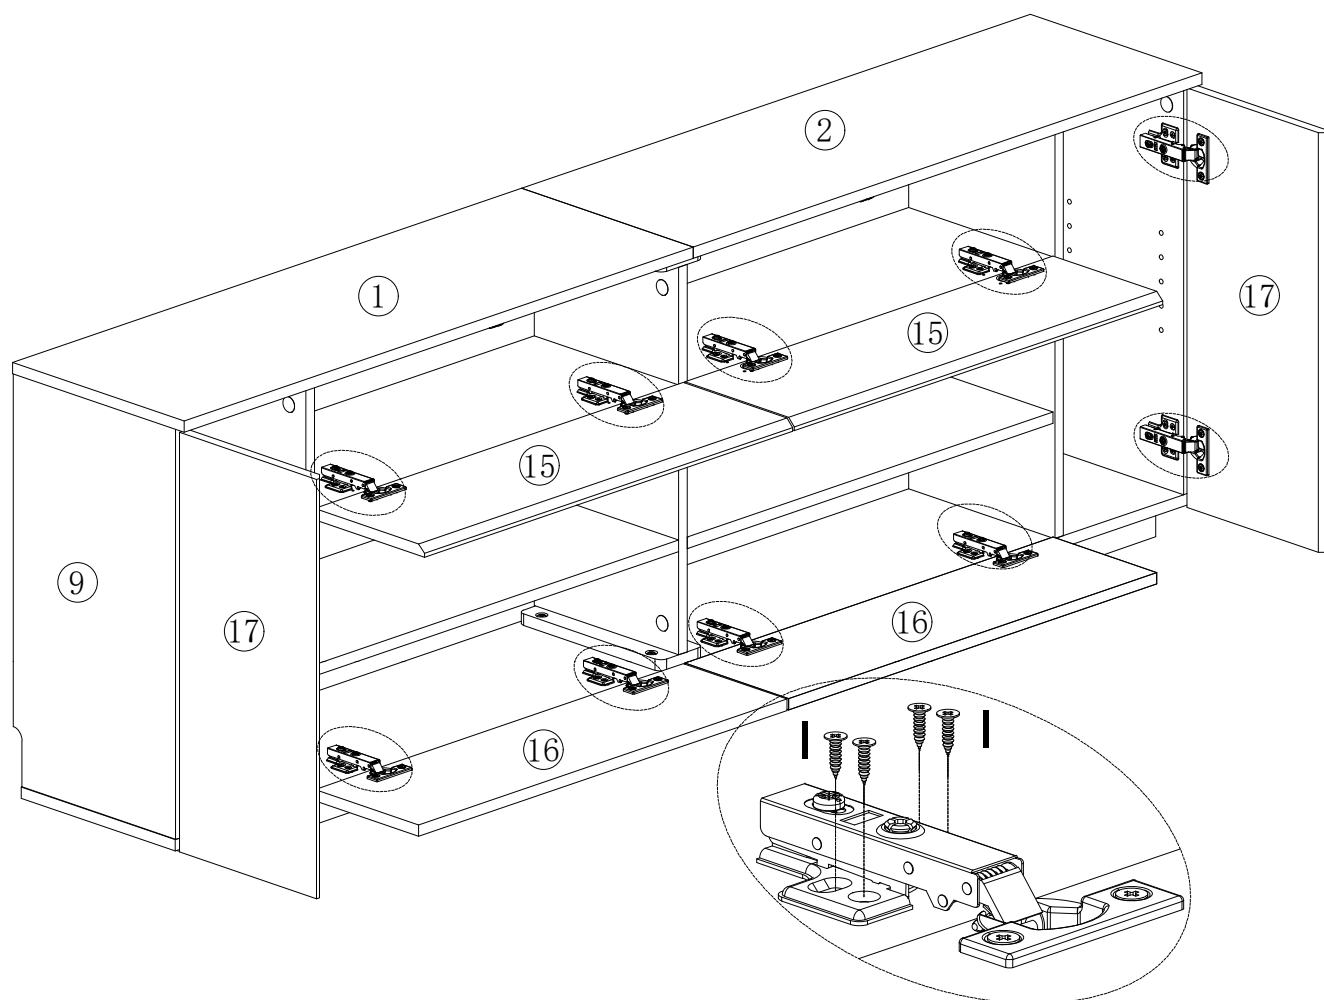


Step 15

DSG064 | Standard

Insert Shelf Supports F into Panels 9, 10, 11 and 12 at matching heights.

Place both Adjustable Shelves 8 on the supports.

 Hardware: F × 8

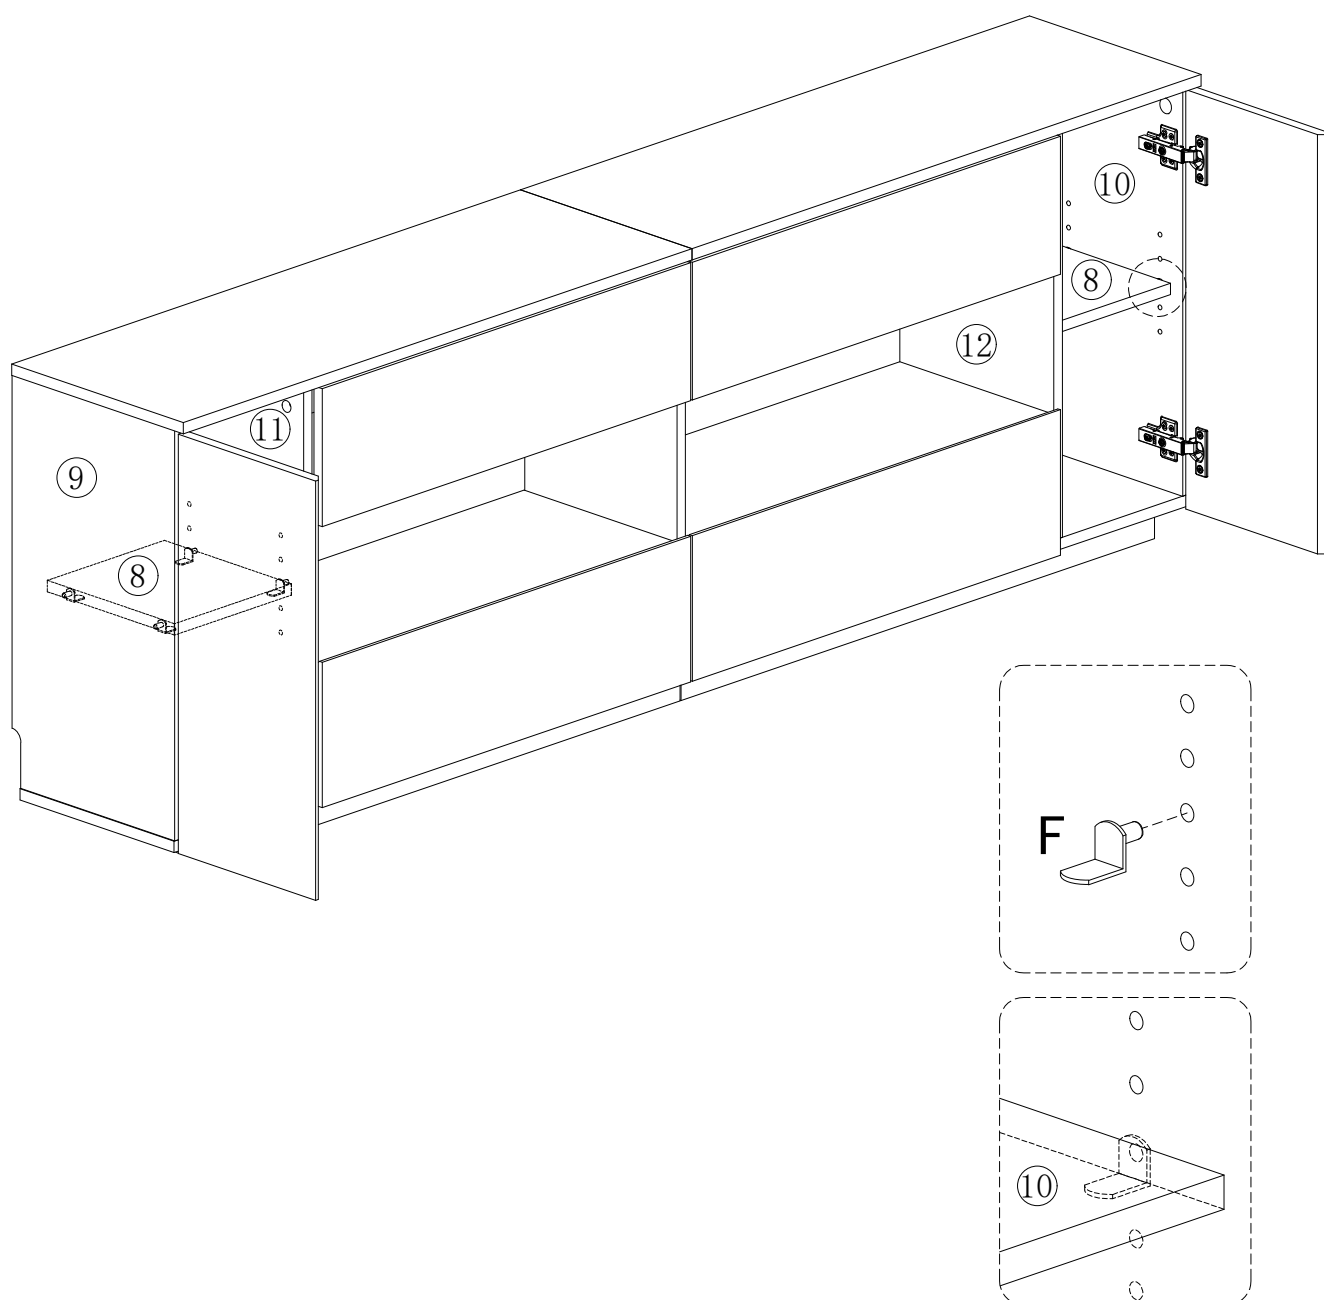

Step 16

DSG064 | Standard

Secure the completed unit to the wall using Anti-tip Kit O.

Install both restraint connections in the positions shown.

Hardware: O

