

Quick Start-Up Guide

Prepare the Attachment / Function Head

Hedge trimmer Attachment Installation

(Once installed, the assembly should appear as follows)



1- Gather the Necessary Components:


Shaft with hedge trimmer head
Handle
2 hex socket screw
L-Hex Wrench



1- Install the handle with 2pcs M6
hex socket screw by L-Hex Wrench.



2- Lift the lock lever and press down
the adjusting lever. Adjusting the angle
of the cutting blade to the desired
angle and loose your hand.

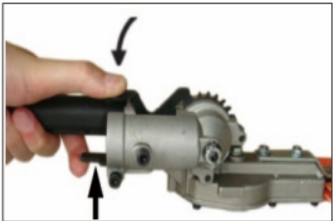

3- Install the hedge trimmer head shaft
to the main shaft .



1.1 Gather the Necessary Components:


Power head
Carrying Strap
Aluminum Tube with Quick-Connect Coupler
Rubber Sleeve
P-TYPE Handlebar with Mounting Bracket
Four (4) Screws (5x35mm) and Locknuts(M5)
upper connector.
L-Hex Wrench
Socket Wrench




2-Install the handle bar grip.Slide
the rubber grip sleeve onto the up
per section of the aluminum tube.




3-.Position the P-type handlebar
over the rubber grip. Secure the
handlebar's mounting bracket to
the tube using the four screws
and locknuts. Tighten them securely
with the L-Hex wrench to prevent
any movement during operation

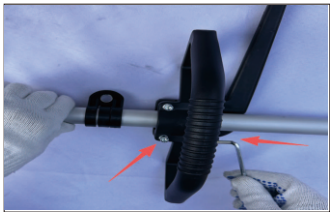


4-Use the L-socket wrench to
remove the middle bolts, loosen the
screws on both sides.

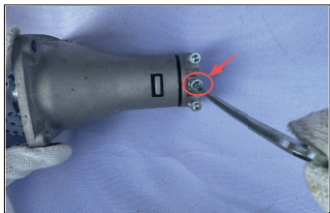


5-Align the handle tube with the
upper connector. Position the
pre-drilled holes in the handle
tube's quick-connect coupler with
the bolt holes on the upper connector.

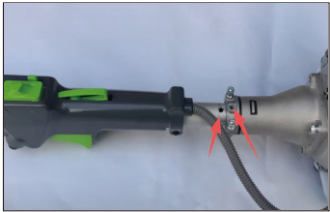


6-Insert the middle bolts through
the aligned holes and tighten them
securely with the L-hex wrench.

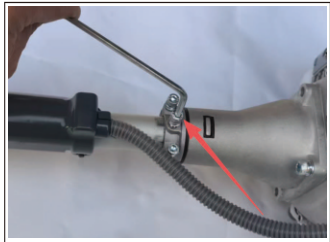


7-Install the connector with the
powerhead in the positions
indicated by the two arrows.
And Insert 4pcs M6 screw.

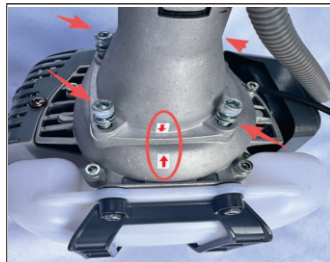

8-Tighten the connetector to the
Powerhead securely with
the L-Hex wrench.

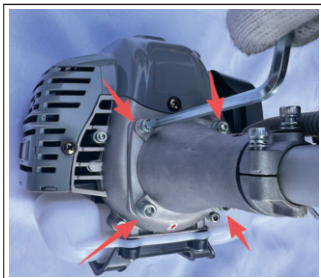

9- Reomove the air filter cover.

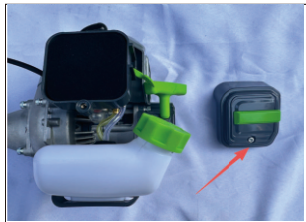


10- Connect the throttle control
cable, Insert the end of the throttle
control cable from the handle
into the spiral cable guide on the
engine.




11-Attach the throttle cable to the
carburetor. Route the cable end to
the carburetor. Slide the cable
barrel into its designated slot on
the carburetor's throttle lever.
Ensure it clicks or seats properly.



12-Tigthen the throttle control
cabel nut by Wrench.

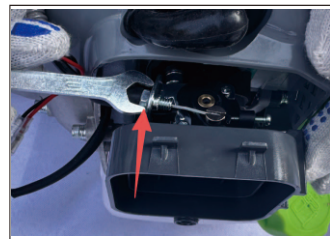

13-Connect the ignition wires.
Connect the wires from the
handle's safety switch to the
engine's ignition system. Match
the colors: Red wire to red wire,
black wire to black wire

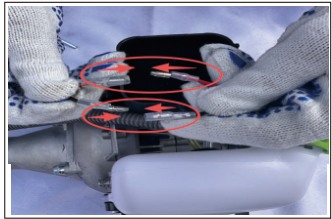

14-Reinstall the air filter cove
Securely the air filter cover
back into place.



How to Attach and Change Function Heads

1-Insert the prepped function head into the quick-connect clamp's slot. Push the functionhead forward firmly until you hear a distinct *click"s ound.Confirm it is secured by trying topull it back out; it should not disengage.



2- Press the clamping plate down firmly and tighten the locking handle securely. Ensure theplate is fully dpressed and cannot spring back up.




How to Disassemble and Install

1- To change the function head or for disassembly.Loosen and open the locking handle. Theclamping plate will spring up automatically, releasing the lock.



2-Press the black wave-shapped release latch to disengage the head from the slot, and thenpull the function head out.

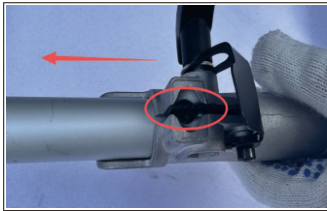

How to Start the Machine

1-Mix two stroke oil and gasoline at a ratio of 1:25.




2-Mix the engine oil and gasoline well.



3-Open the fuel tank cap and add the mixed fuel.




4-Press the primer bulb 5 - 10 times to push the fuel through the pipe into the carburetor.

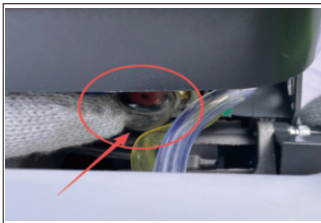

5-Push back to turn on the switch. (If you want to turn off the machine ,push forward to "0" Piston).



6-Cold start the damper upwards. (Once the engine is running and during any hot start, thechoke lever must be in the down position. Failure to do this will cause damage to the machine.)

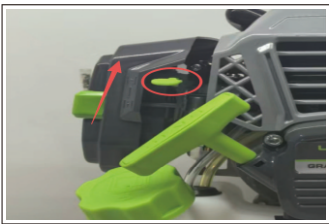

7-Pull the starter firmly until the machine starts.



8-Open the damper downwards at once after the machine starts.



9 -Press and hold the latch and switch while using, test whether the functional head is working.



Questions?



Please give us a chance to make it right and do better !

Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped ASAP !



support@baotree.shop



Installation Video



Startup Steps

Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.