 




INSTALLATION

Product Manual

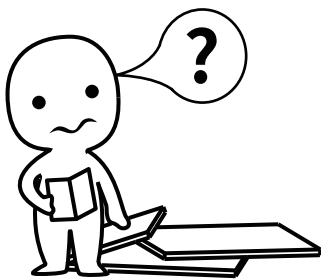


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

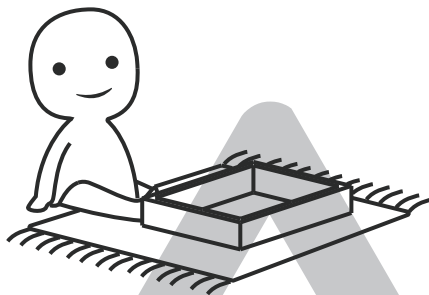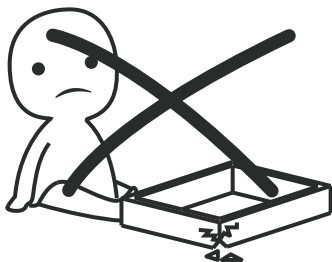



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

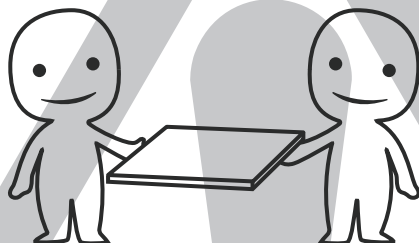

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

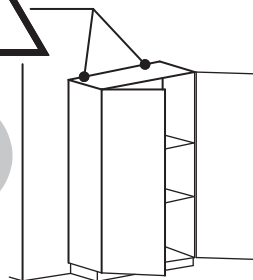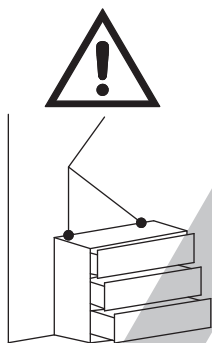

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

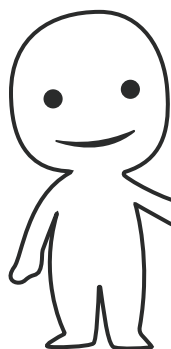


Please prepare the following tools

   


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 82+5



Ø 6 x 35 mm

 B x 82+5

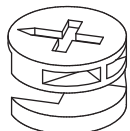


Ø 15 x 9.5 mm

C x 43+4



Ø 6 x 30 mm

 D x 3

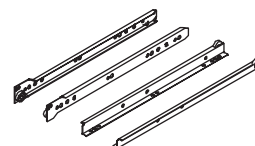


L = 350 mm

E x 34




Ø 3 x 12 mm

 F x 8




Ø 4 x 16 mm

 G x 6

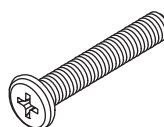


Ø 6 x 35 mm

 H x 1

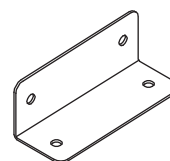

J x 4

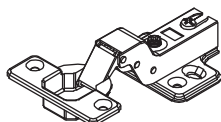 


K x 24+2




Ø 3.5 x 12 mm

 L x 8+1

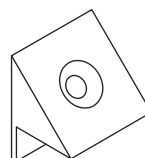


M x 2

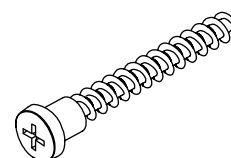 

Ø 5 x 40 mm

 
N x 2

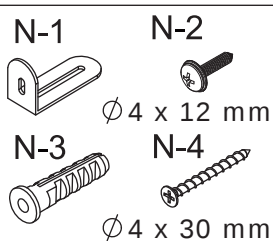

Ø 4 x 12 mm


Ø 4 x 30 mm

 P x 4




Ø 6 x 20 mm

 
Q x 82+5



R x 12+1

 

Ø 4 x 30 mm

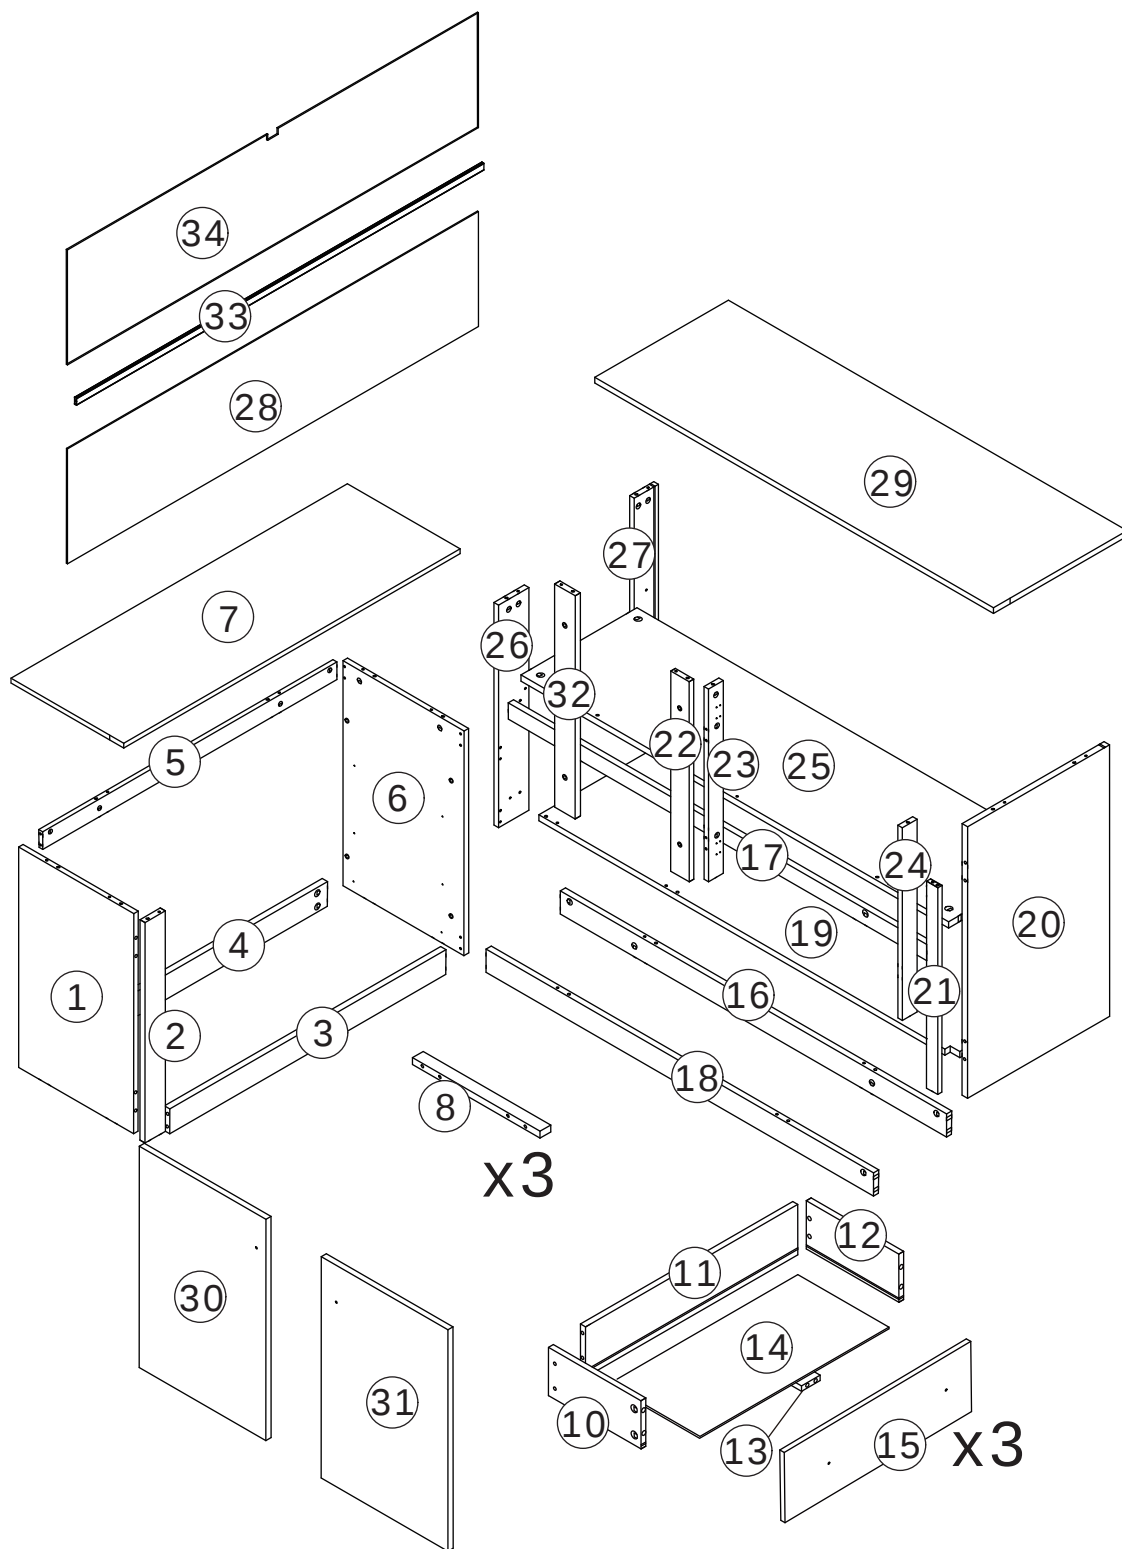 


⚠ WARNING





Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


 
*This is a permanent label.
Do not remove!*

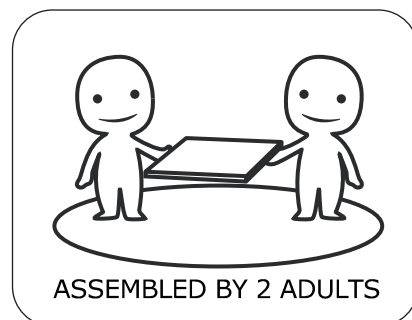




1

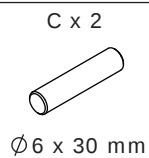  

  
Screw eccentric rod (A) and insert wooden dowel (C) onto part 2 as shown.

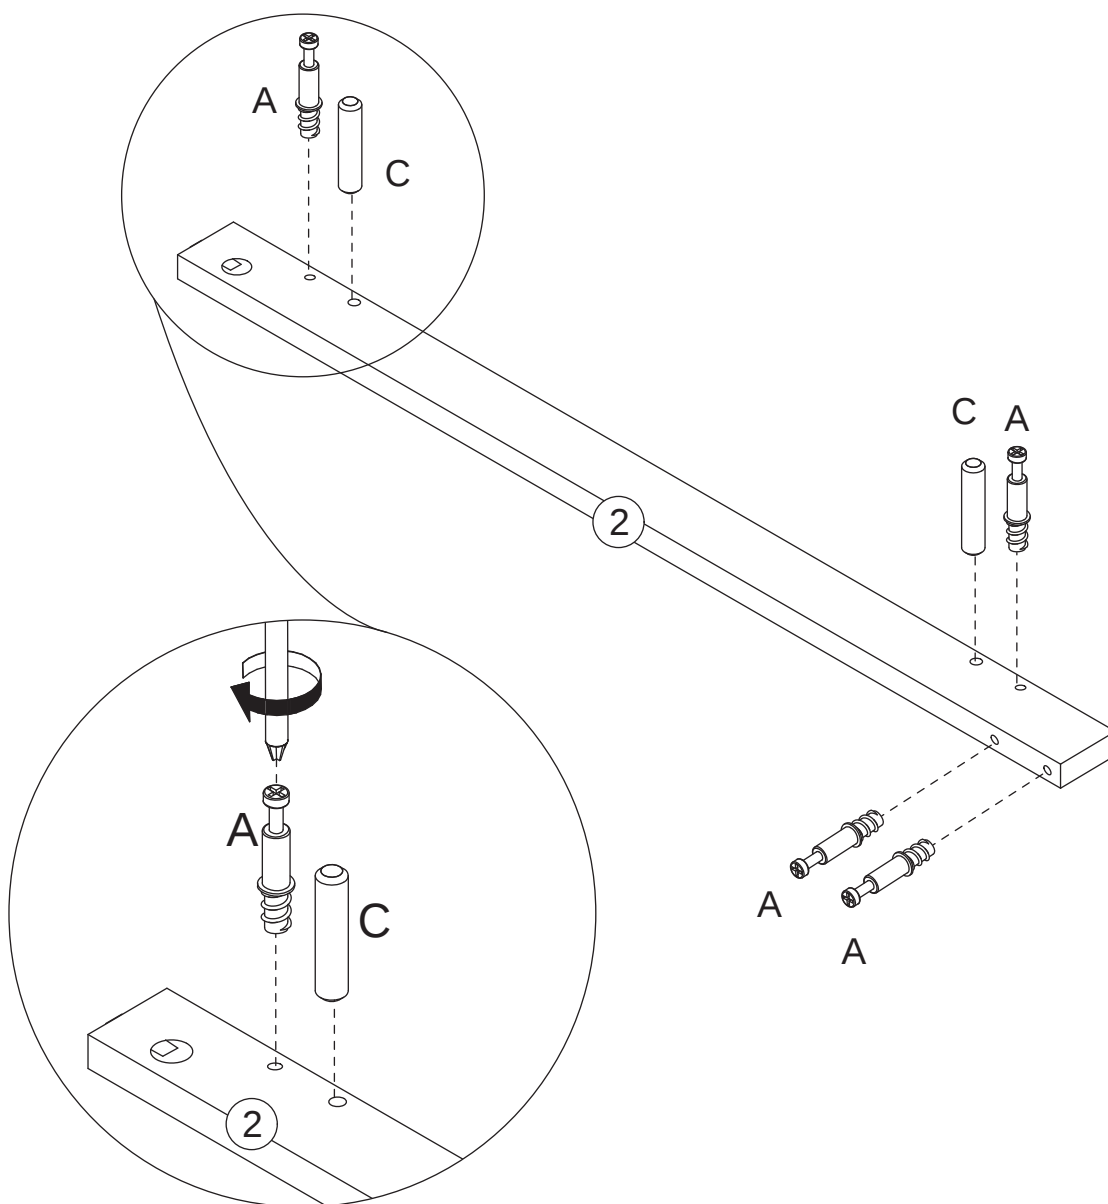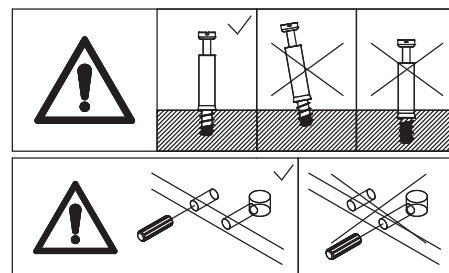



2

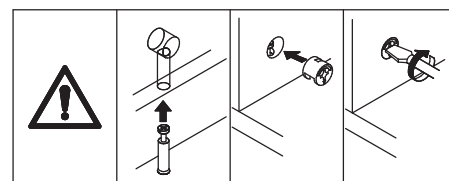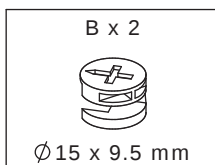   

 
Connect part 2 to part 1, and tighten by turning cam lock (B) clockwise as shown.

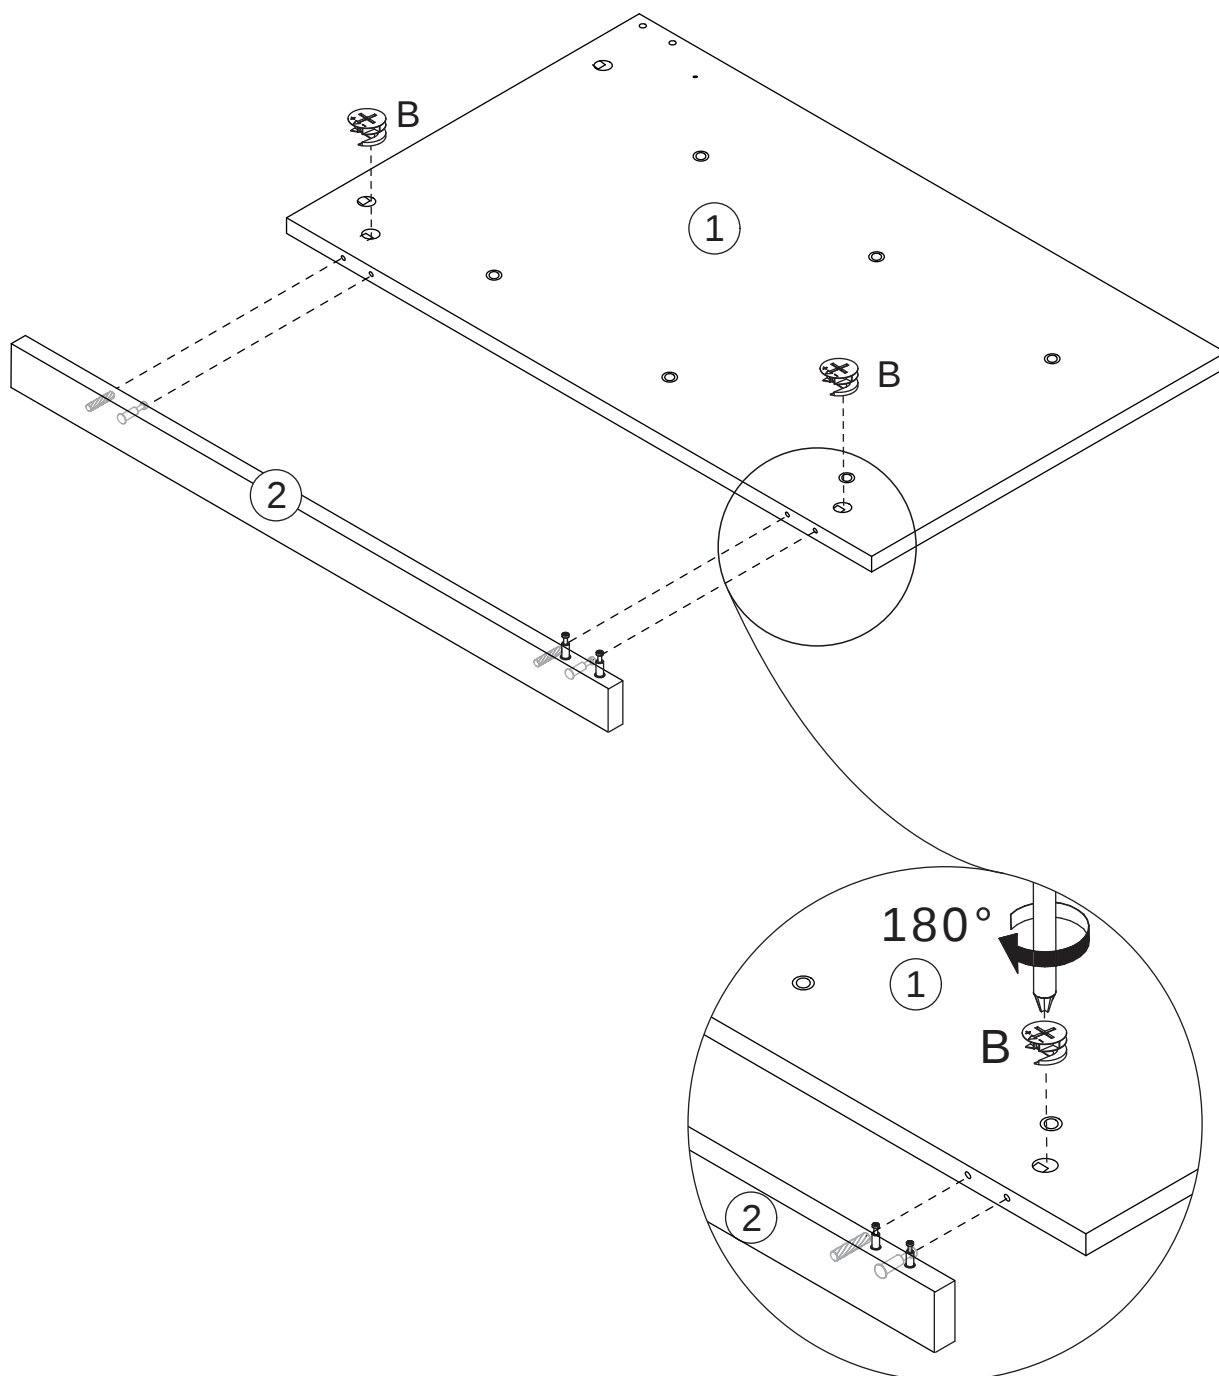





3

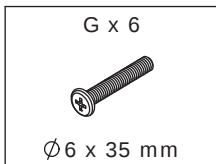  


 
Secure part 8 to part 1 using screw (G) as shown.

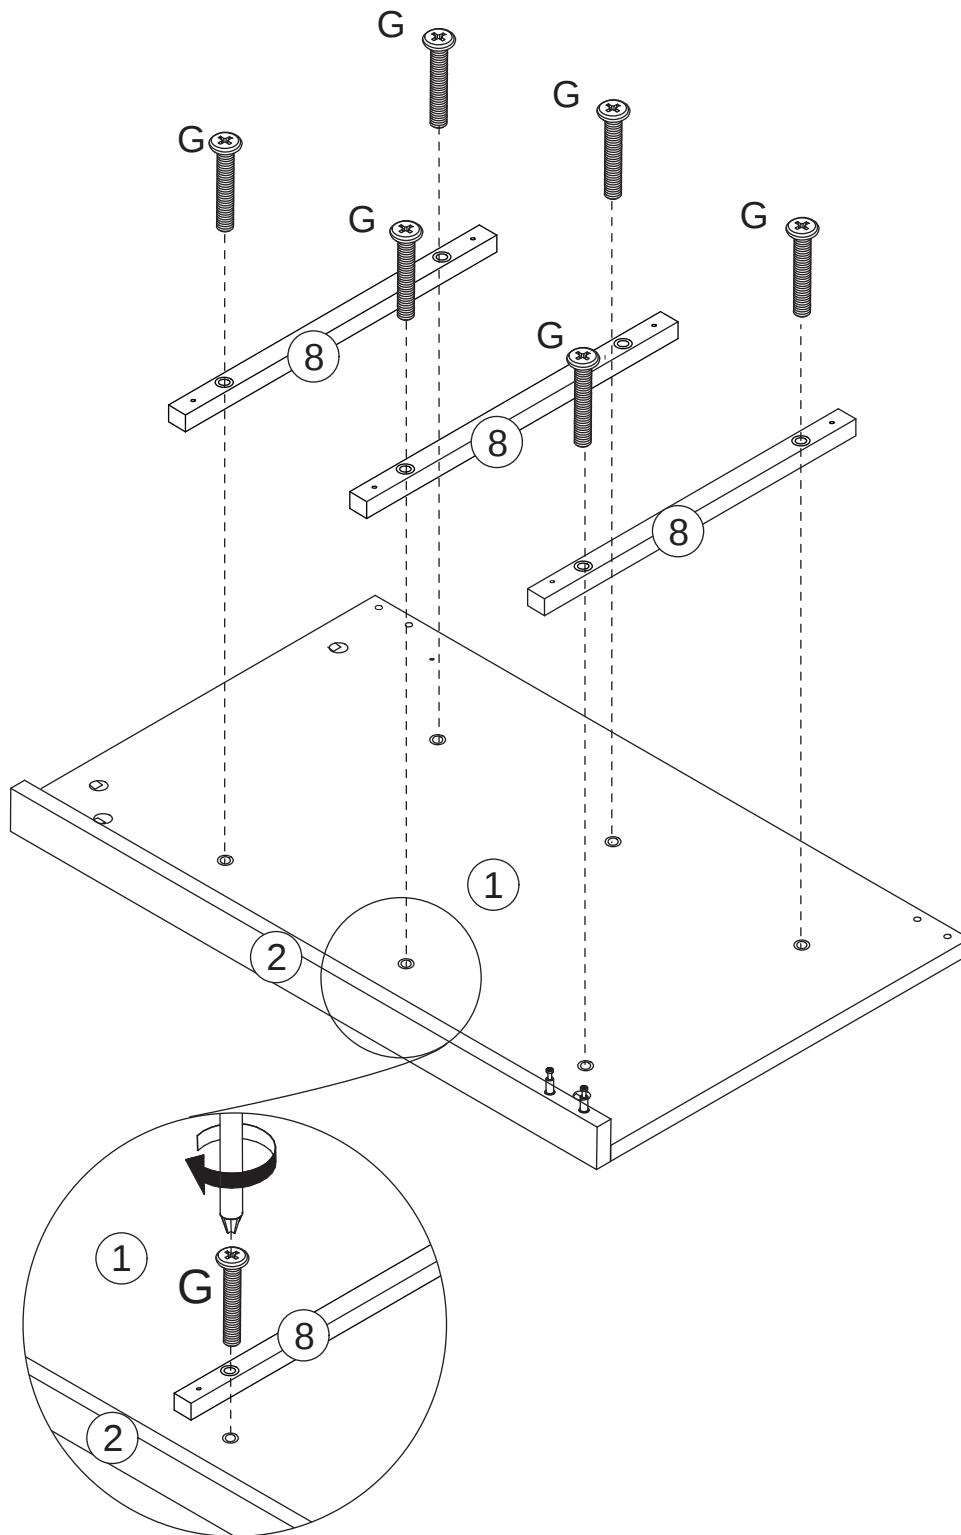



4

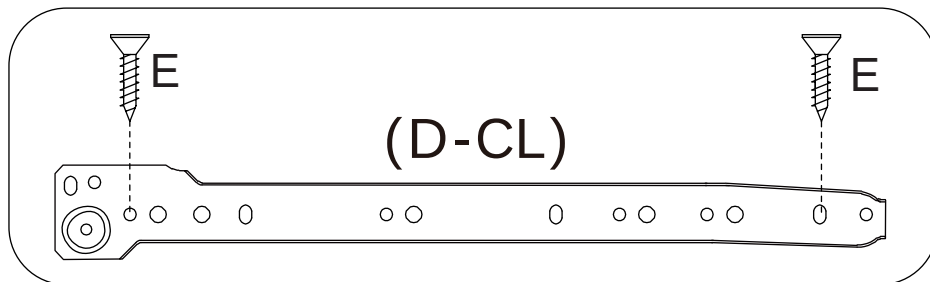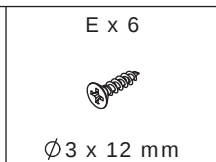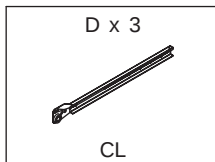    



 
 
Secure slide rail (D-CL) to part 1 using screw (E).

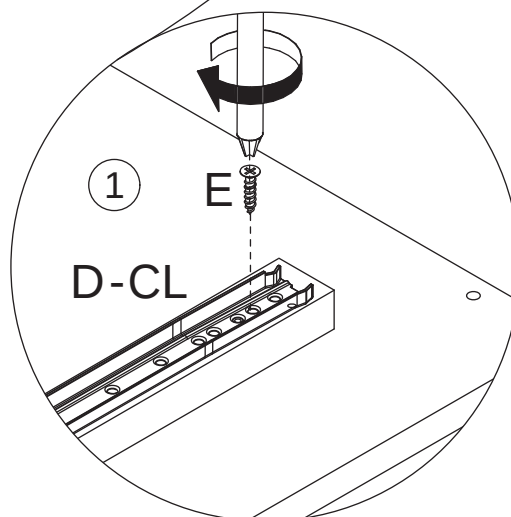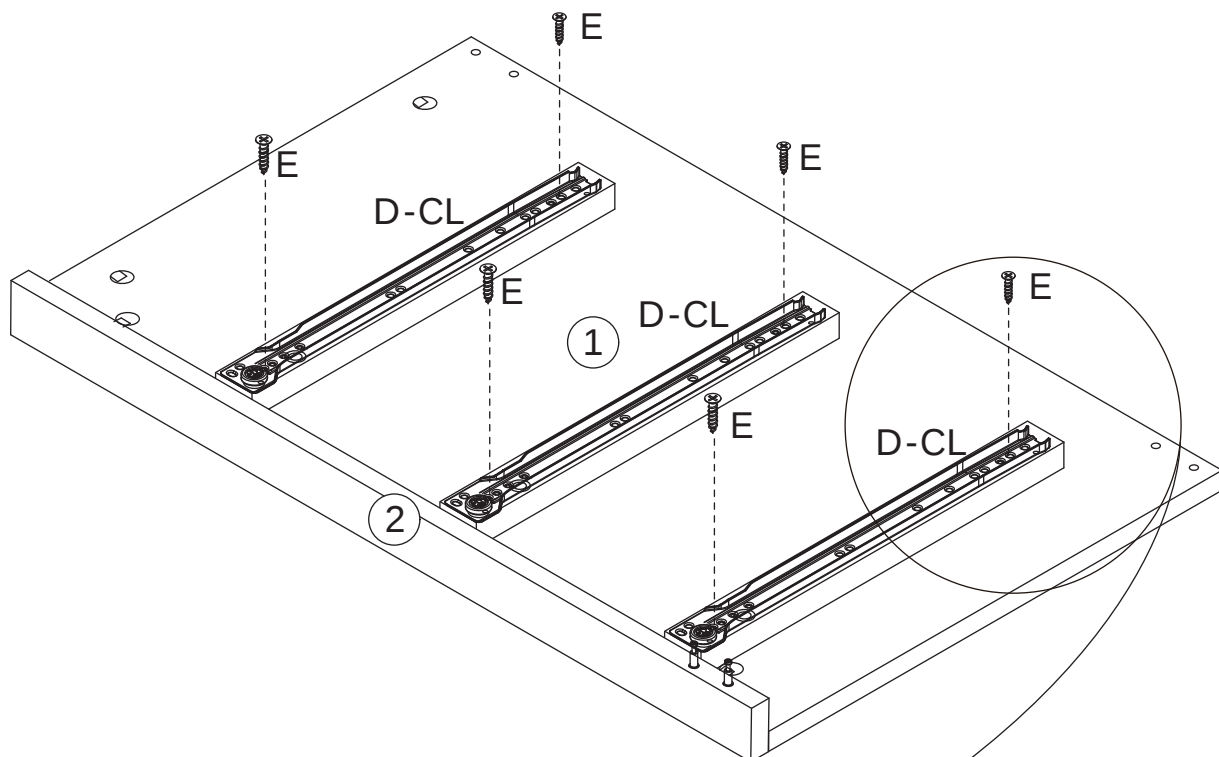





5

  A x 3  Ø 6 x 35 mm	C x 1  Ø 6 x 30 mm	N-1 x 1 	N-2 x 1  Ø 4 x 12 mm	
---	---	--	--	---

   
 
Screw eccentric rod (A) and insert wooden dowel (C) onto part 1 as shown.
Secure bracket (N) to part 1.

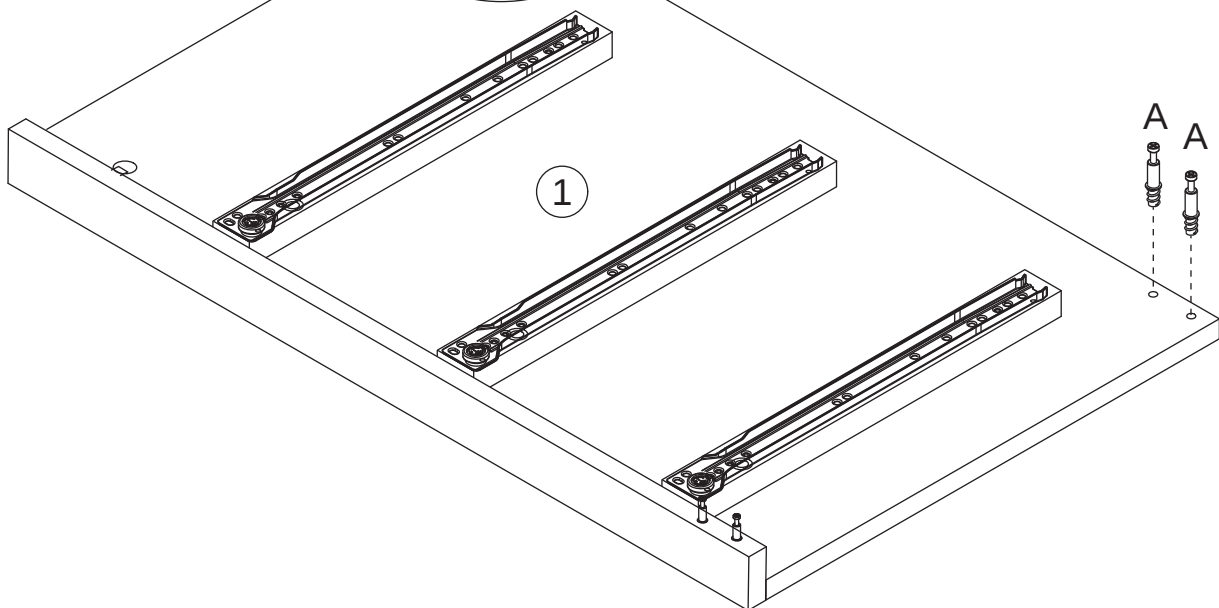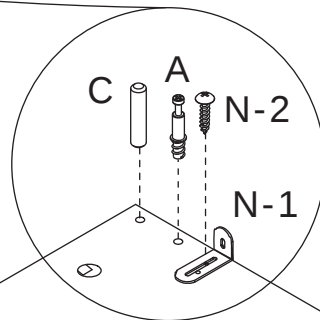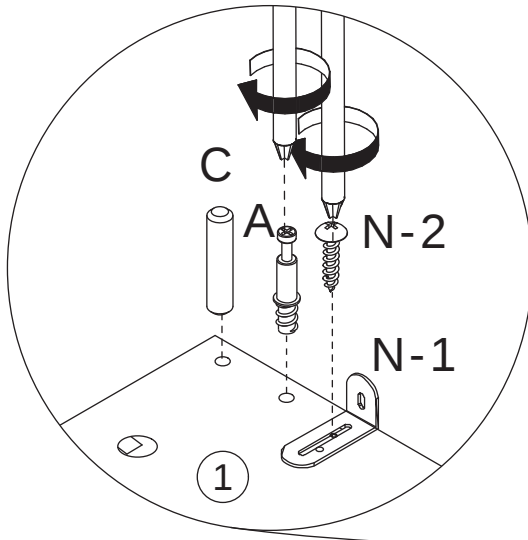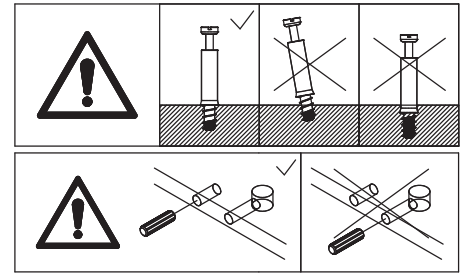



6

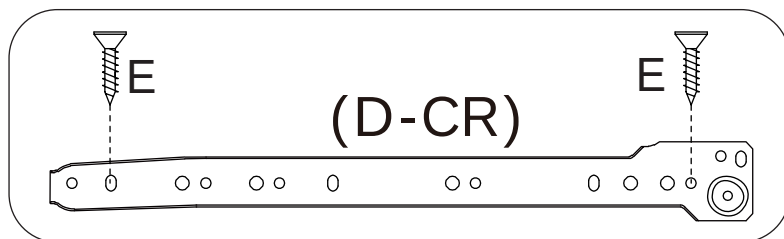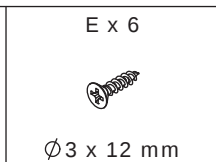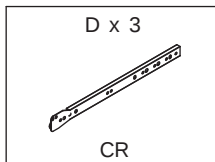    

 
 
Secure slide rail (D-CR) to part 6 using screw (E).

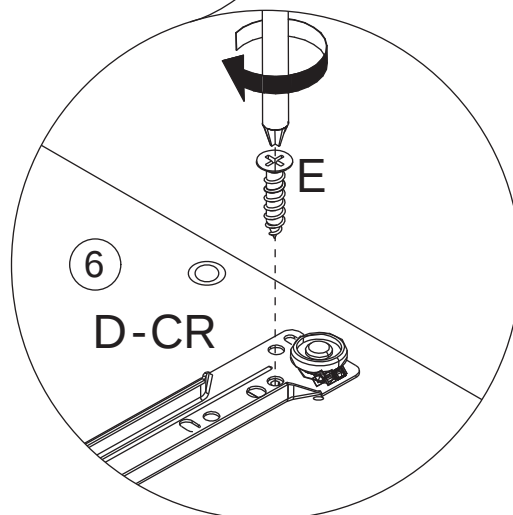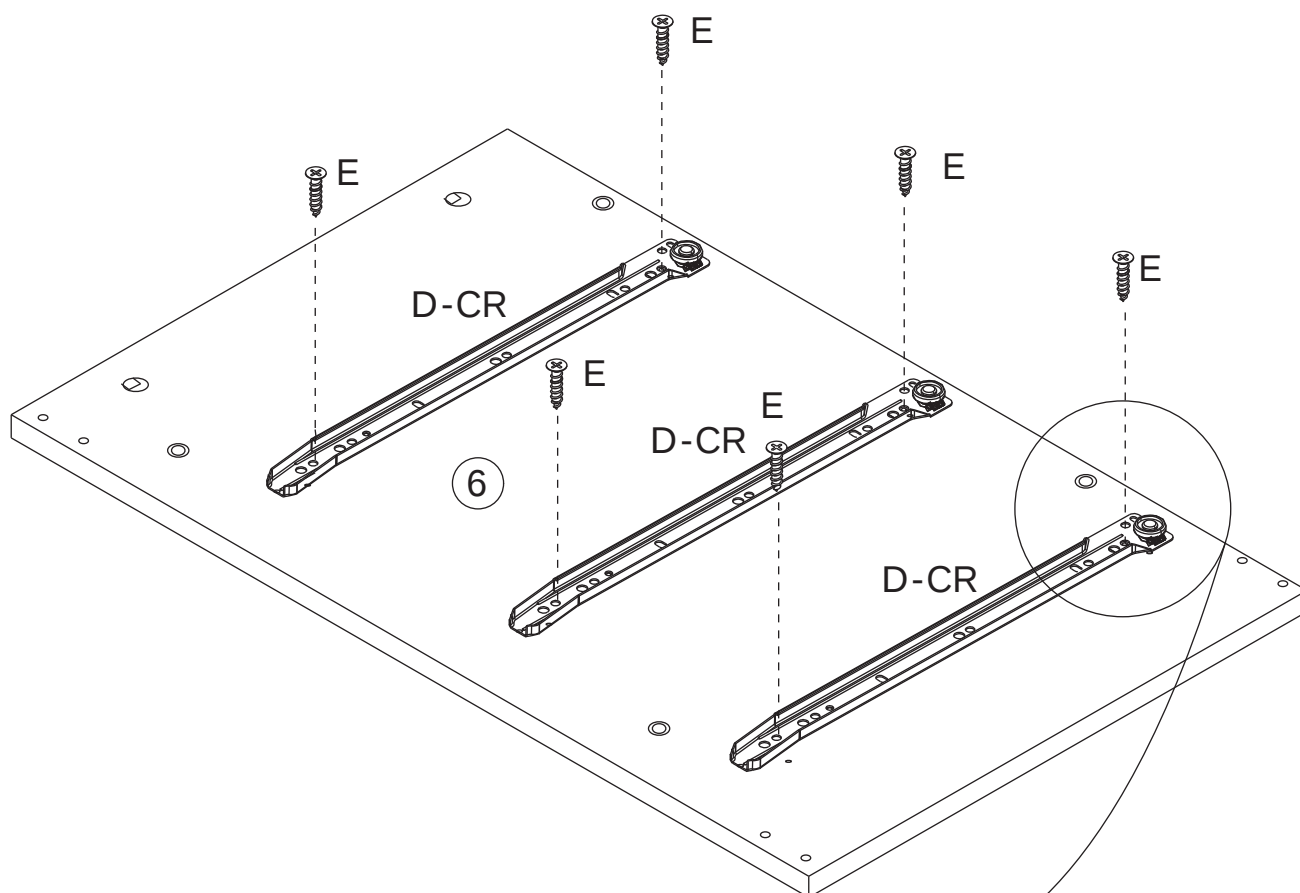

7

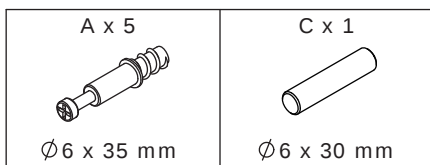  


  Screw eccentric rod (A) and insert wooden dowel (C) onto part 6 as shown.

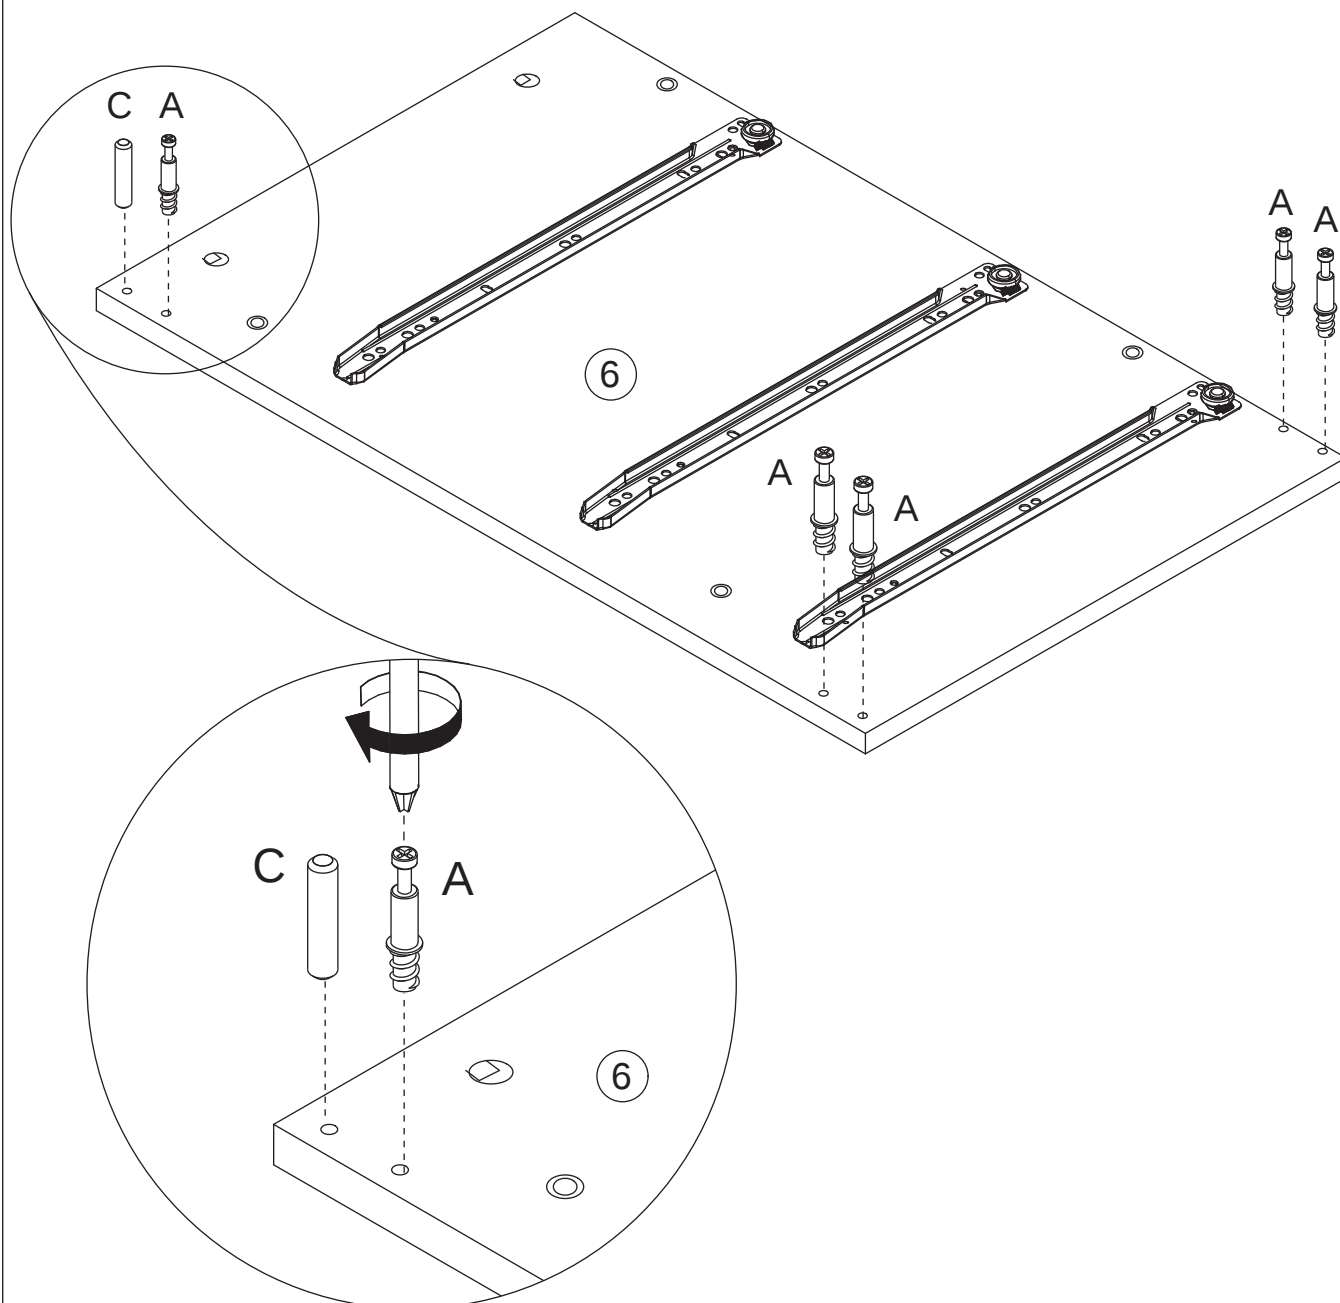
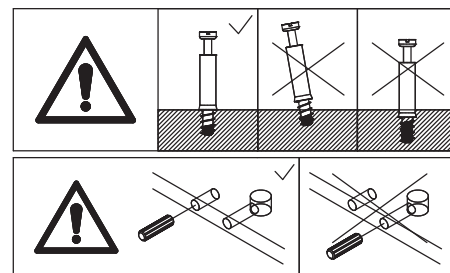


8



 
B x 5

 $\varnothing 15 \times 9.5 \text{ mm}$ 

  
Connect part 1 and 2 to part 3, 4, and 5, and tighten by turning cam lock (B) clockwise as shown.

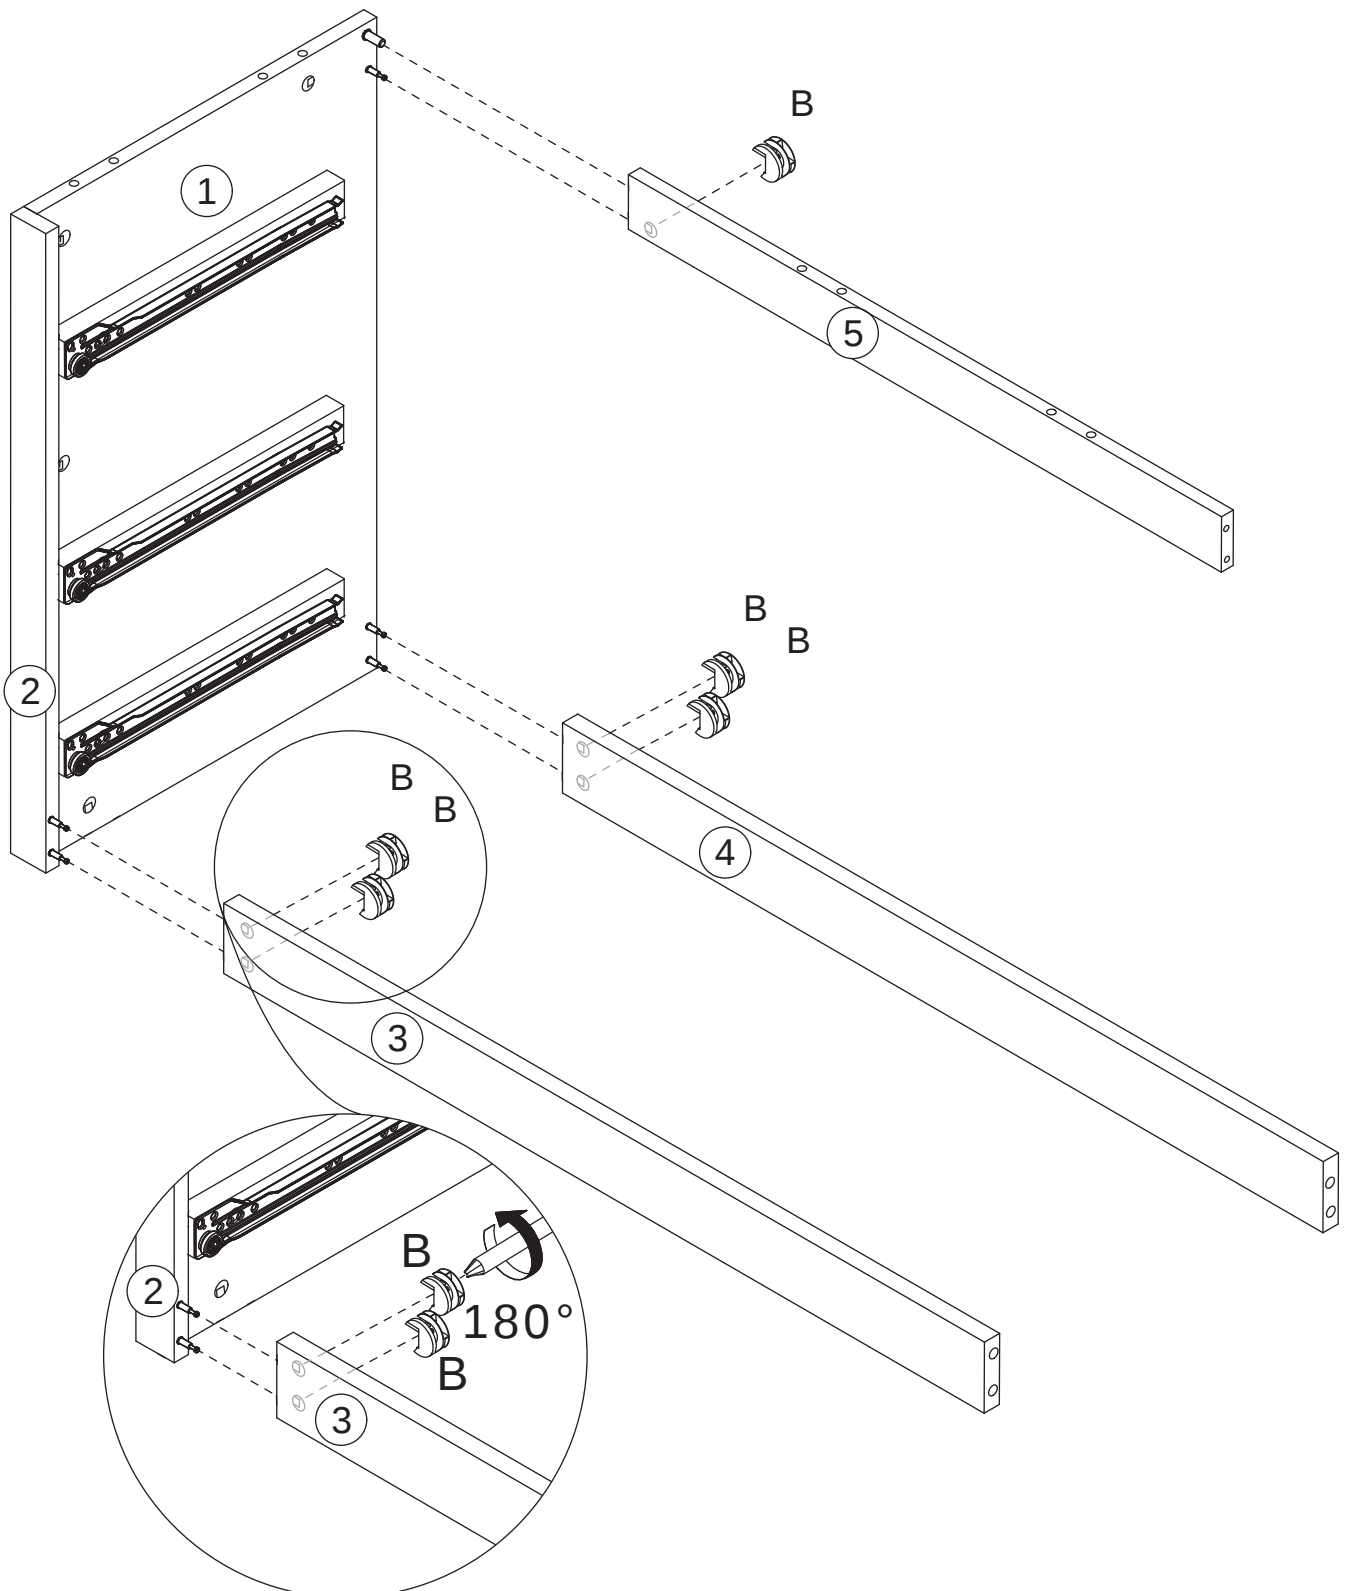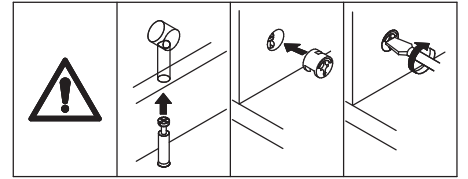




9

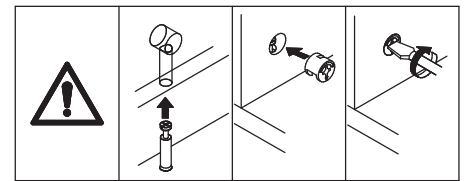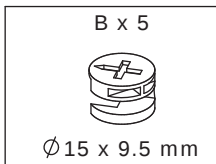   


 
Connect part 6 to part 3, 4, and 5, and tighten by turning cam lock (B) clockwise as shown.

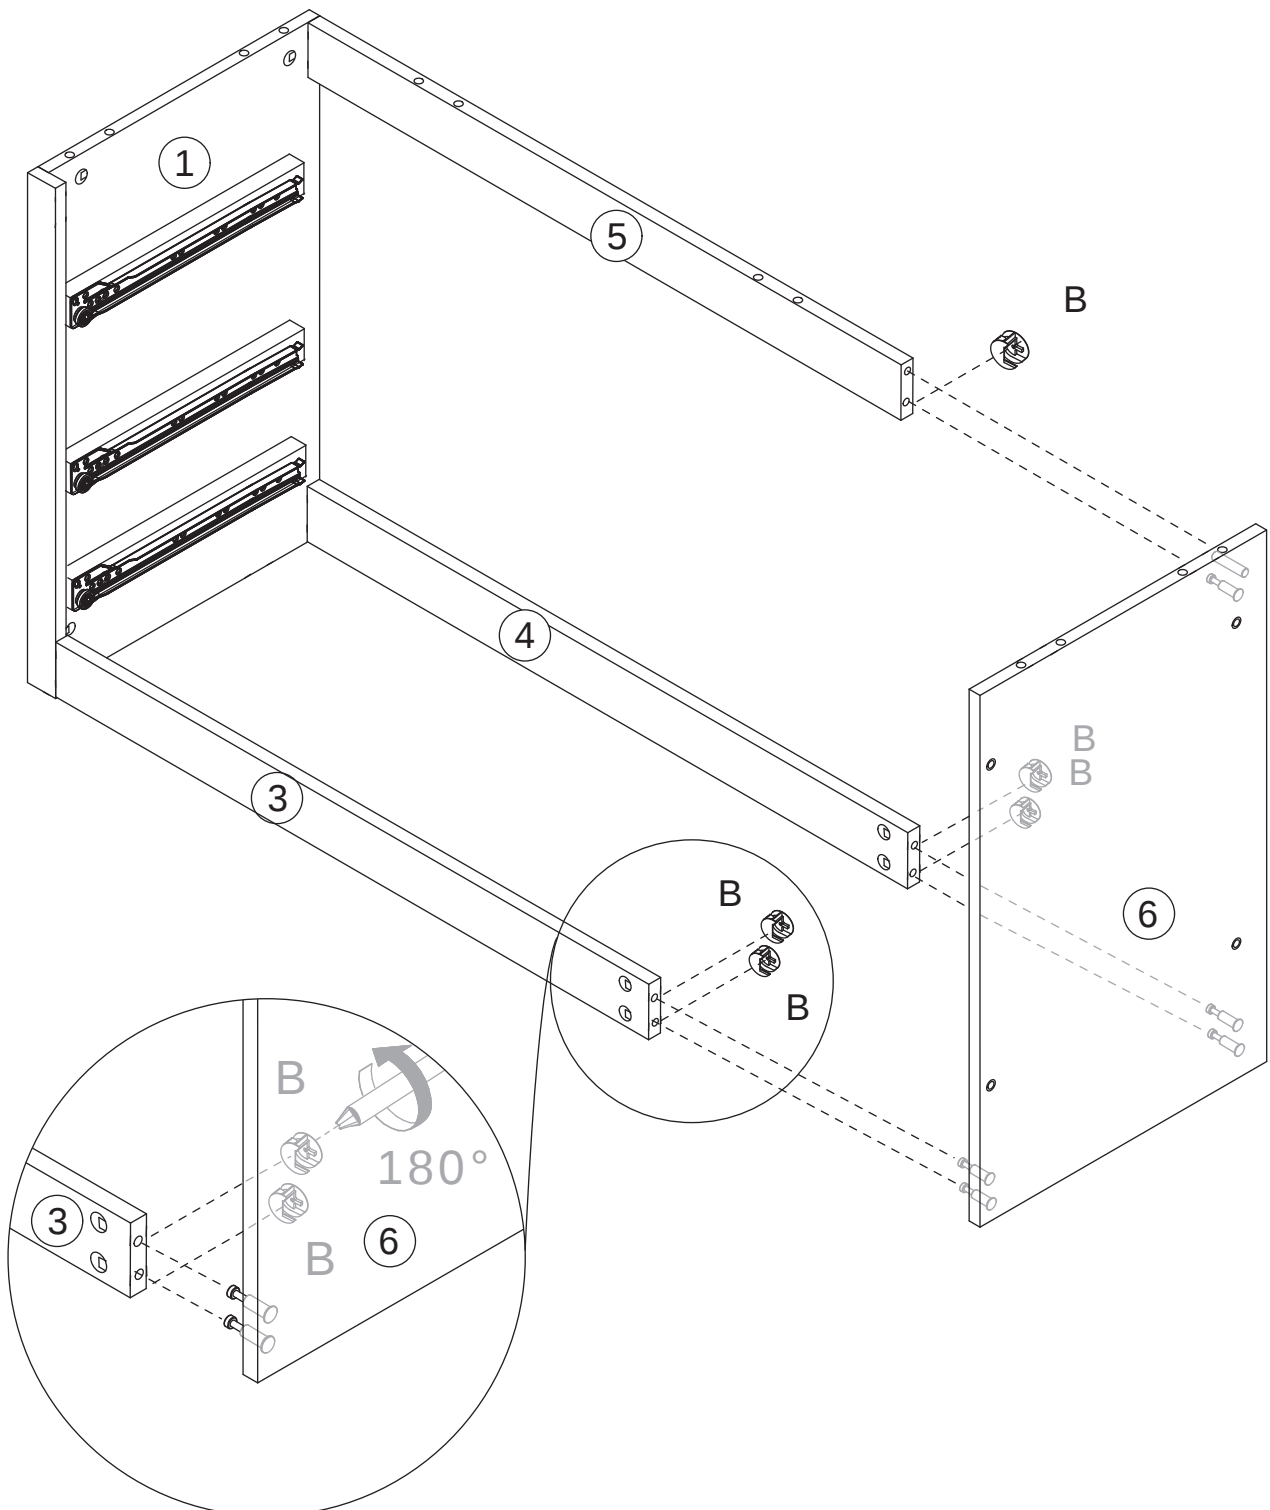




10

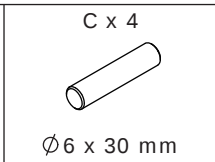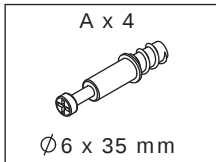   

  
Screw eccentric rod (A) and insert wooden dowel (C) onto part 19 as shown.

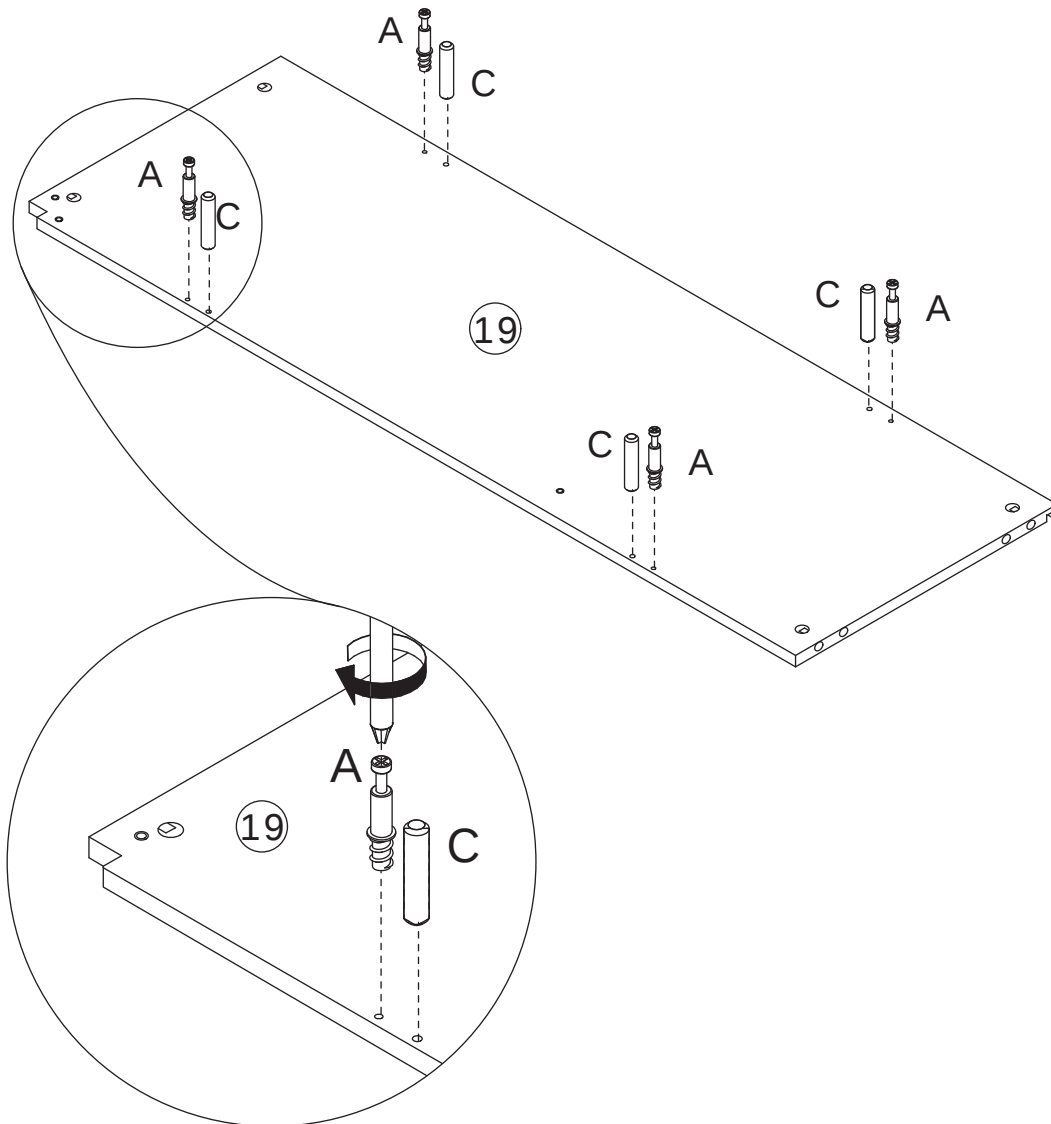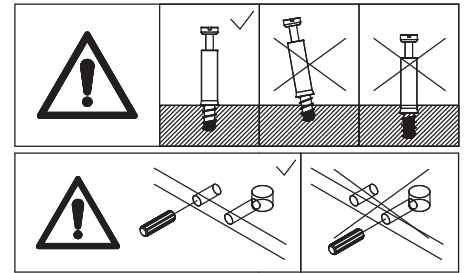

11

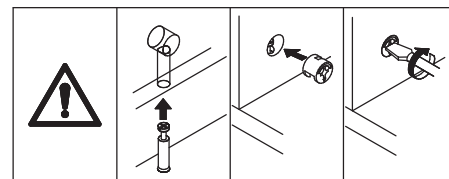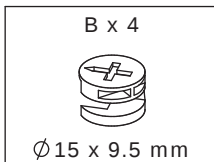   


 
Connect part 16 and 18 to part 19, and tighten by turning cam lock (B) clockwise as shown.

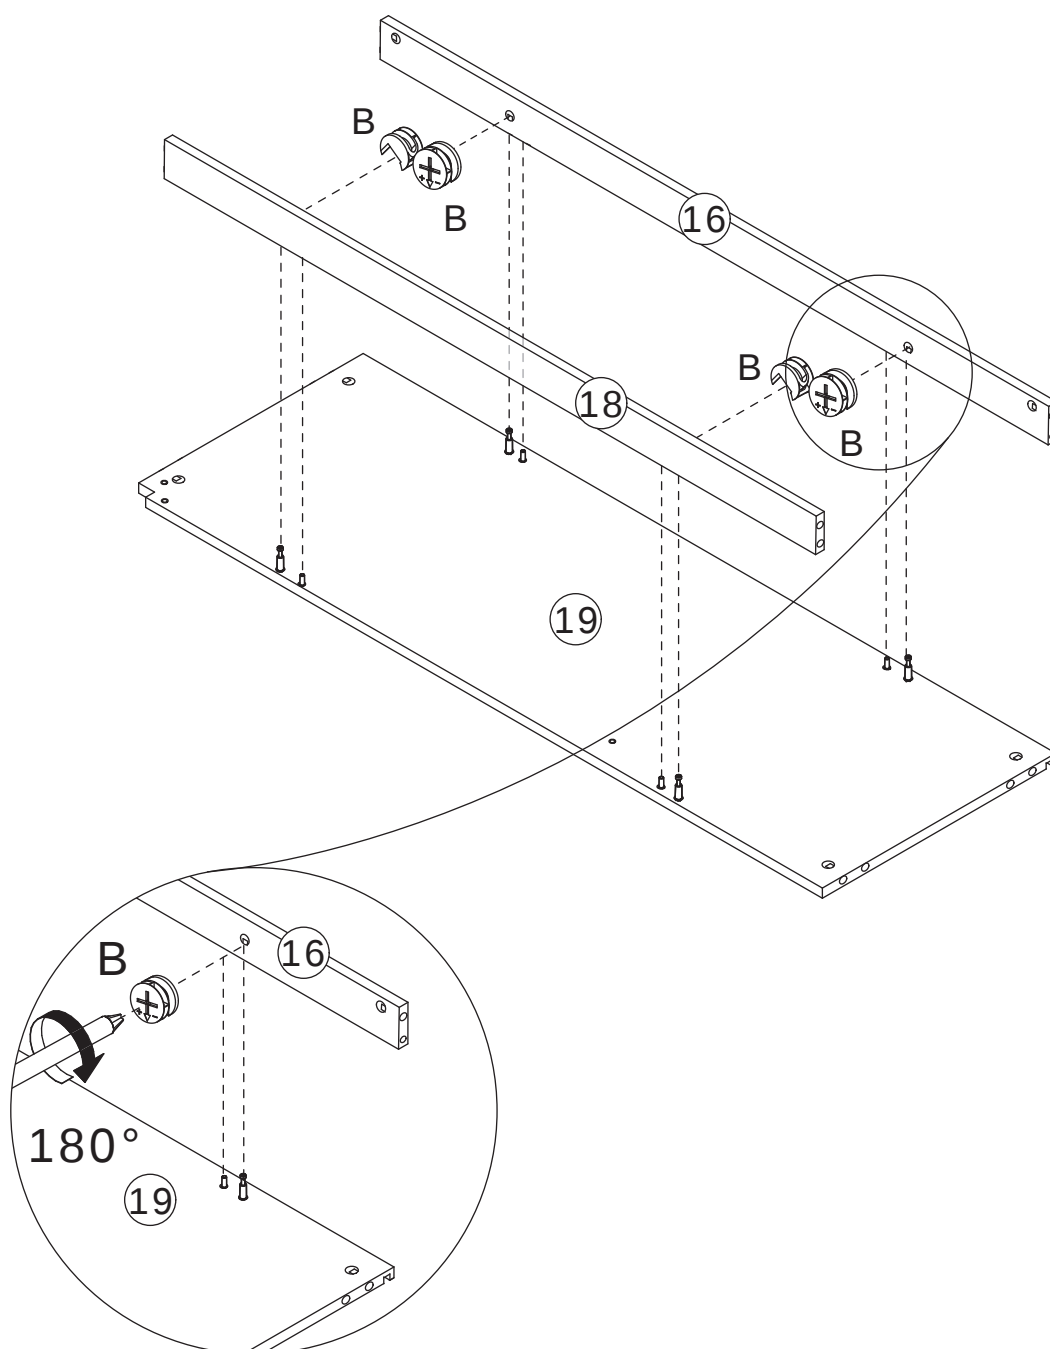

12



 
 
Screw eccentric rod (A) and insert wooden dowel (C) onto part 19 as shown.

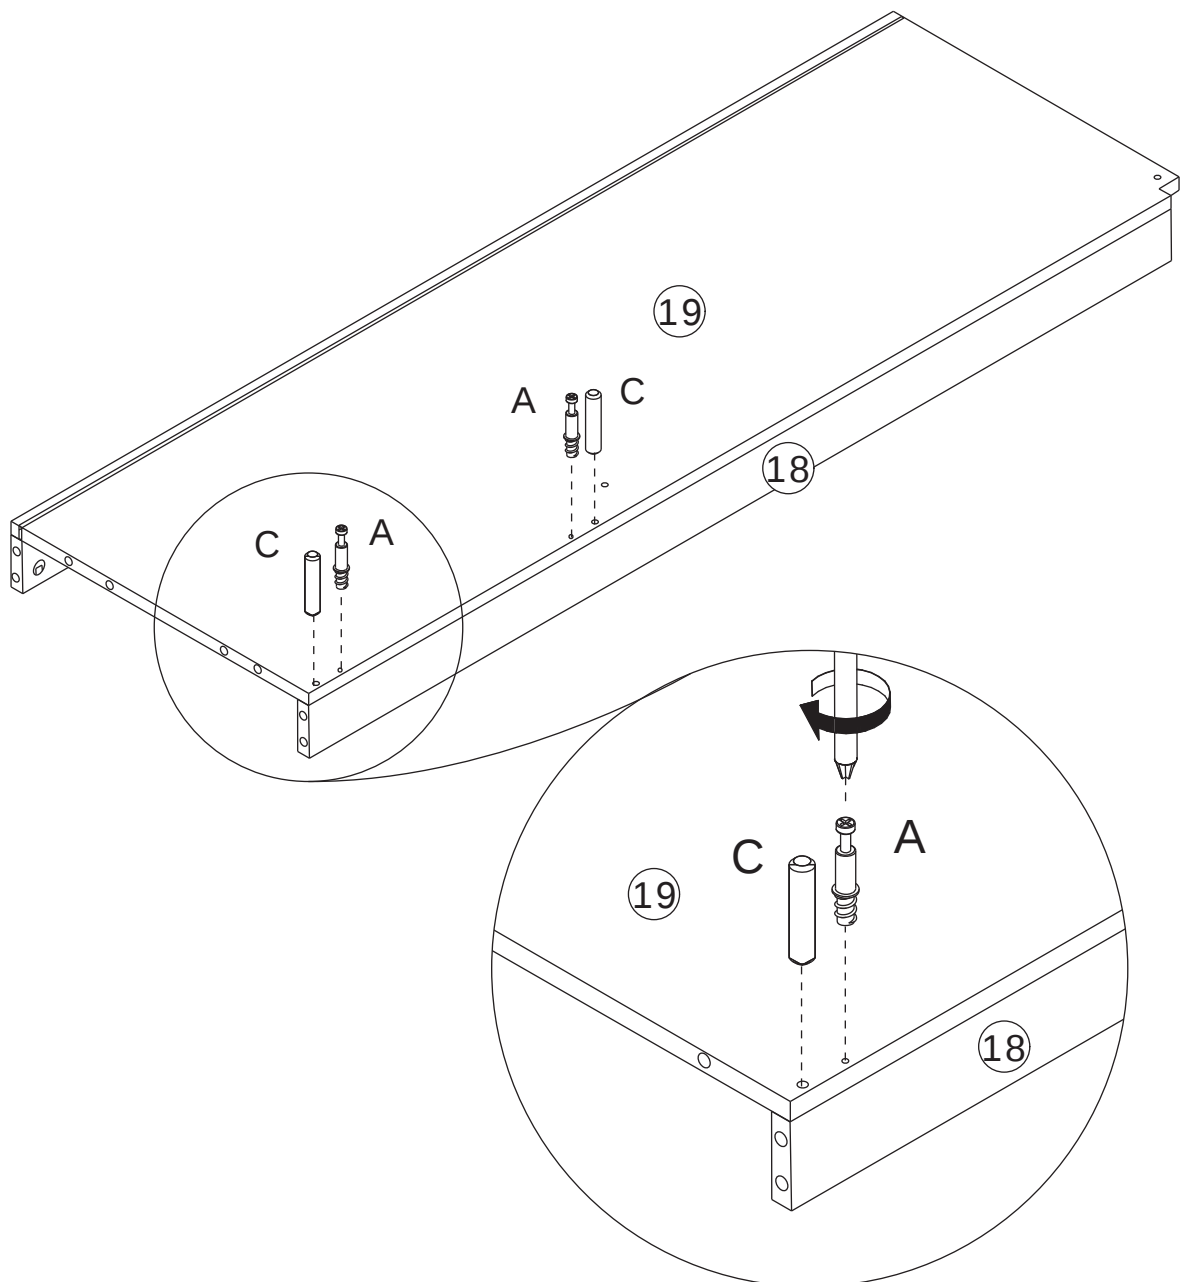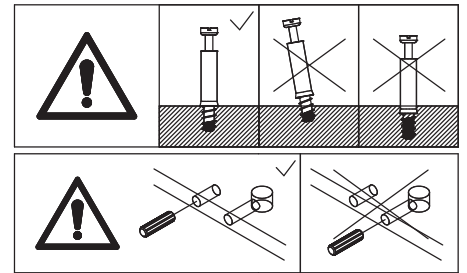

13



  Screw eccentric rod (A) and insert wooden dowel (C) onto part 21 as shown.

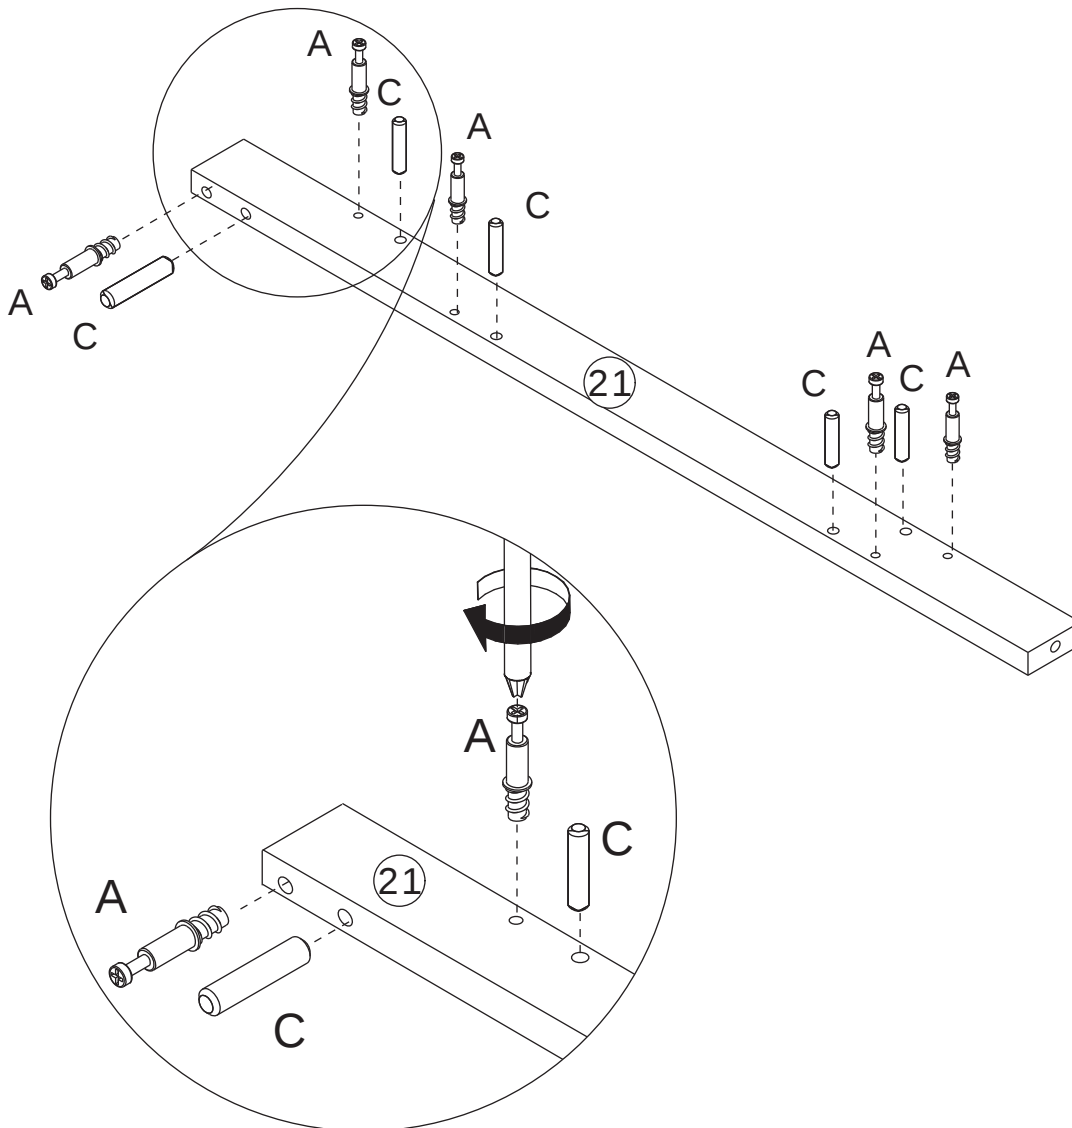
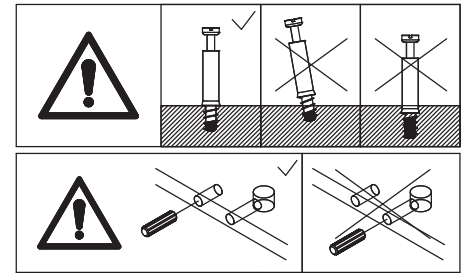


14


B x 2



 
 
Ø15 x 9.5 mm

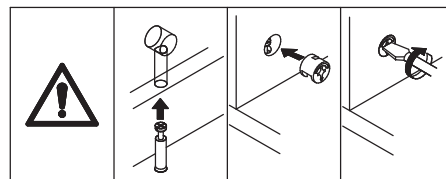



 
Connect part 21 to part 20, and tighten by turning cam lock (B) clockwise as shown.

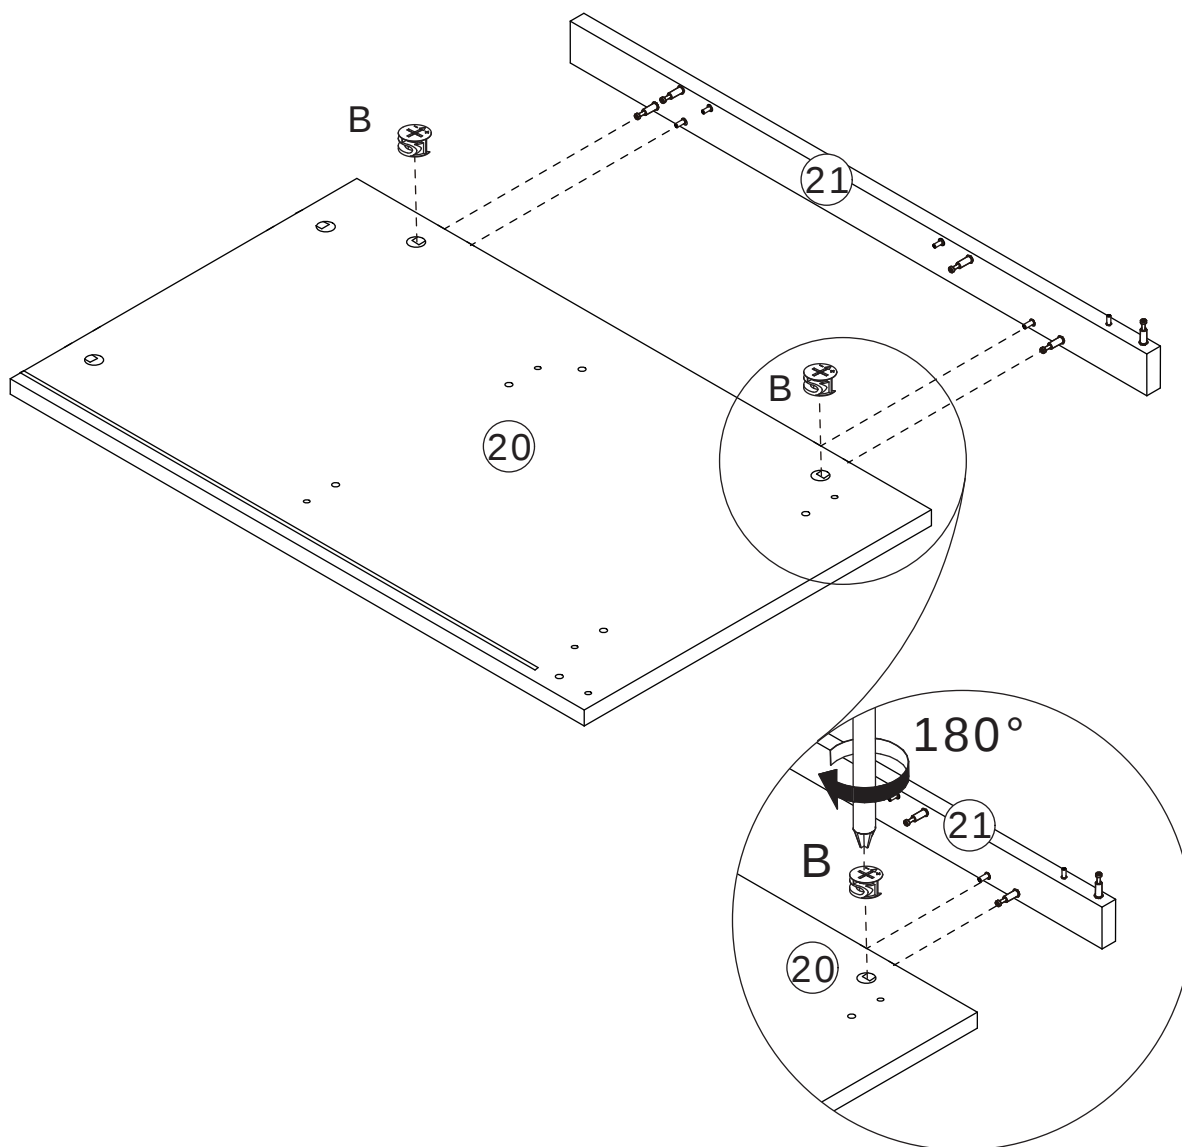



15

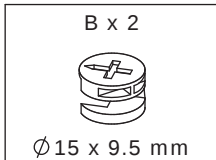  

  
 
Connect part 24 to part 21, and tighten by turning cam lock (B) clockwise as shown.

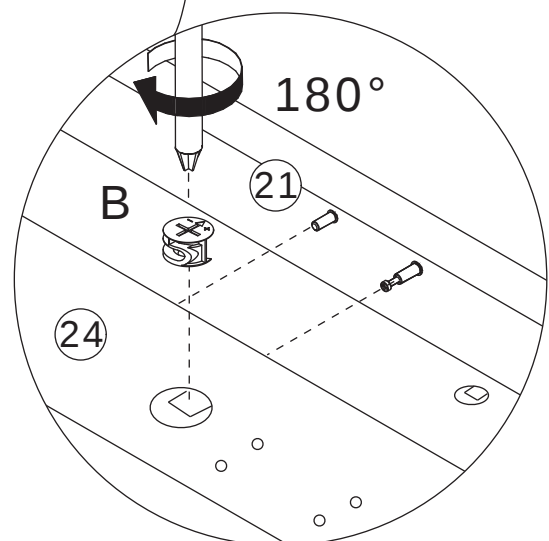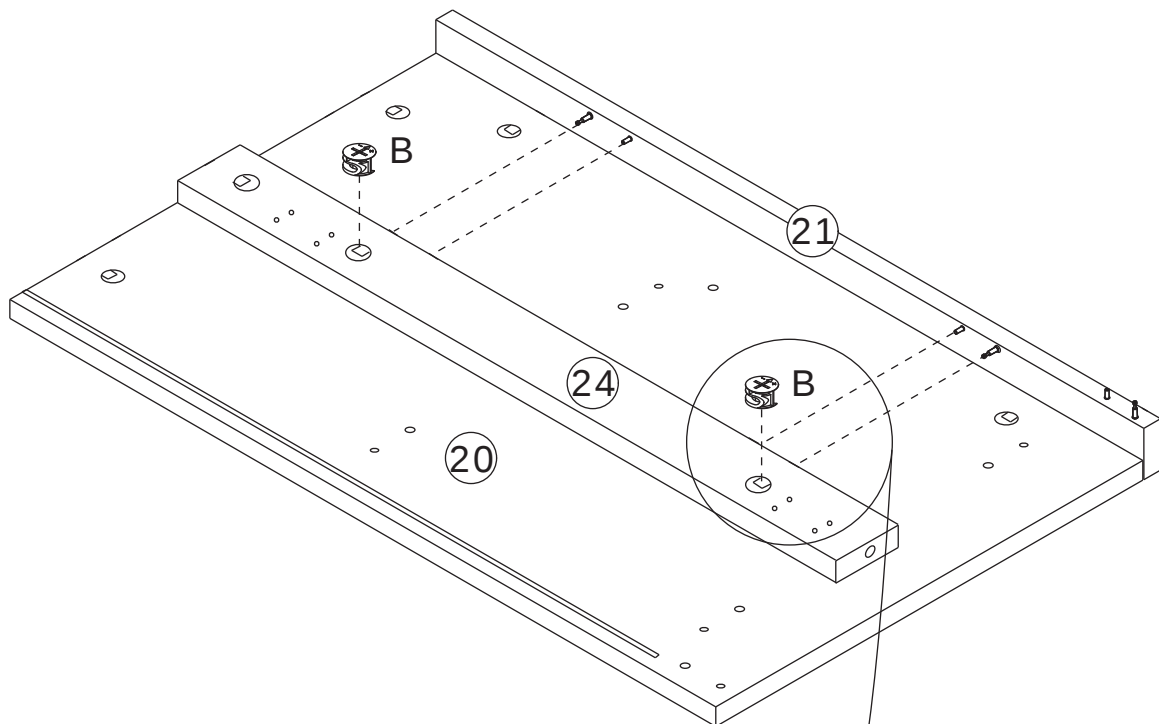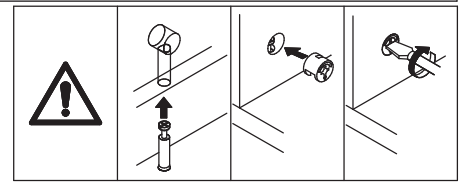


16

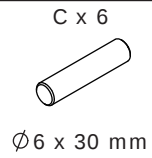  


  
Screw eccentric rod (A) and insert wooden dowel (C) onto part 20 as shown.

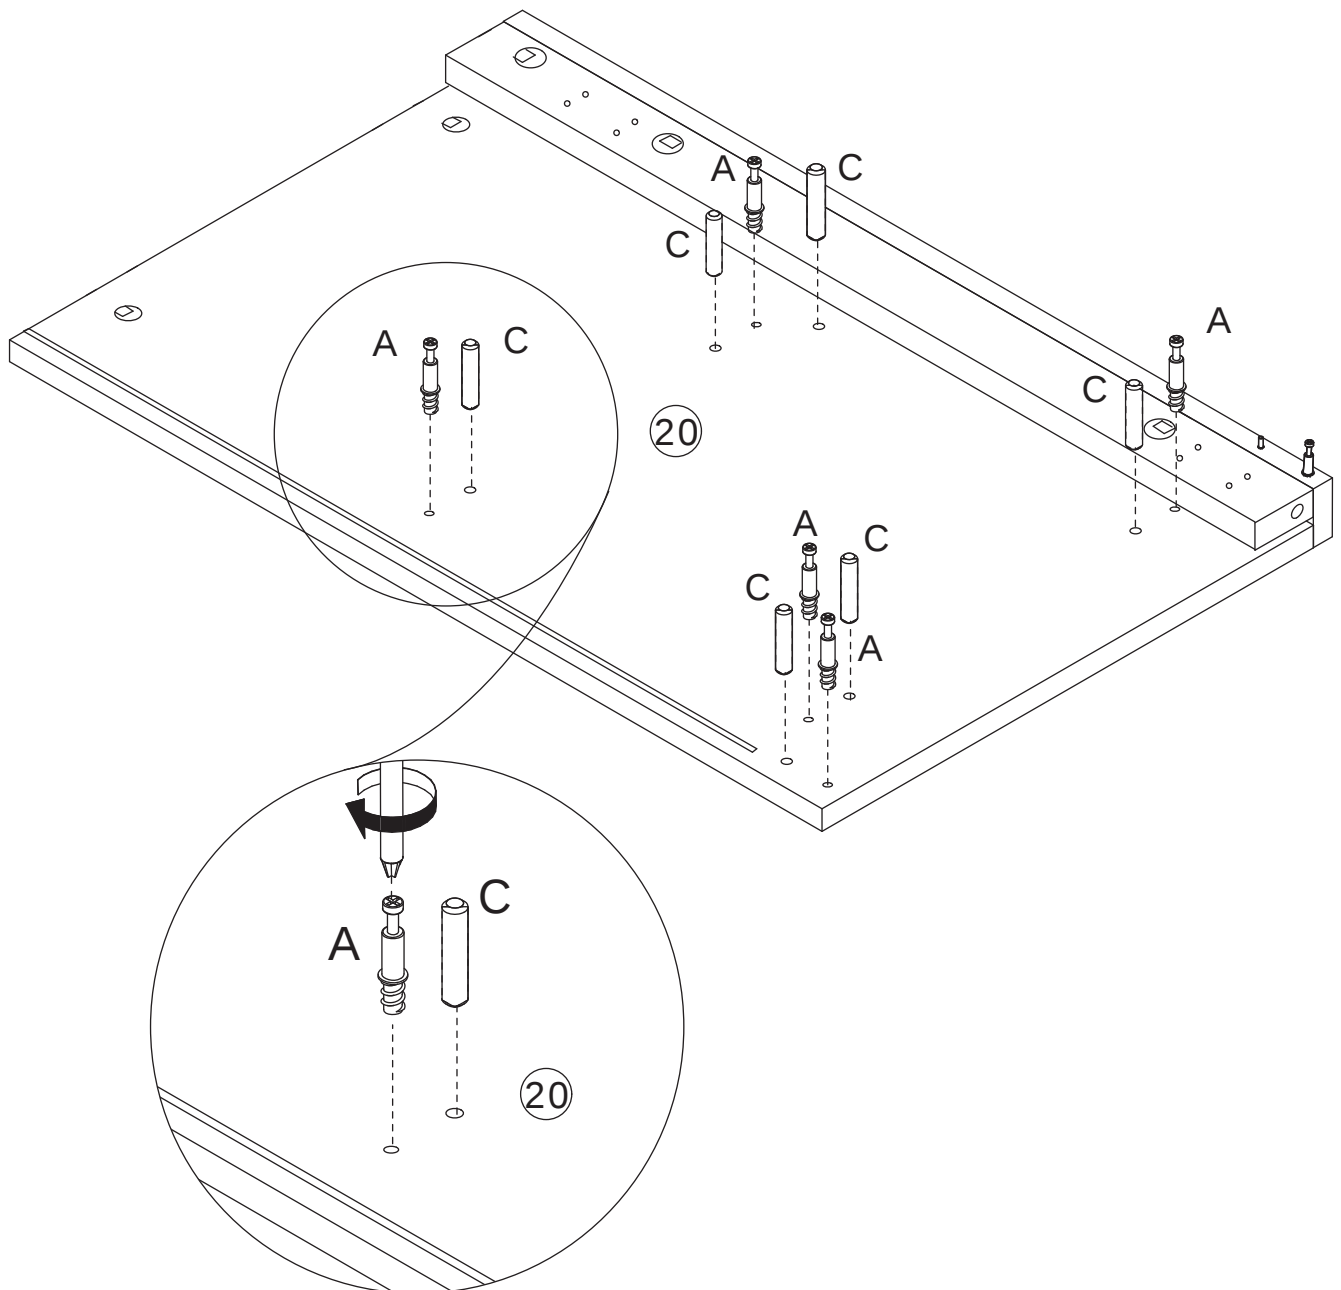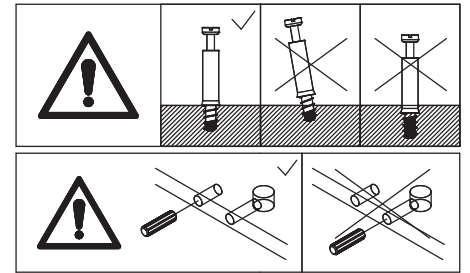



17

 A x 3

  Ø6 x 35 mm

 C x 2

   Ø6 x 30 mm

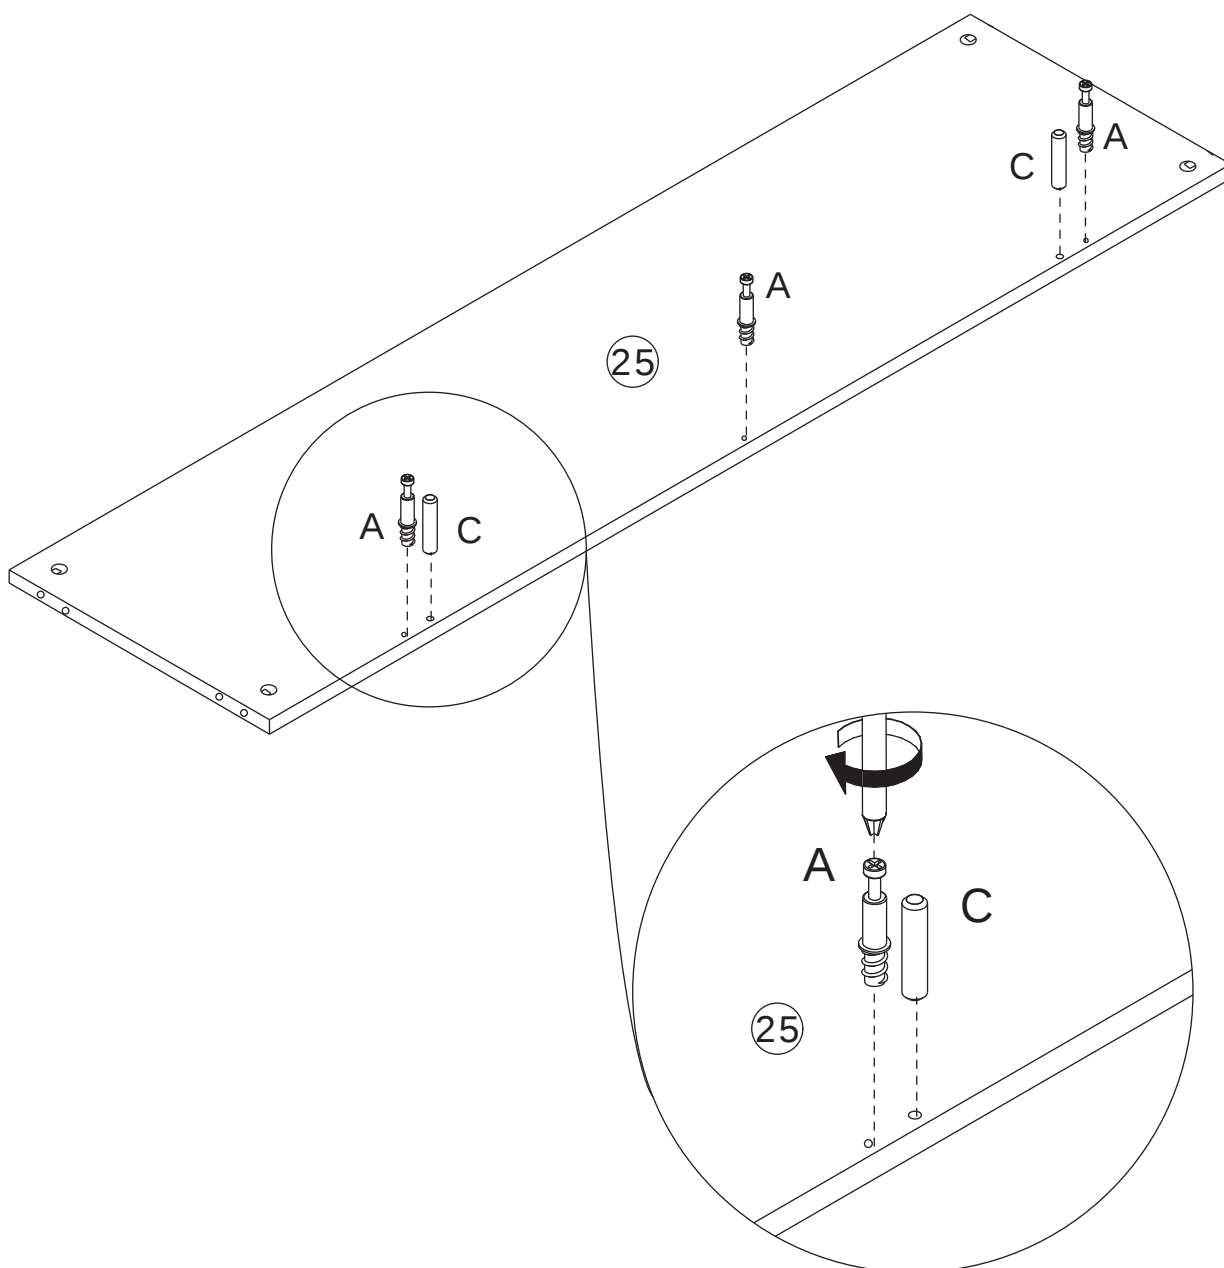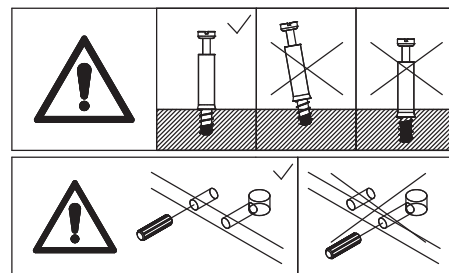

Screw eccentric rod (A) and insert wooden dowel (C) onto part 25 as shown.

 


18




B x 3






Ø15 x 9.5 mm



   
Connect part 17 to part 25, and tighten by turning cam lock (B) clockwise as shown.

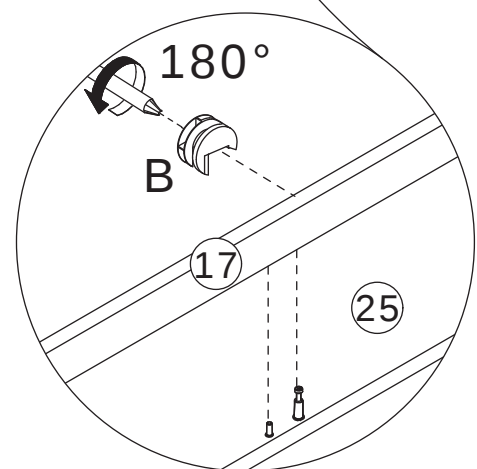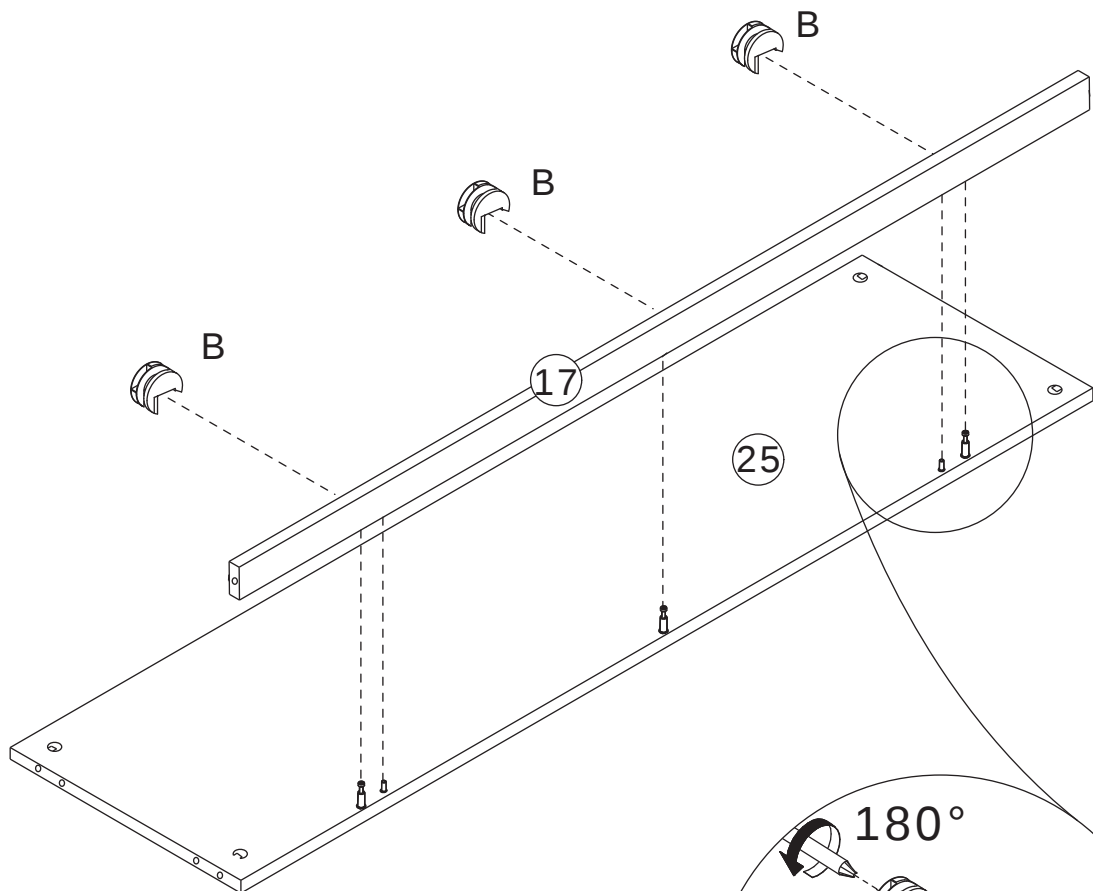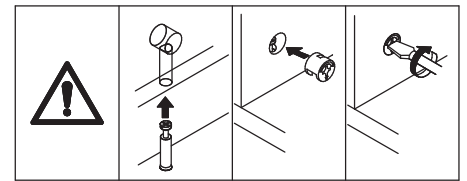




19

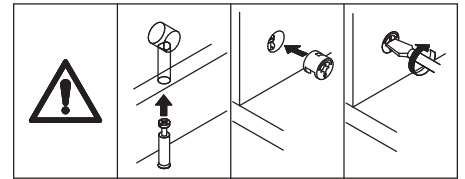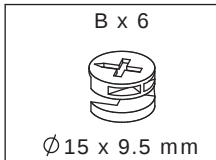   


 
Connect part 25, 19, 18, 17, and 16 to part 20, and tighten by turning cam lock (B) clockwise as shown.

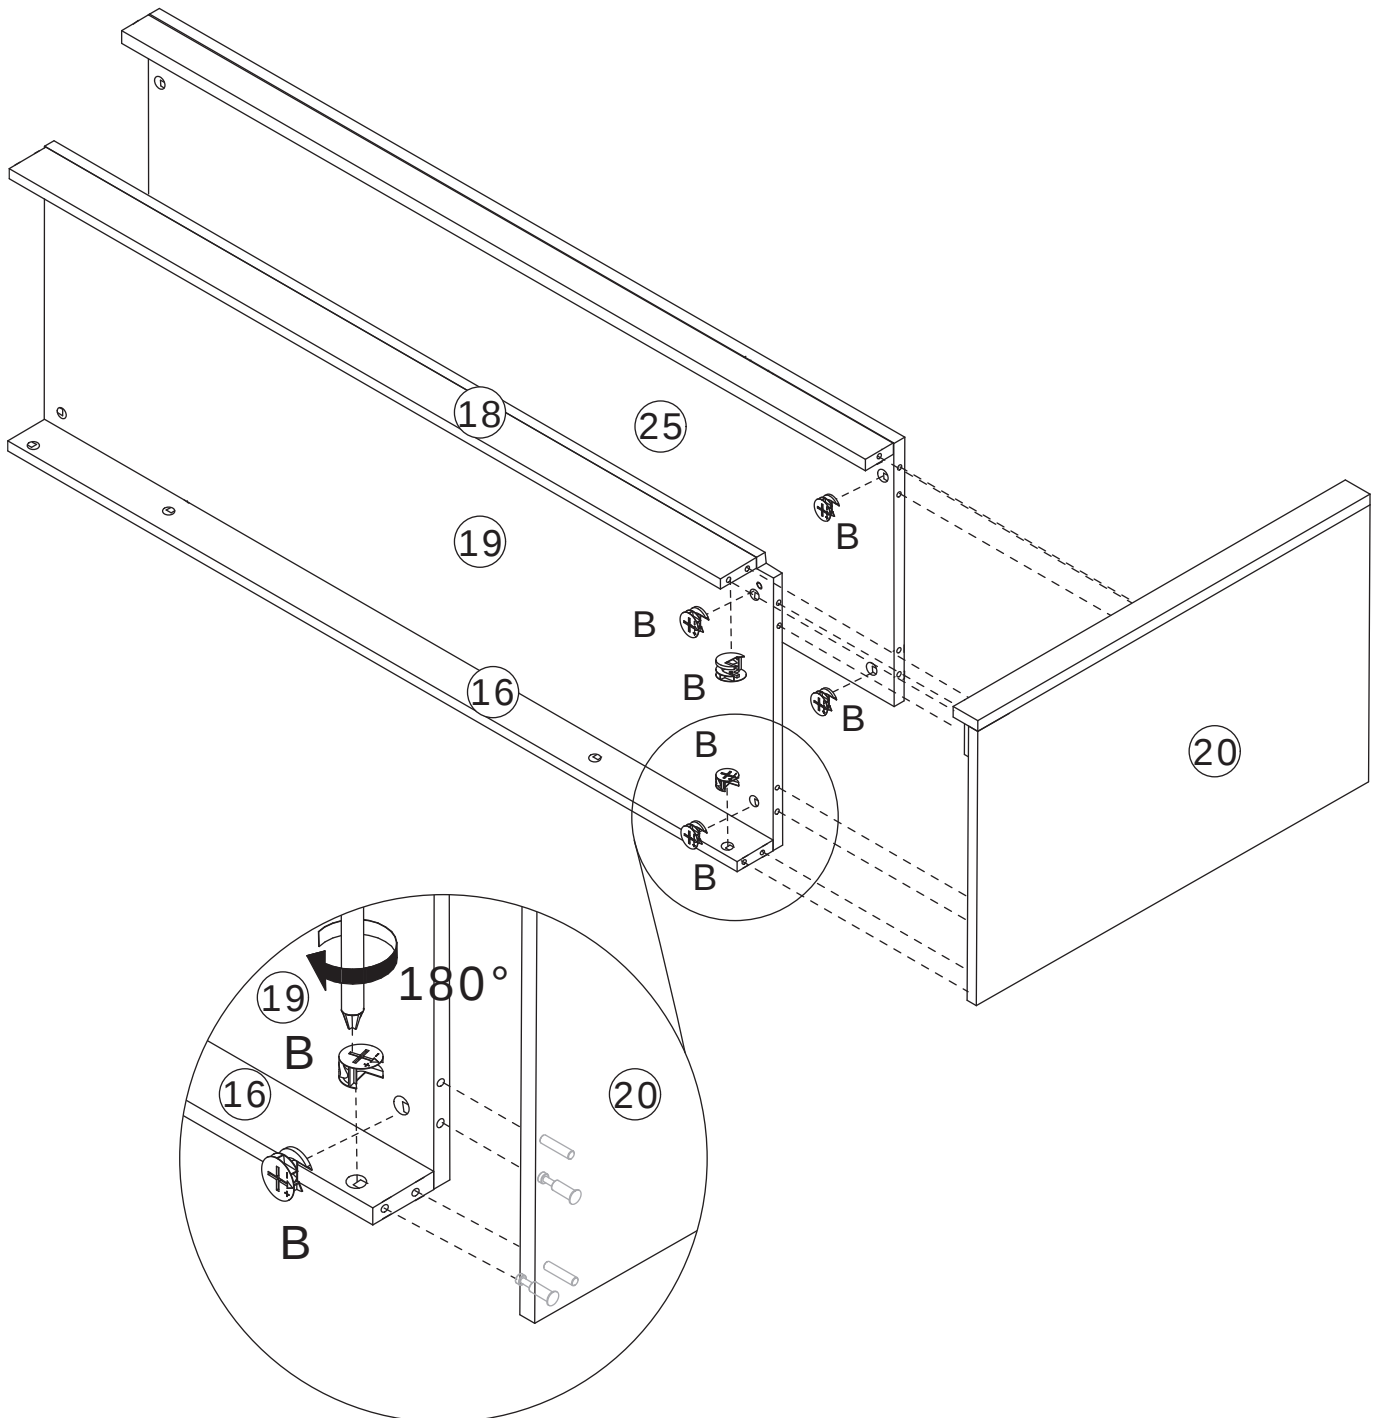



20

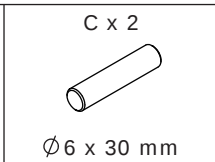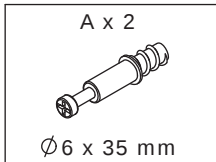   

 
 
Screw eccentric rod (A) and insert wooden dowel (C) onto part 22 as shown.

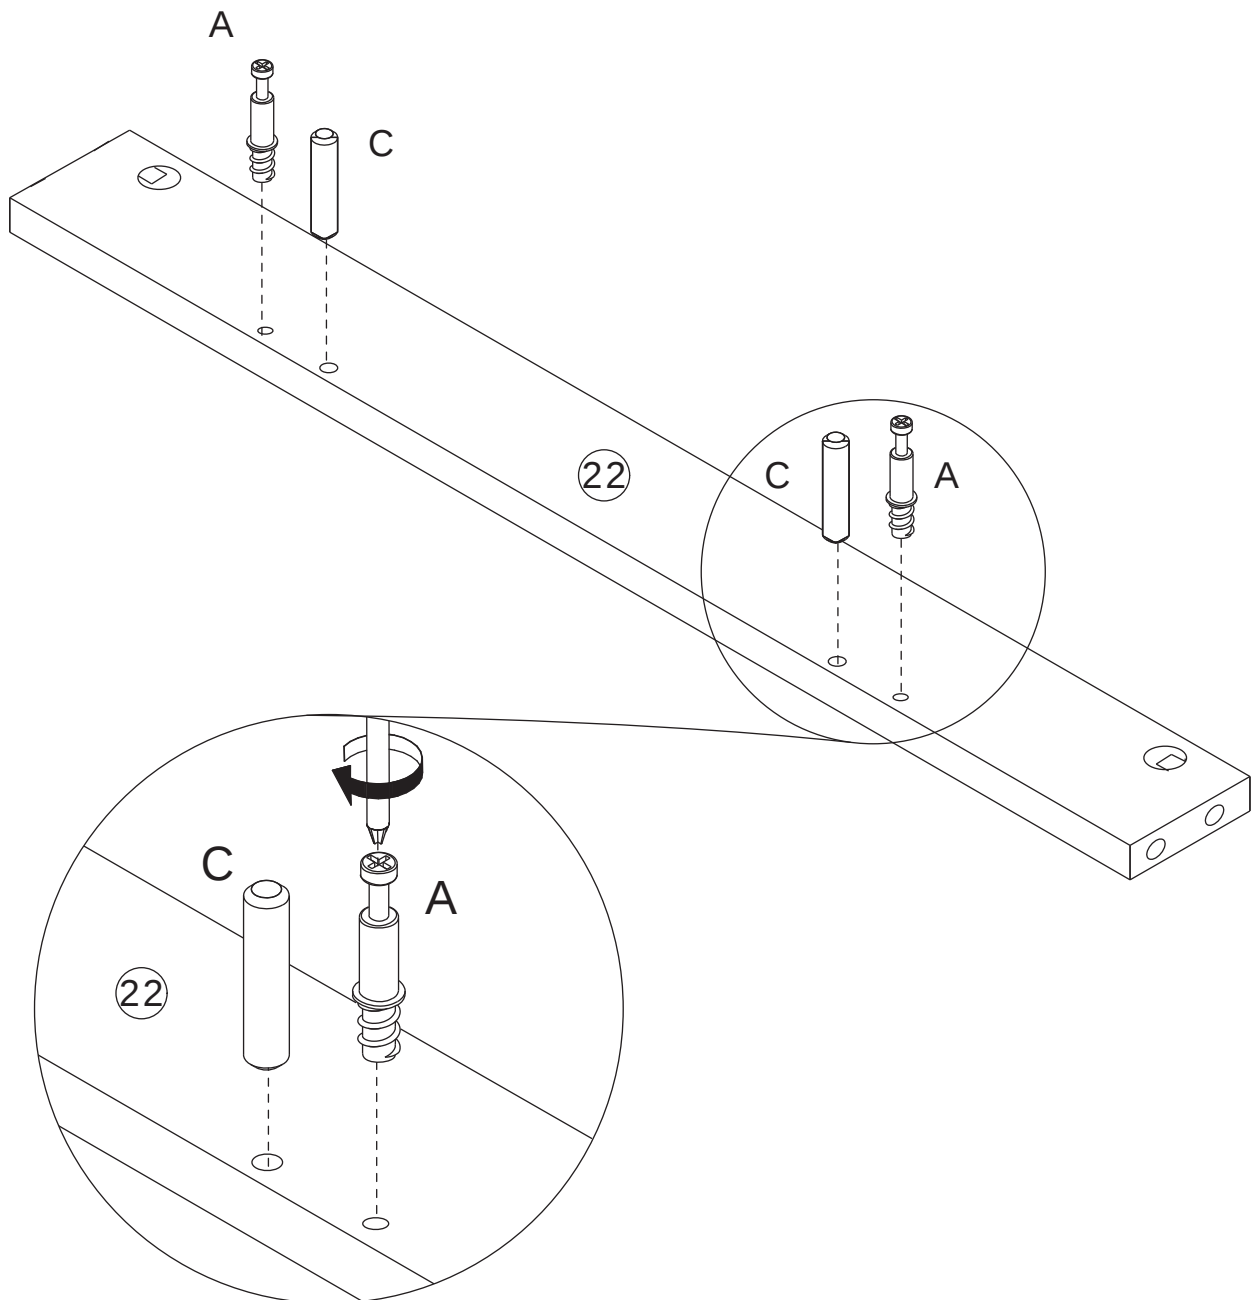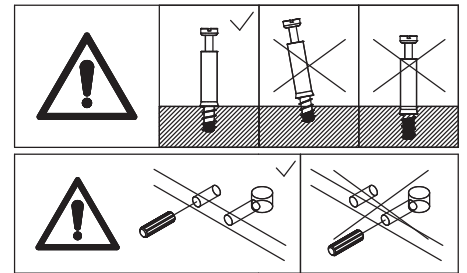





21

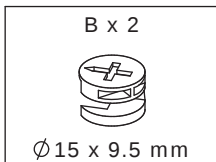  

  Connect part 23 to part 22, and tighten by turning cam lock (B) clockwise as shown.

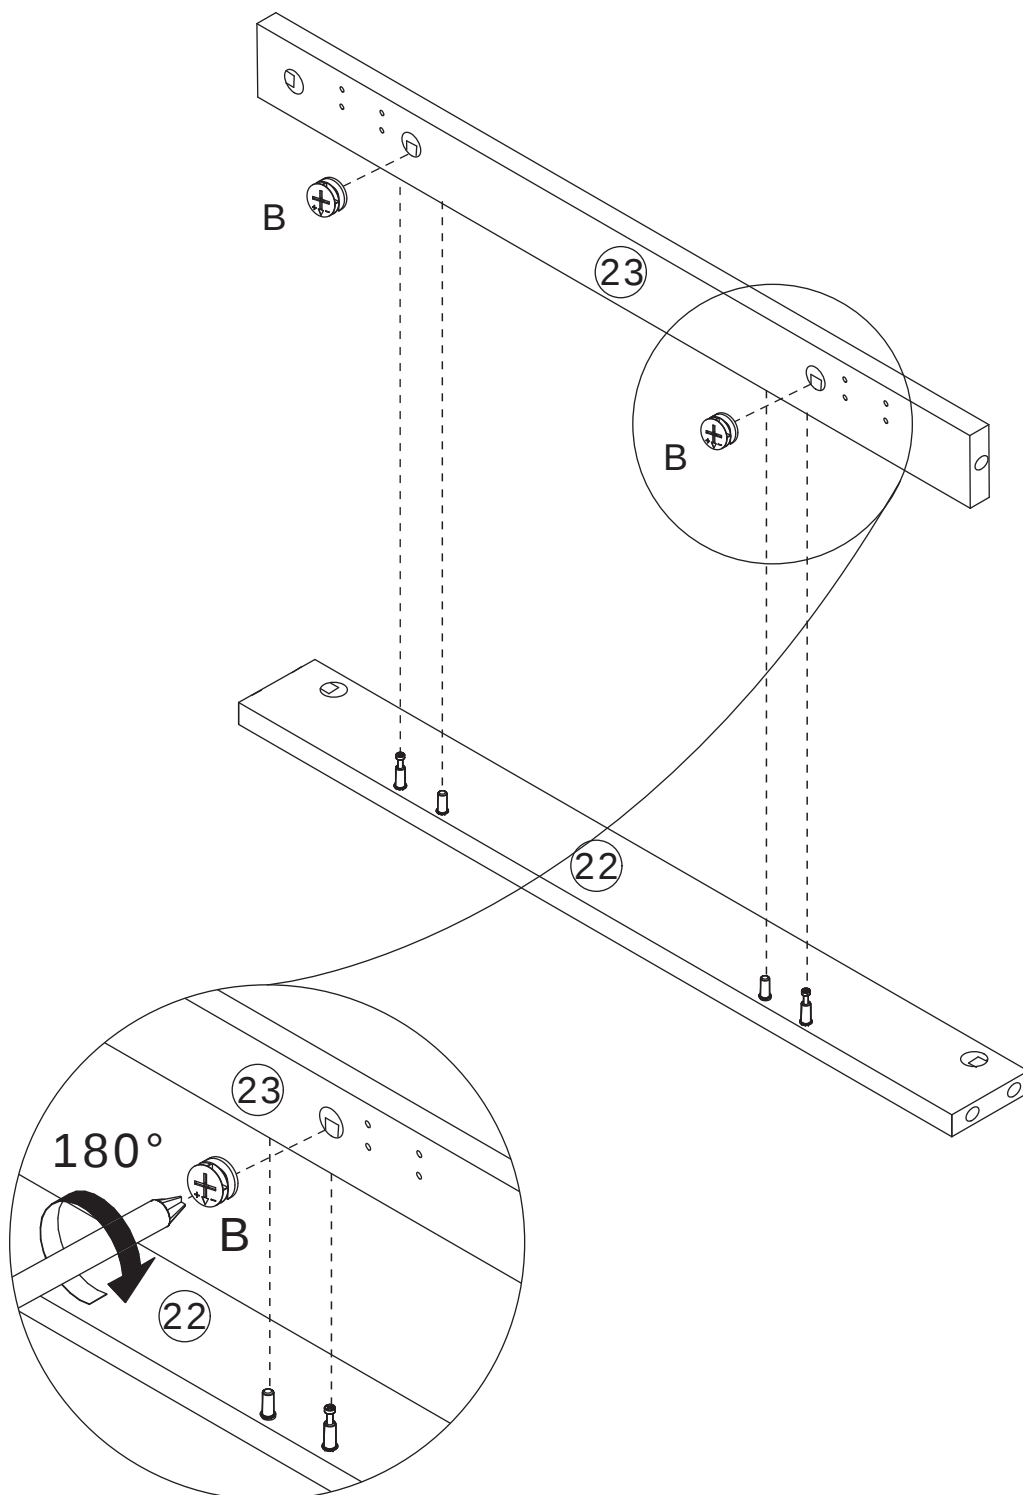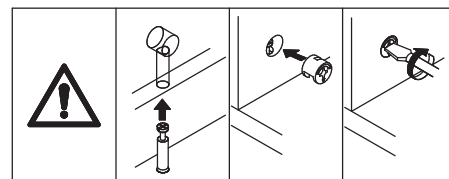


22

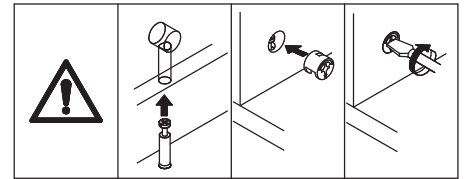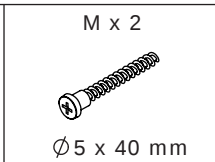   
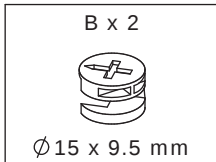 


Connect part 22 and 32 to part 19, and tighten by turning cam lock (B) clockwise as shown.

 
Secure part 23 to part 19 using screw (M).

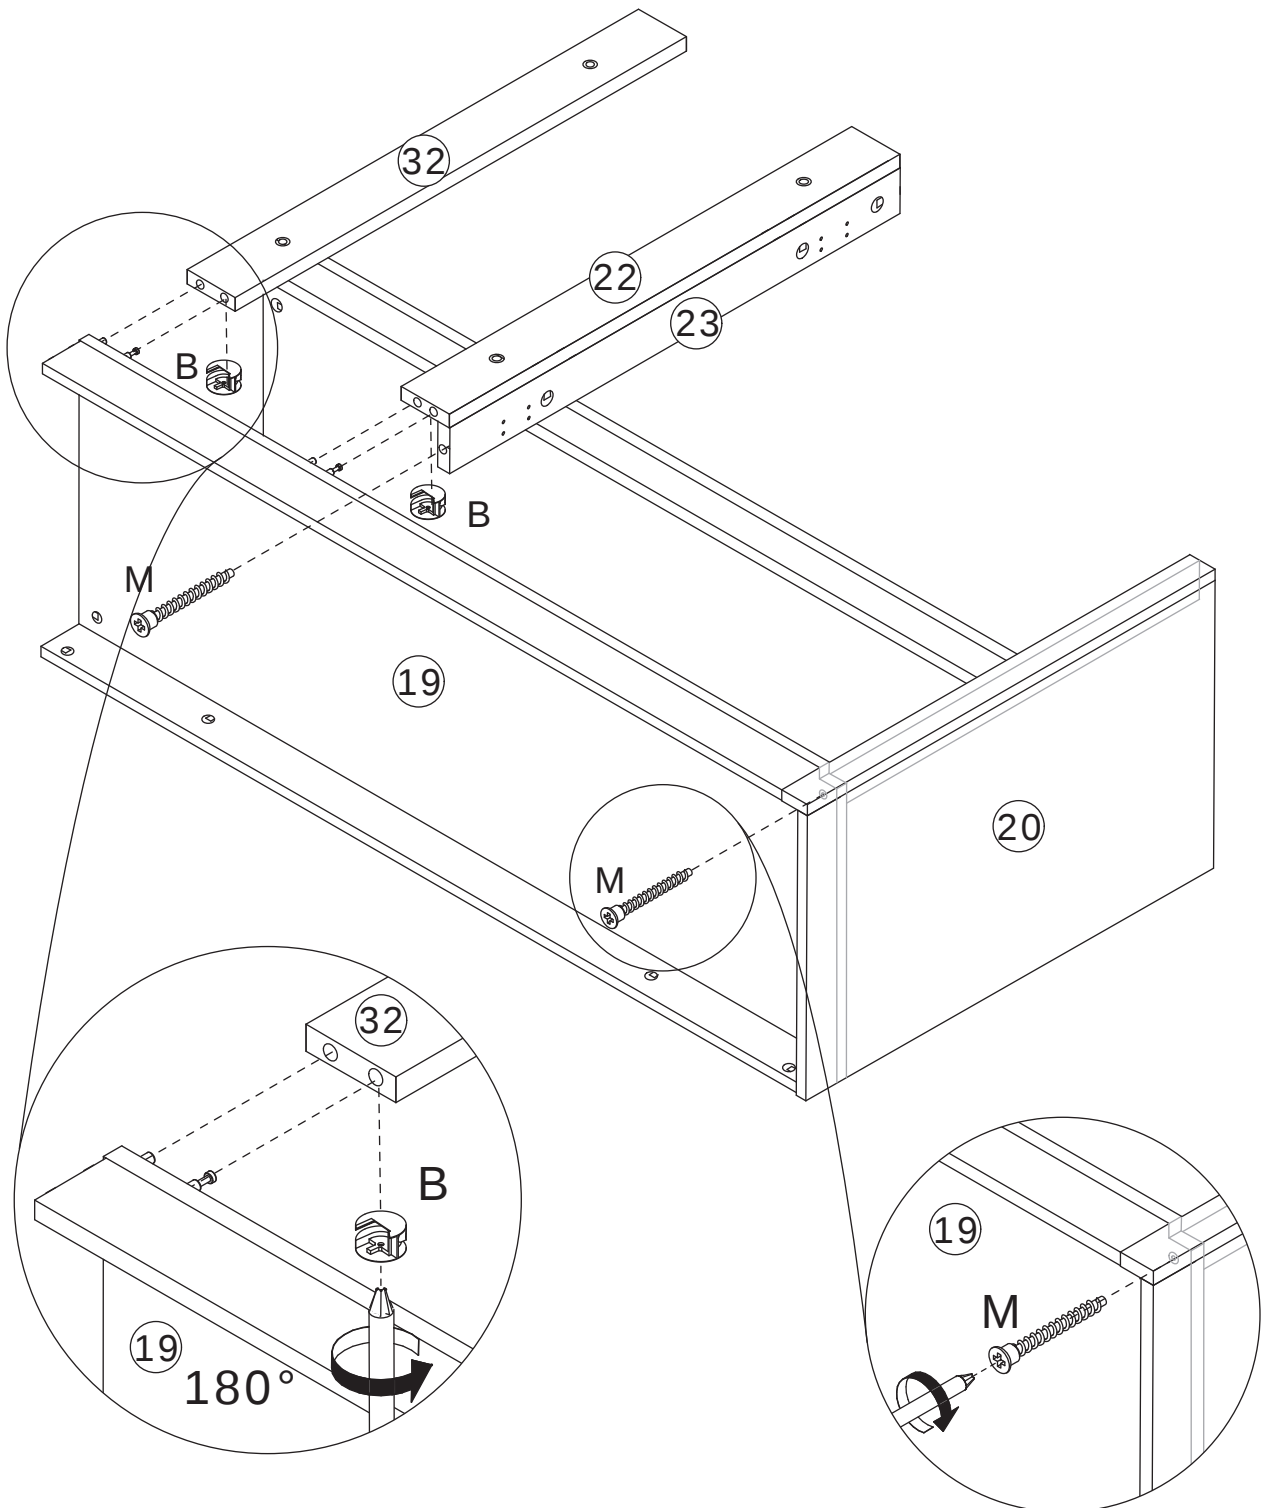




23

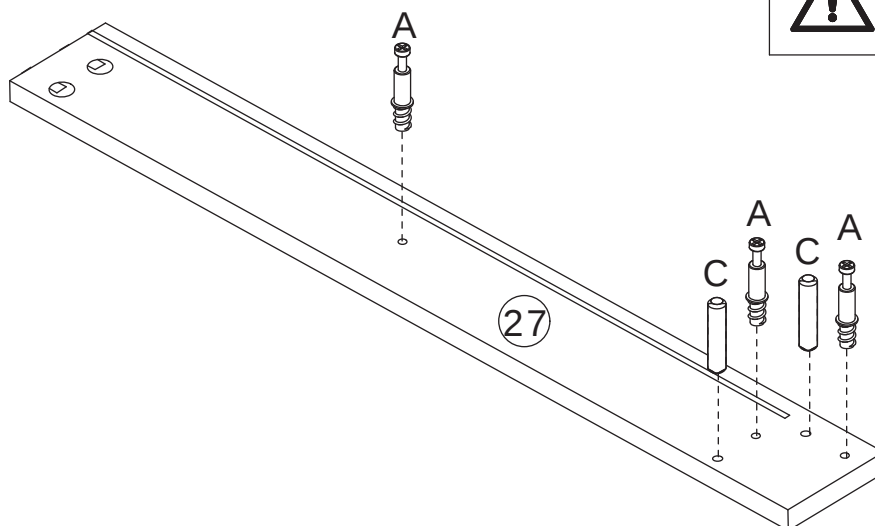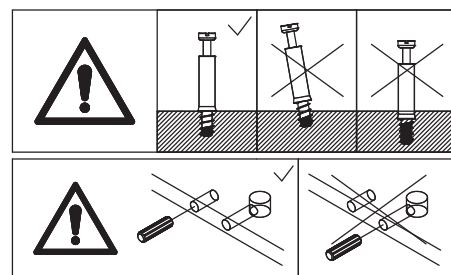  

 
Screw eccentric rod (A) and insert wooden dowel (C) onto part 26 and 27 as shown.

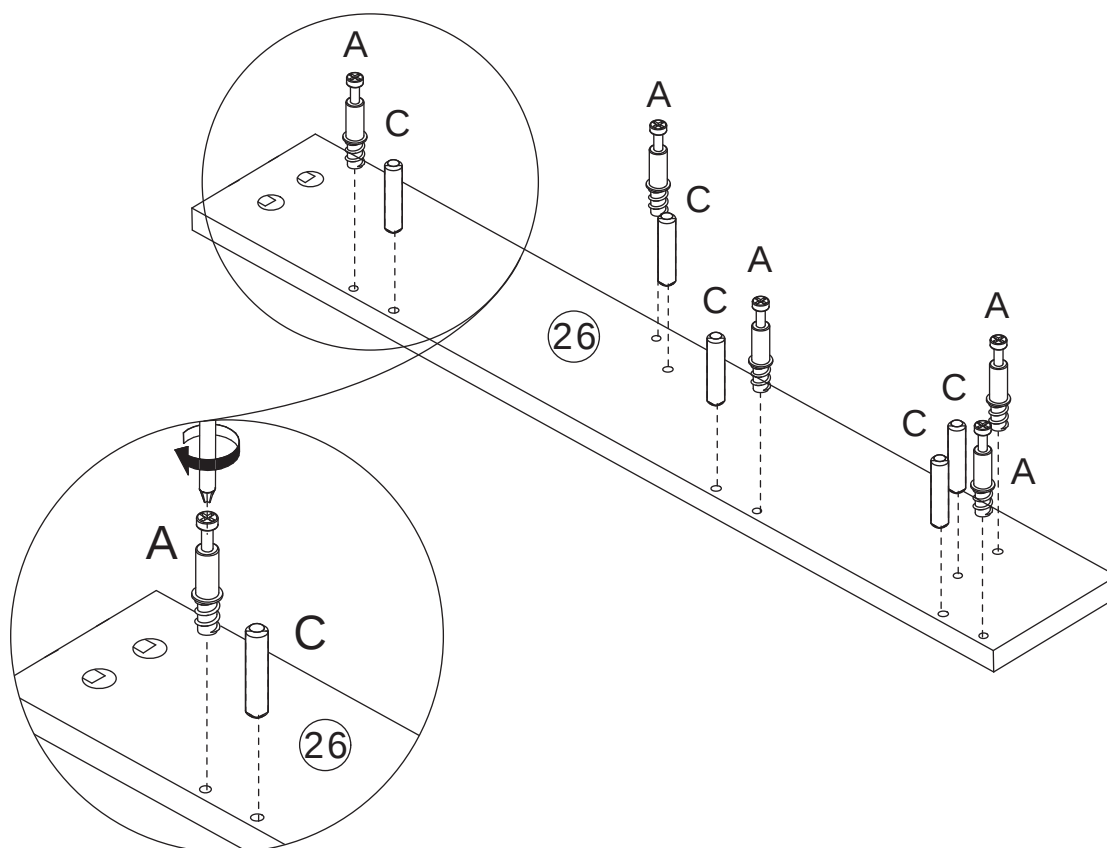

24

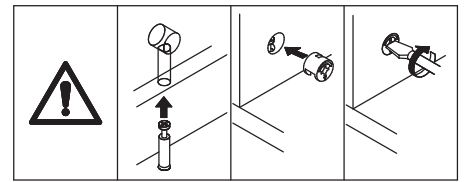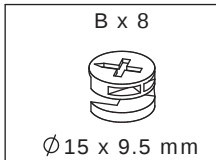   


 Connect part 26 and 27 to part 2, 32, 25, and 17, and tighten by turning cam lock (B) clockwise as shown.

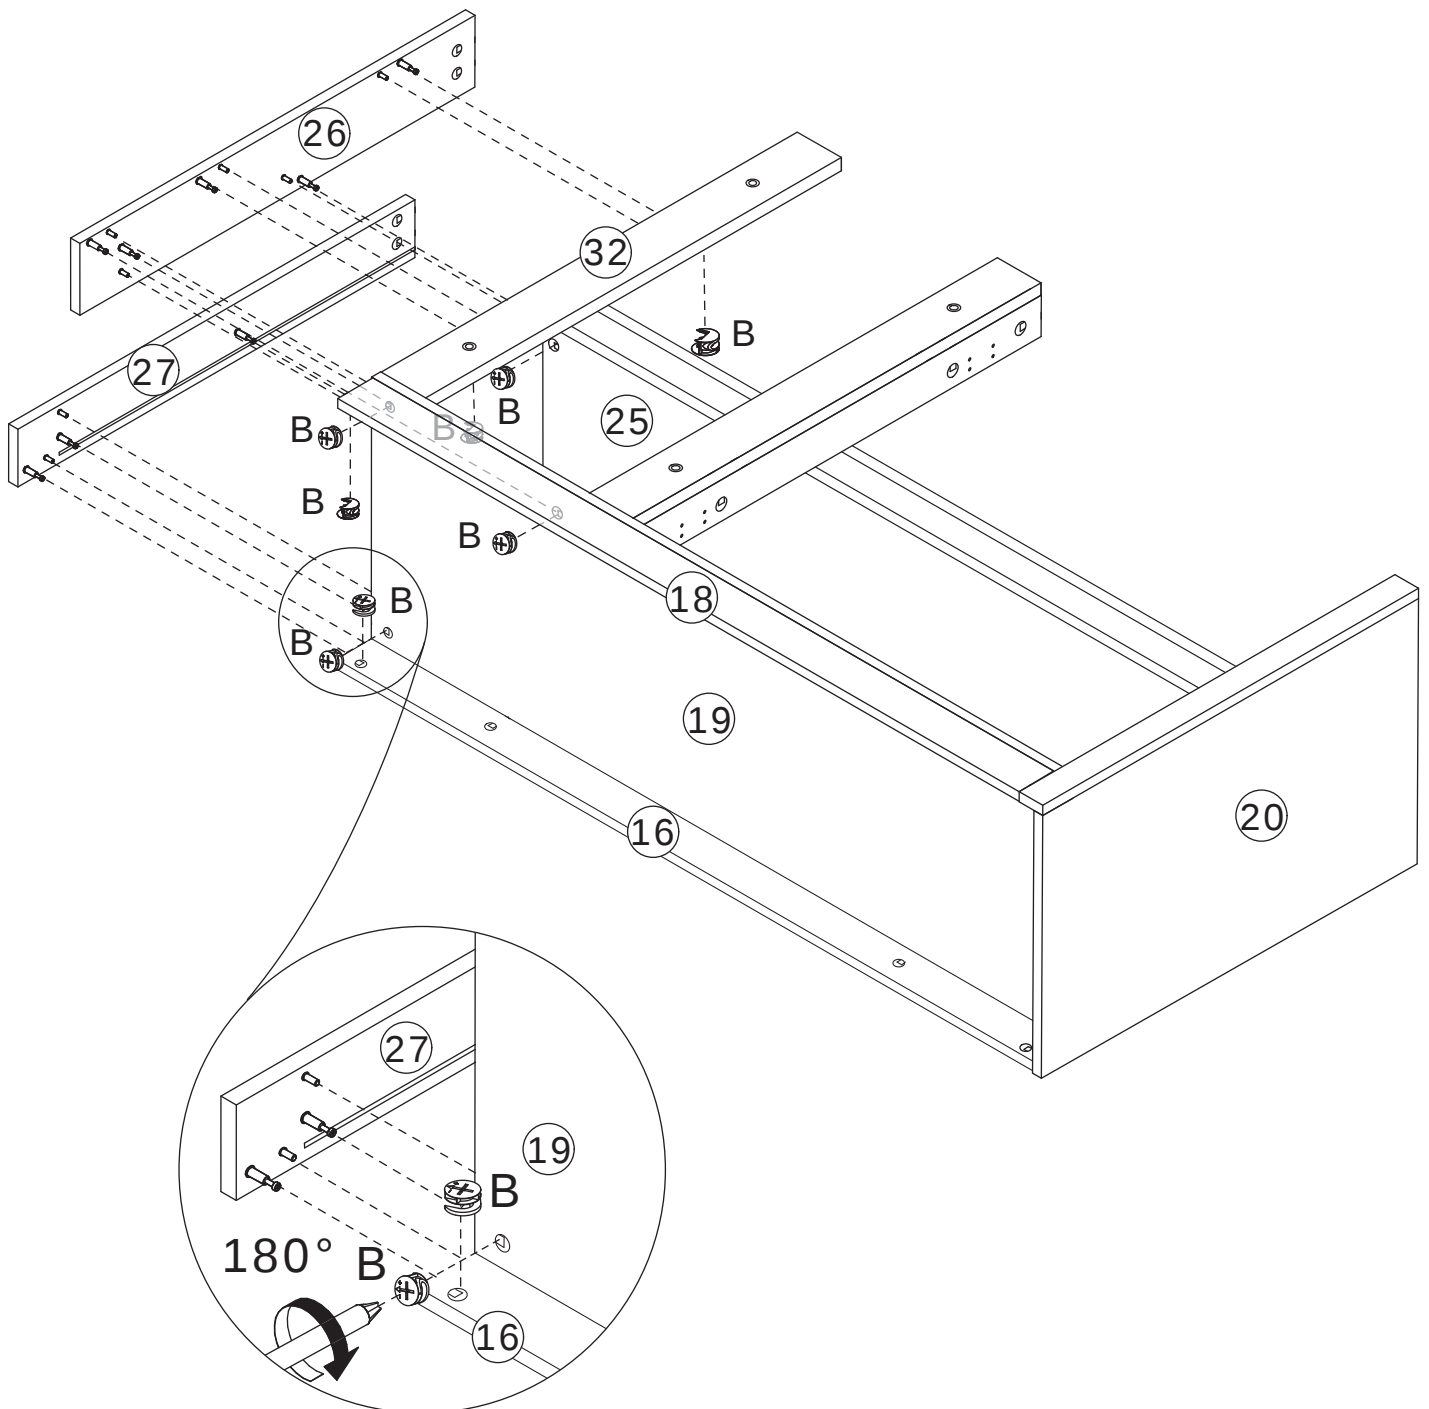

25

 Insert part 28, 34, and part 33 along the grooves.

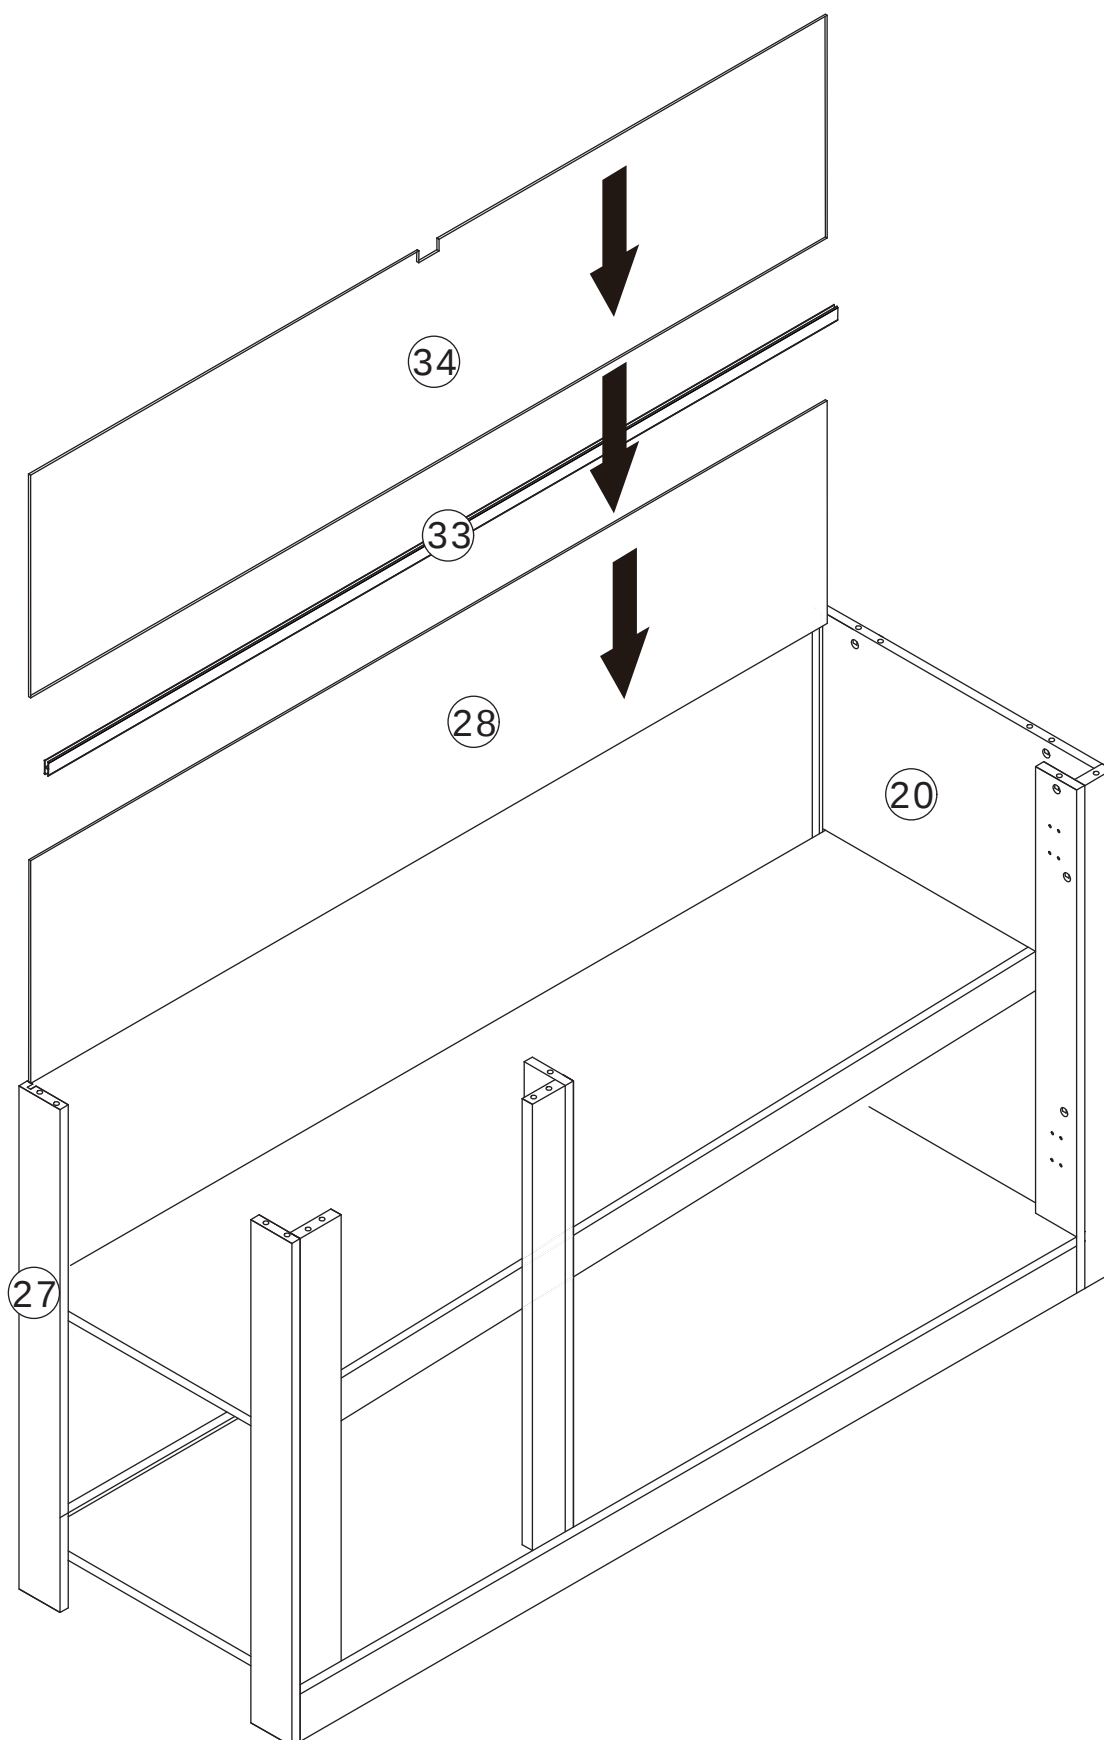


26


P x 4



 
Ø6 x 20 mm



 Connect the two components using screw (P) as shown.

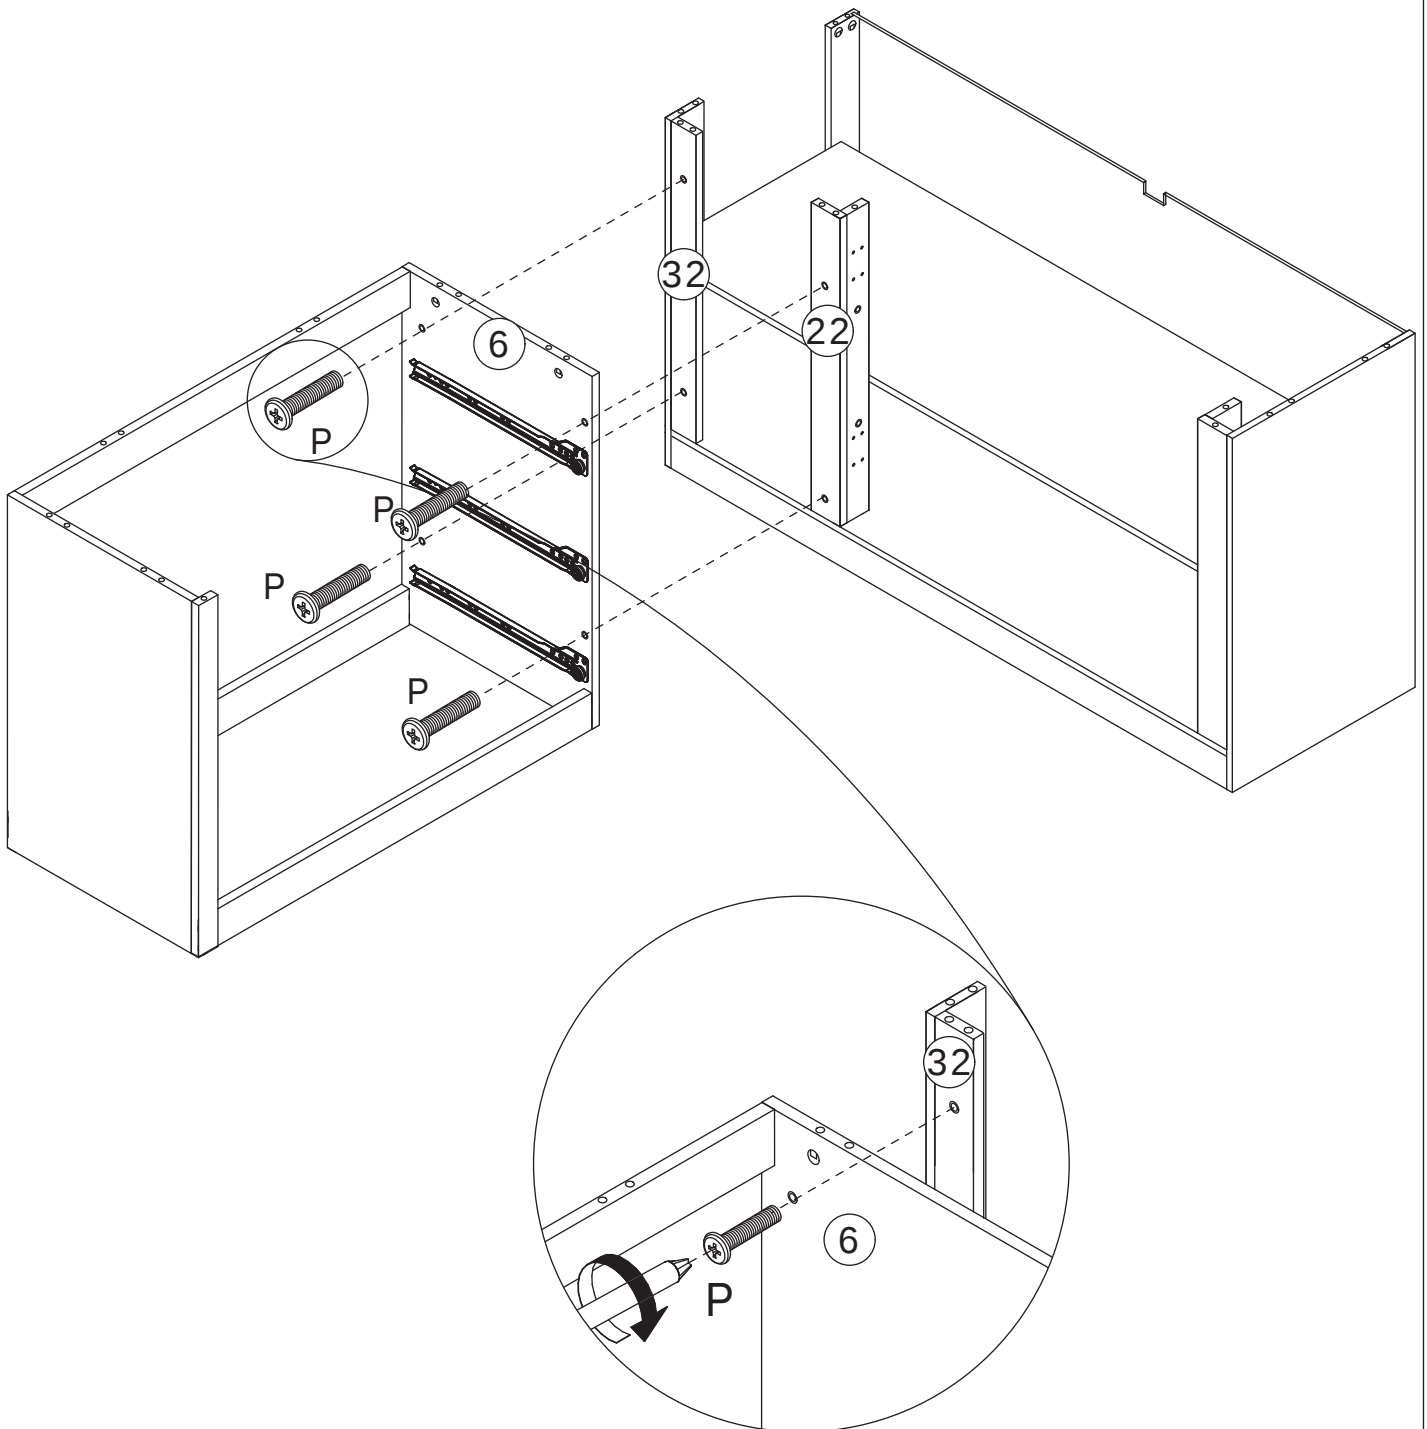

27

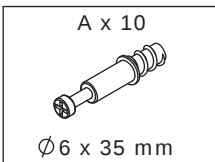 

N-1×1



N-2×1



Ø4 x 12 mm


H×1

An isometric drawing of an L-shaped metal bracket. It has a vertical leg and a horizontal leg. Each leg has two circular holes, one near the outer end and one near the corner. The drawing is shown from a perspective that highlights its three-dimensional form.


E×2



 Ø 3 x 12 mm

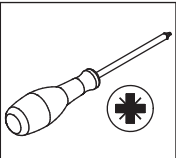

			
---	---	---	---

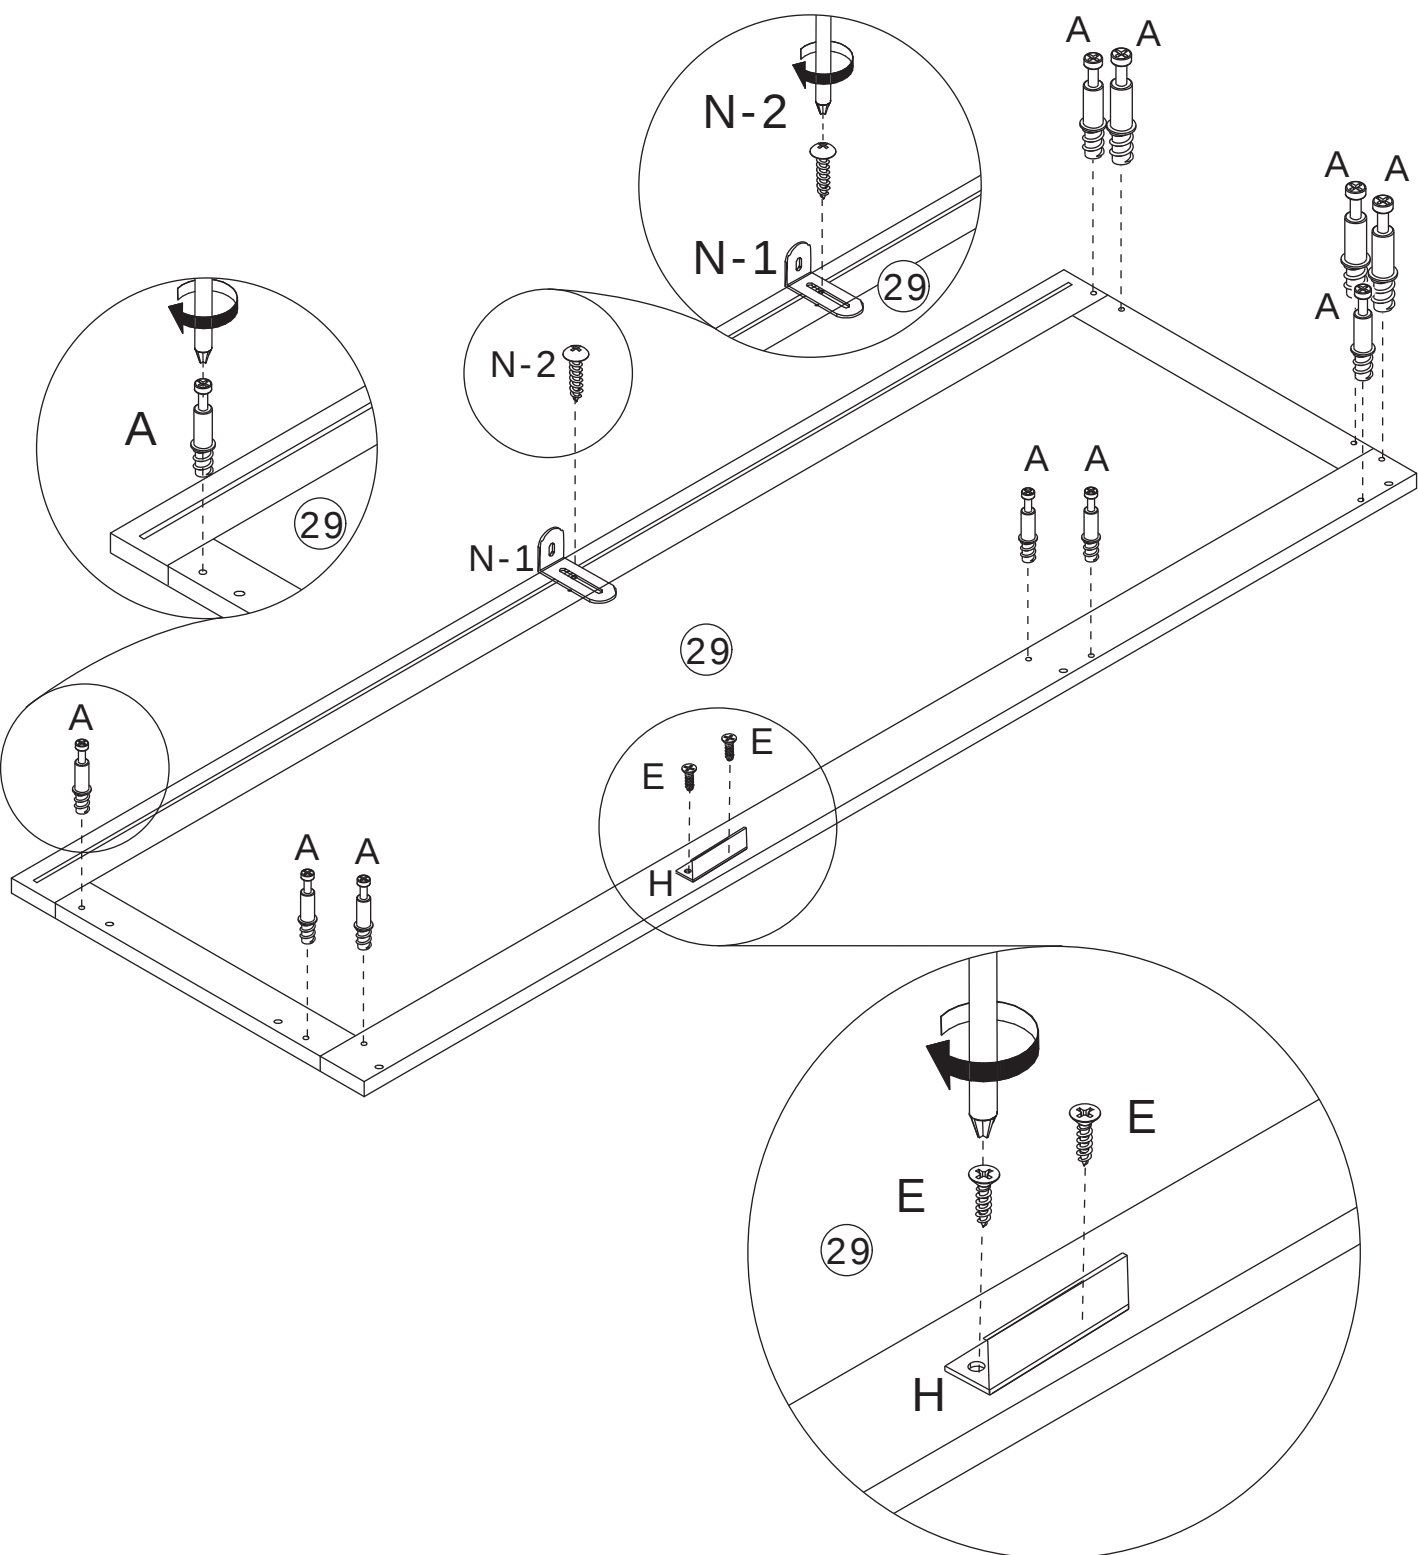 


28

B x 10









Ø 15 x 9.5 mm

 
C x 5






Ø 6 x 30 mm

      

 
Connect part 29 to right top of the component using wooden dowel (C), and tighten by turning cam lock (B) clockwise as shown.

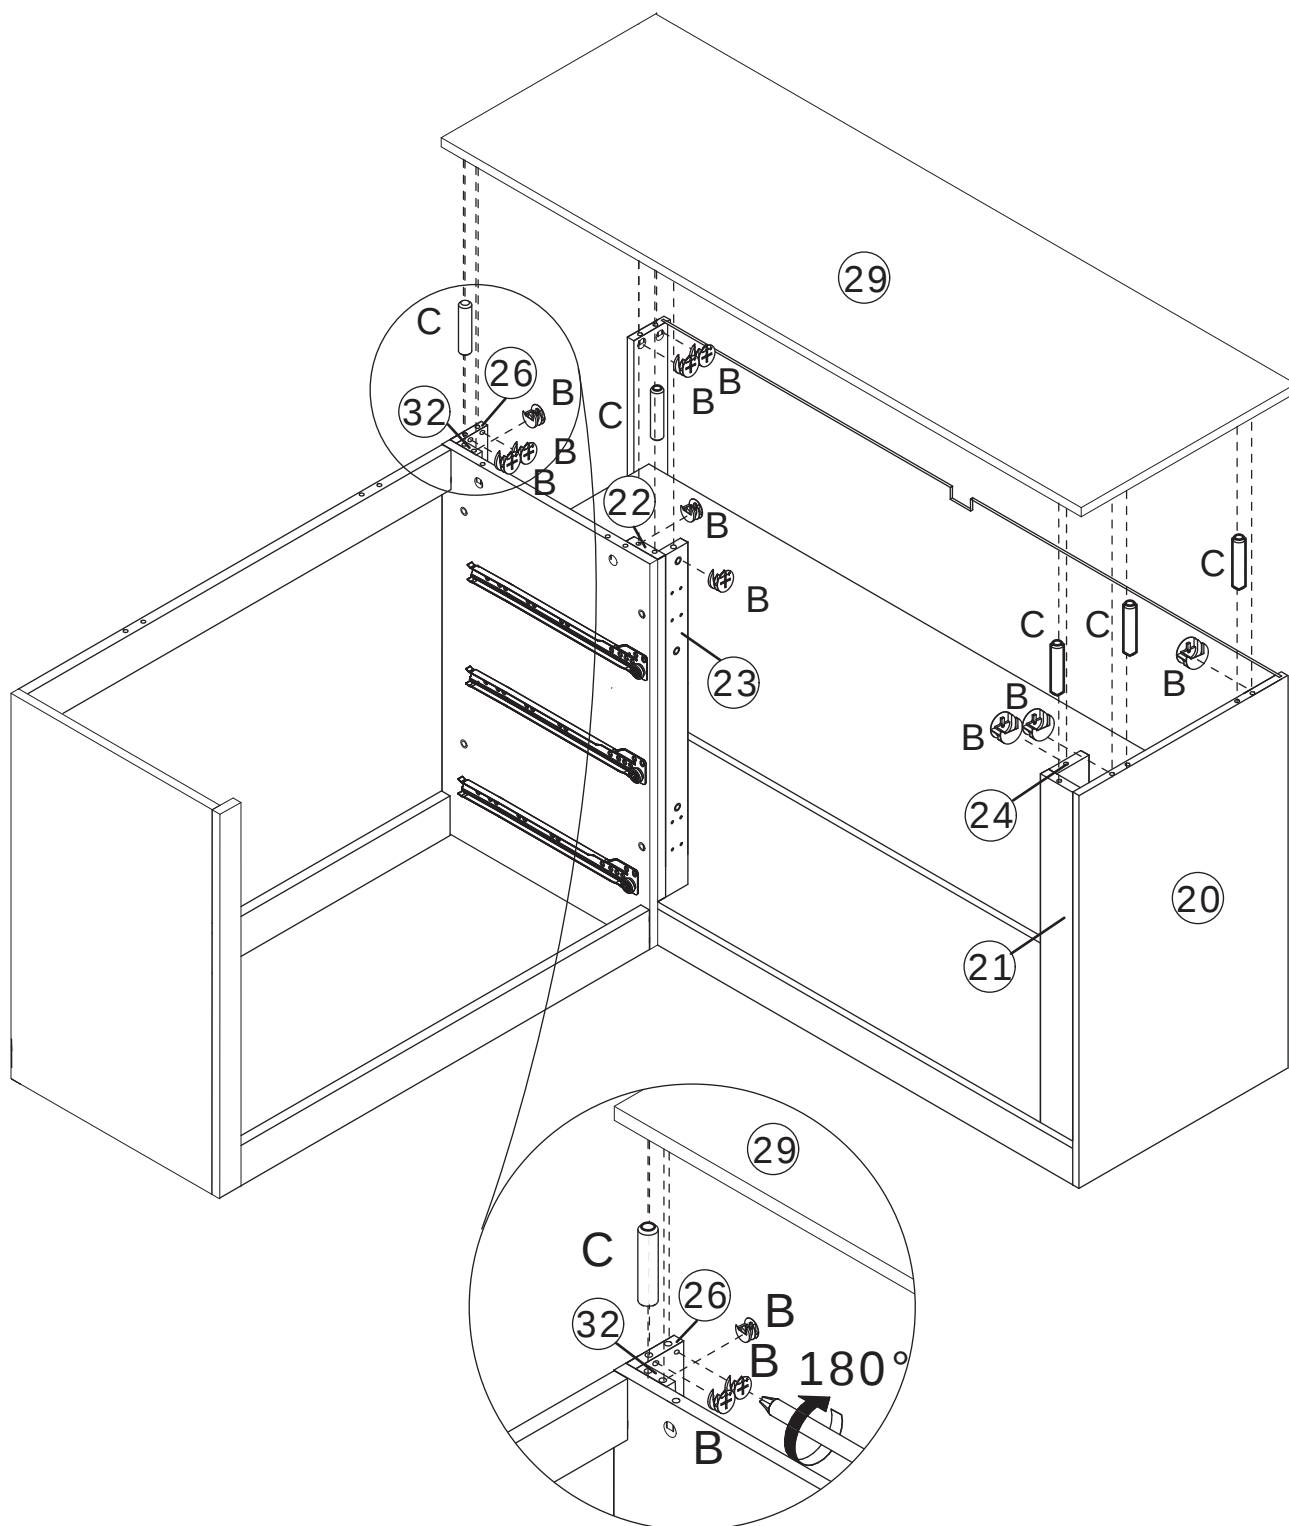




29

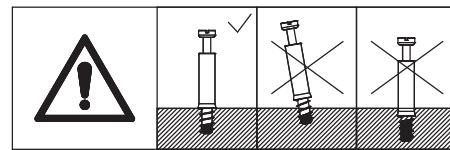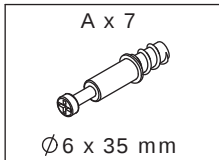   

 
Screw eccentric rod (A) onto part 7 as shown.

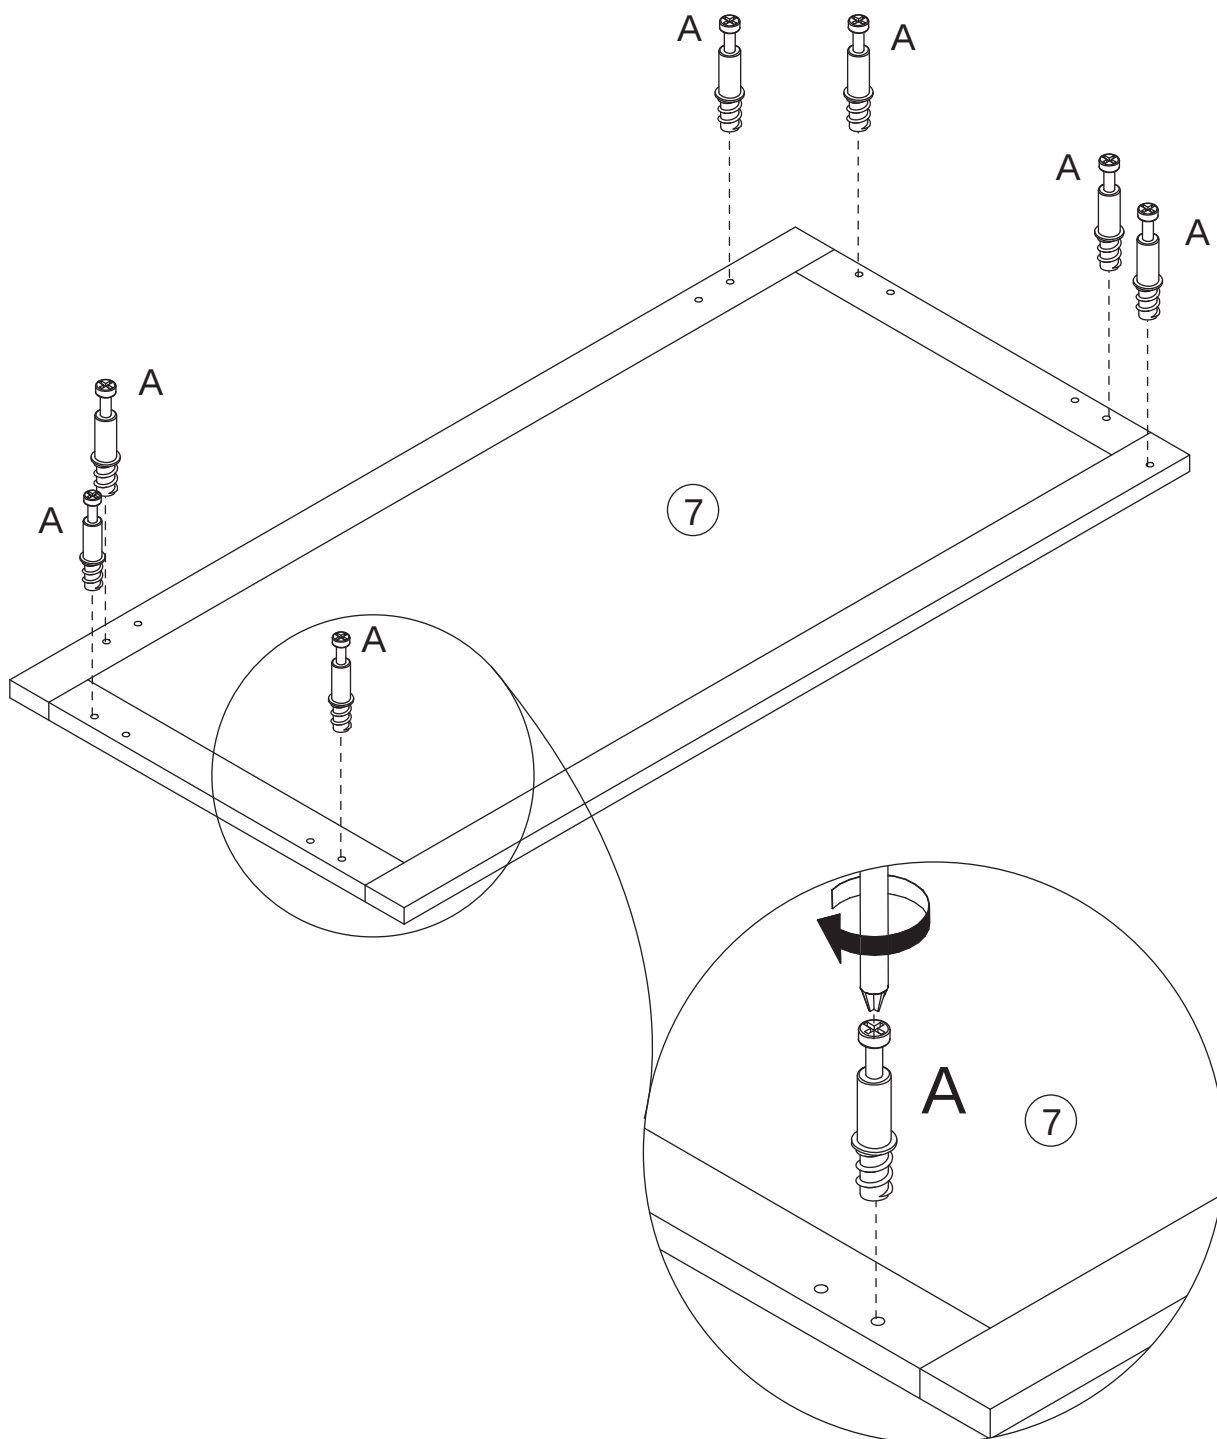


30

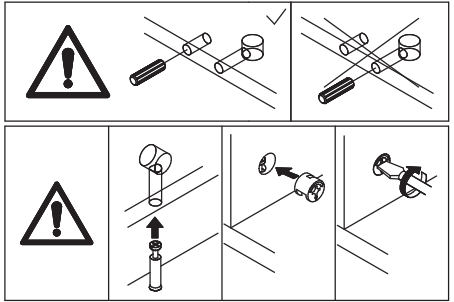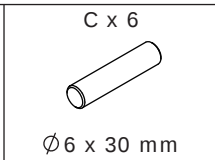  
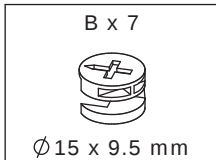 


 Connect part 7 to left top of the component using wooden dowel (C), and tighten by turning cam lock (B) clockwise as shown.

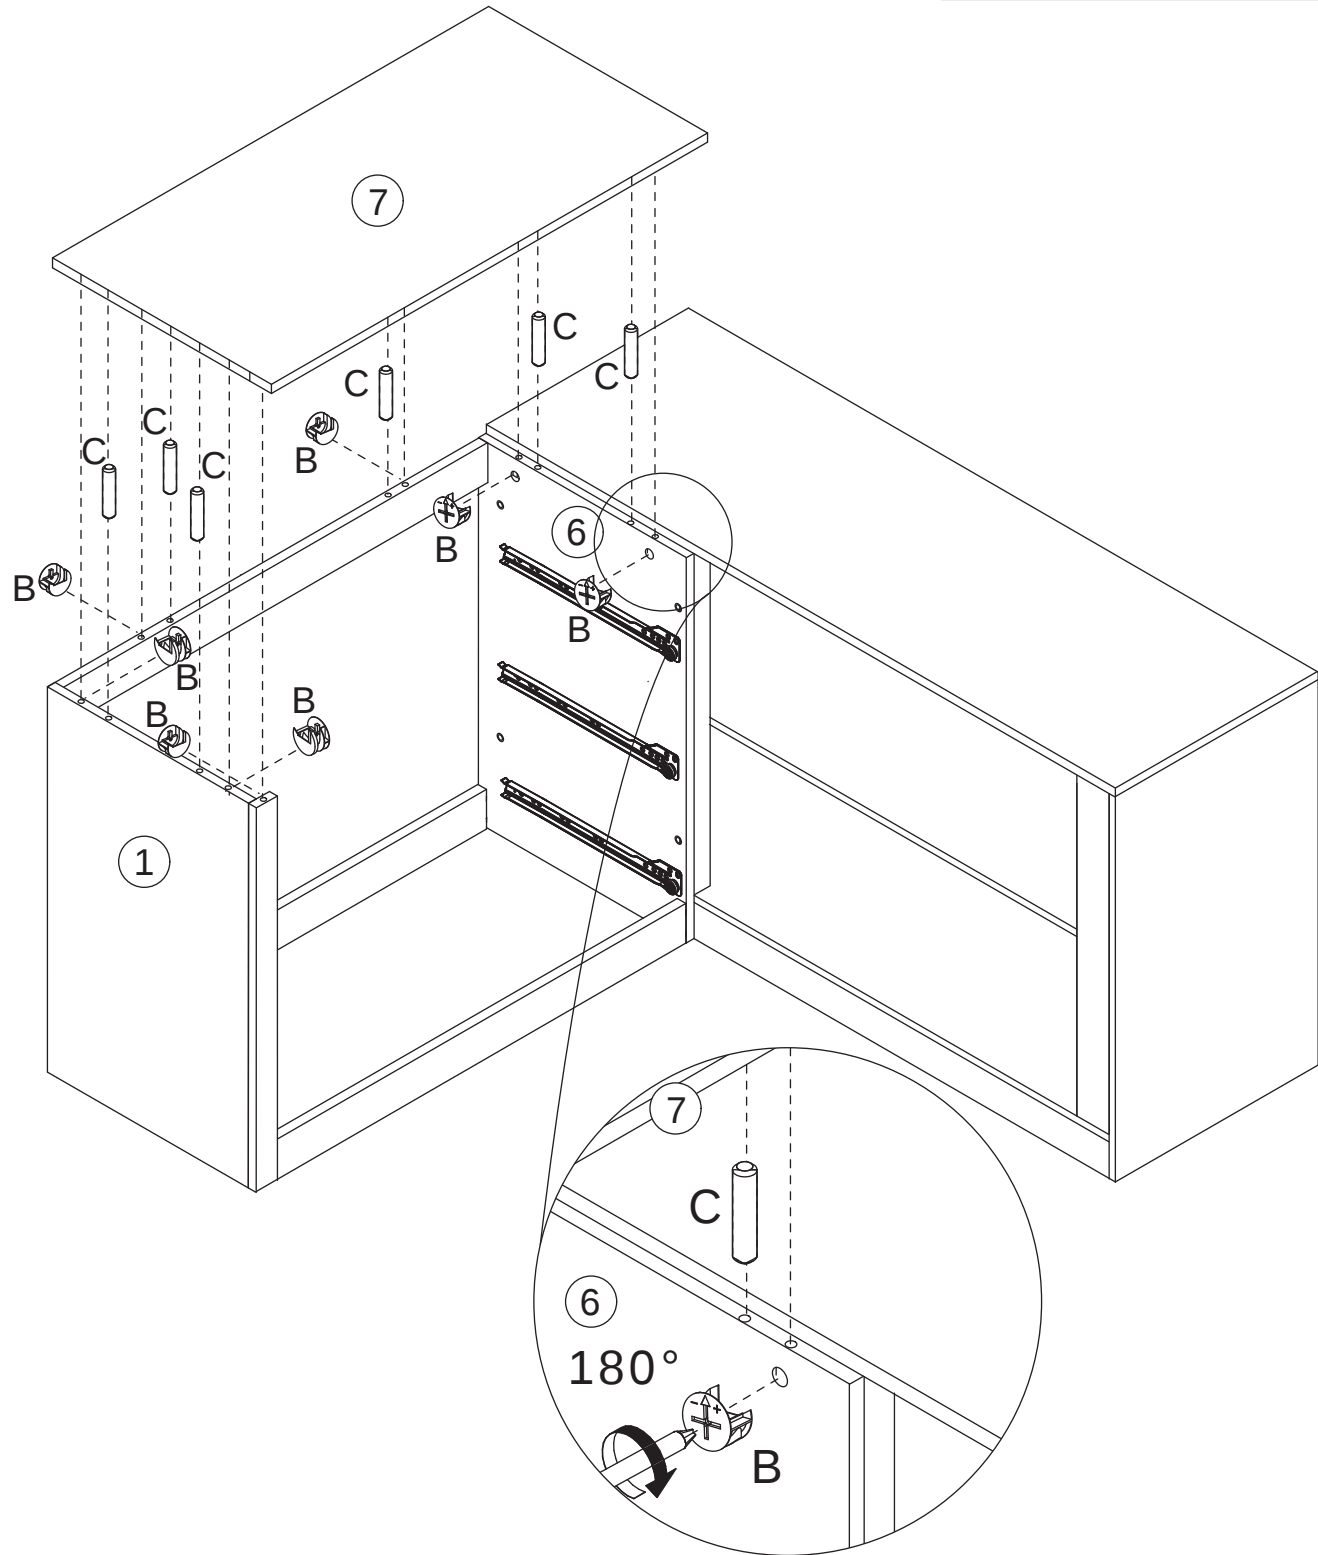


31

 A x 6

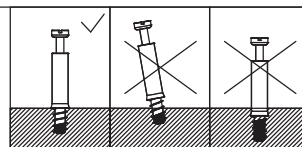   Ø6 x 35 mm

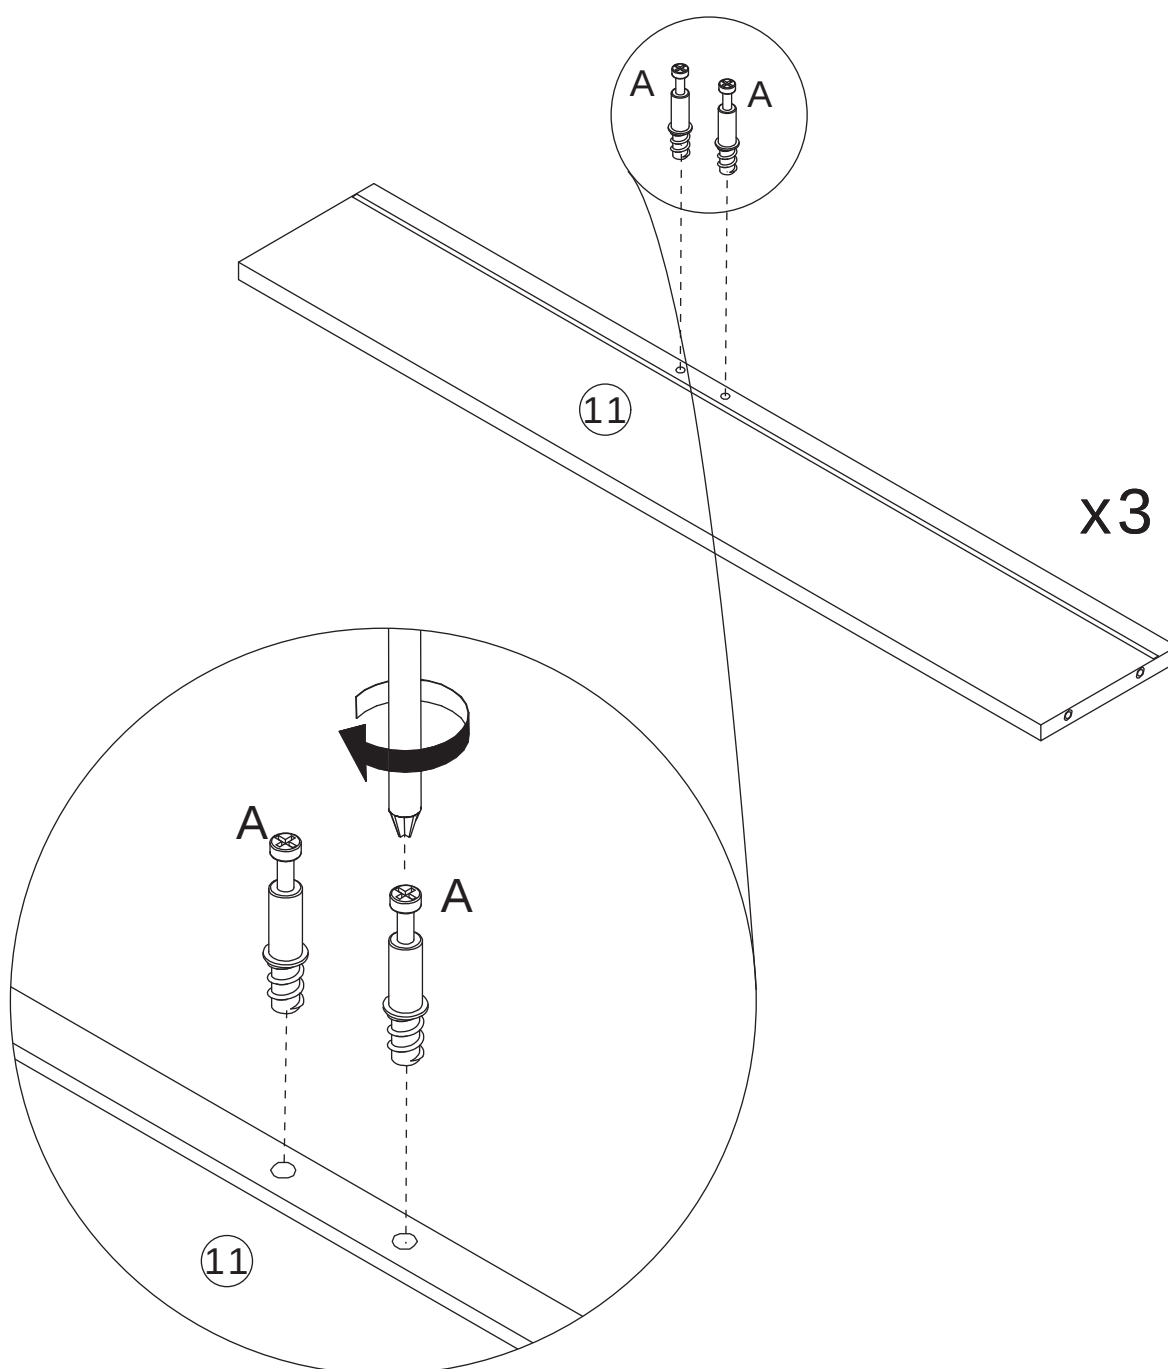 

Screw eccentric rod (A) onto part 11 as shown.



32

B x 6

 


Ø 15 x 9.5 mm



R x 12



Ø 4 x 30 mm




  Secure part 10 and 11 to part 11 using screw (R).
Connect part 13 to part 11, and tighten by turning cam lock (B) clockwise as shown.

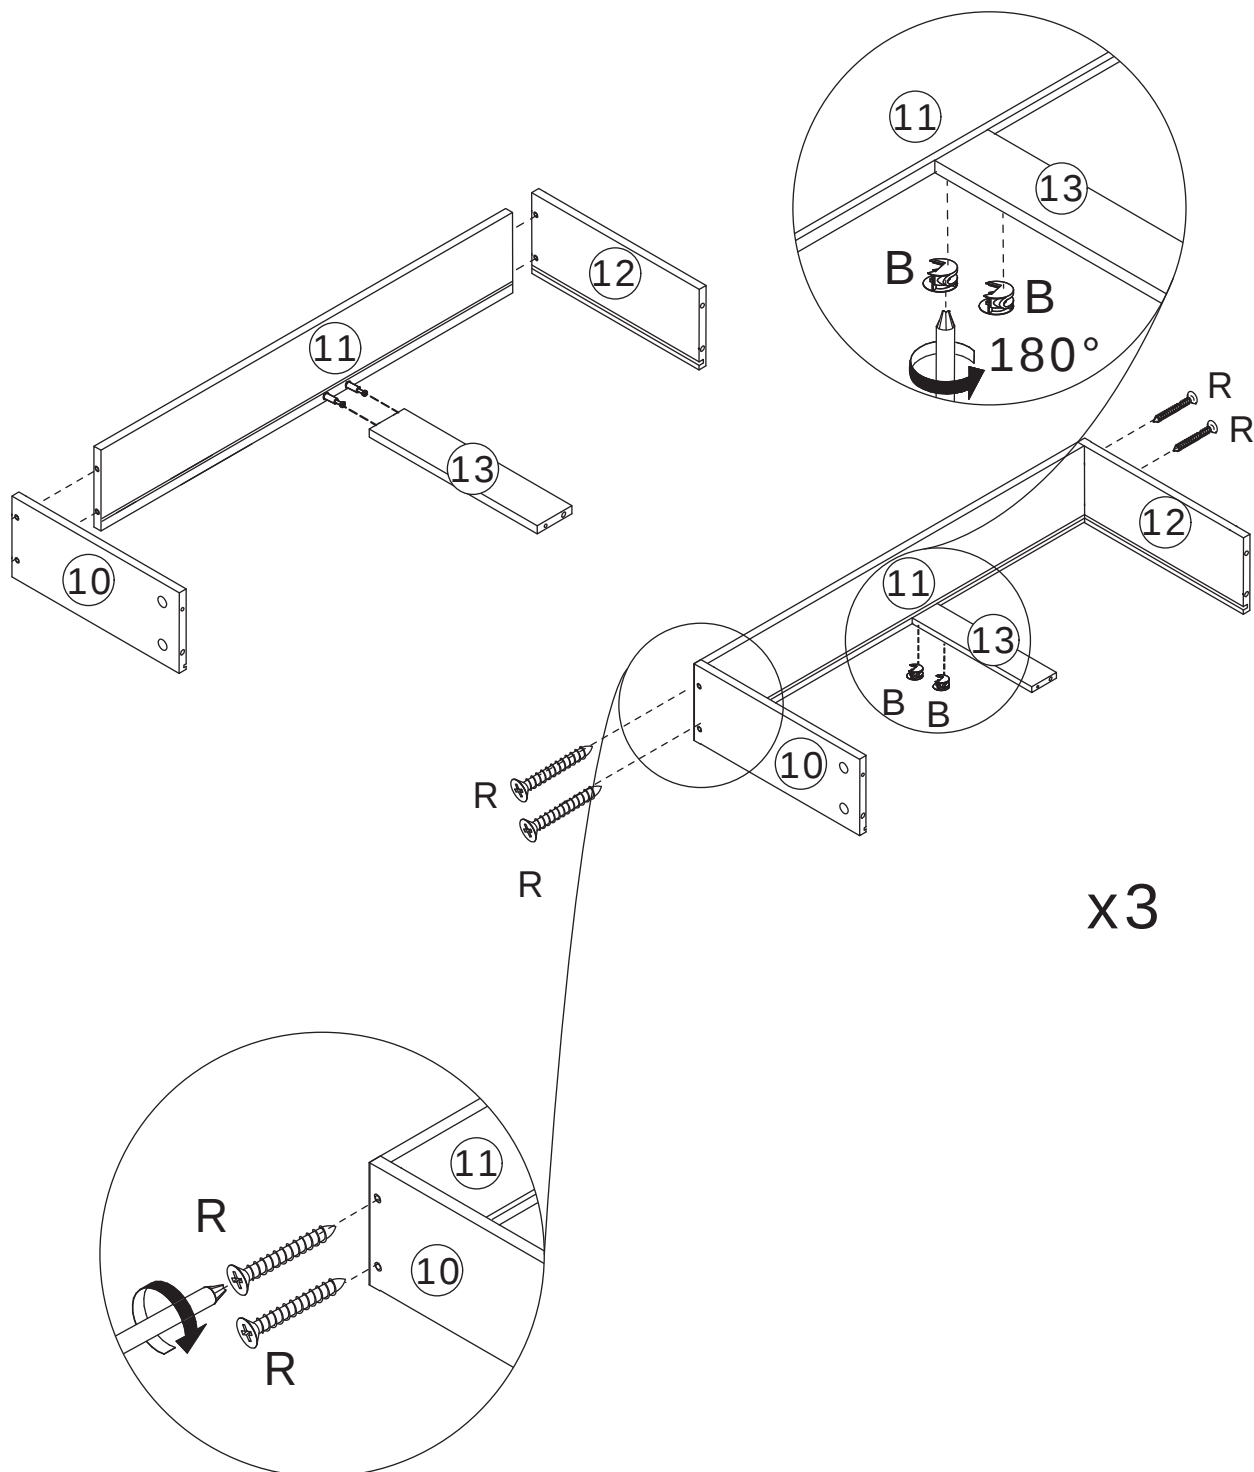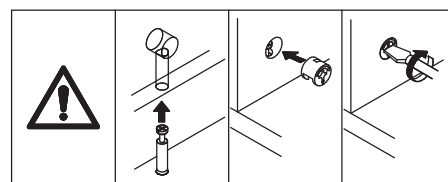


33

 Insert part 14 along the grooves.


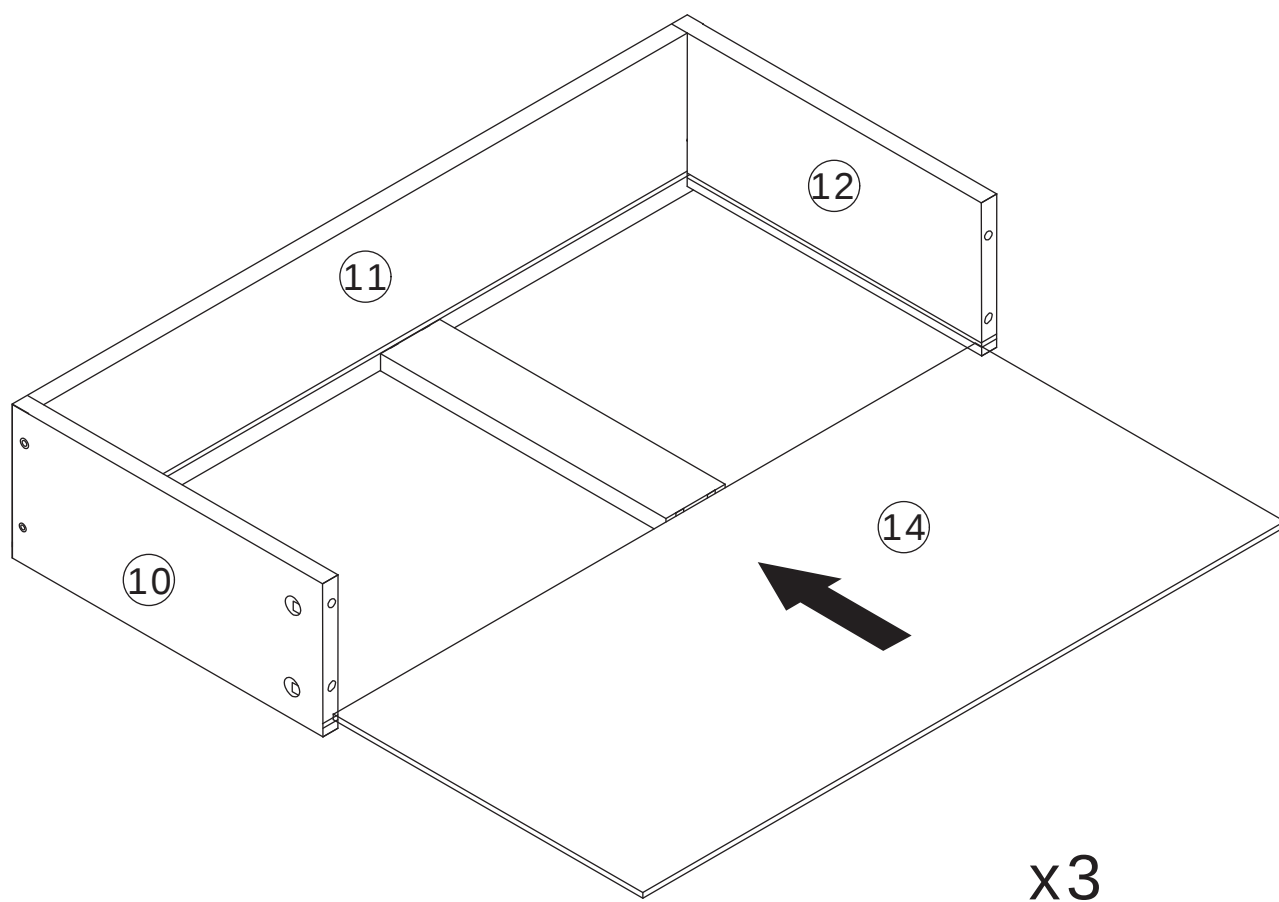


34

 
A x 18



Ø6 x 35 mm

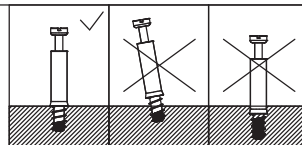  

 Screw eccentric rod (A) onto part 15 as shown.

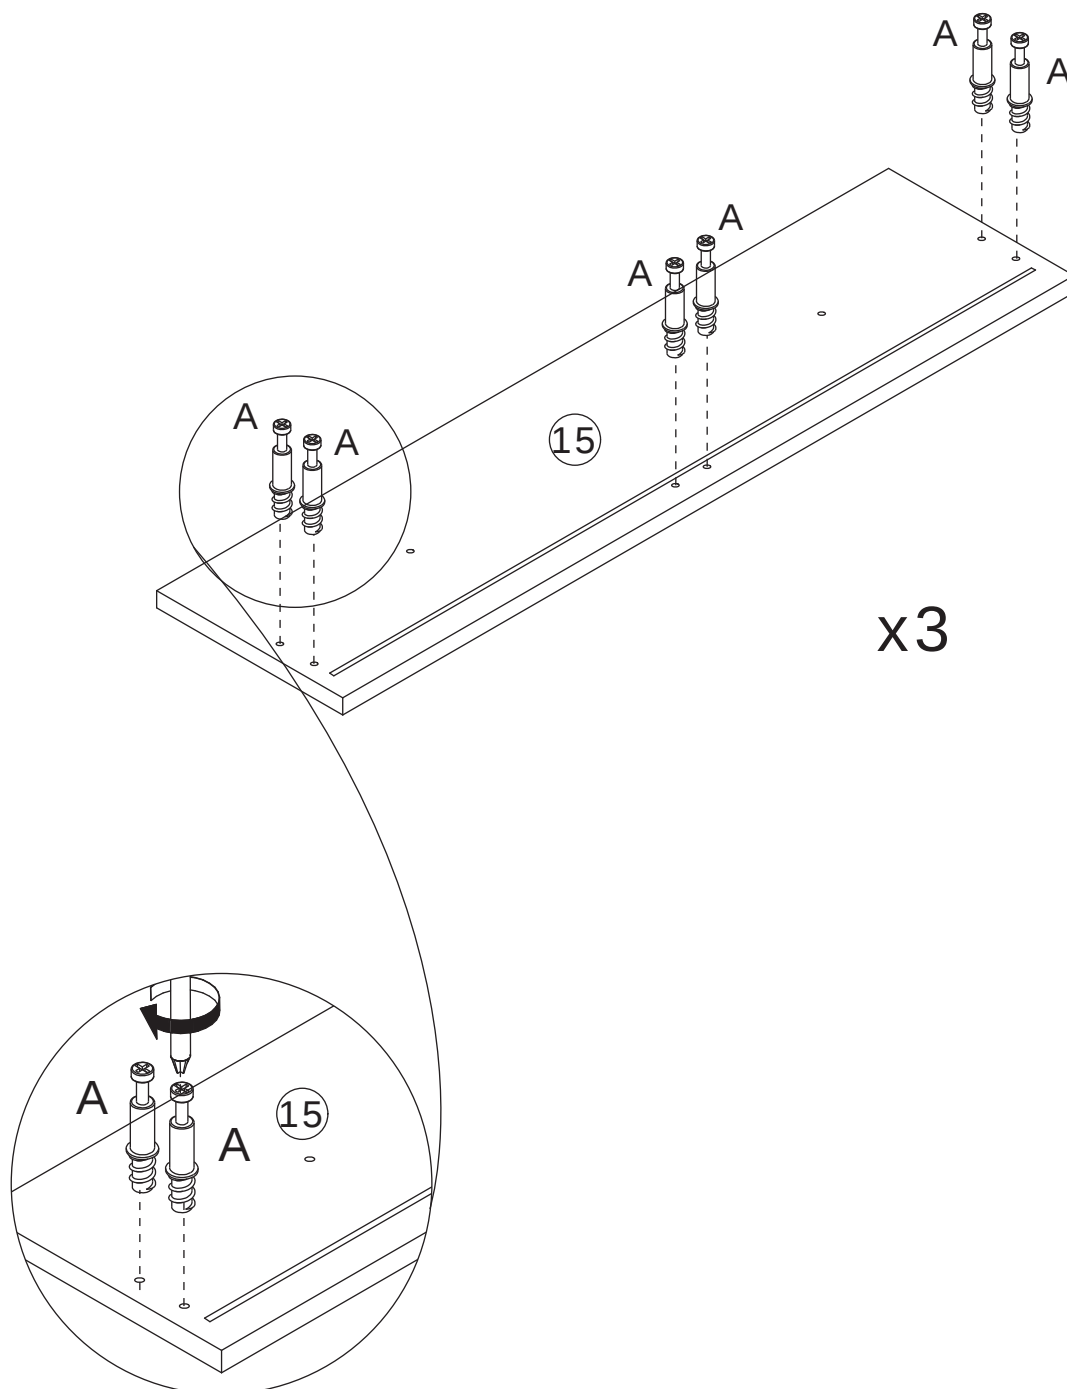

35

B x 18

 


Ø 15 x 9.5 mm

F x 6





Ø 4 x 16 mm



Connect part 15 to part 10, 12, and 13, and tighten by turning cam lock (B) clockwise as shown.


 
 
Secure knob (F) to part 15.

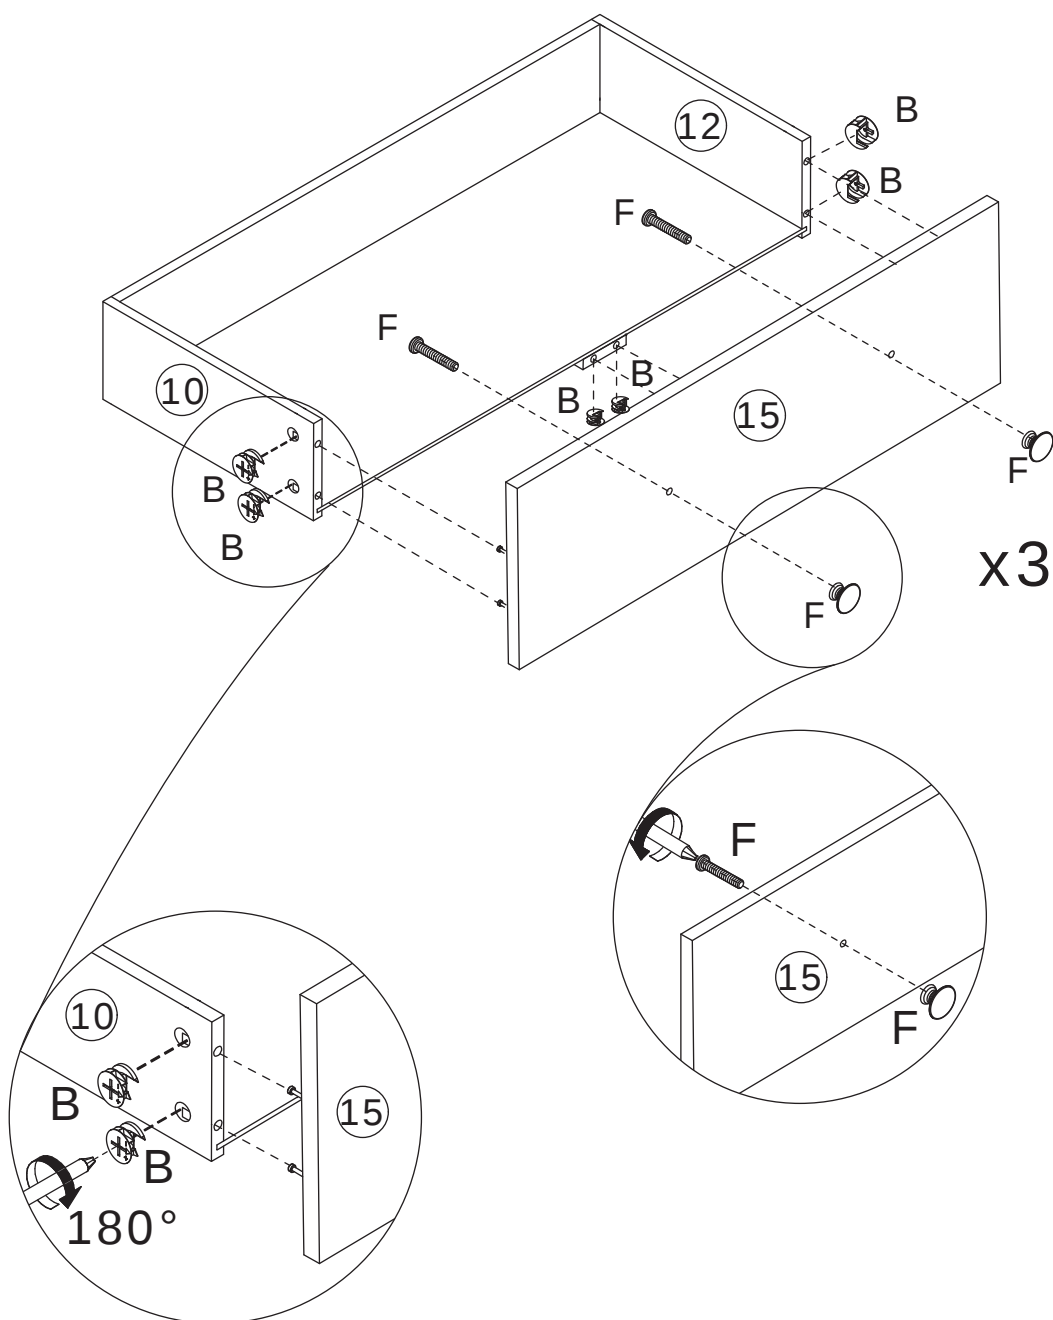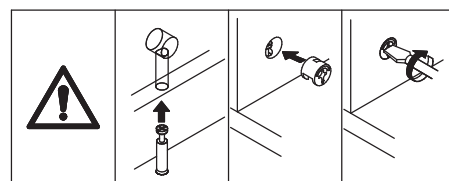

36




   Secure slide rail (E-DR) and (E-DL) to part 10 and 12 using screw (E).

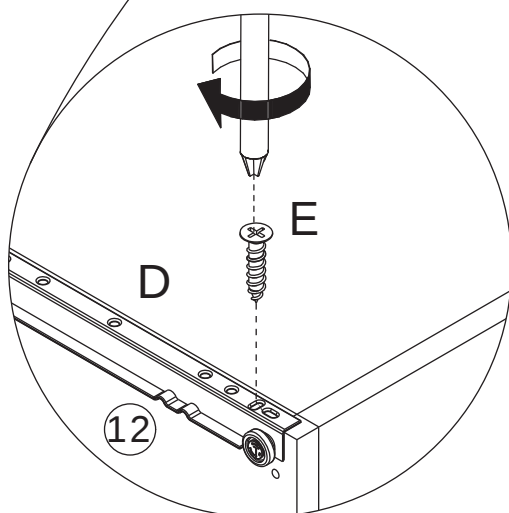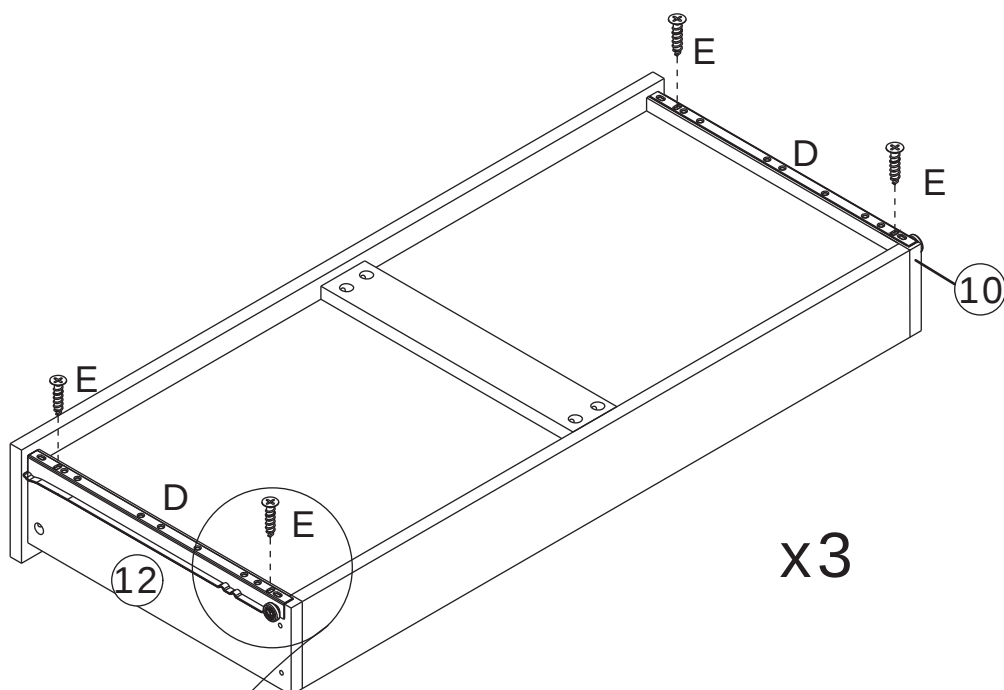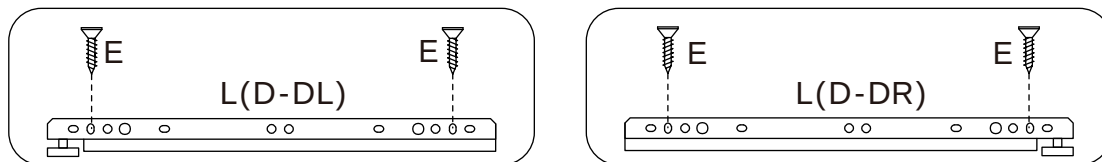


37

 Align the guides and insert all drawers.

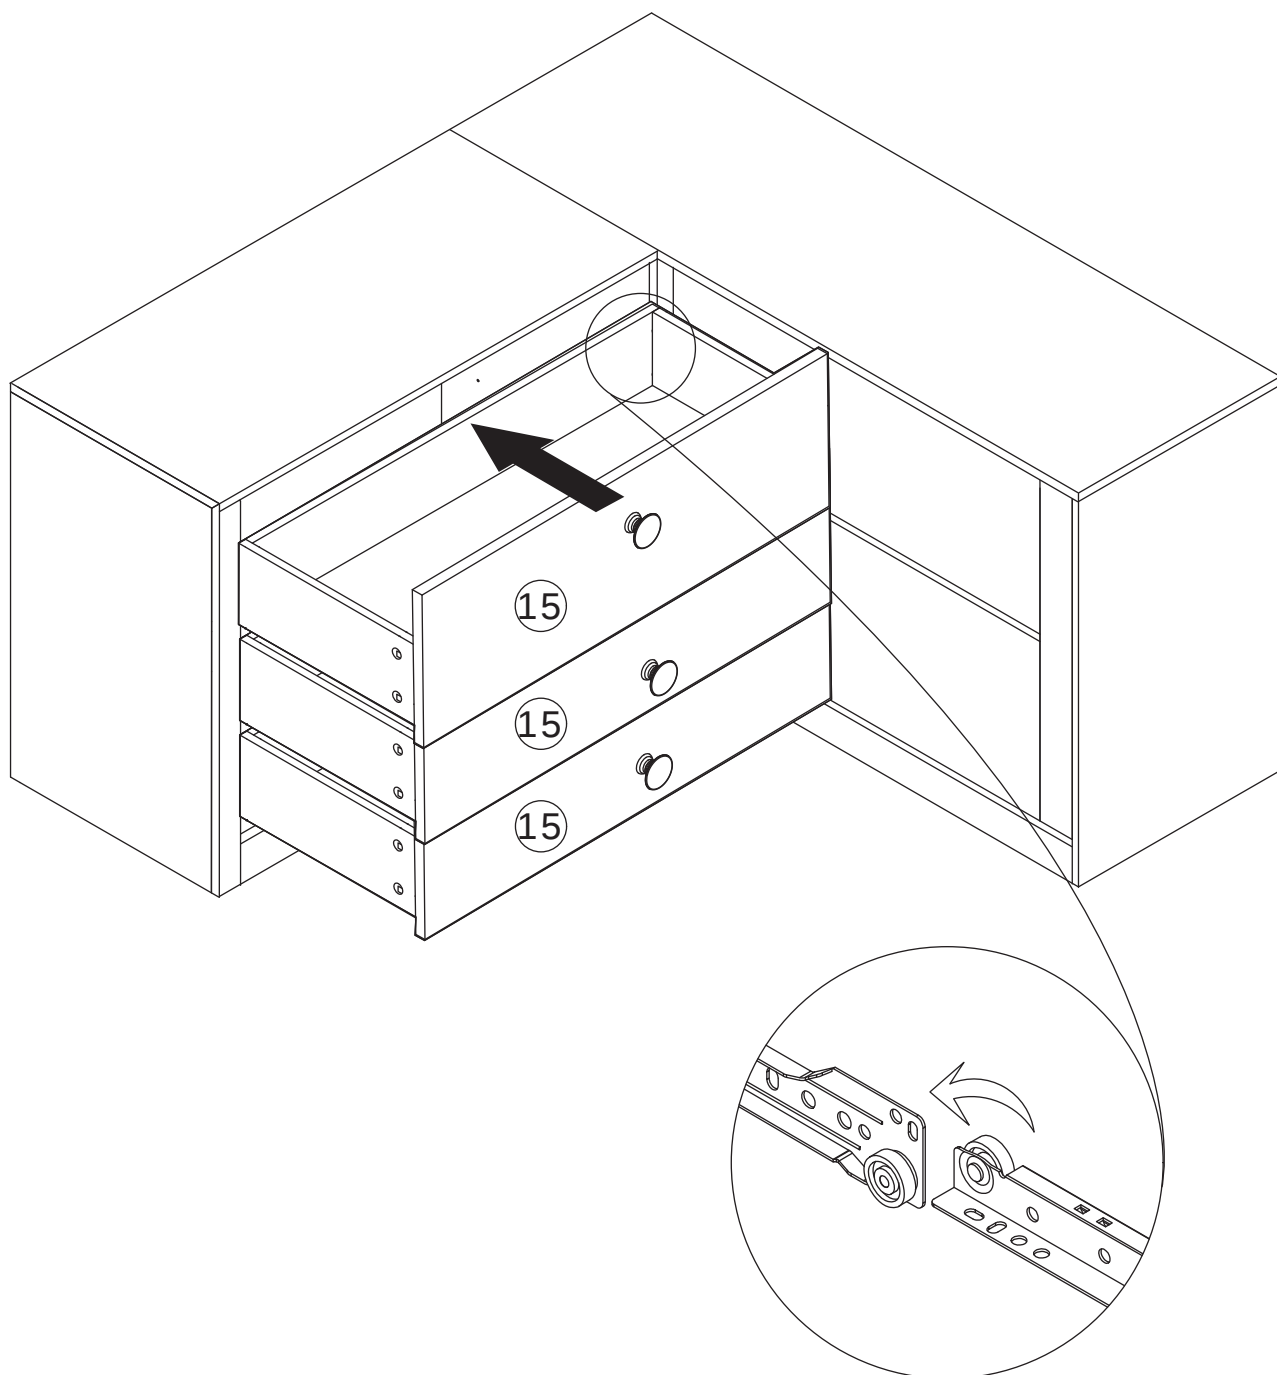

38

 J x 4



K x 8

 


Ø 3.5 x 12 mm


F x 2



Ø 4 x 16 mm



 Secure hinge (J) to part 30 and 31 using screw (K).
Secure knob (F) as shown.

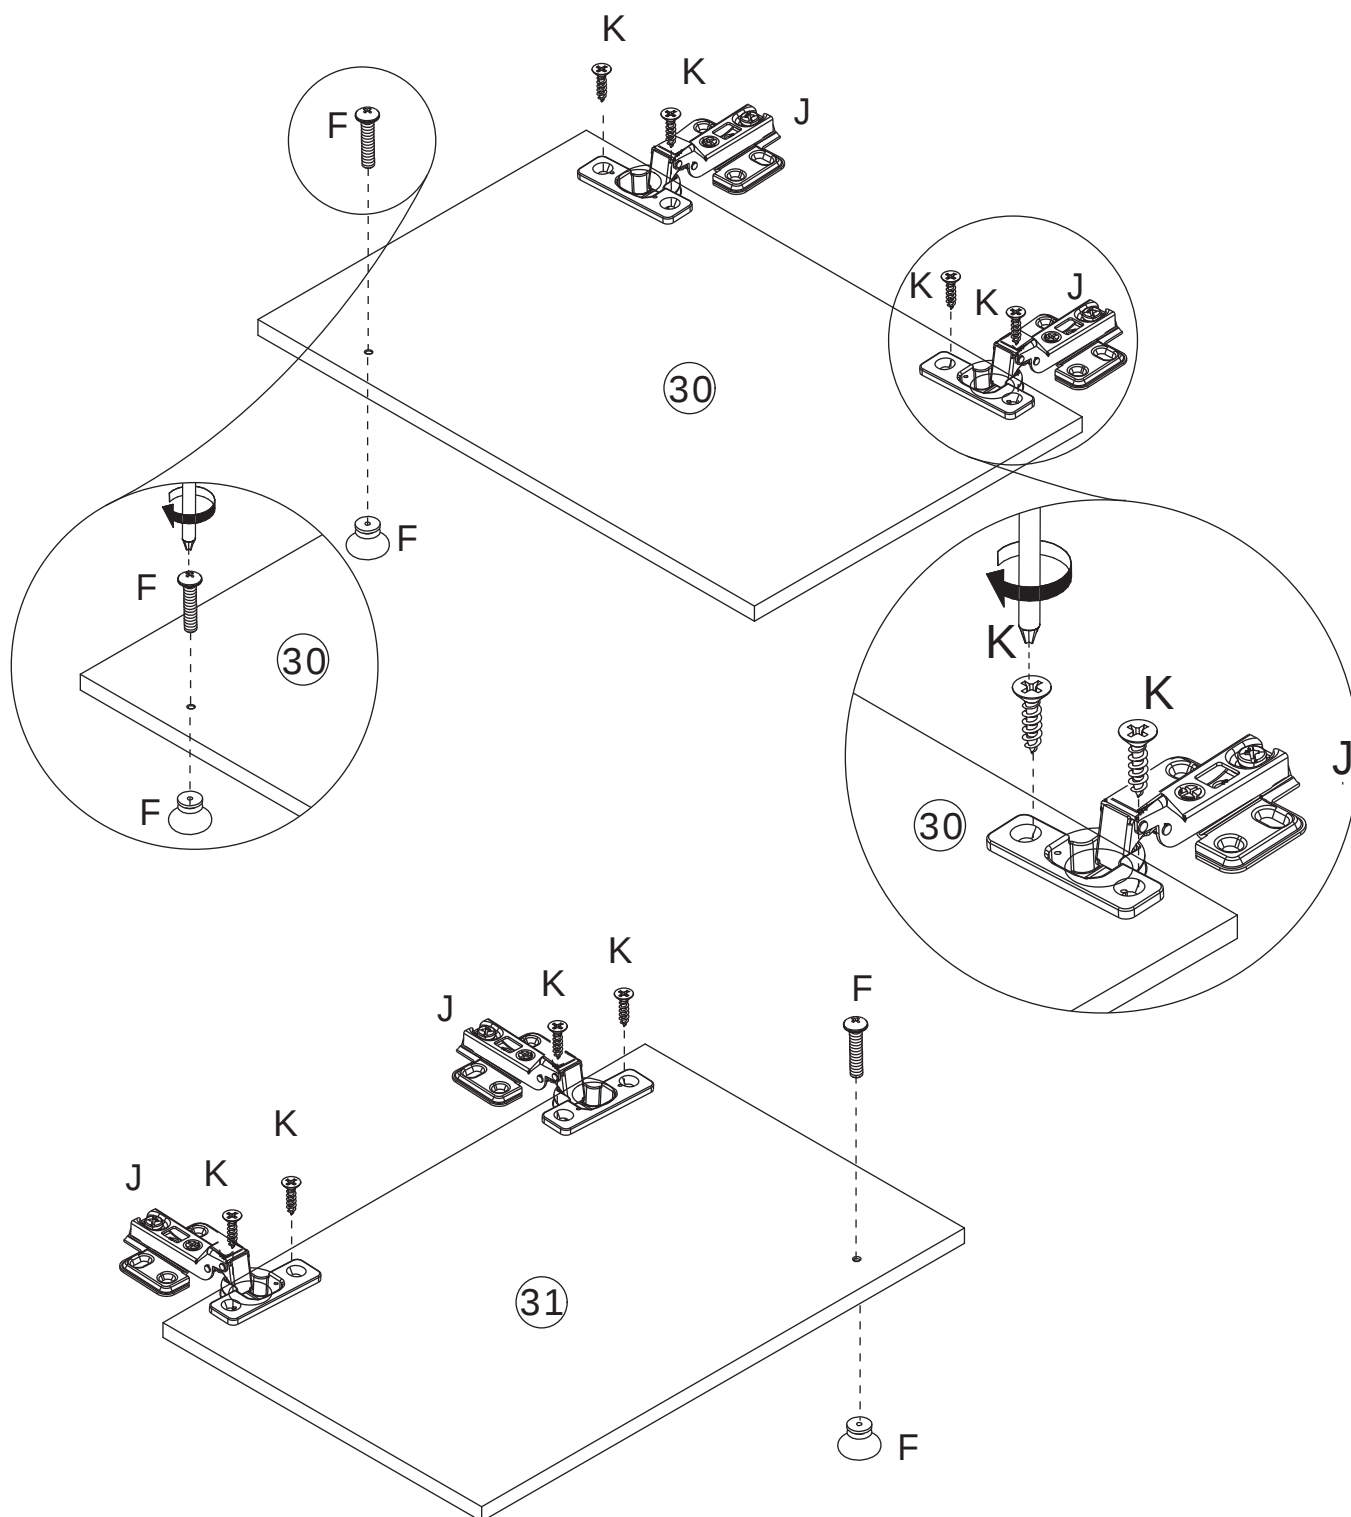


39


K x 16



 Ø 3.5 x 12 mm




 Connect part 30 and 31 to part 23 and 24 by securing hinges using screw (K).

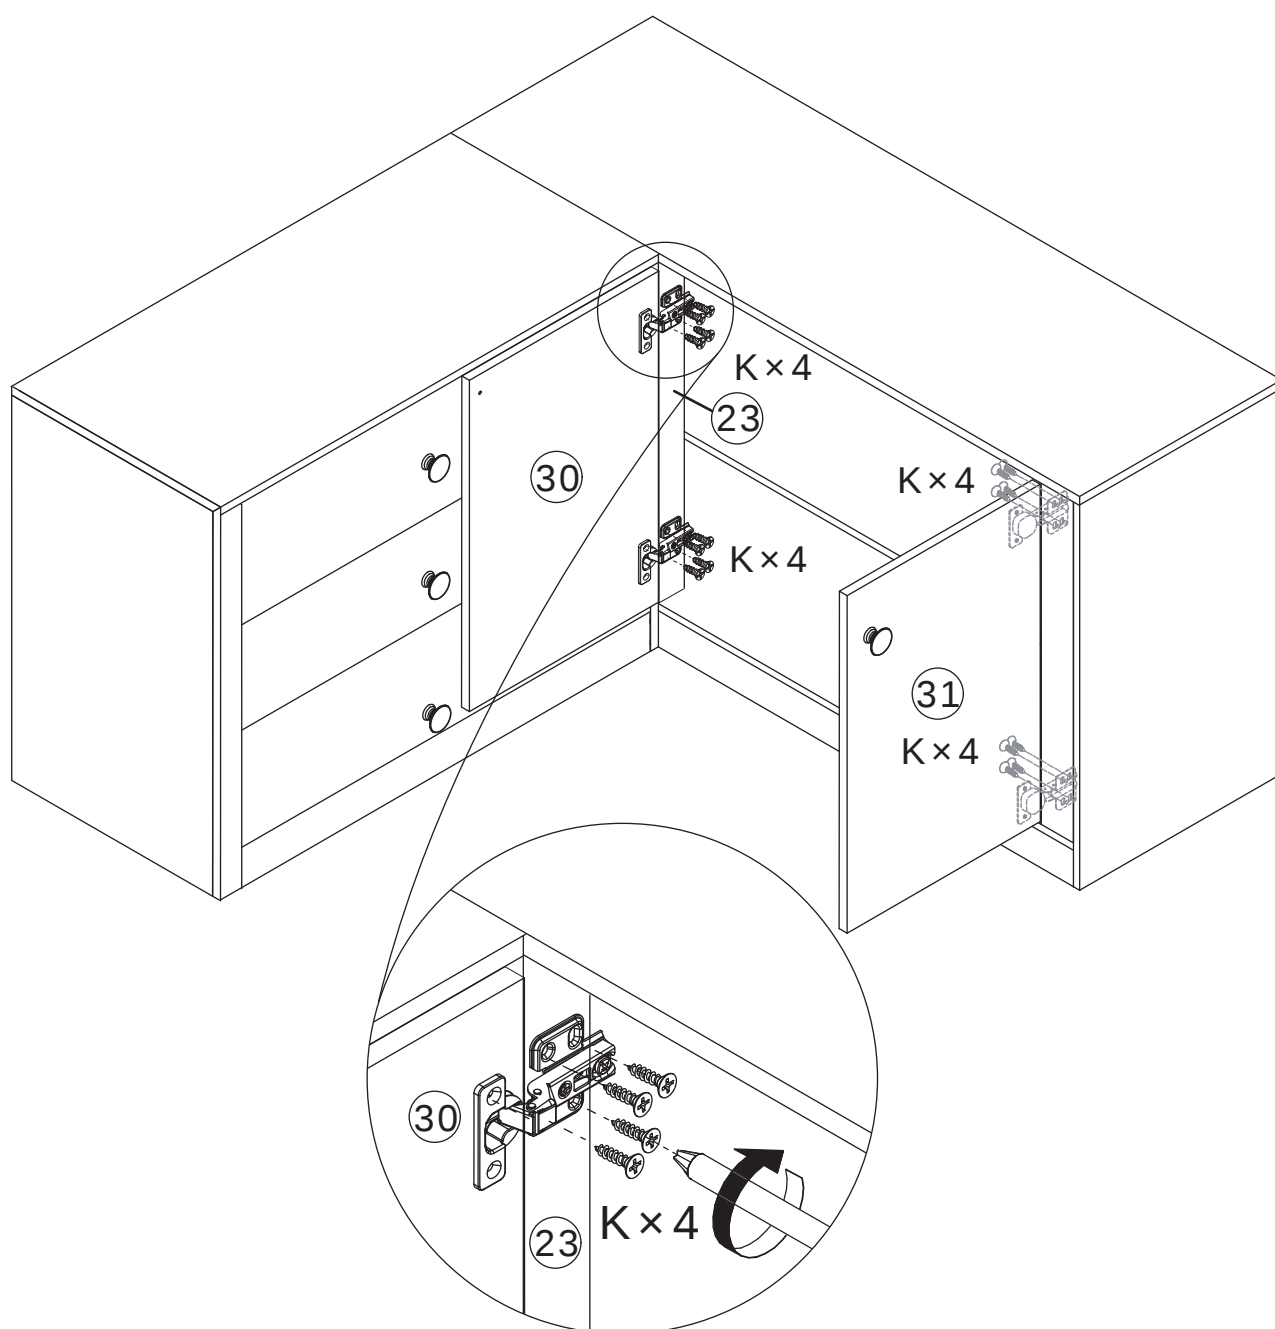

40

 
L x 8





E x 8



 Ø 3 x 12 mm



  Insert clip (Q) into the slot on the back, secure them with screw (E) as shown.

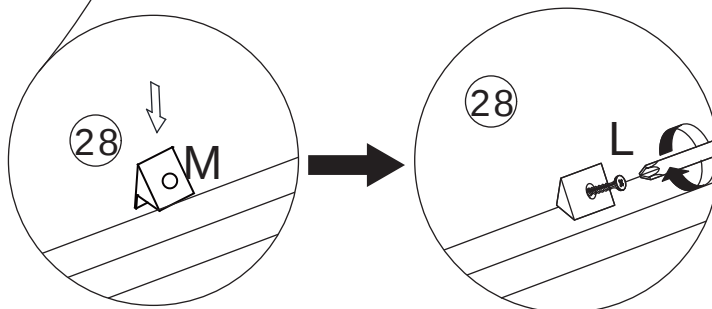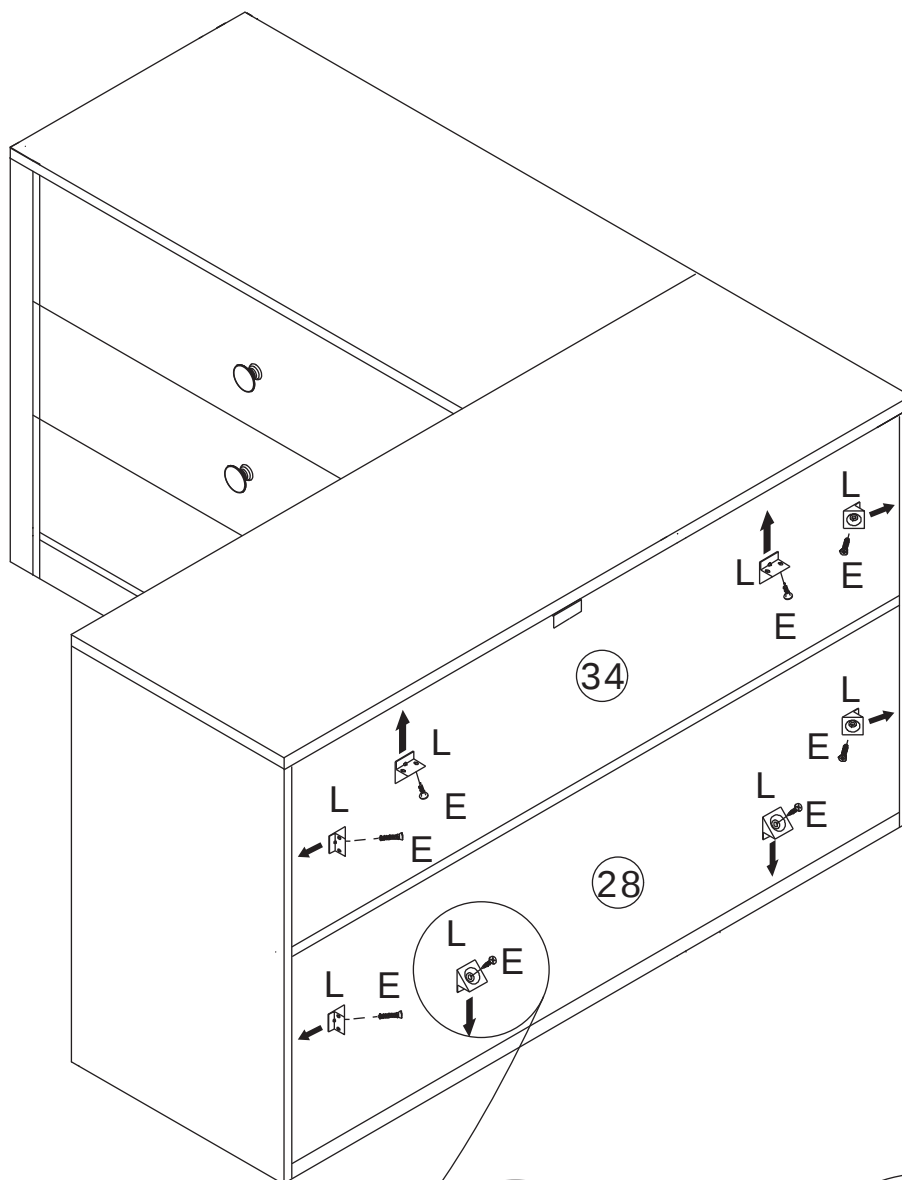

41

 
 
 
N-3×2






N-4×2



Ø4 x 30 mm






Install the anti-tip device.

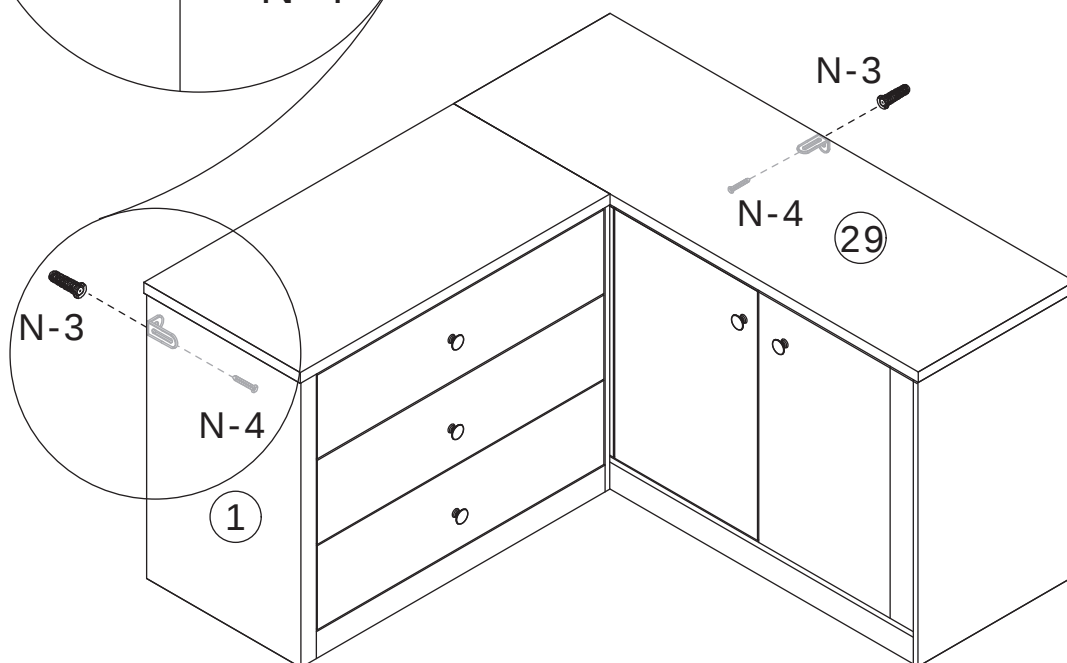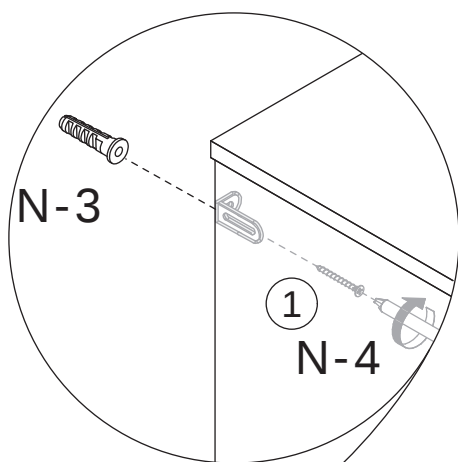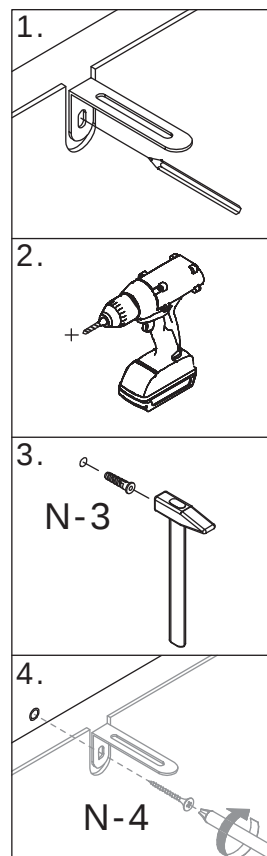   

42

   Q x 82+5

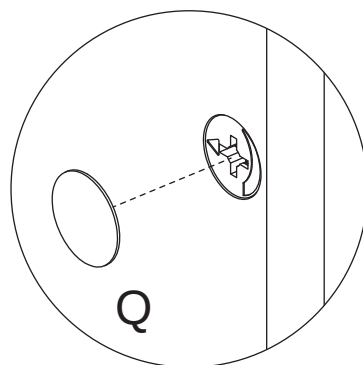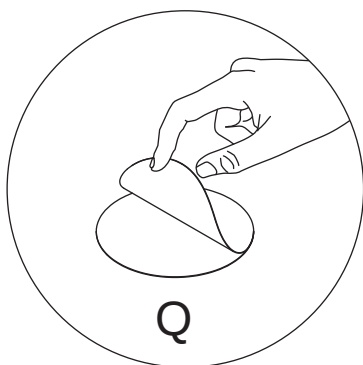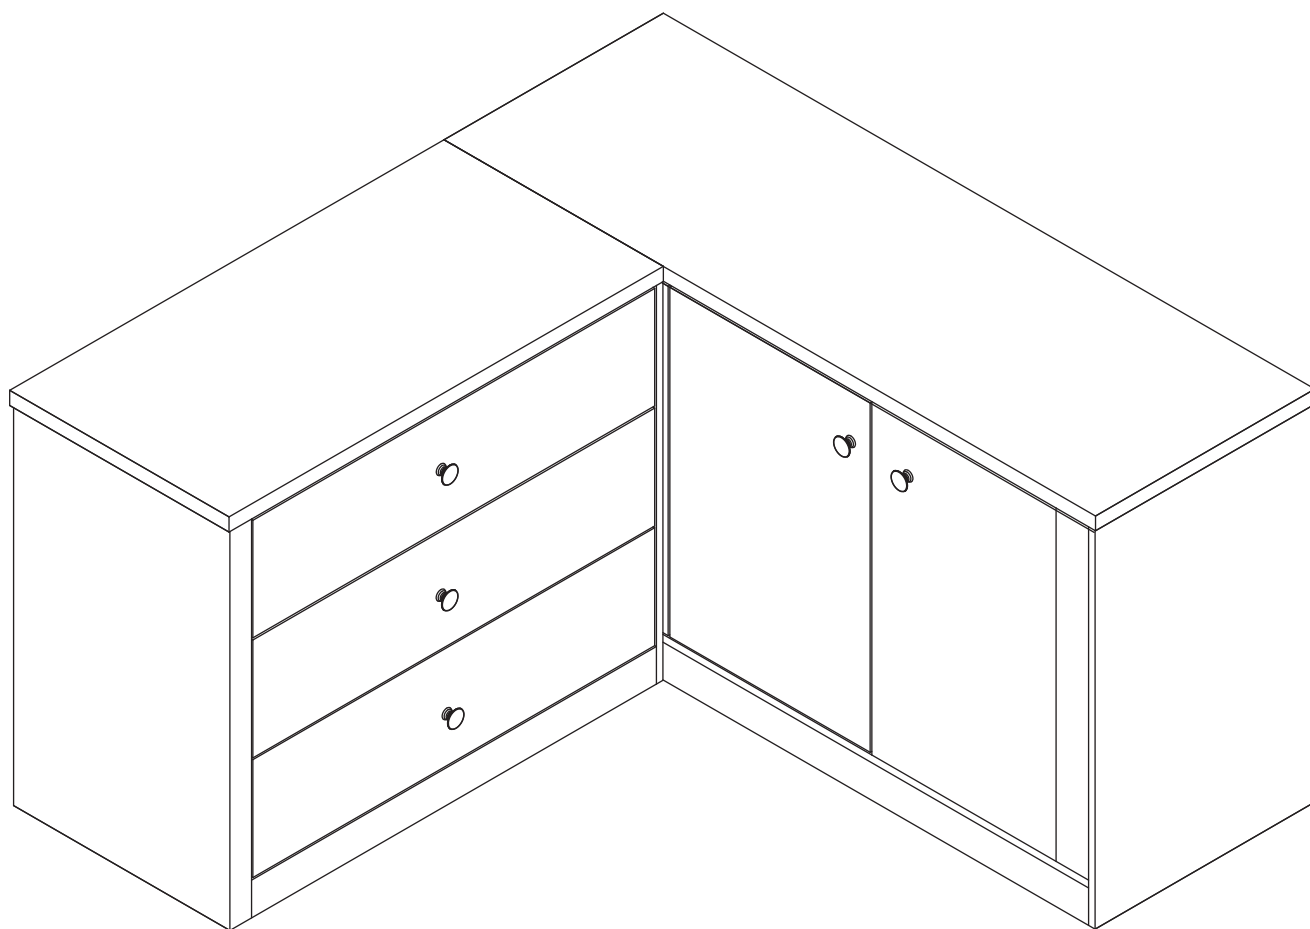

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.