



INSTRUCTION MANUAL

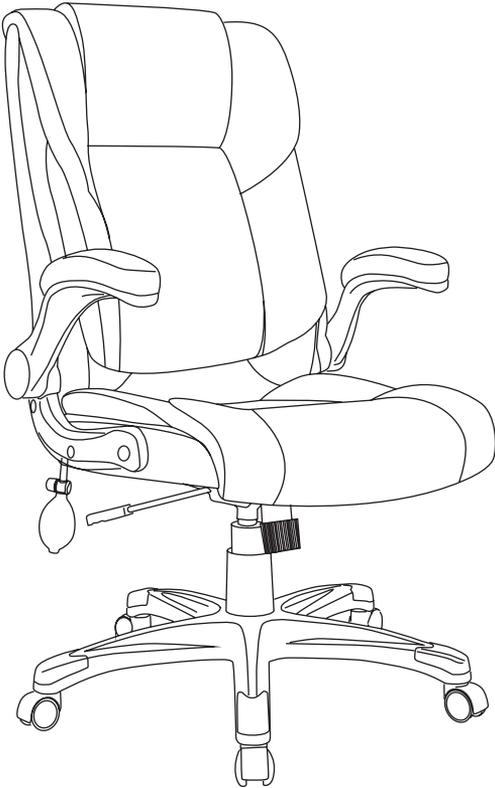

01/PACKAGE LIST


(1) Back Cushion x1

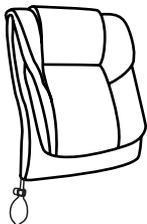


(2) Seat Cushion x1



(3) Arms x2

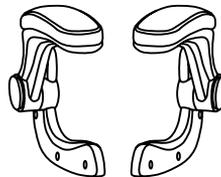

(4) Seat Plate x1

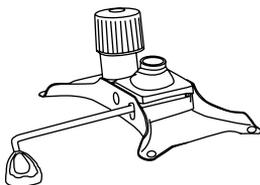

(5) Gas Lift x1



(6) Star Base x1



 
(7) Casters x5



(8) Bolts M6x20mm x4




(9) Bolts M6x25mm x8



(10) Plastic Caps x8



 (11) Lift Cover x1




(12) Wrench x1




02/ASSEMBLY INSTRUCTION


Step 1: Turn the Star Base upside down, then press the Casters into the holes at the end of each base leg.

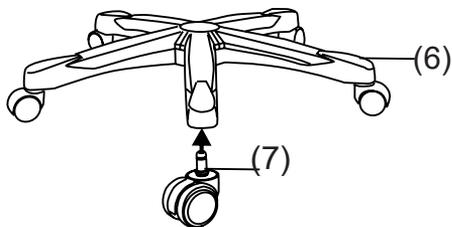


Step 2: Turn the Star Base upright and insert the Lift into the center hole of the Star Base, the Lift Cover should be placed over the Lift.

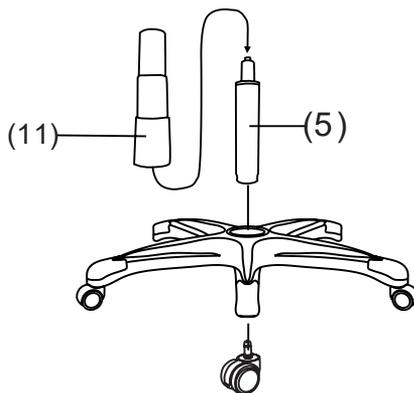

Step 3: Align the seat plate to the bottom of the seat cushion, make sure that the front of the seat plate is facing the front of the seat cushion. Attach the seat plate to the seat cushion using four M6x20mm bolts, tighten all the bolts with the wrench.

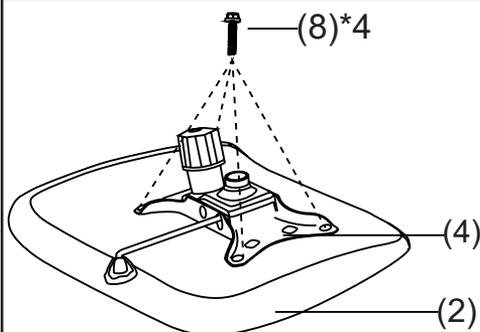


Step 4: Turn the seat cushion upright and align the center hole of the seat plate over the lift, then push the seat cushion down onto the lift firmly until the connection is secure.

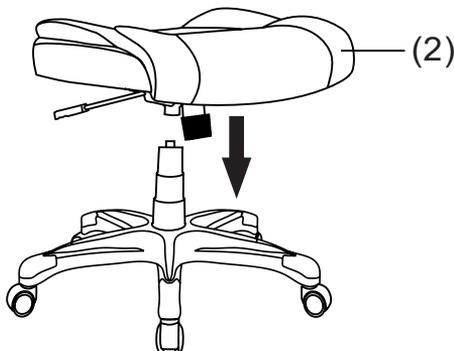

02/ASSEMBLY INSTRUCTION


Step 5: Attach the arms to the seat cushion with four M6x25mm bolts, using the Wrench.

*Note: Arm rests are labeled with an "L" (left) or "R" (right) to show which sides they should be placed on, and Do not tighten the screws completely.

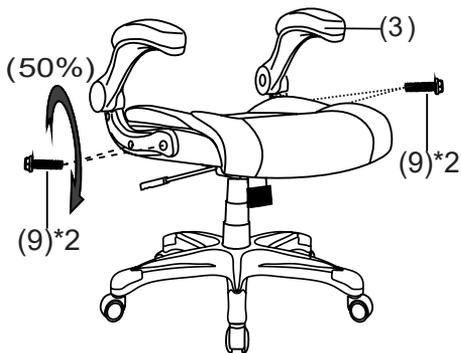


Step 6: Place the Back Cushion flat between Arms, and use two M6x25mm Bolts to locate lower screw holes on both Arms & Back Cushion with the Wrench.

*Note: Do not tighten the bolts completely.

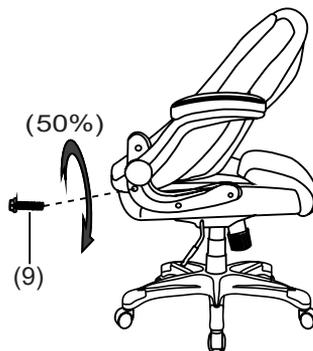


Step 7: Rotate the back cushion of the chair up, then secure it with the top two M6x25mm bolts.

*Note: Do not tighten the bolts completely.

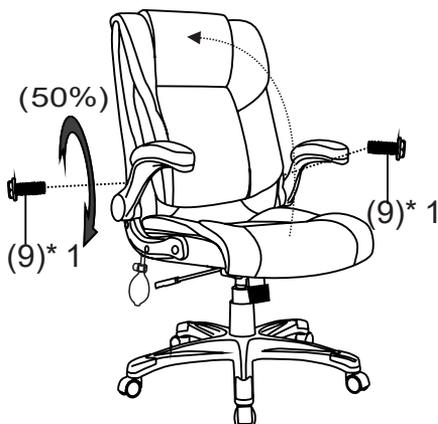


Step 8: Adjust the balance first, then fully tighten all the bolts on each side.

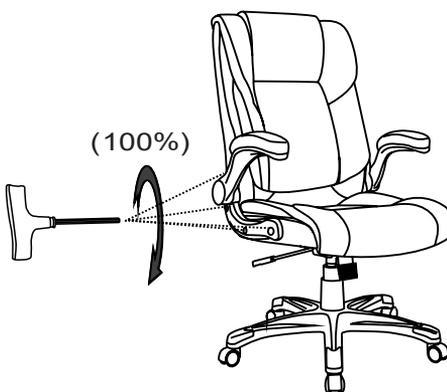

02/ASSEMBLY INSTRUCTION


Step 9: Press the plastic caps into the armrest holes to cover the bolts as pictured.

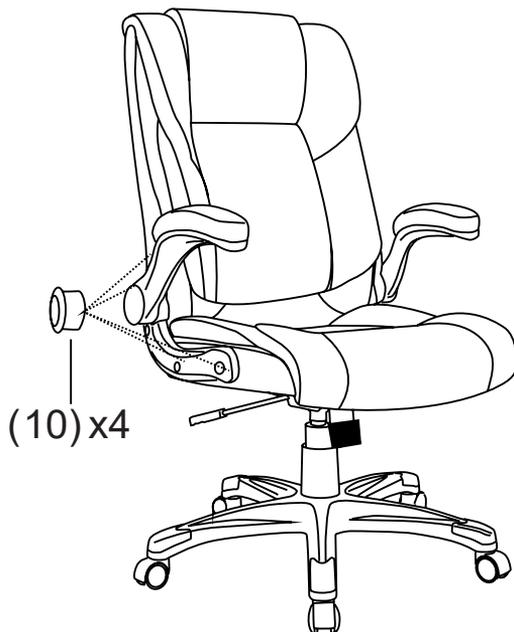

**Congratulations! You've assembled
your chair.**

03/INSTRUCTIONS FOR USE

1 To Adjust Seat Height: Paddle-shaped lever on right side

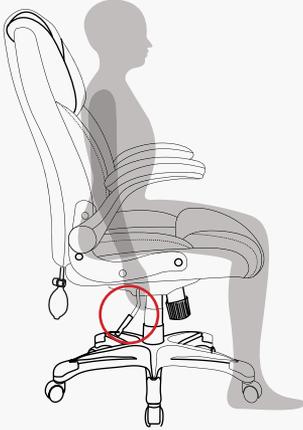

To raise the seat:


While seated, lean forward and reach under the right side of the chair to find the lever. Lift the lever and raise your body up slightly to allow the chair to the desired height. Once desired height is reached, release lever to lock chair at desired height.

To lower the seat:

Lift the lever while seated. The chair will descend until the lever is released or the chair reaches the bottom position.

* At the proper height, your feet should rest flat on the floor.

2 Inflatable Back Cushion: Inflatable handle on right side

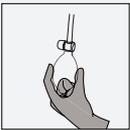

To inflate the back cushion:

To find the inflatable handle on the right side while seated. Hold your back against the back cushion and hold the inflatable handle with your hand. Press it constantly to inflate the back cushion until you are satisfied with the fullness and comfort of your back.


To deflate the back cushion:

Hold your back against the back cushion and use your fingers to hold the plug on the inflated handle to deflate the cushion. Stop pressing the plug when you are satisfied with the fullness and comfort of the cushion.

* (In order to provide you with a comfortable sitting feel and extend the life of the chair, do not over-inflate the back cushion.)

03/INSTRUCTIONS FOR USE

3 To Adjust Tension On The Tilt

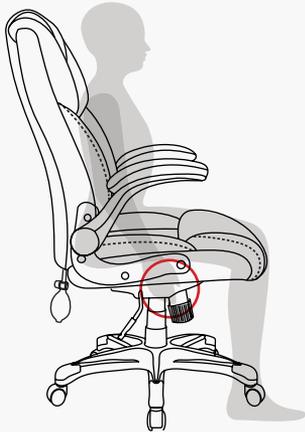

To increase tension:

Reach under the front center of the chair, grasp the round knob and turn it counter-clockwise to stiffen the title mechanism for a heavier user.



To decrease tension:

Turn the knob clockwise to loosen the tilt mechanism for a lighter user. Rotate the knob until the desired resistance is reached.

* Set the tilt tension to control the resistance you feel when leaning back.

4 360° Swivel



360° seat swivel