

 
ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED



Allen Wrench

(Included)

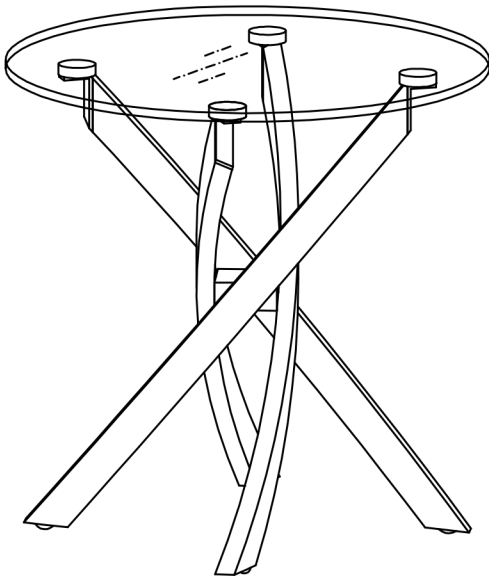

2 - Persons
Recommended

ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



CHECK BEFORE STARTING



Are you missing anything?

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.



Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!



Prep Time!

Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

 
 
PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

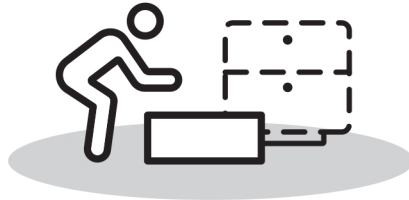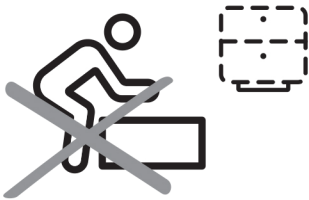

Suitable Location

Assembling near the area of the intended location is highly recommended.



 
Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

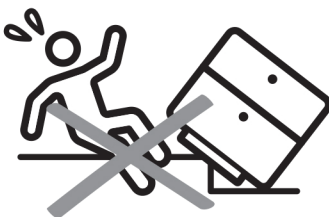

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

 
ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.

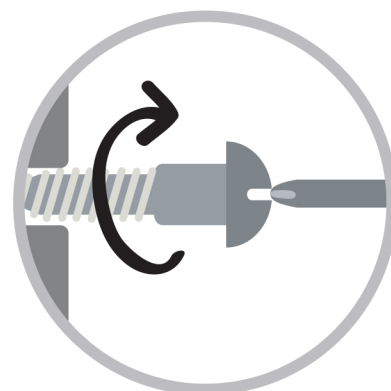


Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.




 
Save the instructions and store
any supplied tools for later
maintenance.

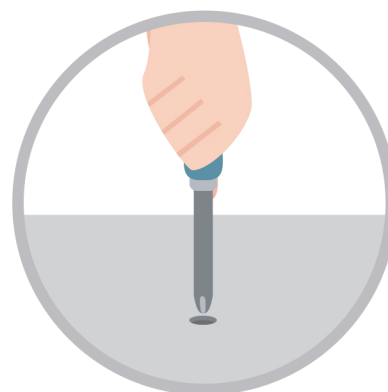

After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

  END TABLE

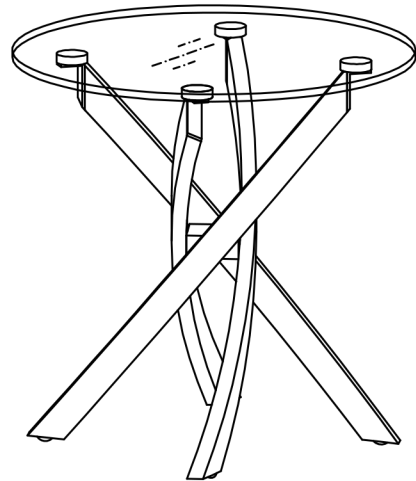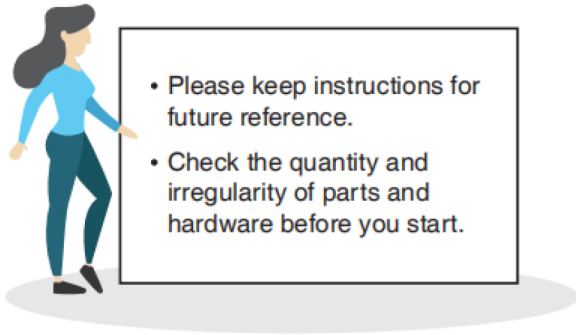

PARTS

#1 4pcs



Leg

#2 1pc



Box

#3 1pc



Glass Top

HARDWARE

#A 4pcs



Bolt 1/4"x1"

#B 4pcs



Flat Washer

#C 4pcs



Lock Washer

#D 4pcs



Bolt 1/4"x1/2"

#E 1pc



Allen Wrench M4

 
ASSEMBLY INSTRUCTIONS

1

- Part #1 x1pc
- Part #2 x1pc
- Part #3 x1pc
- Hardware #A x1pc
- Hardware #B x1pc
- Hardware #C x1pc
- Hardware #D x1pc

Align box (#2) to the center hole of leg (#1), then secure with bolts (#A).

Align leg (#1) to the holes of the glass top (#3), then secure with bolts (#D) that contains a lock washer (#C) and flat washer (#B).

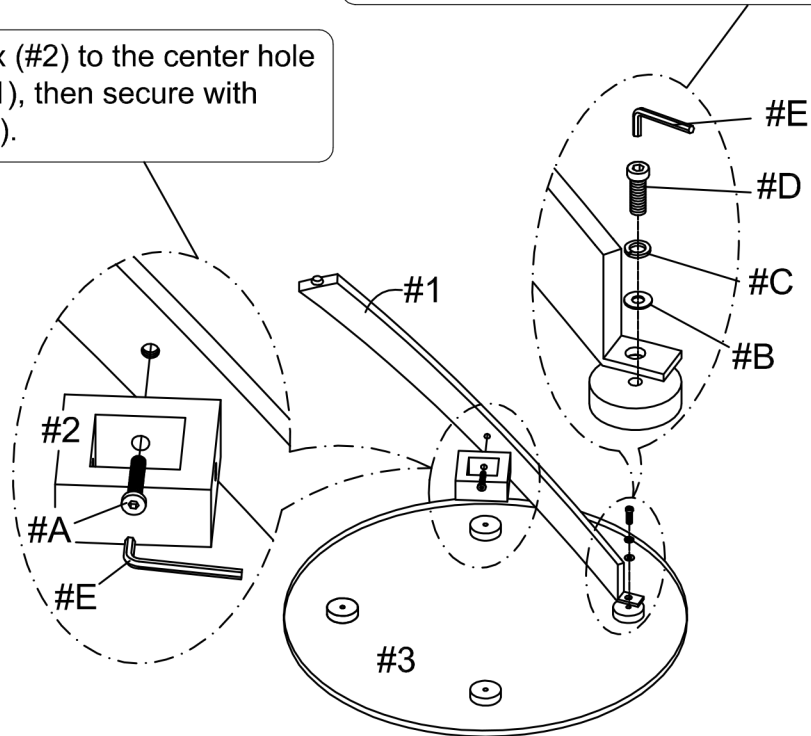


2

- Part #1 x1pc
- Hardware #A x1pc
- Hardware #B x1pc
- Hardware #C x1pc
- Hardware #D x1pc

Align leg (#1) to the center hole of box (#2), then secure with bolts

 Align leg (#1) to the holes of the glass top (#3), then secure with bolts (#D) that contains a lock washer (#C) and flat washer (#B).

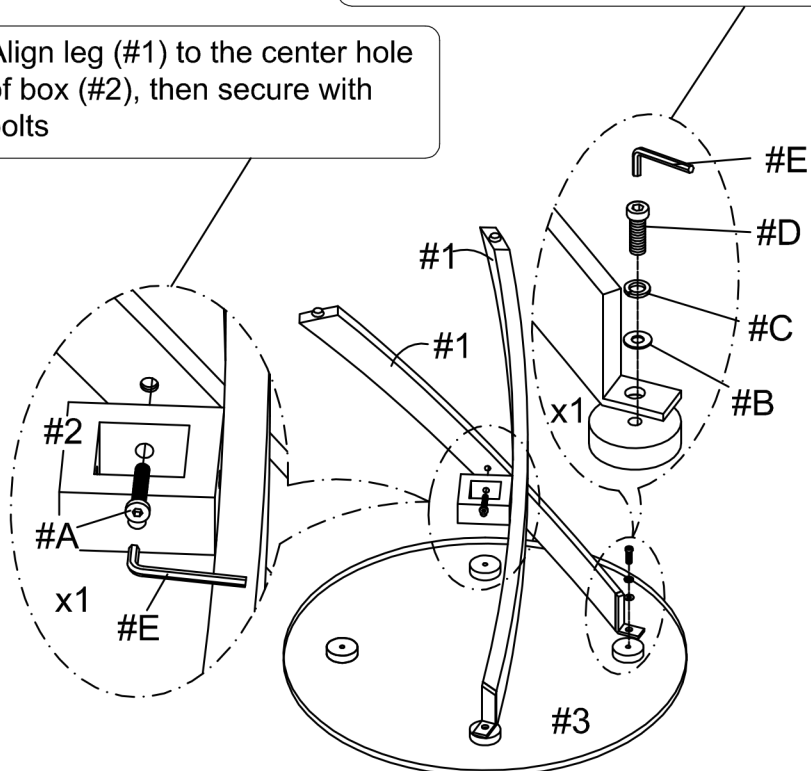


ASSEMBLY INSTRUCTIONS

3

Part **#1** x1pc
 Hardware **#A** x1pc
 Hardware **#B** x1pc
 Hardware **#C** x1pc
 Hardware **#D** x1pc

Align leg (#1) to the center hole of box (#2), then secure with bolts

 Align leg (#1) to the holes of the glass top (#3), then secure with bolts (#D) that contains a lock washer (#C) and flat washer (#B).

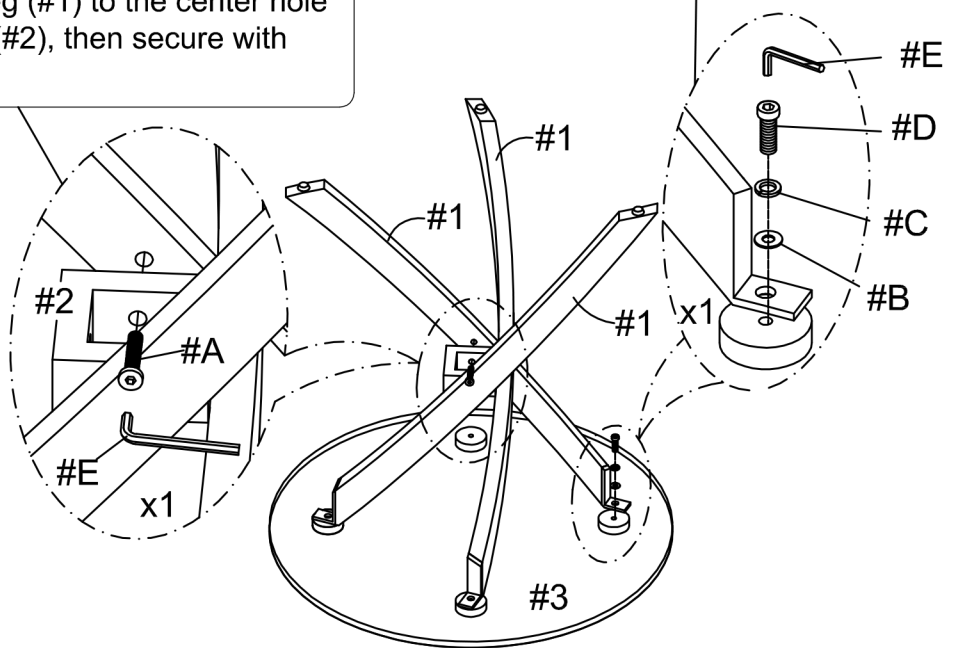


4

Part **#1** x1pc
 Hardware **#A** x1pc
 Hardware **#B** x1pc
 Hardware **#C** x1pc
 Hardware **#D** x1pc


Align leg (#1) to the center hole of box (#2), then secure with bolts

 Align leg (#1) to the holes of the glass top (#3), then secure with bolts (#D) that contains a lock washer (#C) and flat washer (#B).

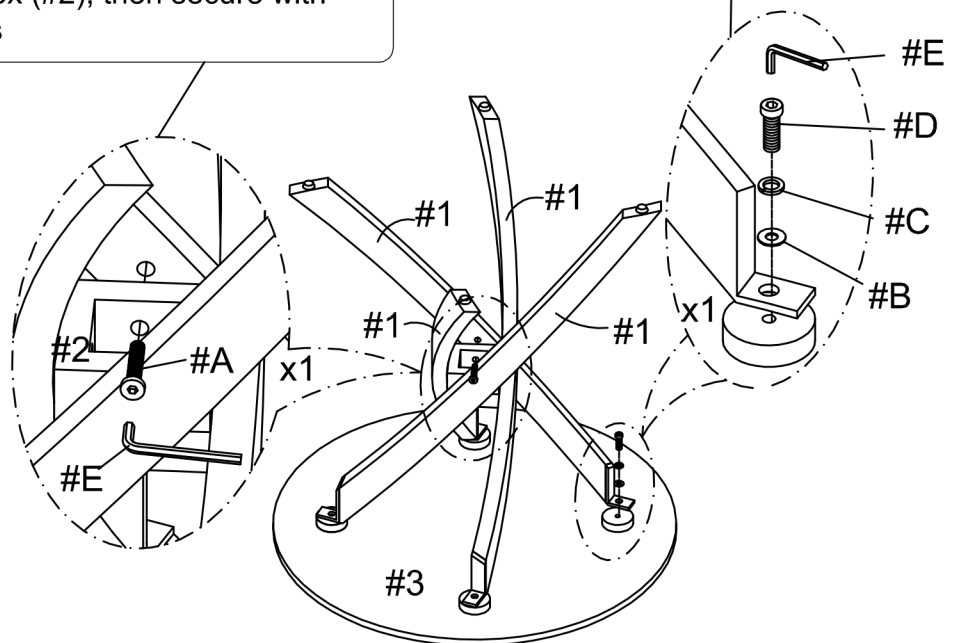

ASSEMBLY INSTRUCTIONS

 5

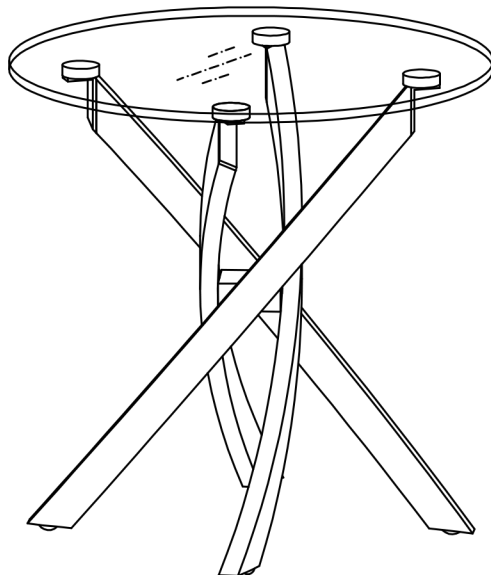

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.