 




TV STAND WITH LED LIGHTS

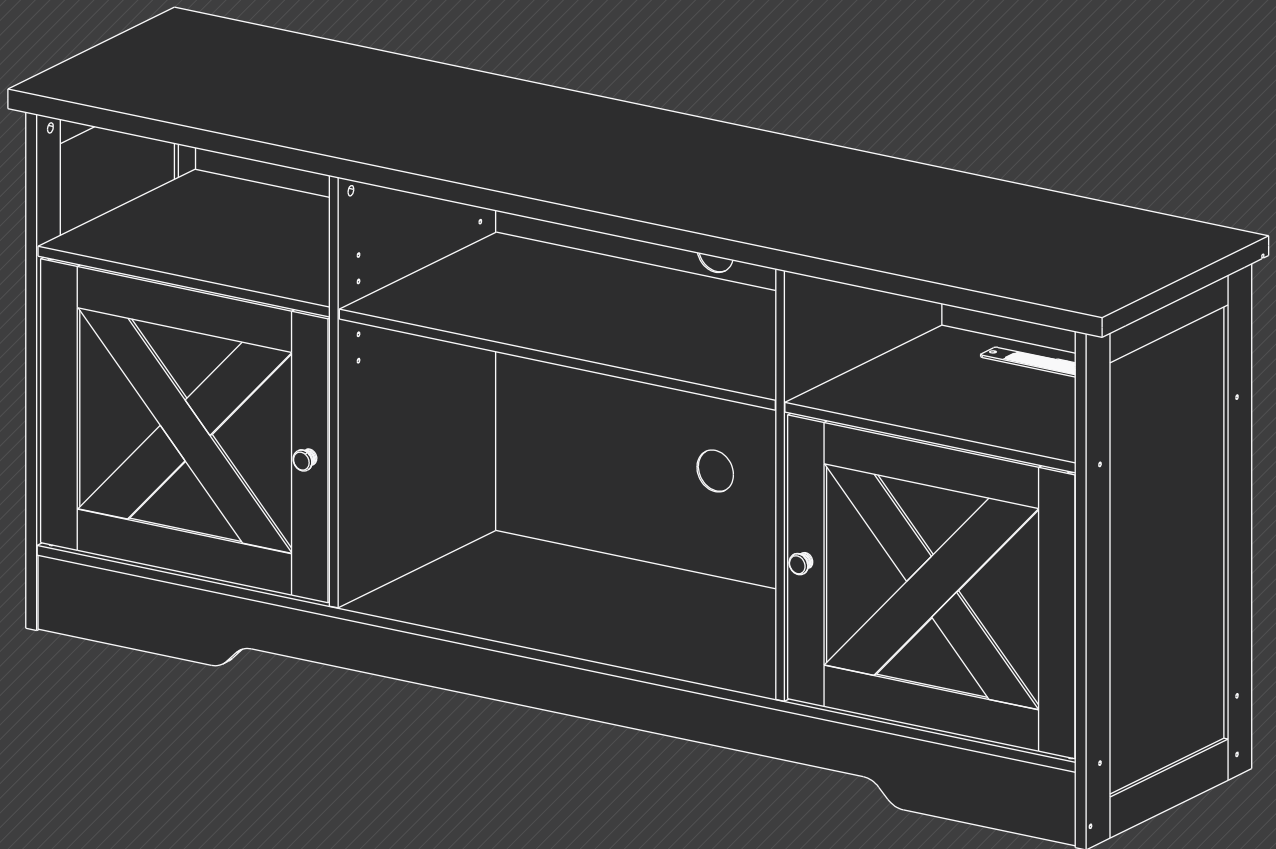

USER MANUAL



Contents


TOPIC	PAGE
01	
SAFETY INSTRUCTIONS	01-01
1-1	Thank You For Choosing Our Product 01
1-2	Precautions 01
02	
INSTALLING MODULES	02-25
2-1	Disassembly Diagram 02
2-2	Parts List 03-04
2-3	Assembly Instructions 05-25
03	
CUSTOMER SERVICE	26
3-1	30-Day Return Policy 26
3-2	1-Year Warranty 26
3-3	Quick Response Within 24 Hours 26
04	
PROBLEMS YOU MAY ENCOUNTER	27
4-1	Problems You May Encounter 27

Safety Instructions

Thank You For Choosing Our Product

Before assembly, please read this USER MANUAL first, and check according to Parts List to make sure all parts are included. Feel free to contact us if you have any concerns or questions about your product, we are always ready to help. Your satisfaction is our first priority!

 
Precautions

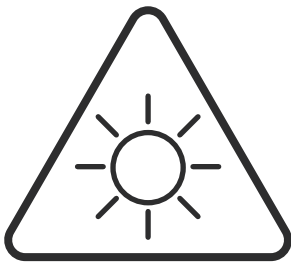


- Avoid long-term direct sunlight exposure.



- Keep away from sharp objects.

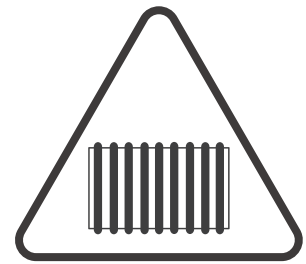


- Keep away from heat.

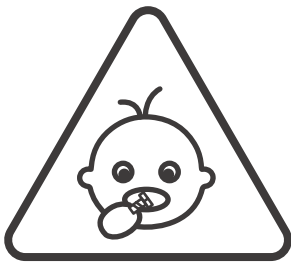

- Keep infants/children away from assembly parts to avoid choking and suffocation.





- Keep away from corrosive substances.

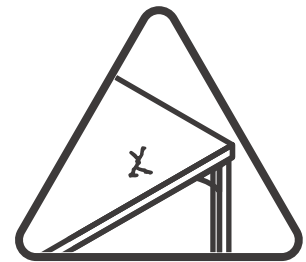

- Pay attention to avoid over-tightening fasteners, or they may induce cracking within the board.

  
Disassembly Diagram

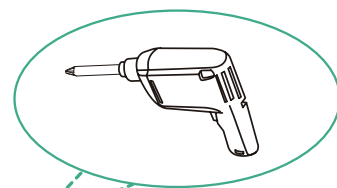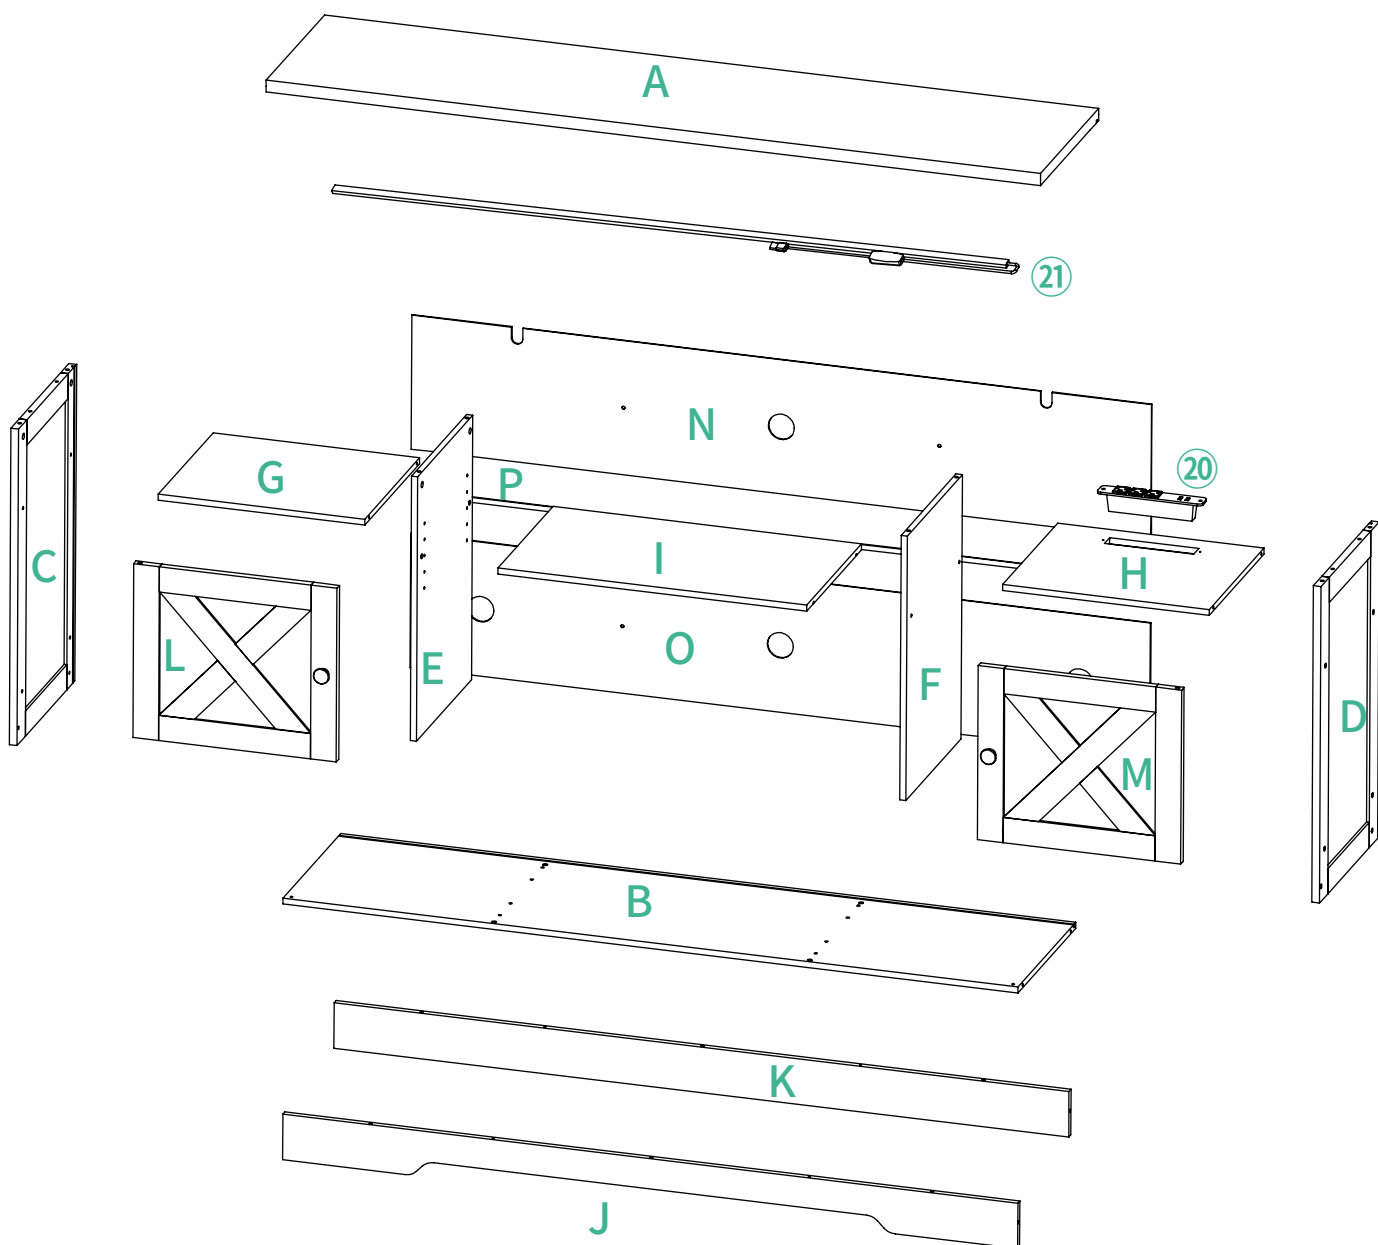

Recommend to use an electric drill to finish the installation.

Parts List


For ease and safety, we recommend two people for assembly.
















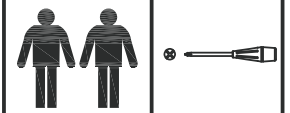


A x1 	B x1 	C x1 	D x1
E x1 	F x1 	G x1 	H x1
I x1 	J x1 	K x1 	L x1
M x1 	N x1 	O x1 	P x1
1 x10 	2 x10 	3 x10 	4 x27
1 Spare	1 Spare	1 Spare	3 Spares

Parts List

                 For ease and safety, we recommend two people for assembly.



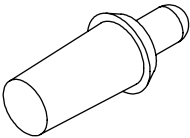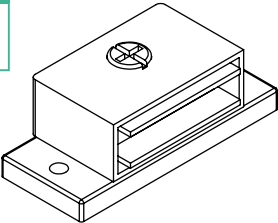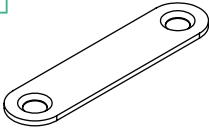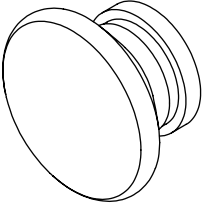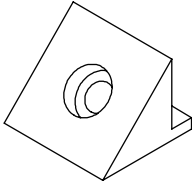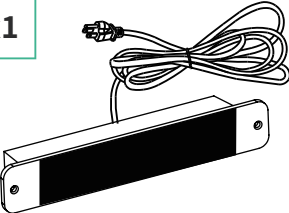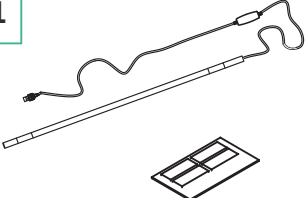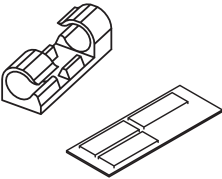
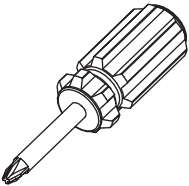
5 x5  1 Spare	6 x5  1 Spare	7 x5  ST3x14 1 Spare	8 x2 
9 x2 	10 x3  M4x18 1 Spare	11 x2 	12 x7  1 Spare
13 x7  ST3.5x16 1 Spare	14 x1  a x2  b x3  c x2  d x5	15 x7  ST3.5x12 1 Spare	
16 x22  2 Spares	17 x9  1 Spare	18 x2  M3 1 Spare	19 x5  ST4x14 1 Spare
20 x1 	21 x1 	22 x2  1 Spare	23 x1 

Assembly Instructions

- When installing , please lay soft pad on the ground to avoid scratch product.
- We suggest installing the screws first, and then assembling the product.

1

 
 
Install Part ①.

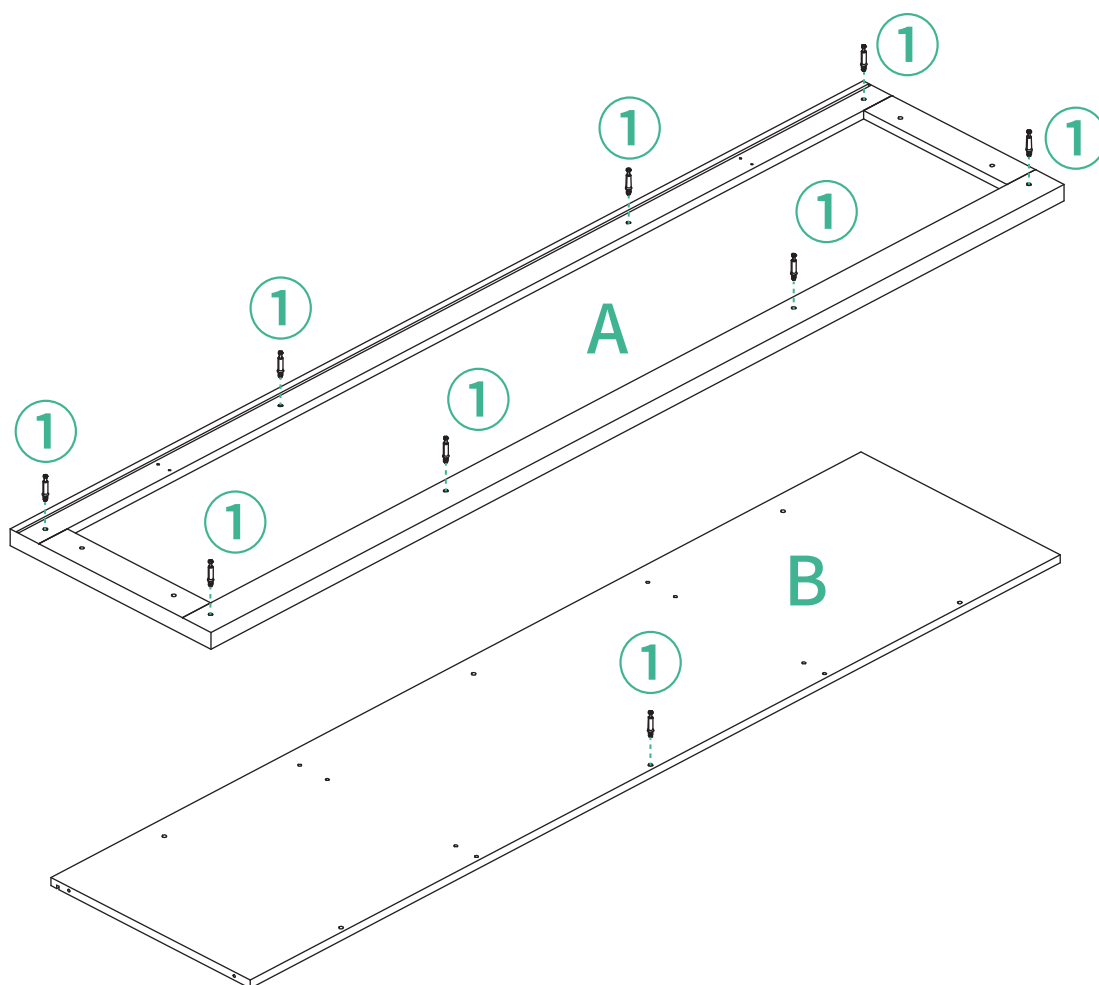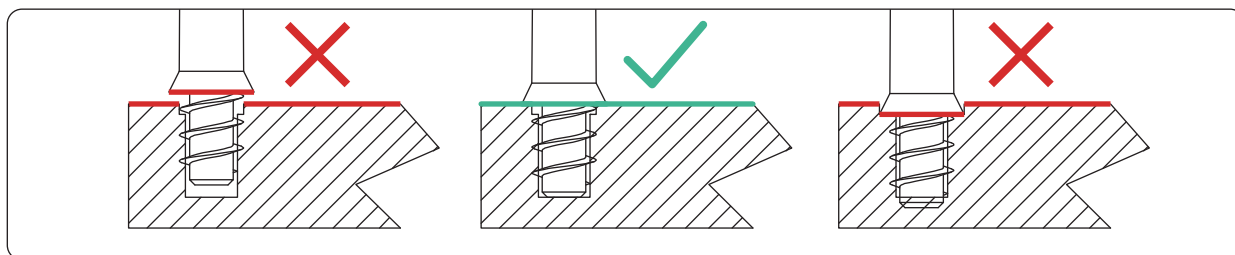

A x1		B x1		① x9		②③ x1	
----------------	--	----------------	--	----------------	--	-----------------	--

Assembly Instructions

  2 Install Part ③.

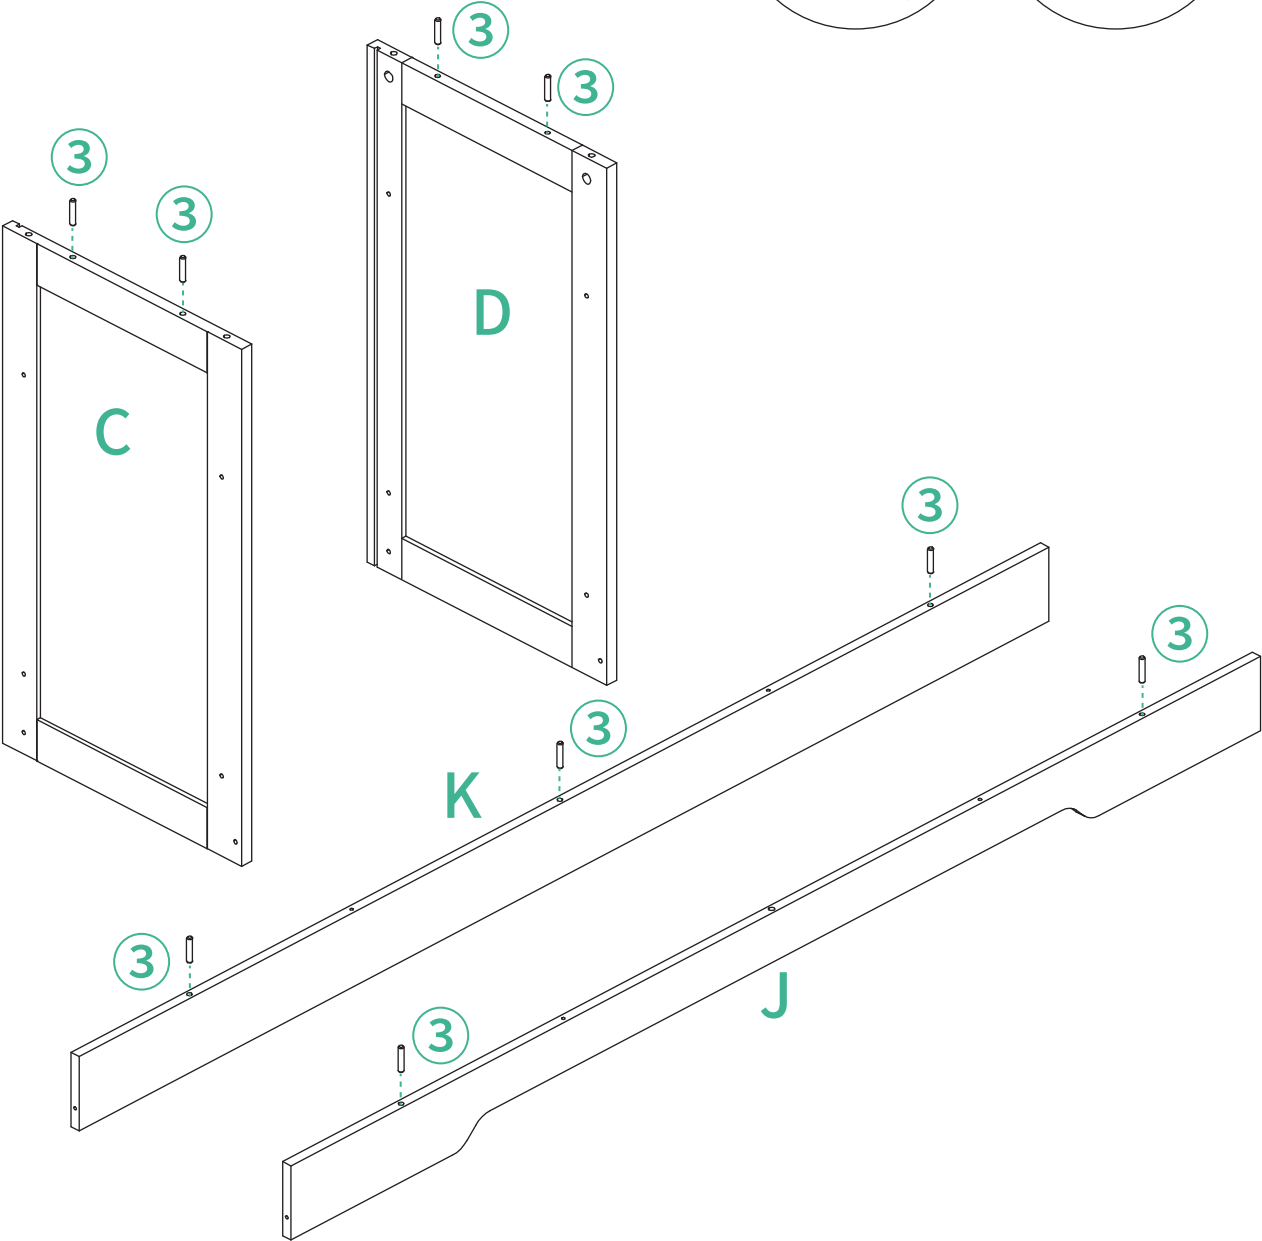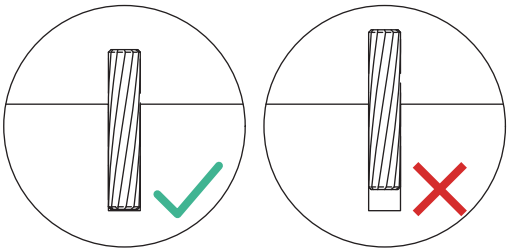

C		D		K		J		③	
x1		x1		x1		x1		x9	


Assembly Instructions

3

Install Part ⑧ using Screw ⑦.

Please pay attention to the orientation of Part ⑧ during installation.

G x1	
H x1	
7 x4	
8 x2	
23 x1	

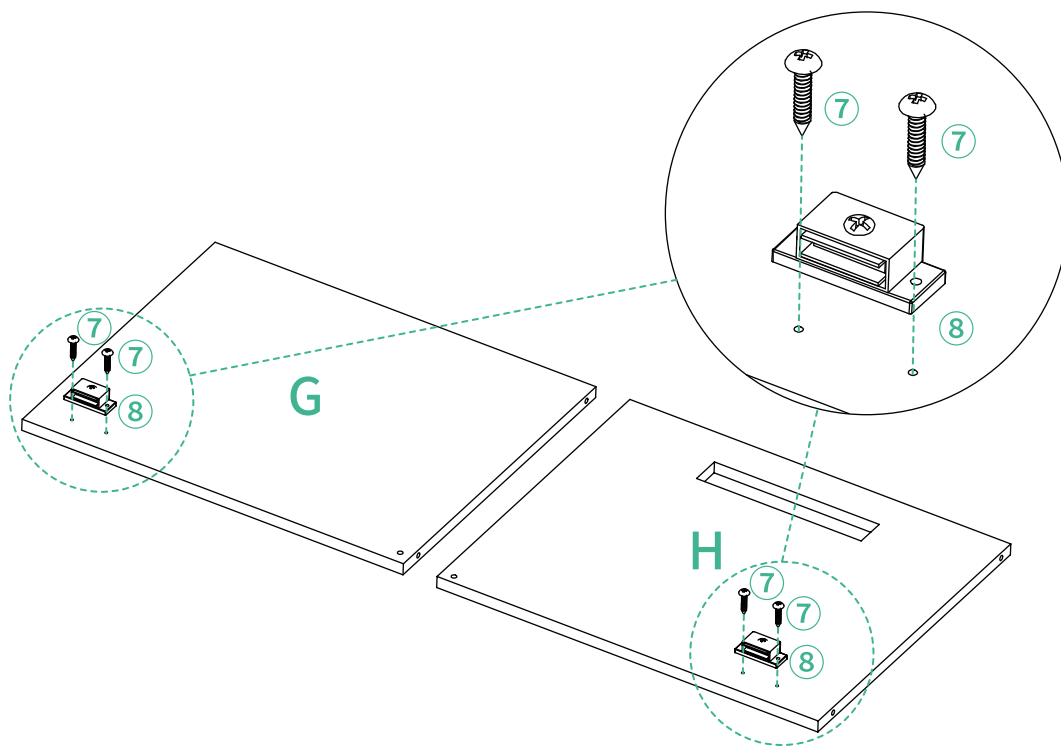 


4

Install Part ②① using Screw ①⑤.


Note: Install Part ②① on the side without Part ⑧.

H x1	
15 x2	
20 x1	
23 x1	

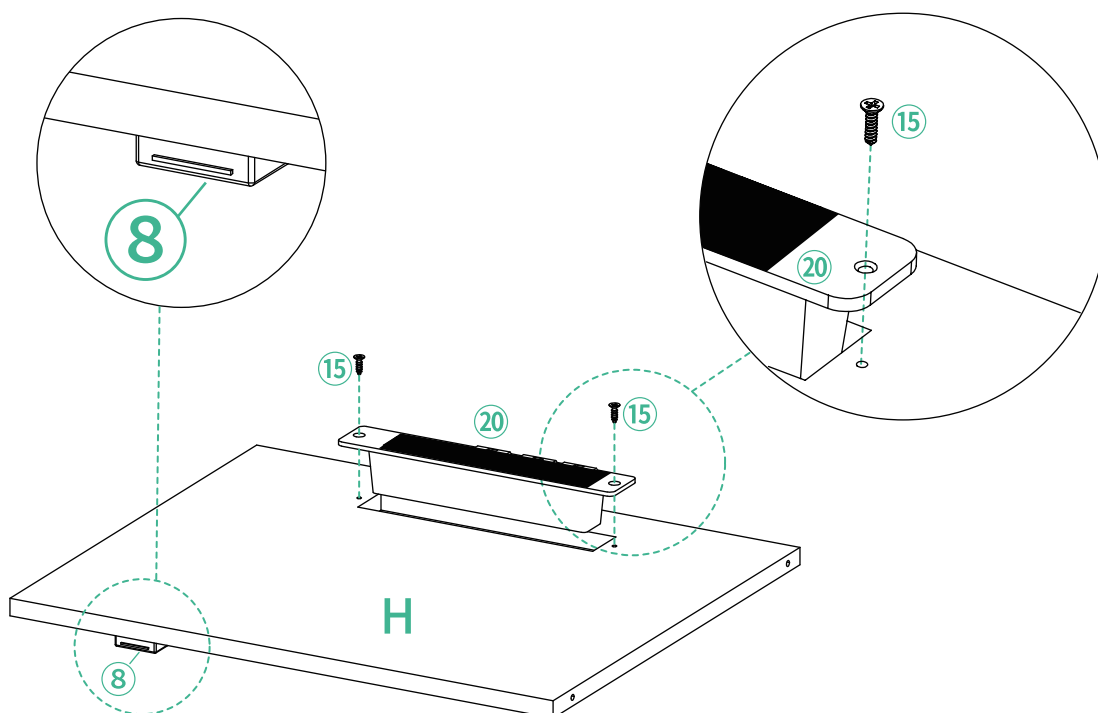 

Assembly Instructions

 5 Install Parts ⑨ using Screw ⑮ and Install Part ⑤.

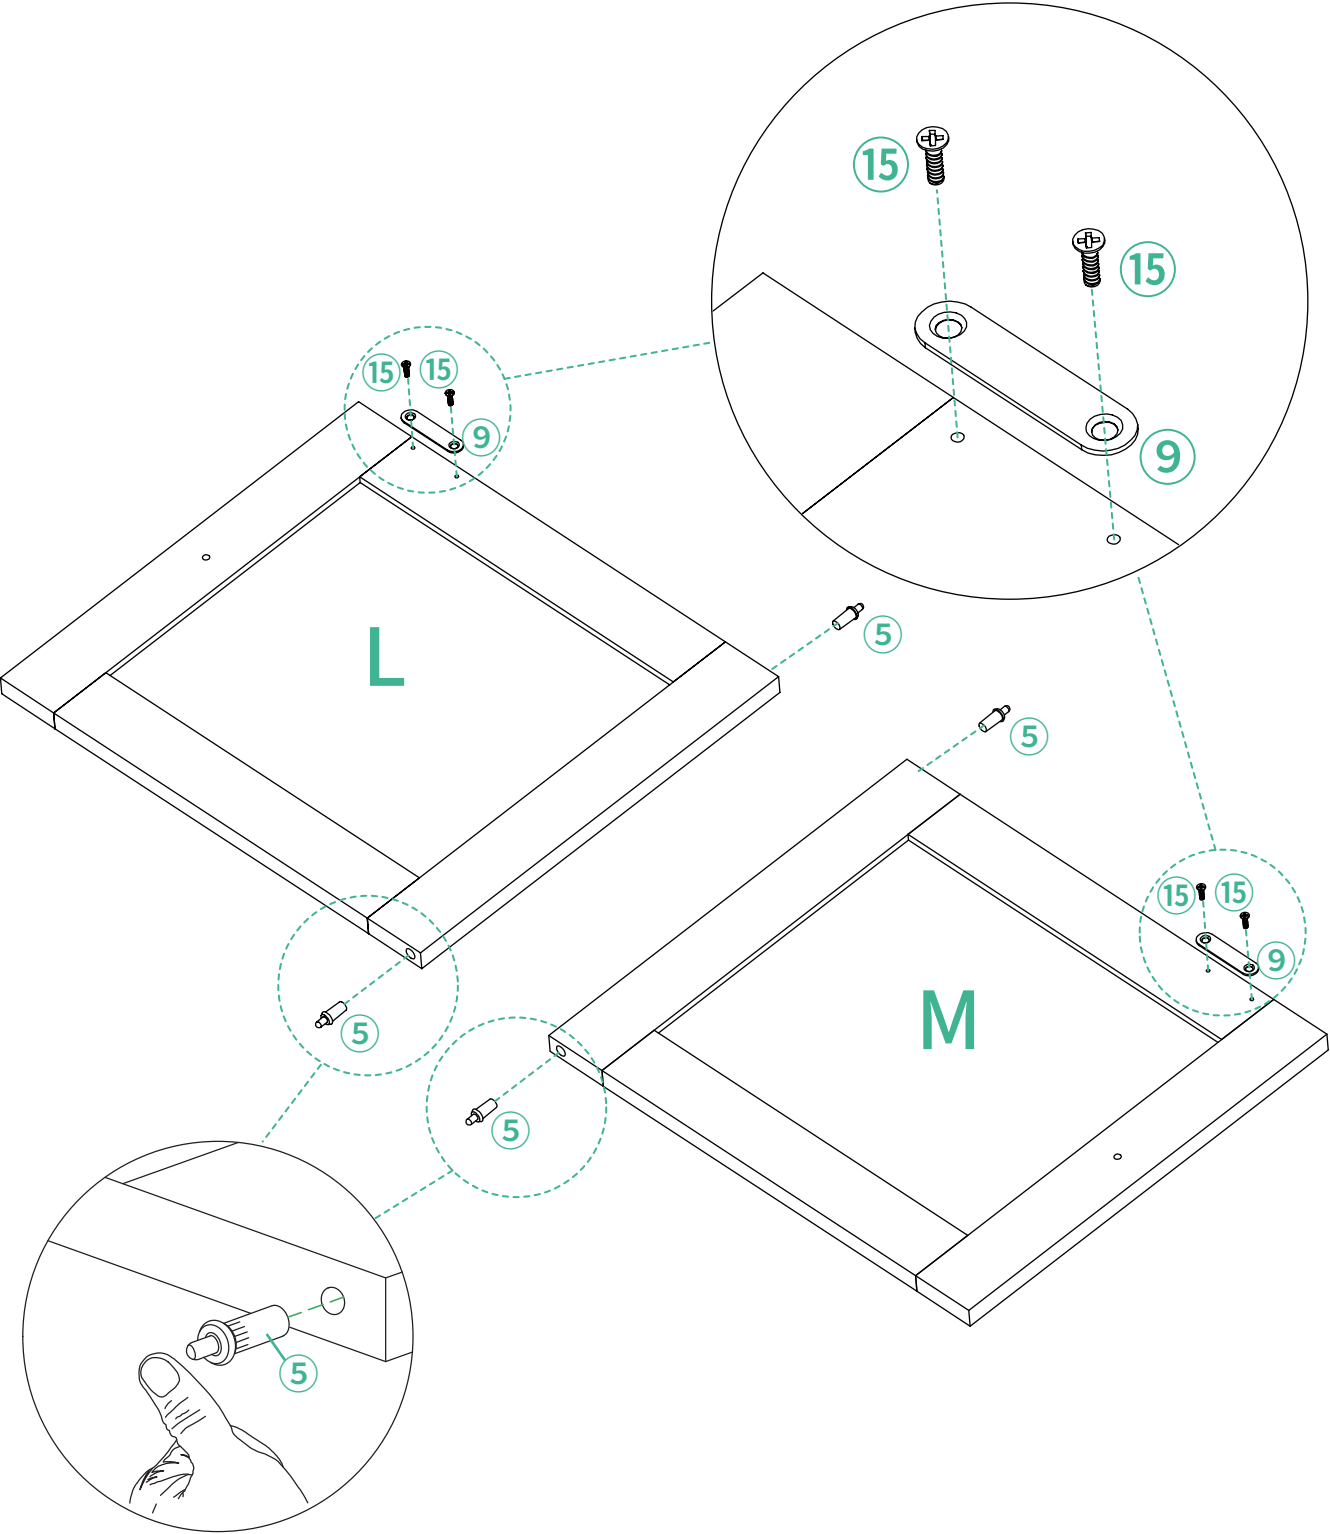


L x1		M x1		⑤ x4		⑨ x2		⑮ x4		⑳ x1	
----------------	--	----------------	--	----------------	--	----------------	--	----------------	--	----------------	--

Assembly Instructions

6

 Install Part ⑪ on the side opposite Part ⑨ using Screw ⑩.


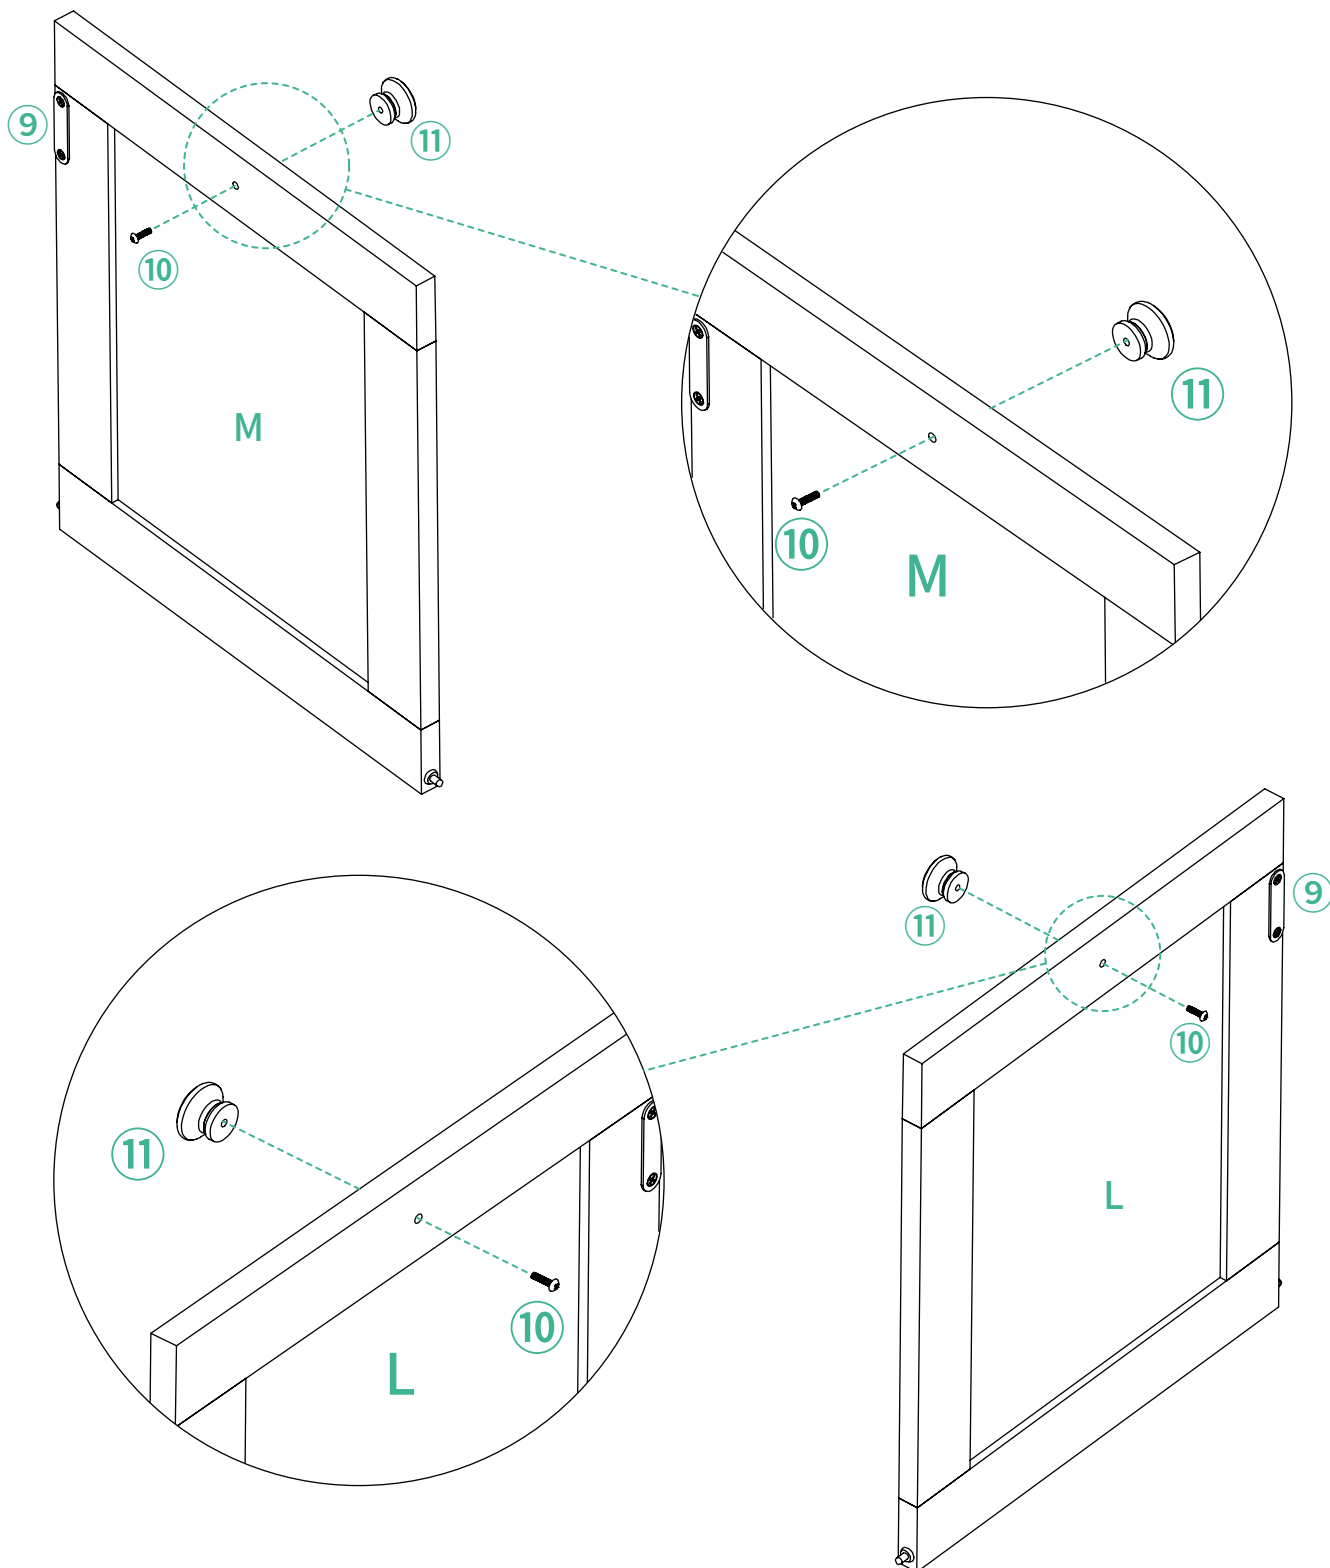


⑩		⑪		②③	
x2		x2		x1	

Assembly Instructions




7

  Light up the strip to distinguish between the front and back, then stick the 3M adhesive to the back of the strip. Sticking the 3M adhesive to the front of the strip will block the light.

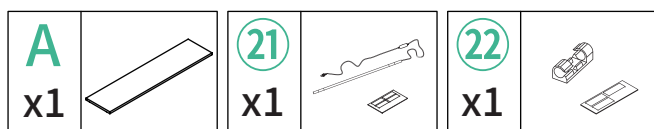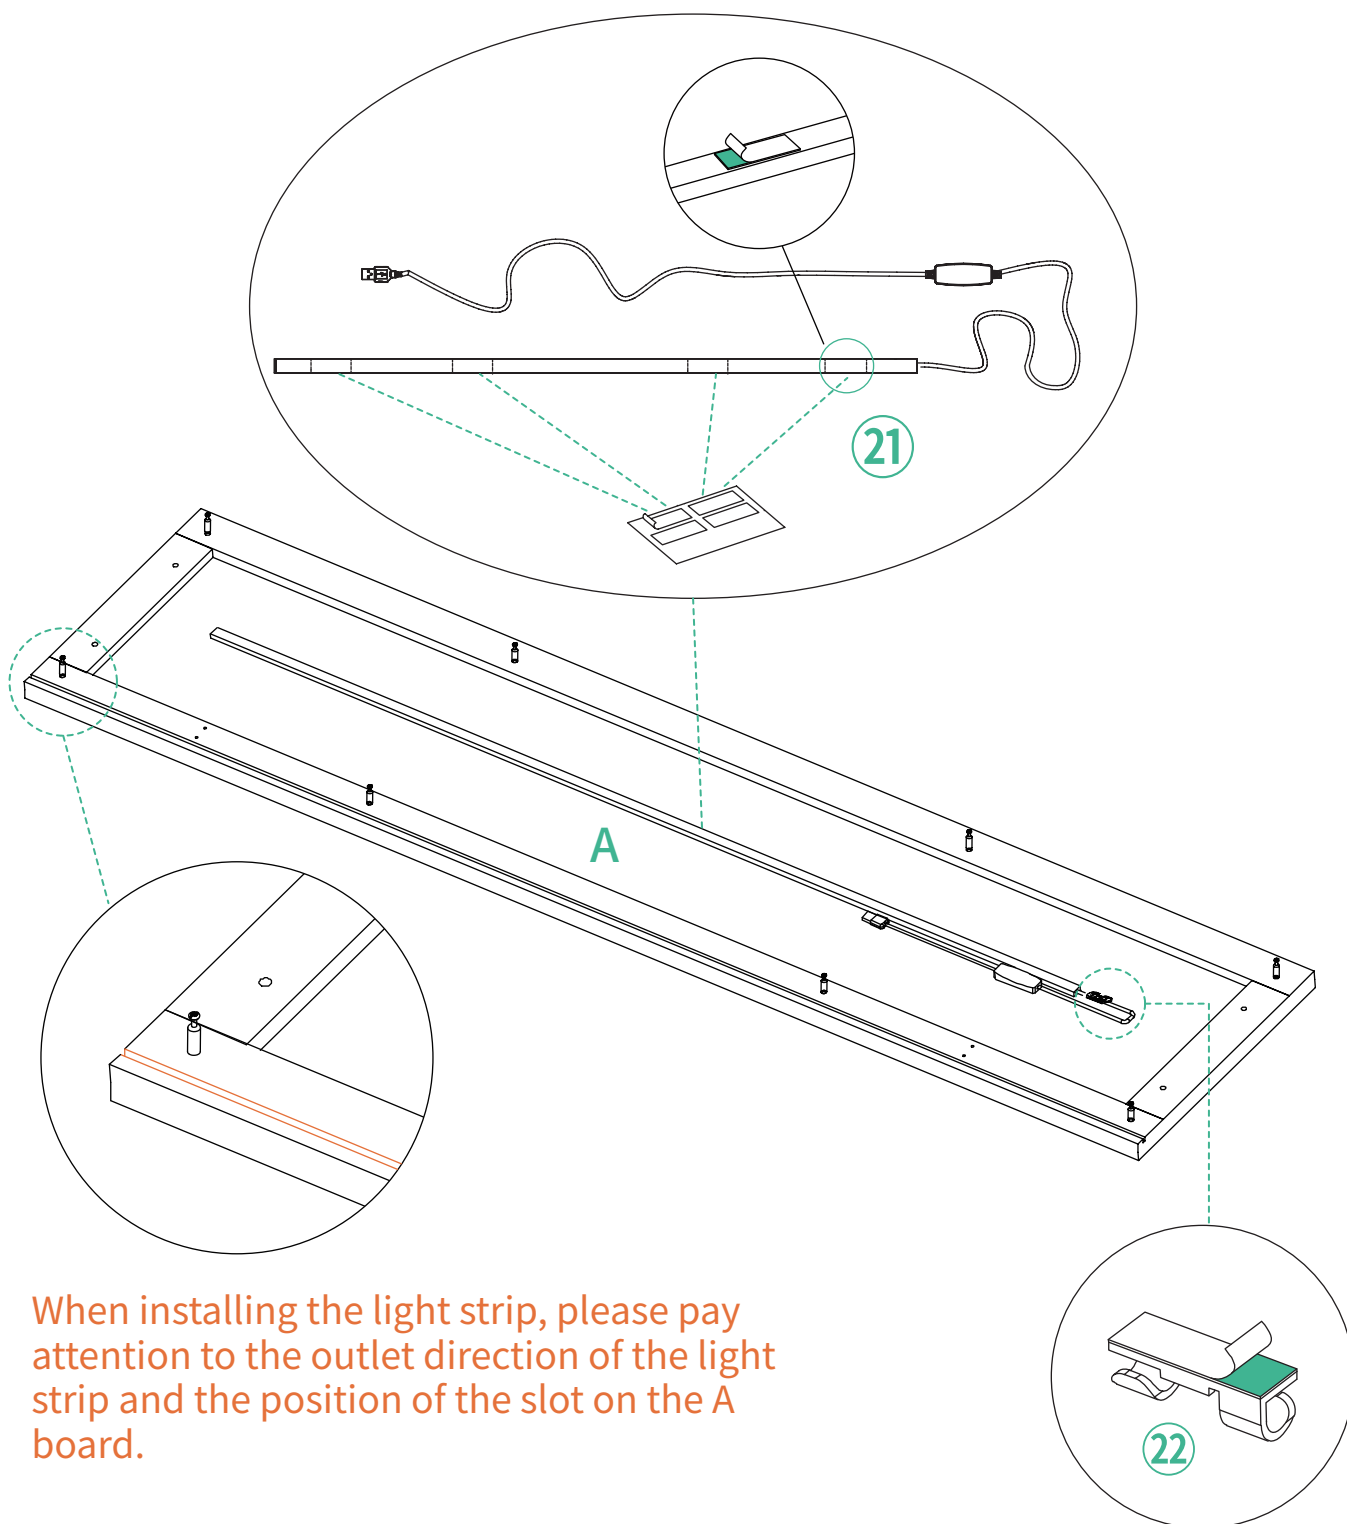

Assembly Instructions

   8 Install Part ⑭-a using Screw ⑭-d.

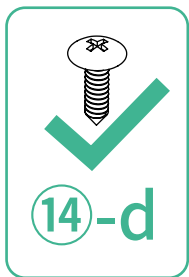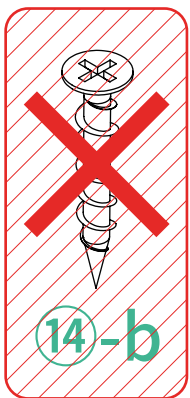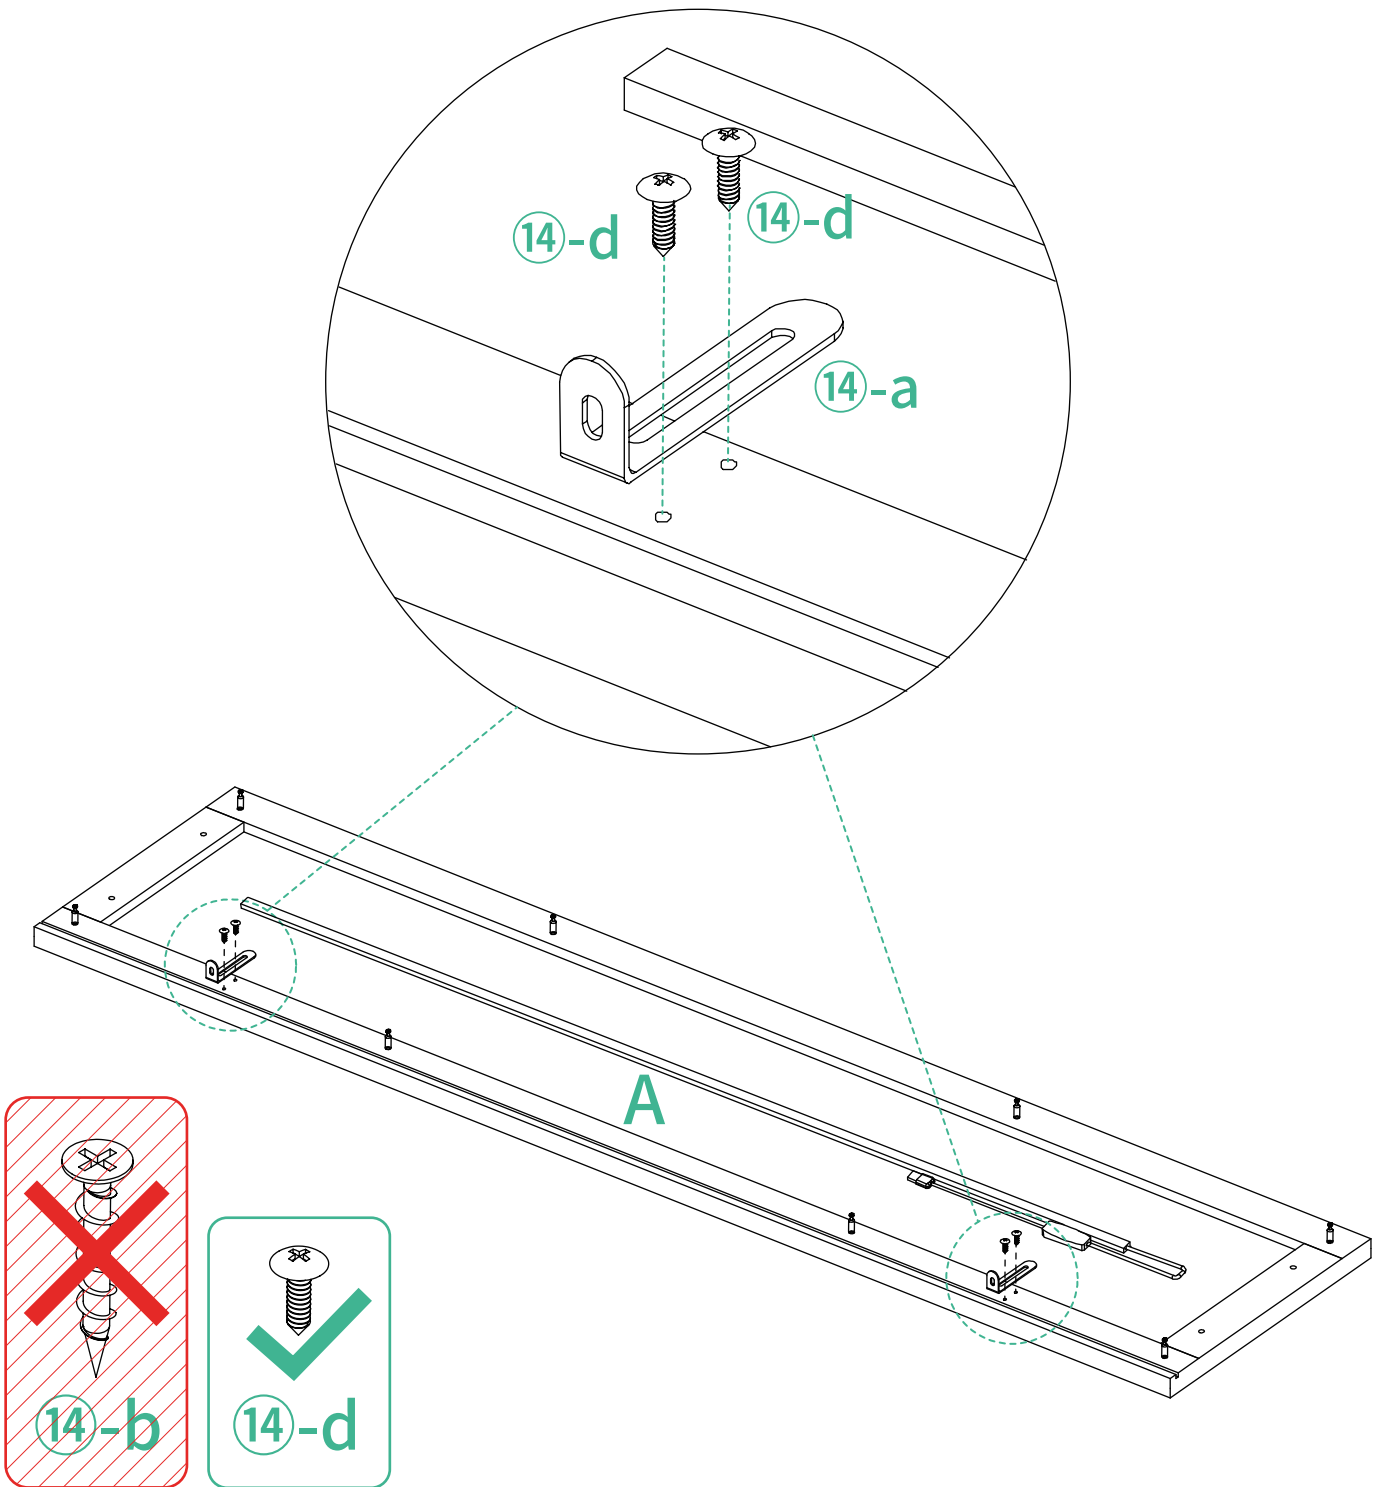

⑭-a		⑭-d		⑳	
x2		x4		x1	

Assembly Instructions

 
9

Connect Part C and Part E to Part A using Screw ②.

Note: Ensure correct orientation during installation.

Part C: Align its groove with the groove on Part A.

Part E: The screw holes (see arrows) must face the same side as Part ⑭-a on Part A.

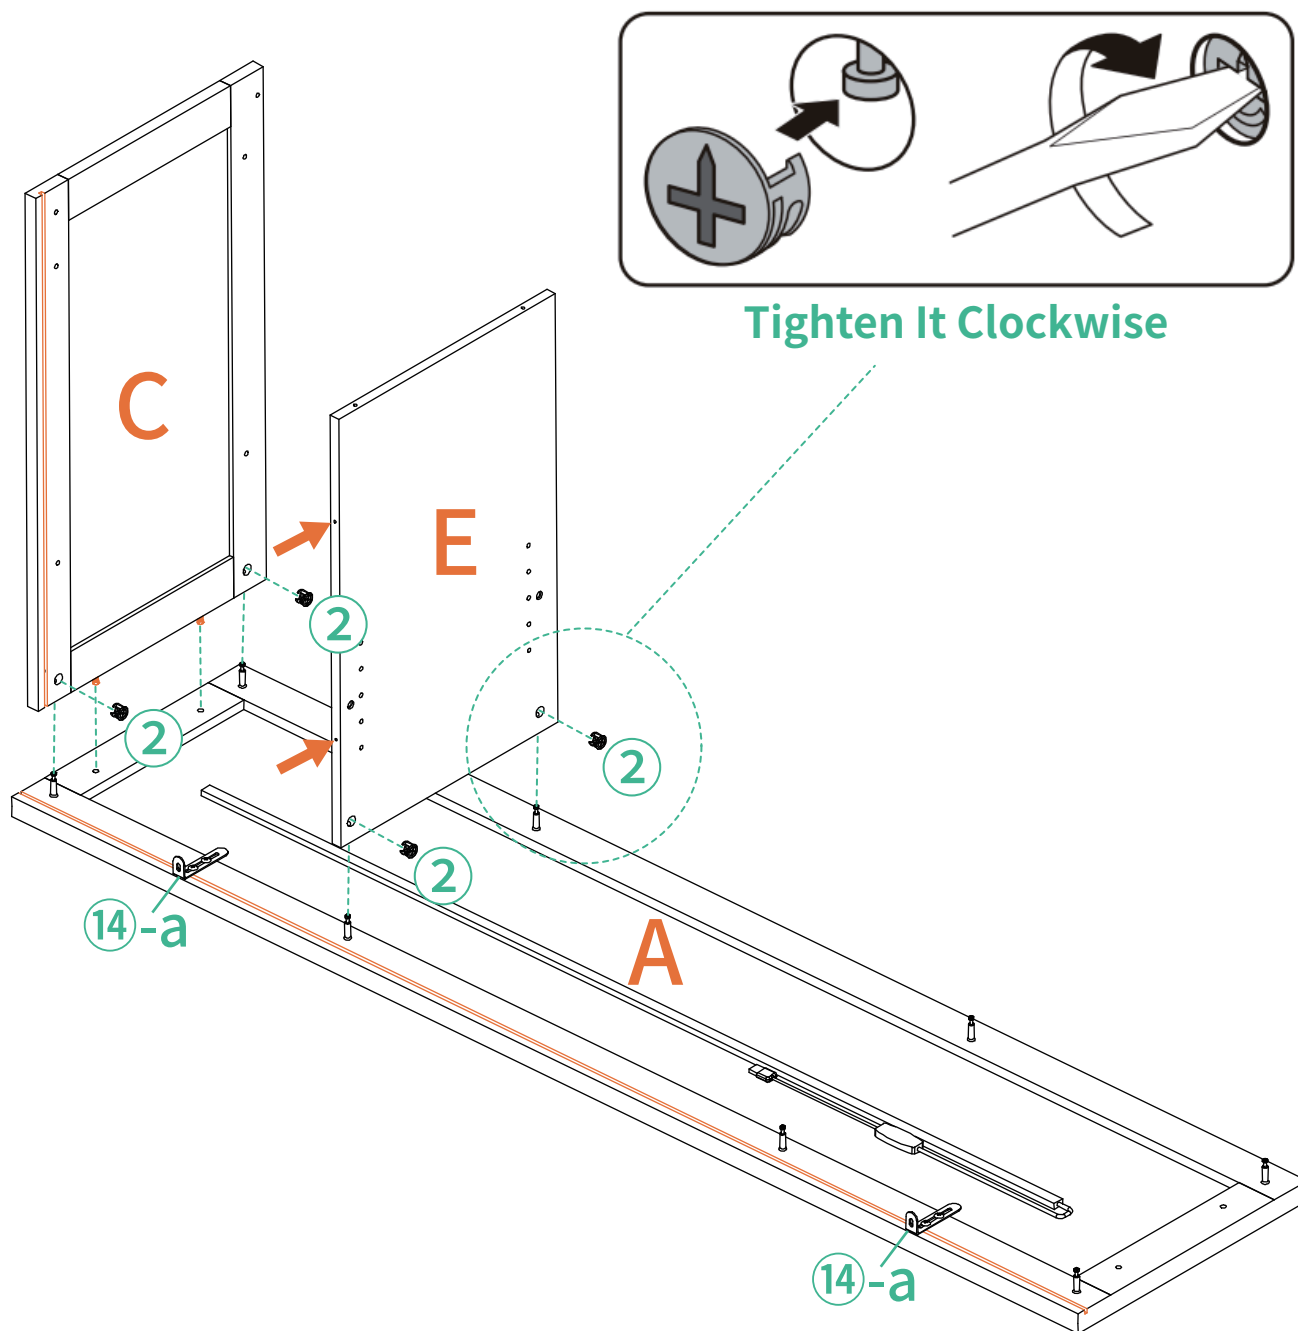

C		E		②		②③	
x1		x1		x4		x1	

Assembly Instructions

 
10

Connect Part D and Part F to Part A using Screw ②.


Note: Ensure correct orientation during installation.

Part D: Align its groove with the groove on Part A.

Part F: The screw holes (see arrows) must face the same side as Part ⑭-a on Part A.

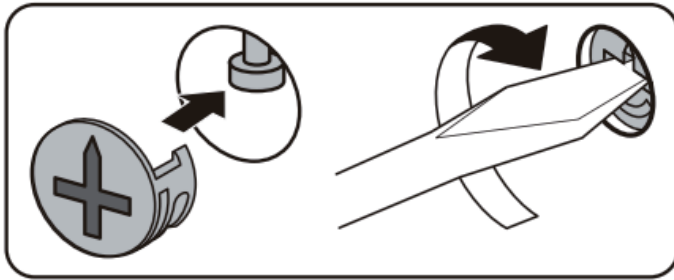

Tighten It Clockwise

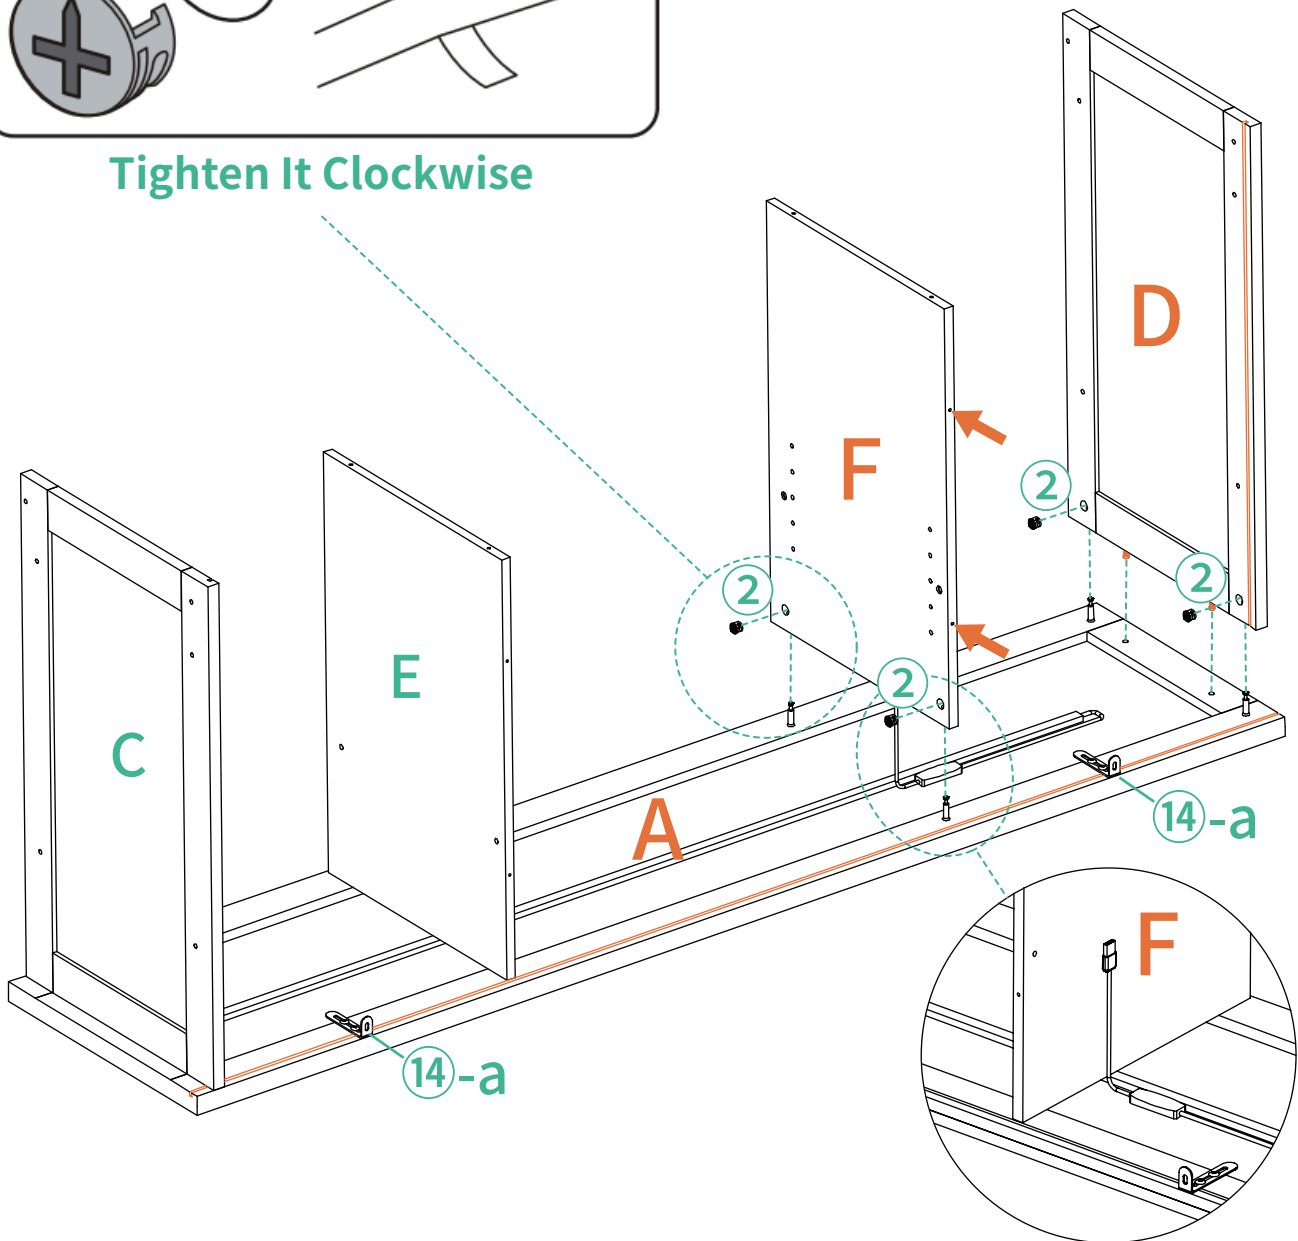 

D x1		F x1		② x4		②③ x1	
----------------	--	----------------	--	----------------	--	-----------------	--

Assembly Instructions

 
 
11

Install Parts G and H using Screw ④.

Note: Ensure correct orientation during installation.

Part G: The screw hole (see arrow) must face upward and forward.



Part H: The socket panel must face downward and be on the same side as Part ⑭-a.

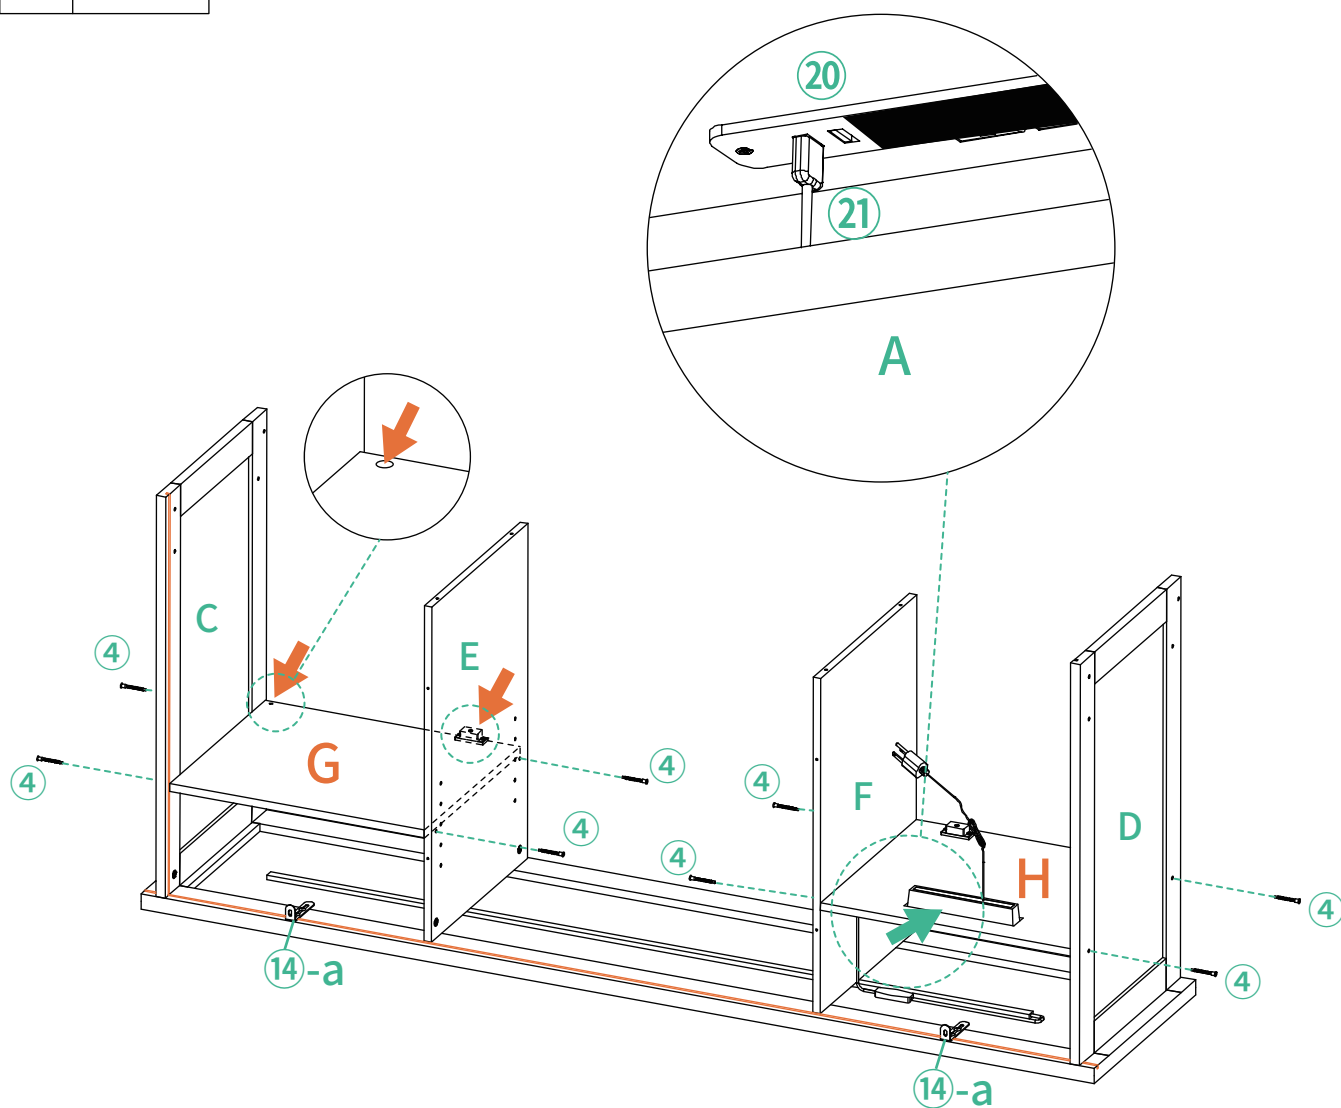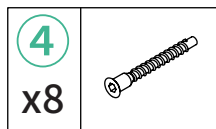

Assembly Instructions




12

 Install Part N with the groove on its edge facing downward.

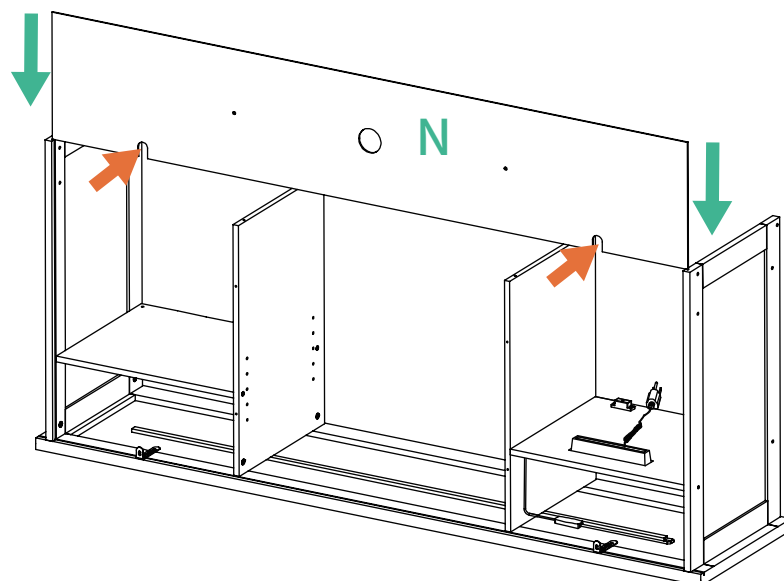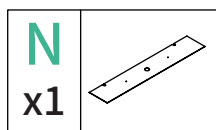

13

   Install Part P.

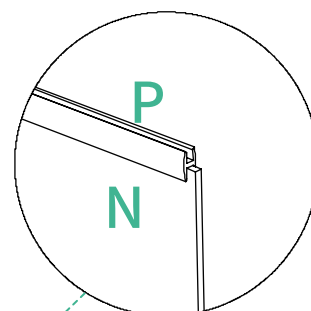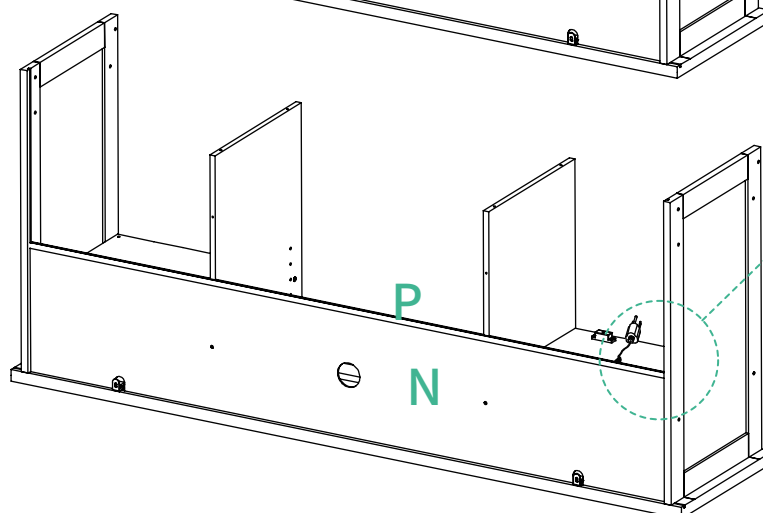
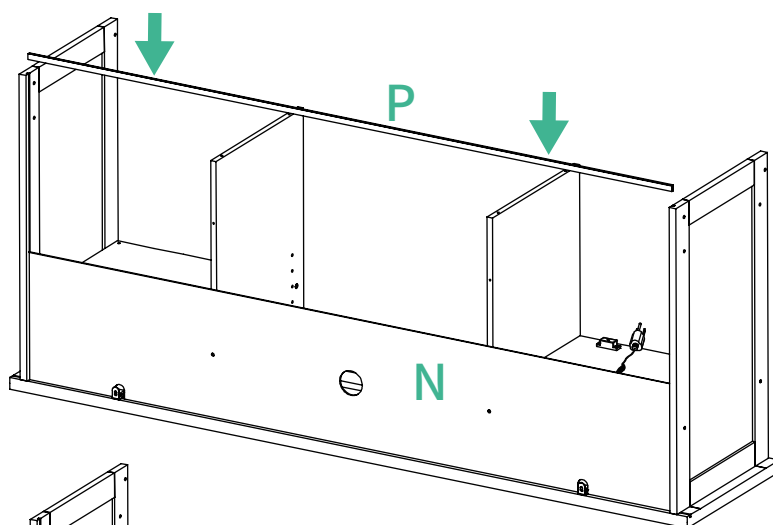


Assembly Instructions

14

Install Part O.

 

Note: Ensure Part N, P and O are firmly locked together.

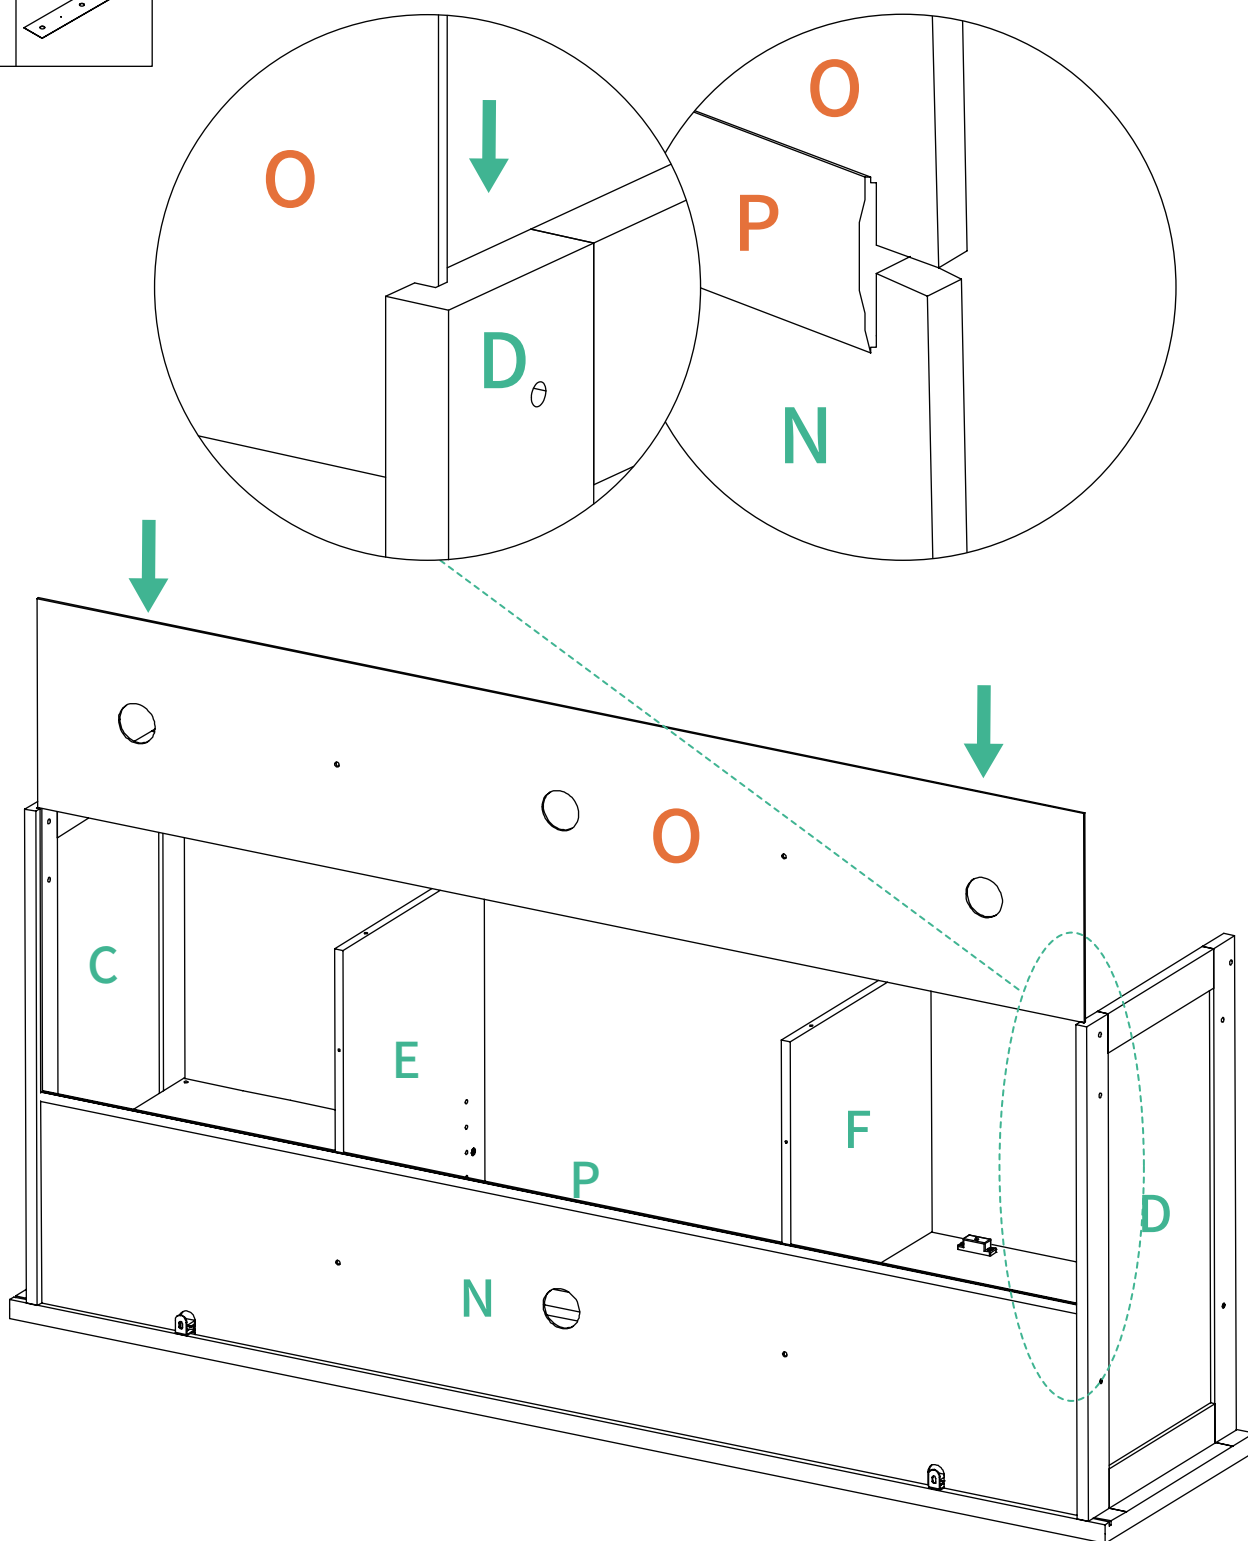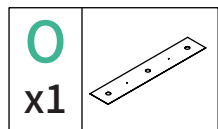

Assembly Instructions



15

  Connect Part B and Part J. Part J is installed on the side away from the grooved strip of Part B.

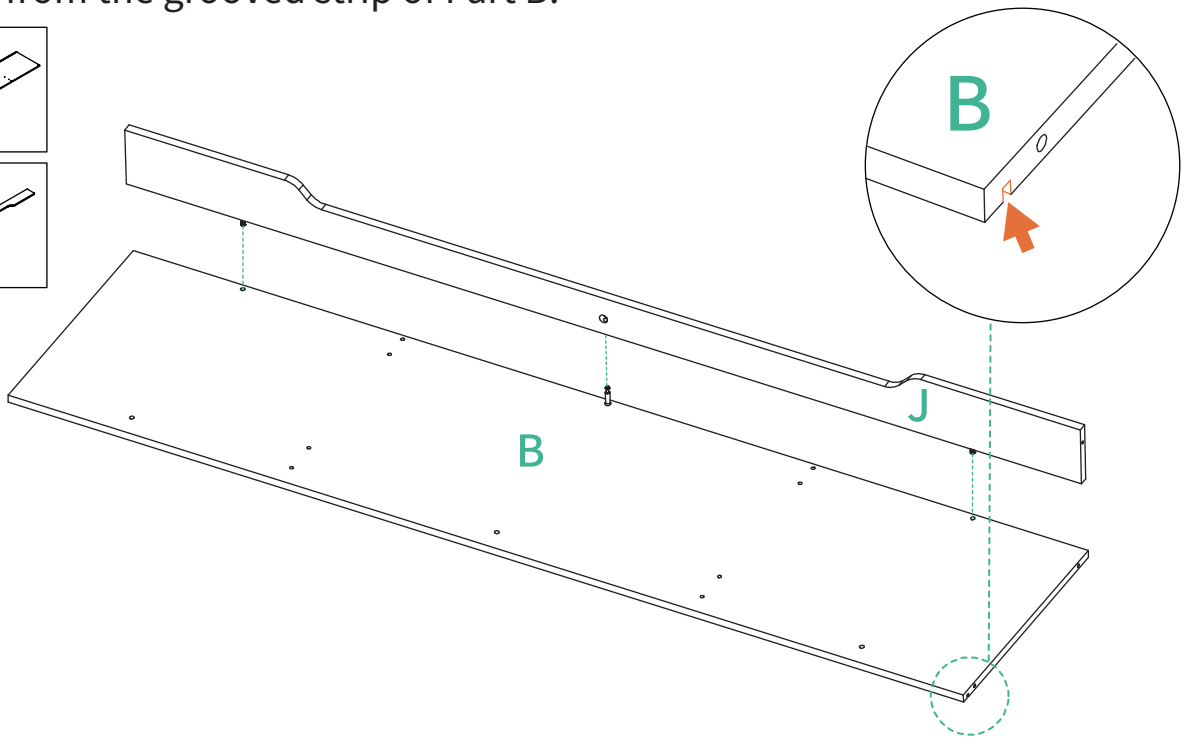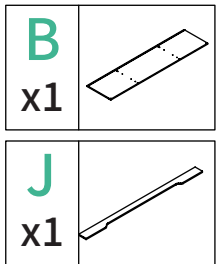

16

  
Install Screw ② onto Part J.

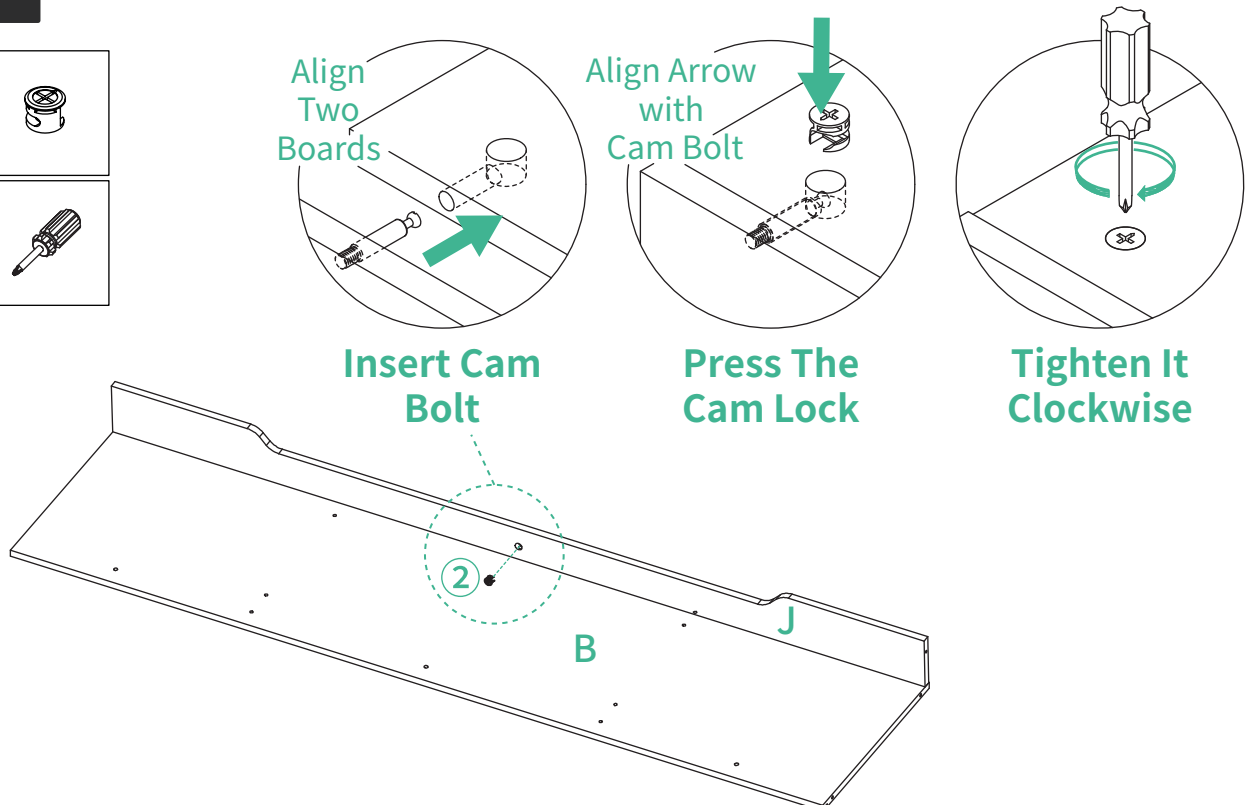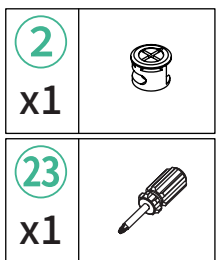


Assembly Instructions

17

 
Fix Part B and Part J together using Screw ④.
Connect Part B and Part K using Screw ④.

K x1	
④ x4	
18 x1	

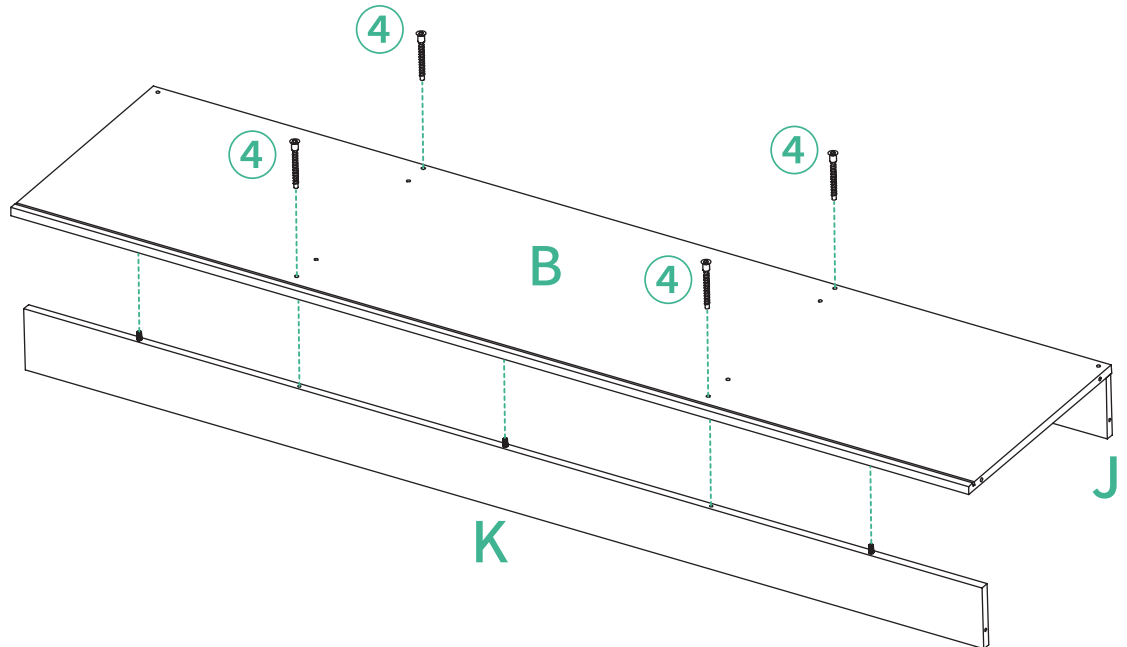 

18


 
Please note that the Part O should be installed in the card slot of the Part B.

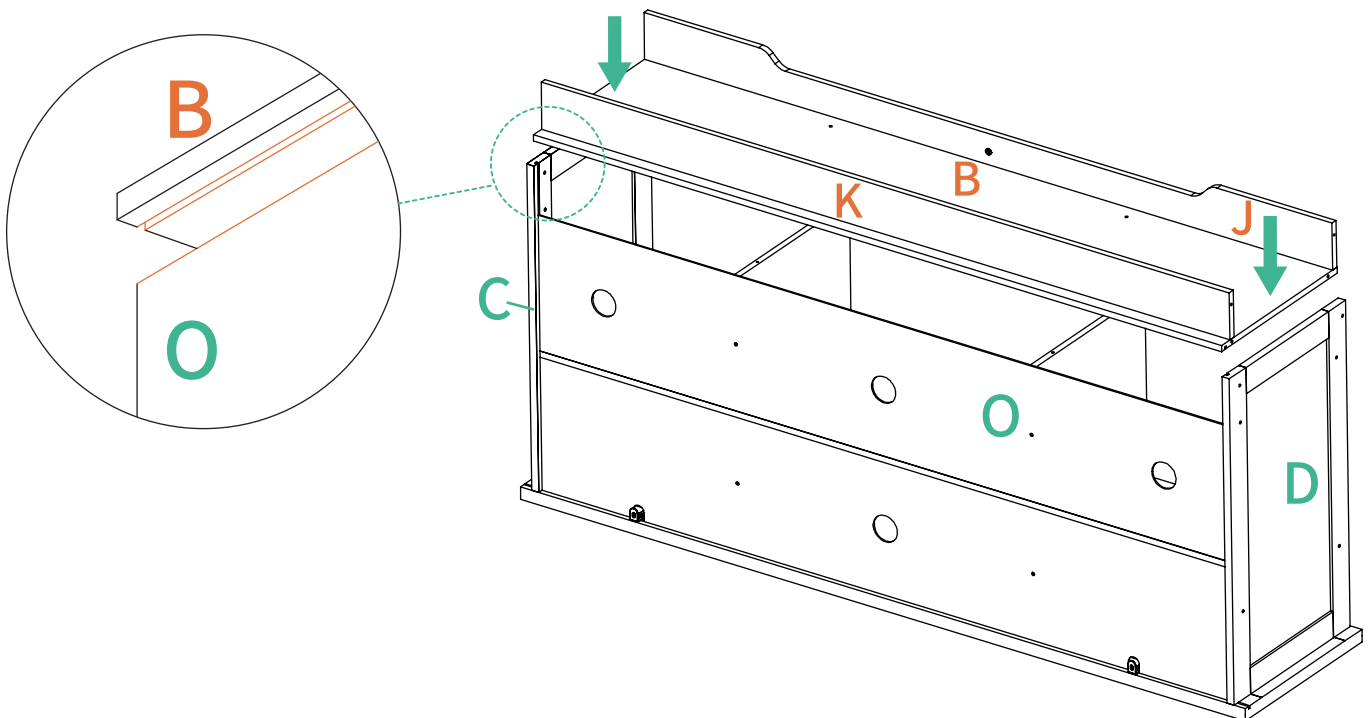

Assembly Instructions



19

  Fix the base to the main body using Screw ④, ensuring that the Part O snaps into the grooved strip of Part B.

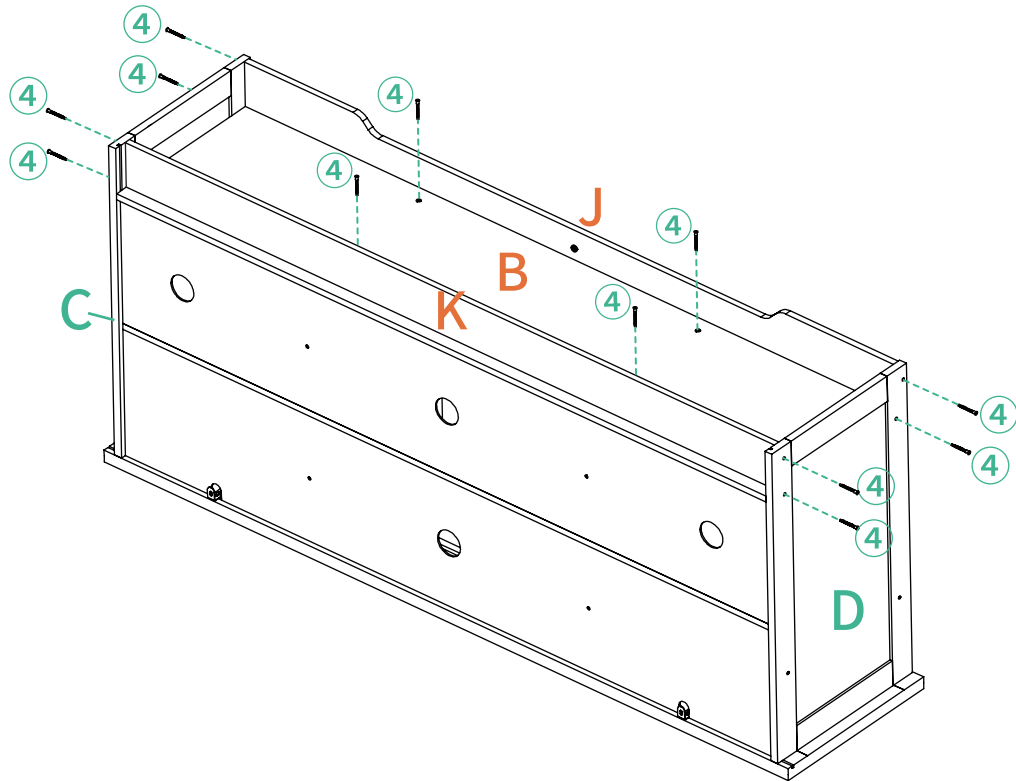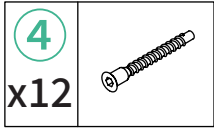

20



 
 
Apply Foot Pad ⑰ to the location as shown.

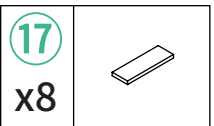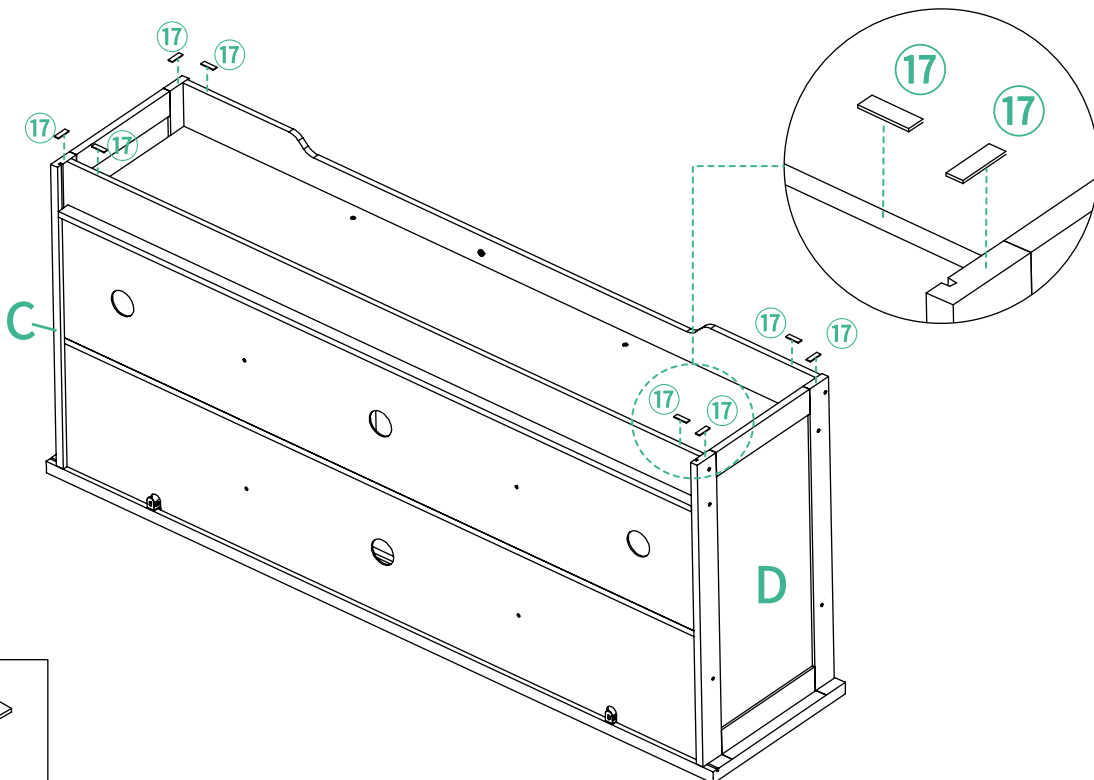

Assembly Instructions

21

    Install the back panel clips - Part ⑫ using Screw ⑬.
Then fasten the back plate in place with Screw ⑰.


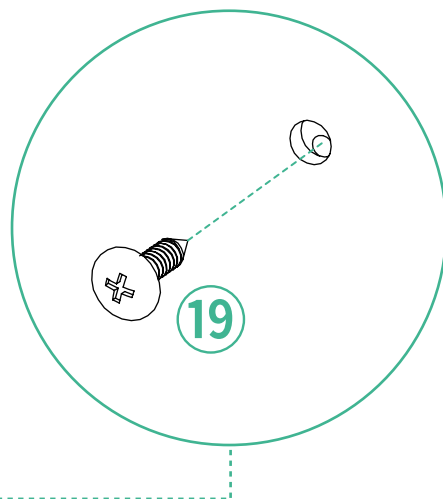
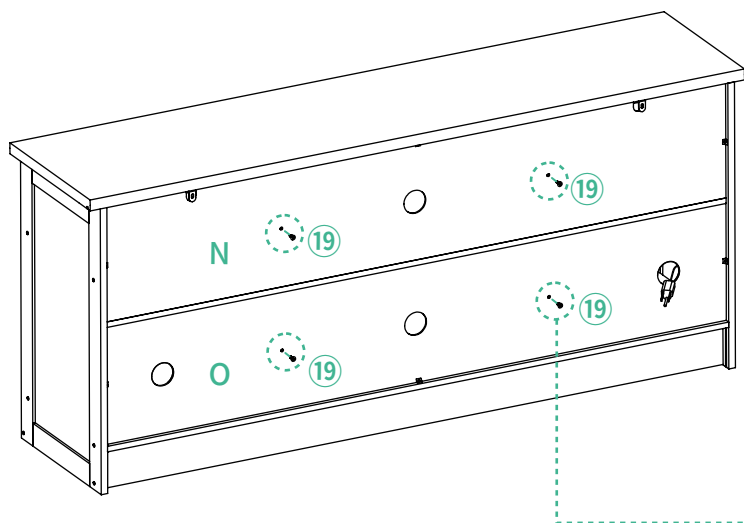
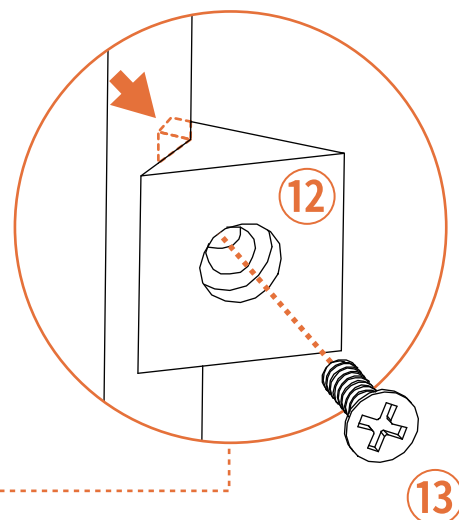
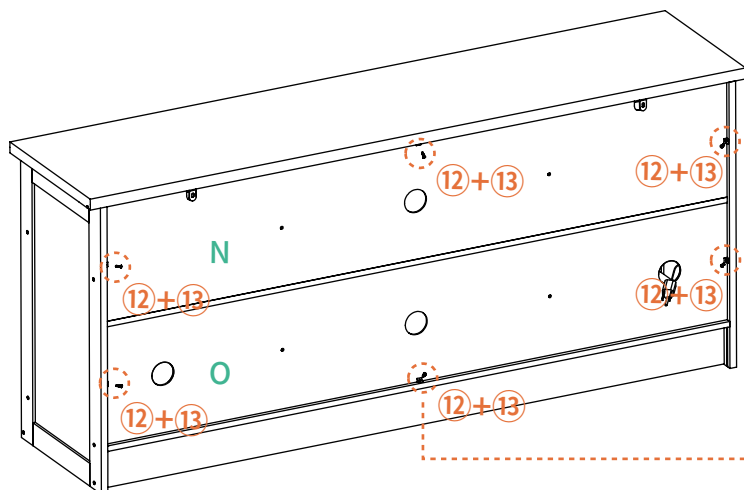


⑫		⑬		⑰		⑳	
x6		x6		x4		x1	

Assembly Instructions

22

    
 
Mount Doors L and M.

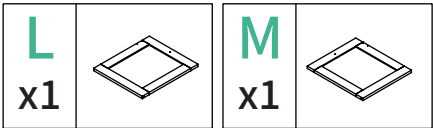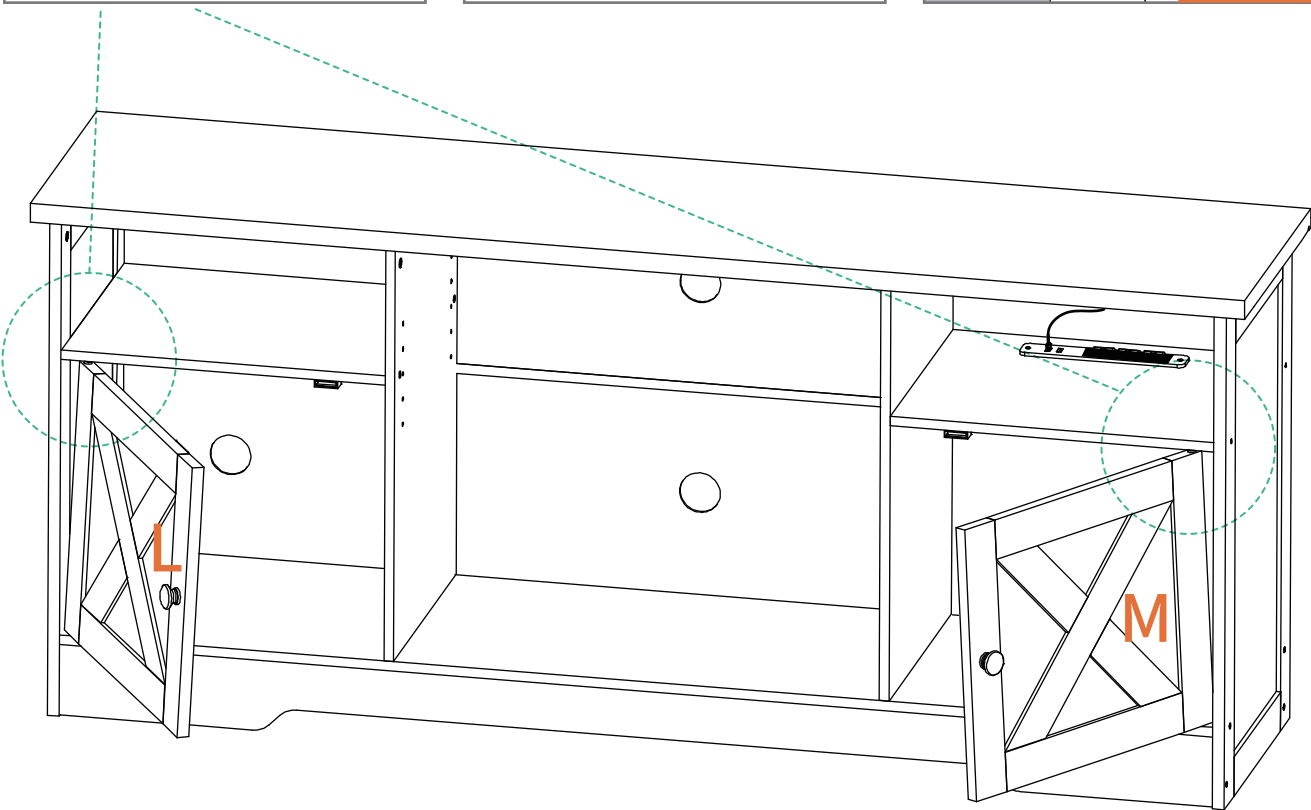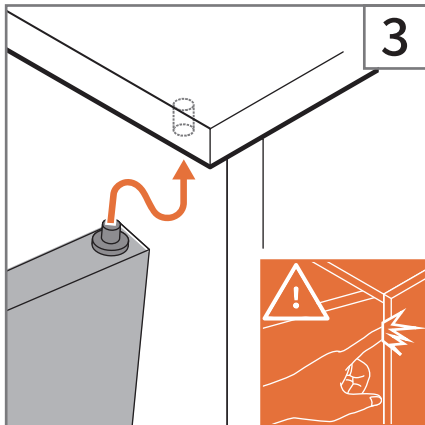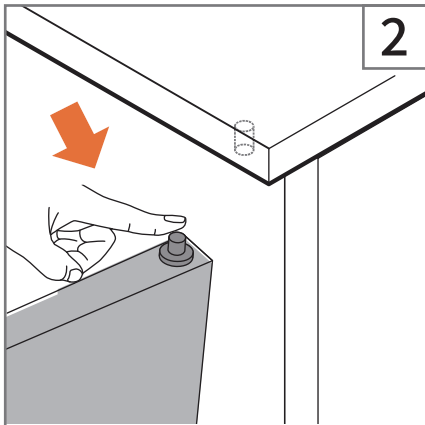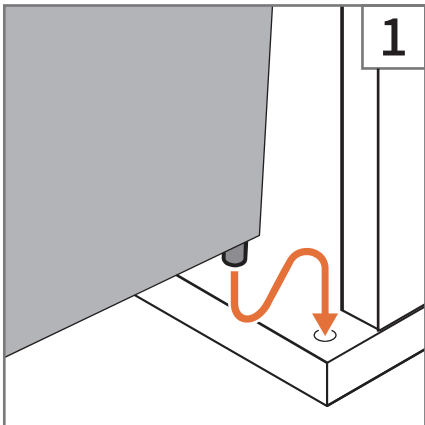

Assembly Instructions



23

  Install Part I using Part ⑥. Note that its installation height is adjustable; secure it at your desired height.

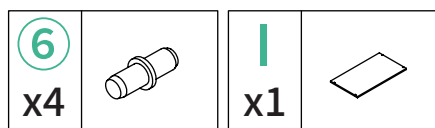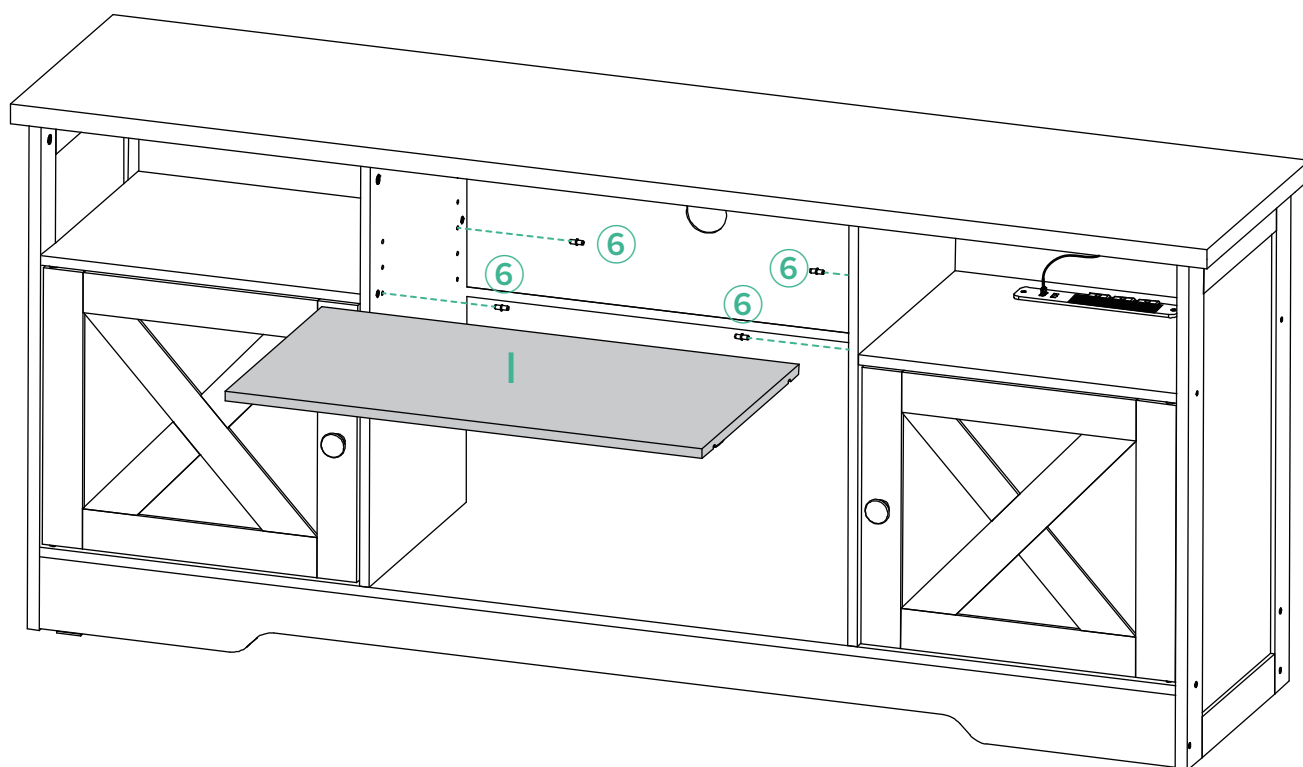

Assembly Instructions

  24 Install Part 16.

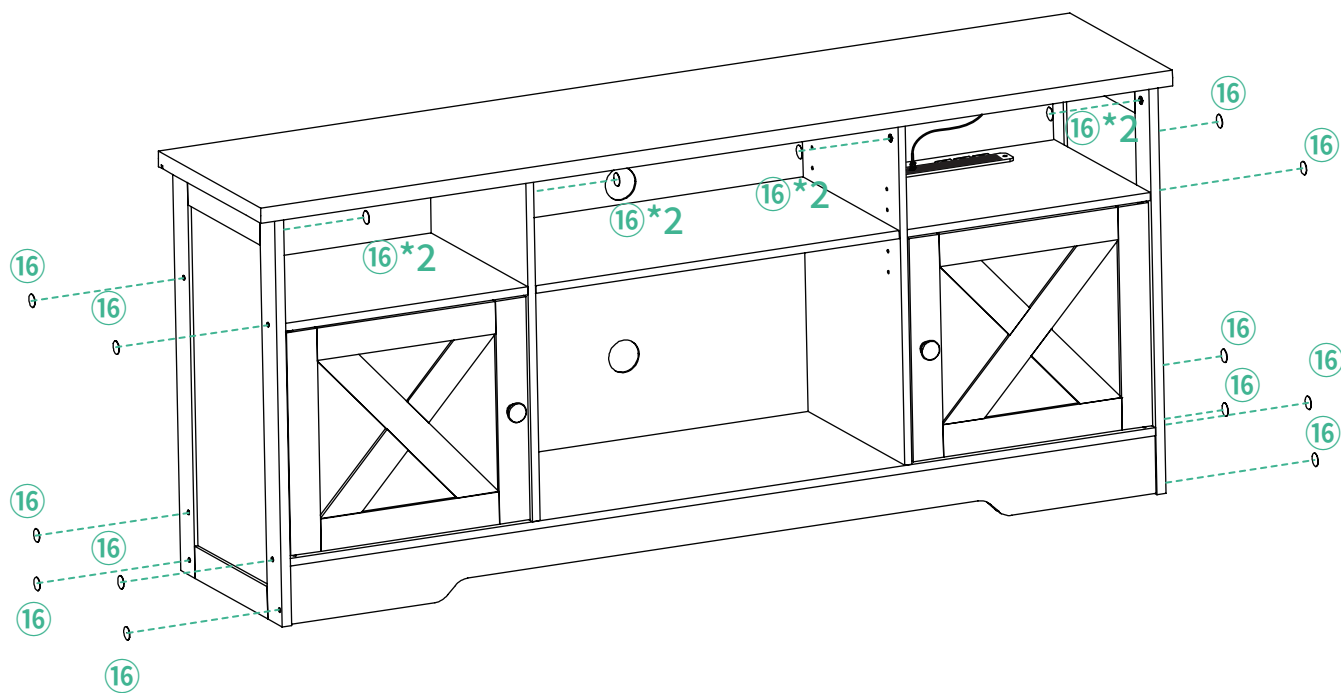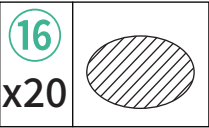


Assembly Instructions


25

Mark the wall with a pen through the hole in ⑭-a. Use a power drill to drill a hole 0.2-0.24 inches in diameter and 1.2-1.6 inches in depth at the marked location. Then, use a hammer to fully drive Part ⑭-c into the hole. Lastly, use a screwdriver to lock Screw ⑭-b through Part ⑭-a into Part ⑭-c.

 
Note: Please be cautious not to over-tighten Part ⑭-b.

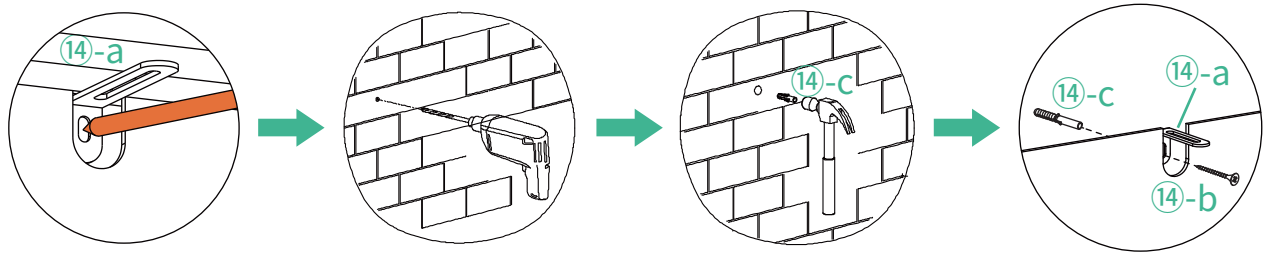

WALL

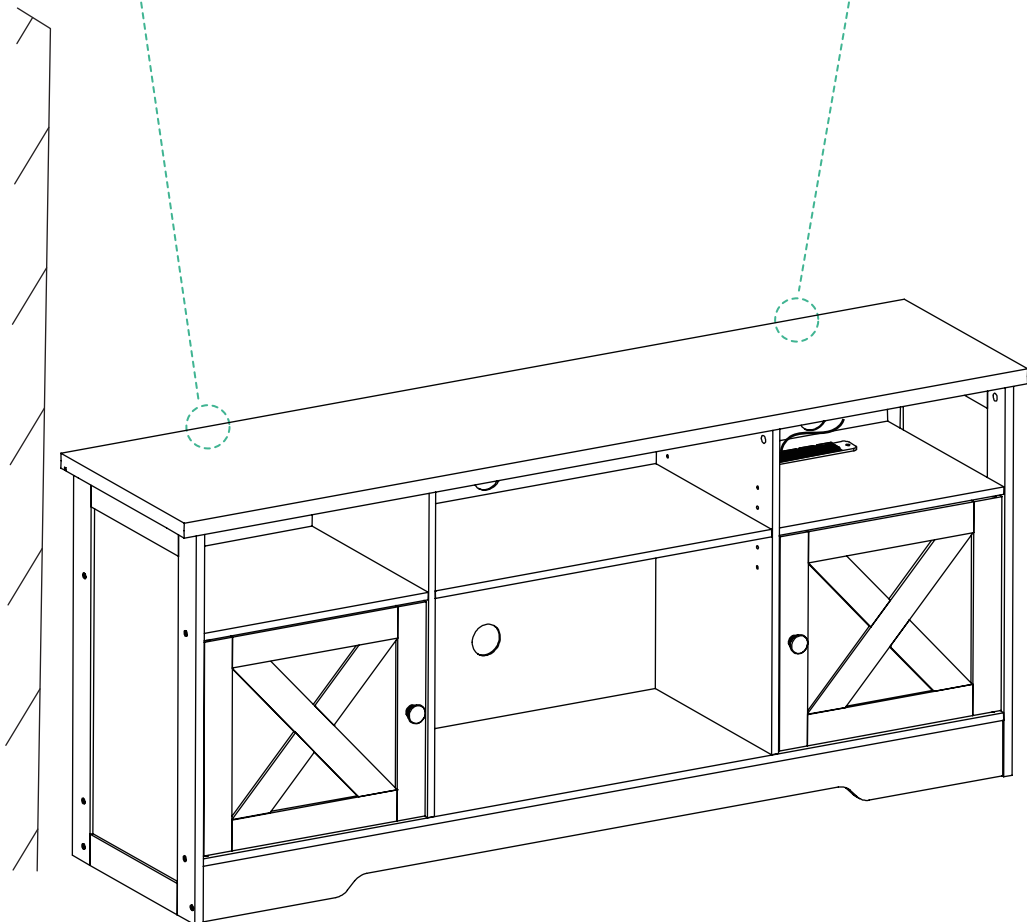

⑭-b
x2

 

⑭-c
x2



Assembly Instructions



Static Color Button

 


Dynamic Mode Button



S / B

Speed & Brightness
and Power Button

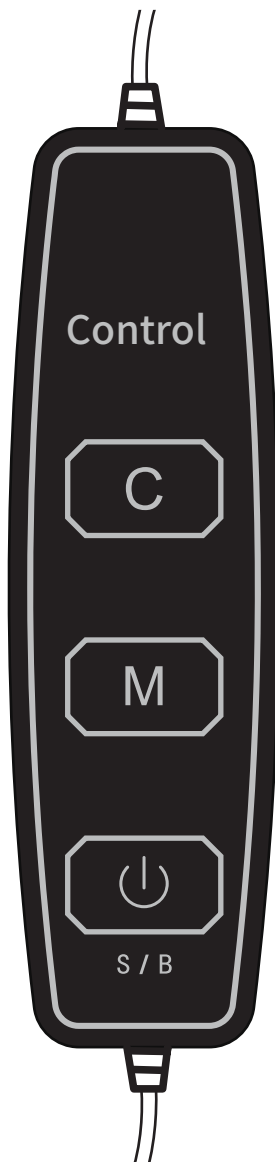

STATIC COLOR BUTTON

Press this button once to switch to the static color mode, and then each pressing can change the color.

DYNAMIC MODE BUTTON

Press this button once to switch to the dynamic mode effect, and then each pressing can change the dynamic mode.

Press this button for more than 3s to switch to the demo mode; In the demo mode, the strip will automatically cycle through various dynamic modes.

SPEED & BRIGHTNESS AND POWER BUTTON

A. In the static mode, press this button to adjust the brightness of the light bar; each press can switch to a brightness level.

B. In the dynamic mode, press this button to adjust the dynamic mode speed; each press can switch to a speed level.

C. Press and hold this button to shut it down when the strip is on. Press this button to turn it on when the strip is off.

The product has a power-off memory function; the strip can restore the color, brightness, and mode in the next power-on.



30 DAY Return Policy

If you're not completely satisfied with your purchase, please return the merchandise via our Official Customer Support. Unused merchandise can be refunded or exchanged within 30 days of purchase.



1-Year Warranty

We guarantee your product is free from defects in product material and workmanship for one (1) year starting from the date of purchase during normal use of household conditions. If your appliance fails to operate properly within our warranty period, we will arrange a new one. Replacement is free and all shipping costs are covered.



Quick Response within 24 Hours

If you are still unable to resolve the issue you are experiencing, please contact us immediately via our support email. It doesn't matter if the product has been installed or not, our customer support team will respond within 24 hours and assist you quickly and efficiently. The most efficient way to confirm your problem to us is to attach a video, which illustrates your product issues.

Problems You May Encounter

PART	PROBLEM	SOLUTION
Whole Product	Parts are missing, defective or having wrong parts in package.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	Having issue(s) while reading the instruction or completing the assembly.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	Encountering non - human caused damage during use.	If the product is damaged due to non - human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Furniture Surface	Surface is broken, scratched or lack of some screw holes.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	The screw holes that on the board and the frame don't line up.	1. Tighten the screws only 70% of the way. Do not fully tighten the screws until all parts are aligned. 2. Adjust the board and frame until the holes align, then fully tighten all screws.
	Surface is uneven or not tight that has gaps after being assembled.	1. Loosen the screws in the uneven or gap positions; adjust until the surface is flat and tight, and then tighten the screws. 2. If your problem still can't be solved, please feel free to contact us.
Structure Frame	Components are bent, broken, chipped, rusted, or damaged.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	The furniture is unstable after being assembled.	1. Check if all screws are fully tightened. 2. Read through the manual and check if any parts are installed incorrectly or missing. 3. If the problem persists, please contact us.
	Encountering non - human caused damage during use.	If the product is damaged due to non - human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.

We are committed to providing our customers with premium
quality products and convenient customer service.

MADE IN CHINA