

ASSEMBLY INSTRUCTION

DESCRIPTION: GAME TABLE (MOUNTAIN LODGE)


DIMENSION: 30" X 30" X 30" H

| PARTNAME | | QTY. |
|-------------------|--------------|--------------------|
| A | TOP | 1 PC. |
| B | LEGS | 4 PCS. |
| HARDWARES: | | |
| QTY.: | DESCRIPTION: | DIMENSION: |
| 8 PCS. | ALLEN BOLT | 5/16" D x 1 1/2" L |
| 8 PCS. | PLAIN WASHER | 5/16" D |
| 1 PC. | ALLEN WRENCH | 5/16" |
| | | |
| | | |




STEP # 1

- a.) Lay the top invertedly in a flat surface.
b.) Place the first leg into the inverted top and insert 2 pcs. of allen bolt with plain washer and fit in the insert nut embedded on the leg, tighten using allen wrench.

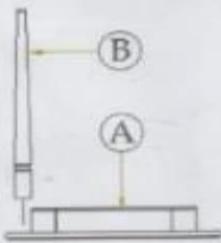


STEP # 2

- Place the 2nd leg and do the same procedure as step # 1.

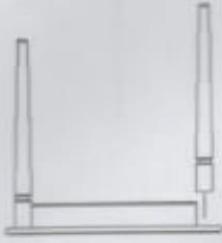


STEP # 3

- Place the 3rd leg and do the same procedure as step # 1 & 2.

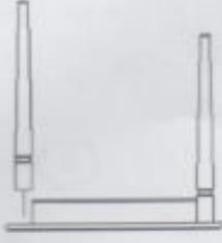

STEP # 4

- Place the 4th leg and do the same procedure above.

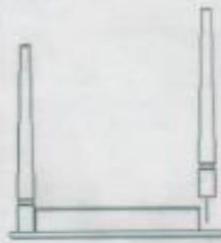

STEP # 5

- Finally tighten all bolts after alignment of all legs. Do not over tight.



STEP # 6

- Turn the item in an upright position after assembly.

