 


ZFK029

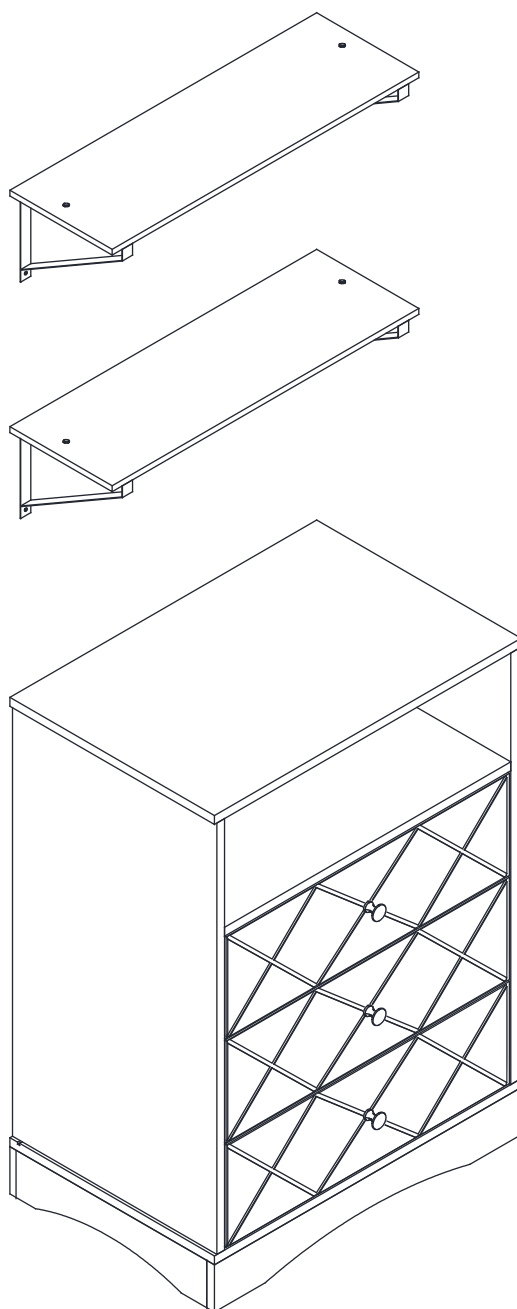

INSTRUCTION MANUAL

ASSEMBLY INSTRUCTIONS

Carefully unpack all the components and verify that all the necessary parts are included as listed in the packaging.

Identify each component and refer to the provided assembly diagram or step-by-step instructions.

Assemble the furniture in the order specified to ensure proper alignment and fit.

Use the provided tools or recommended tools for assembly. Do not use excessive force when tightening screws or bolts.

IF ANY DIFFICULTIES ARISE DURING ASSEMBLY, CONSULT THE TROUBLESHOOTING SECTION OR CONTACT OUR CUSTOMER SUPPORT.

Tools Required

 
 
 
 


Wrench tool







Wrench tool

Board Parts List

NO.	PICTURE	QTY	NO.	PICTURE	QTY	NO.	PICTURE	QTY
1		1	7		2	13		3
2		1	8		2	14		3
3		1	9		2	15		3
4		1	10		2	16		4
5		1	11		3	17		2
6		1	12		3			

   Hardware parts List

NO.	PICTURE	QTY	NO.	PICTURE	QTY	NO.	PICTURE	QTY
A		46+2	G		8+1	M		1
B		46+2	H		8+1	N		6+1
C		24+2	I		9+1	O		1
D		25+2	J		4+1	P		20+2
E		12+1	K		3	Q		4+1
F		6	L		1+1			
	Cam Bolt $\phi 6 \times 35$			Plastic Corner Support				
	Cam Lock $\phi 15 \times 9.5$			Screw $\phi 3 \times 14$				
	Wooden Dowel $\phi 8 \times 30$			Plastic Expansion Bolt				
	Screw $\phi 4 \times 30$			Screw $\phi 6 \times 10$				
	Screw $\phi 3.5 \times 12$			Screw $\phi 4 \times 18$ Handle				
	Slide Sets			Screw $\phi 4 \times 14$				

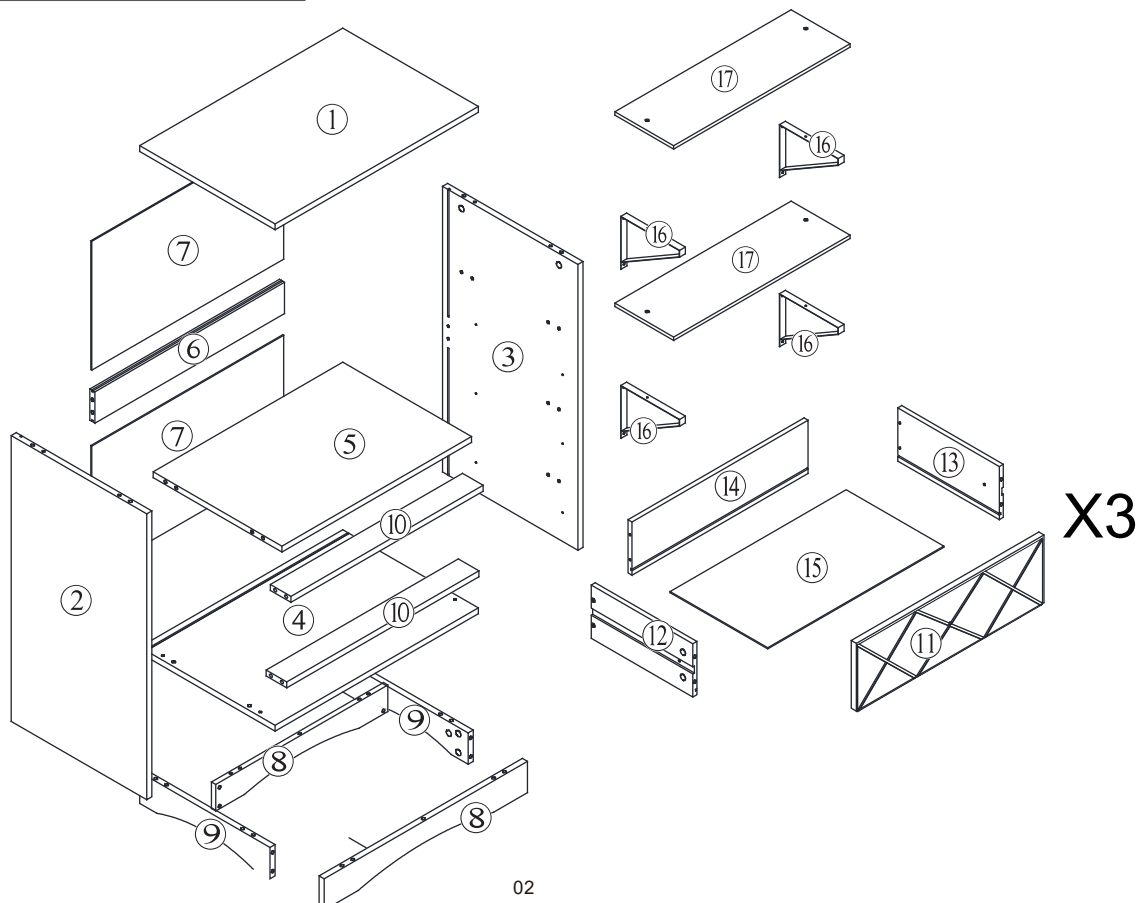 


ASSEMBLY INSTRUCTIONS

STEP 1

	
Cam Bolt	
A	X6

	
Screw	
E	X6

	
Slide Sets	
F	X3

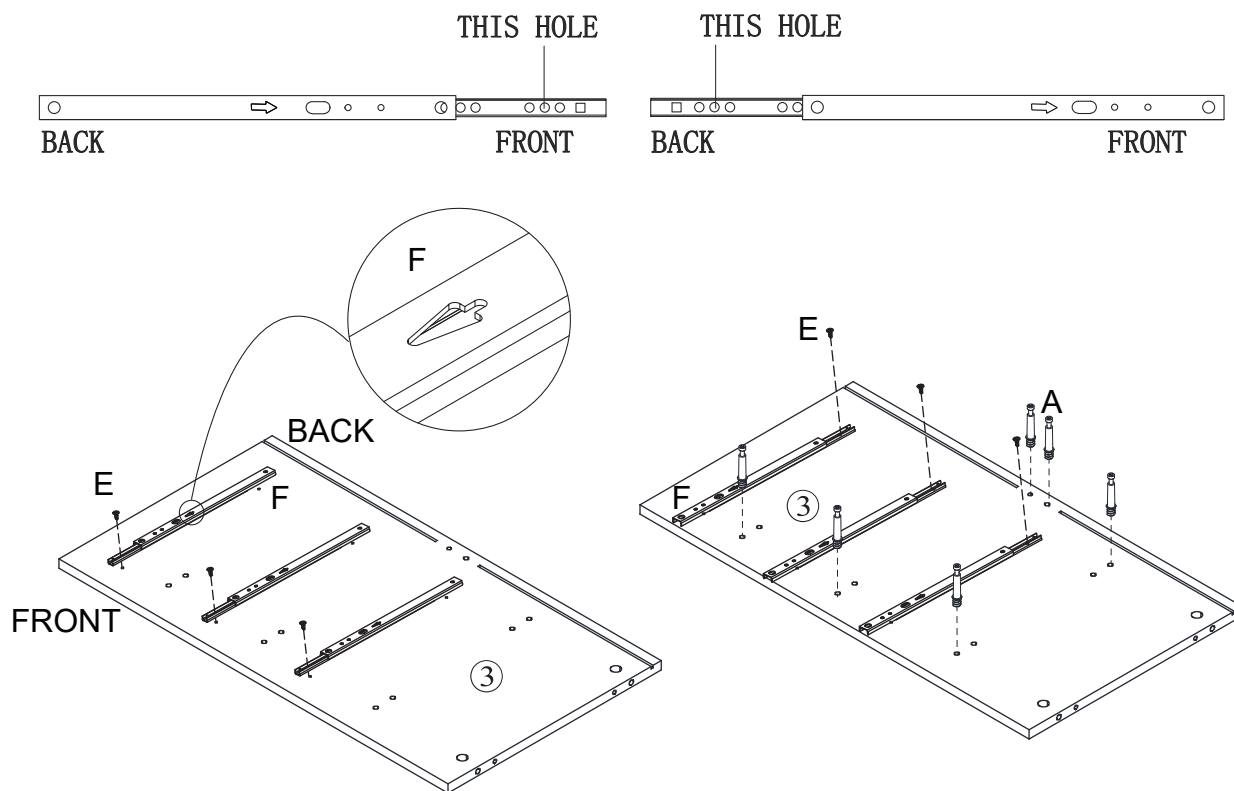 


STEP 2

	
Cam Bolt	
A	X6

	
Screw	
E	X6


	
Slide Sets	
F	X3

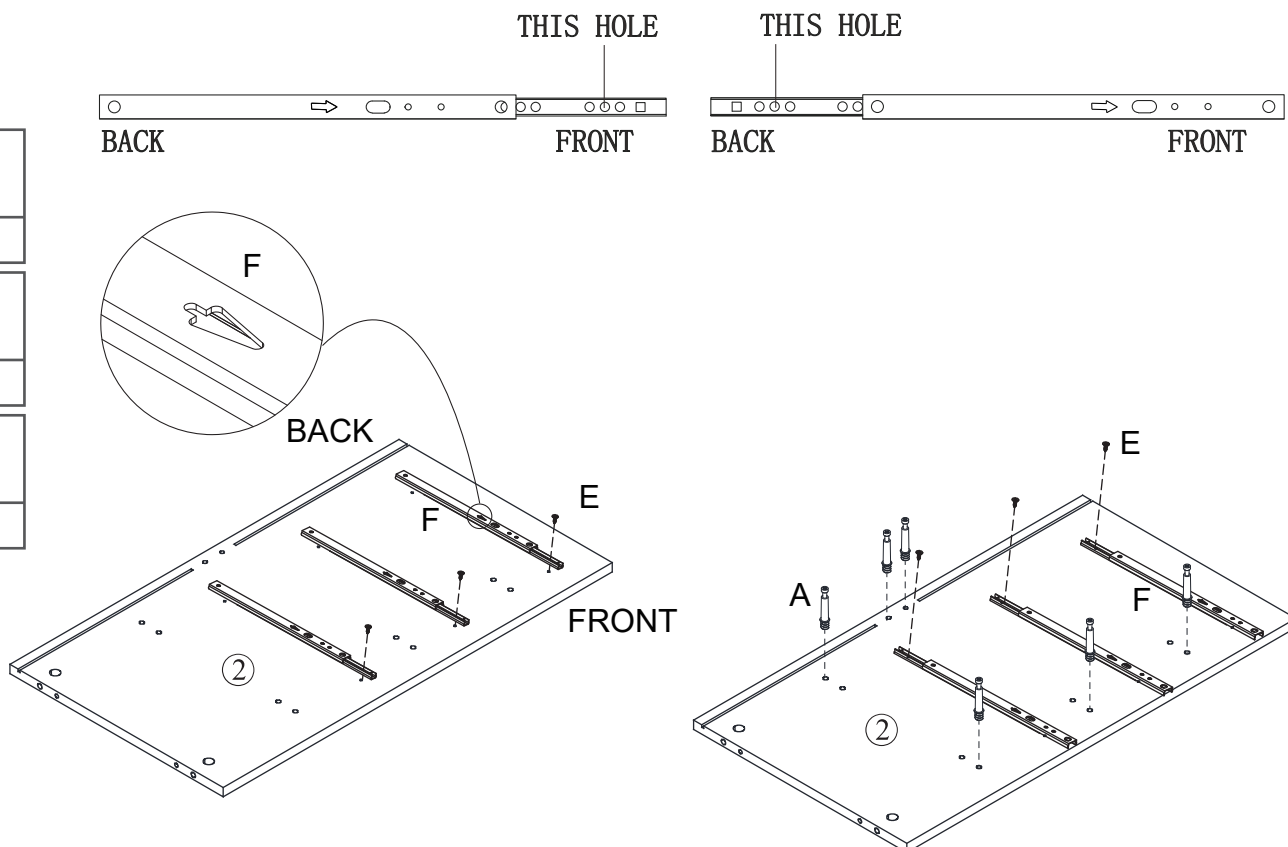 

STEP 3

	
Cam Lock	
B	X6


	
Wooden Dowel	
C	X4

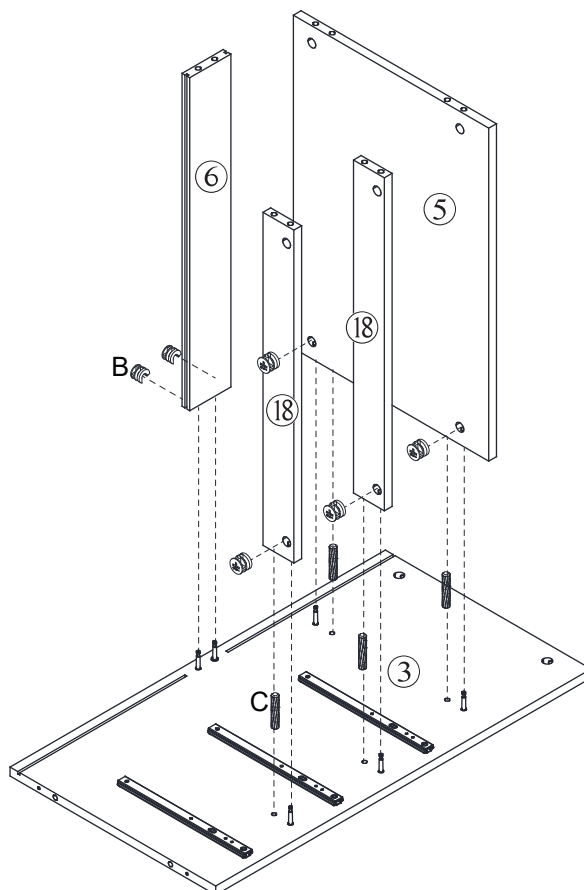 


STEP 4

	
Cam Lock	
B	X6

	
Wooden Dowel	
C	X4


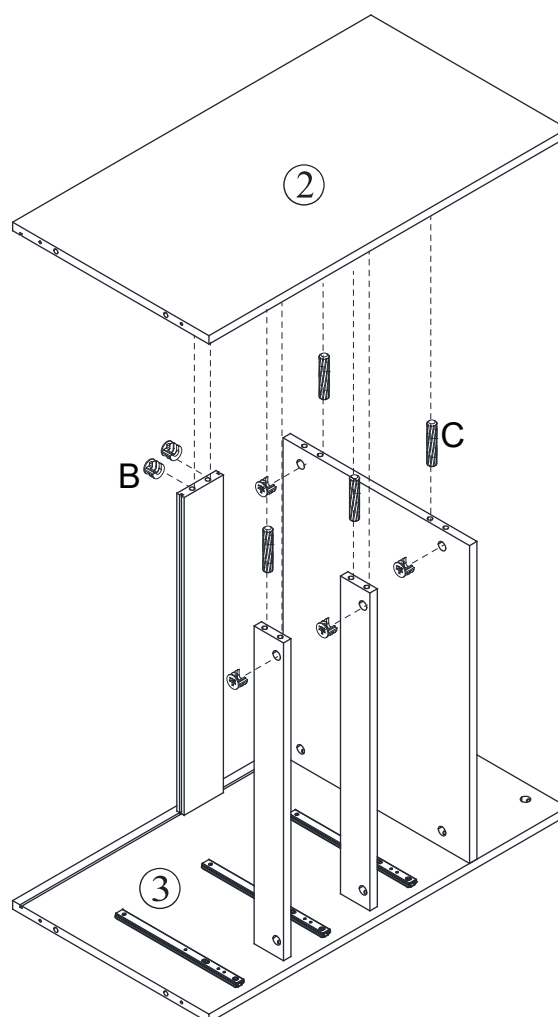 


 STEP 5

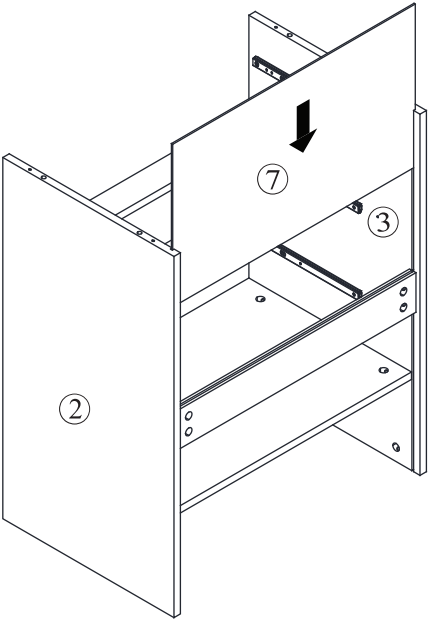




STEP 6

	
Cam Bolt	
A	X10
	
Wooden Dowel	
C	X4
	
Screw	
D	X4
	
Screw Hole Sticker	
P	X4




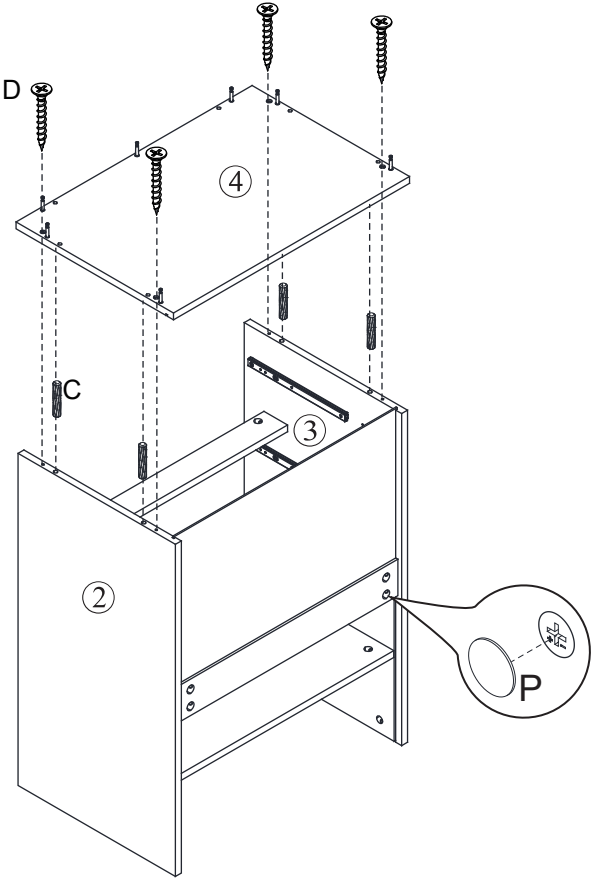 
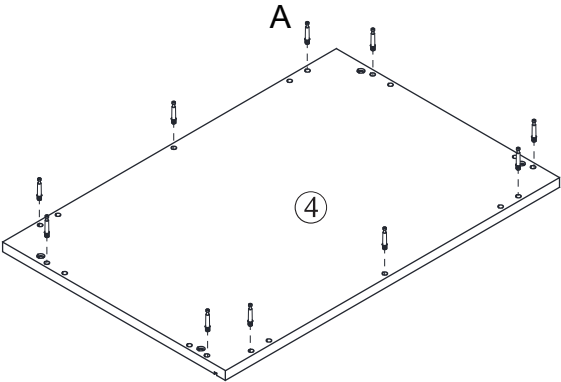 


≡ ASSEMBLY INSTRUCTIONS

   
STEP 7

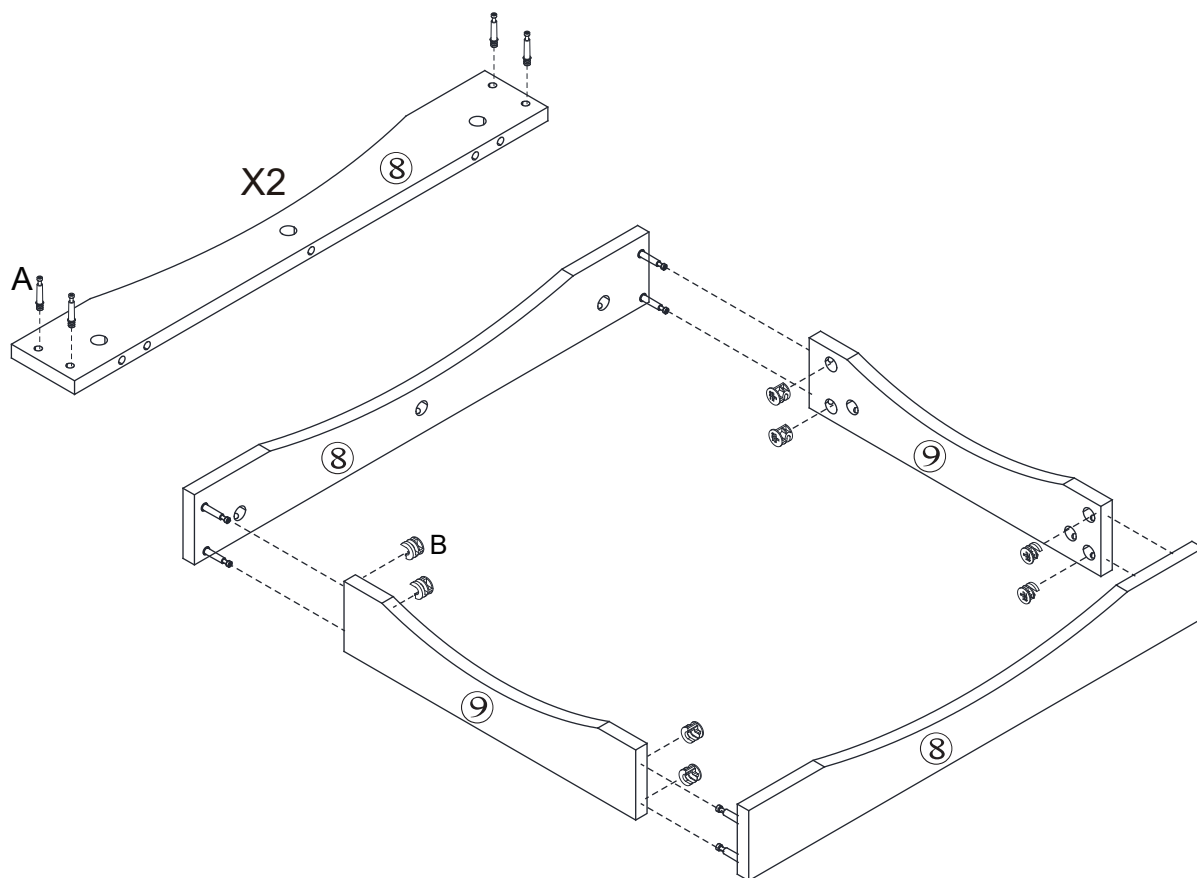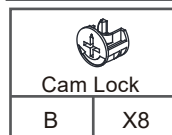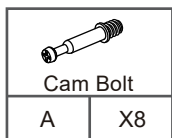

    
 
STEP 8

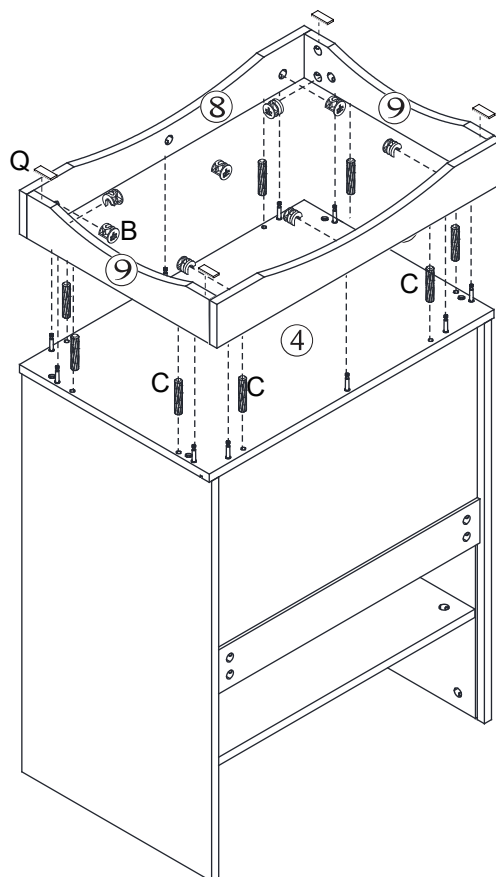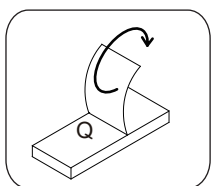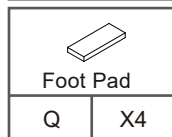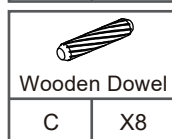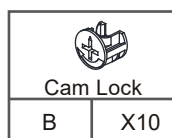

 STEP 9

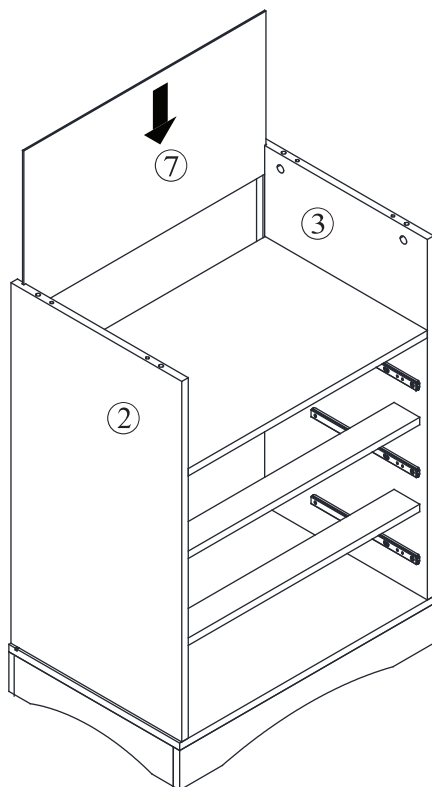

  STEP 10

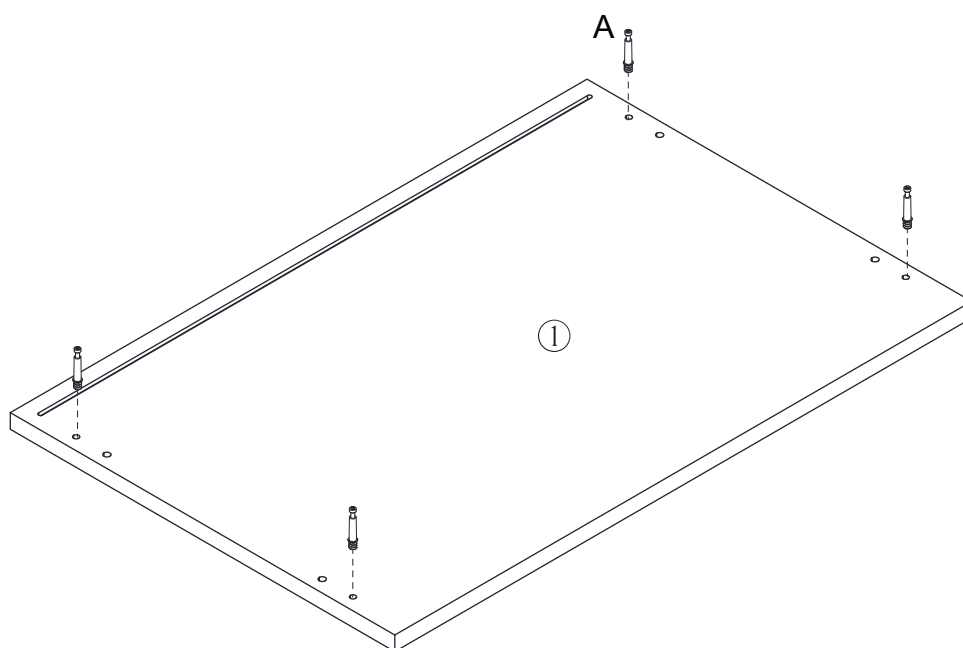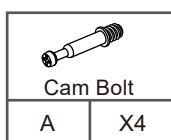


ASSEMBLY INSTRUCTIONS

STEP 11

		
Cam Lock		
B	X4	

		
Wooden Dowel		
C	X4	



		
Screw Hole Sticker		
P	X4	

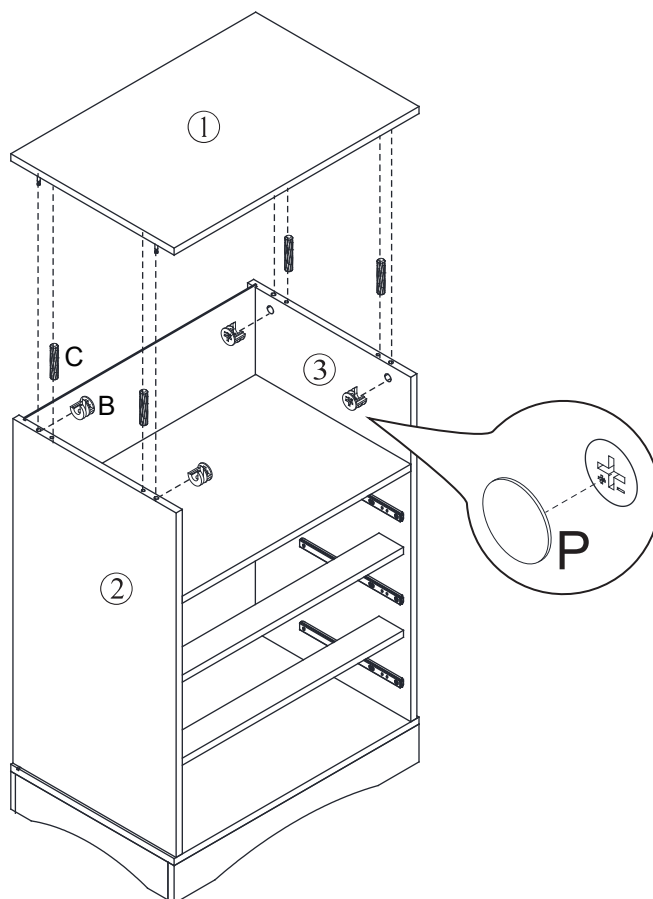 

STEP 12




		
Plastic Corner Support		
G	X8	

		
Screw		
H	X8	

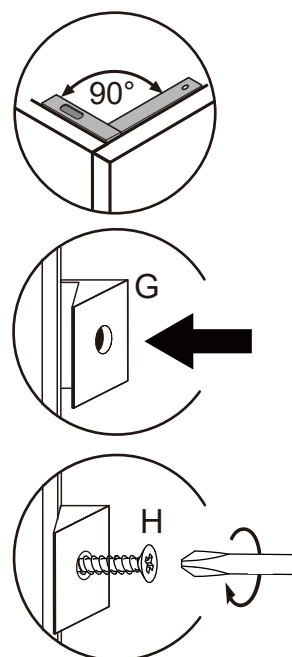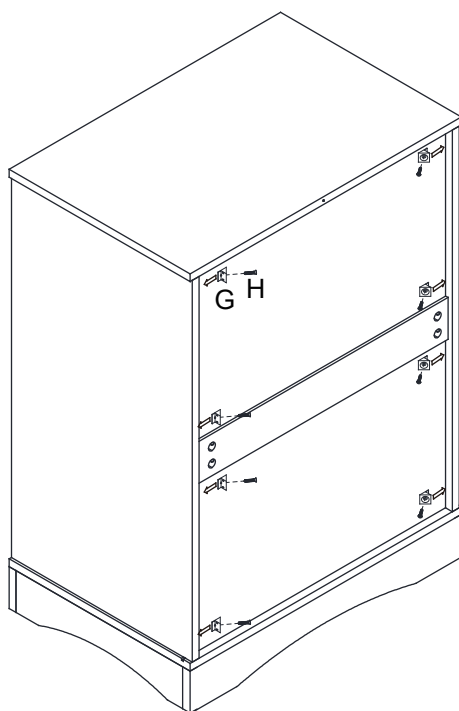  

STEP 13



		
Cam Bolt		
A		X12
		
Cam Lock		
B		X12
		
Screw		
D		X12
		
Handle		
K		X3

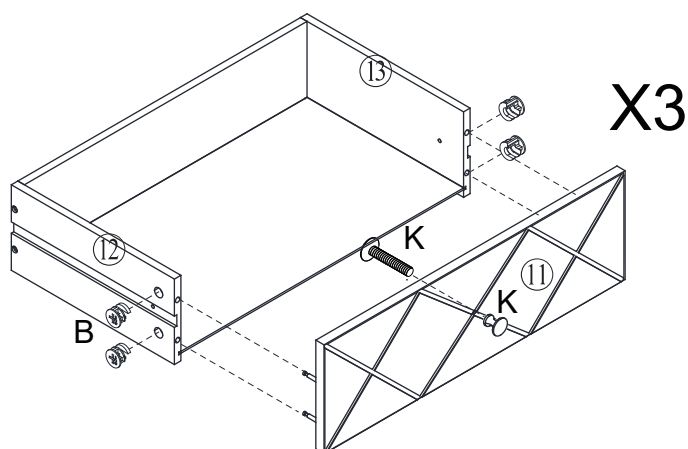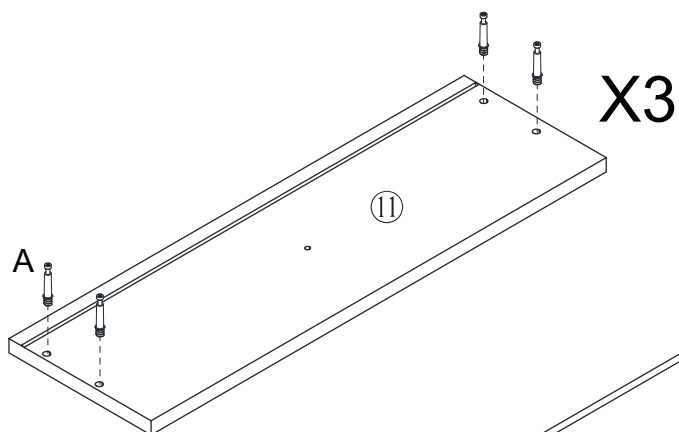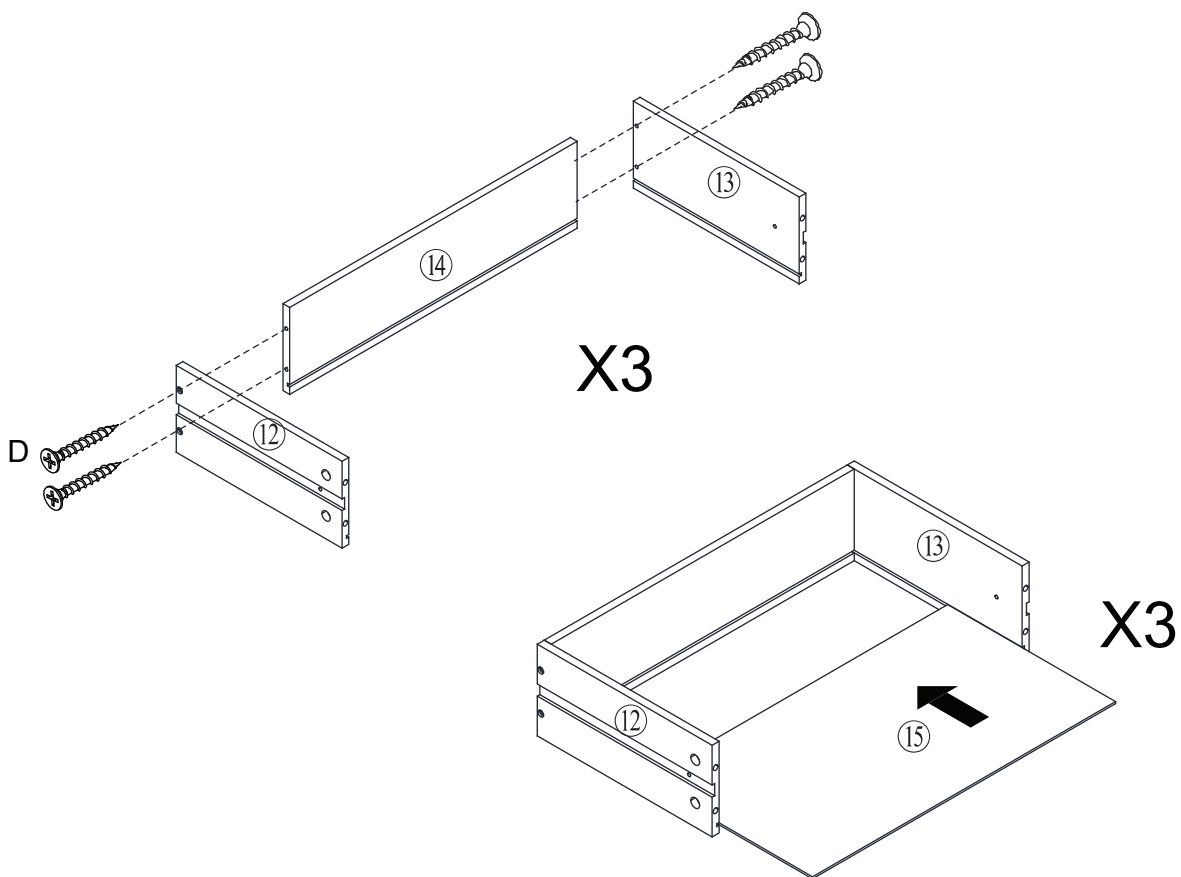   

ASSEMBLY INSTRUCTIONS



STEP 14

	
Screw	
N	X6
	
Screw Hole Sticker	
P	X12

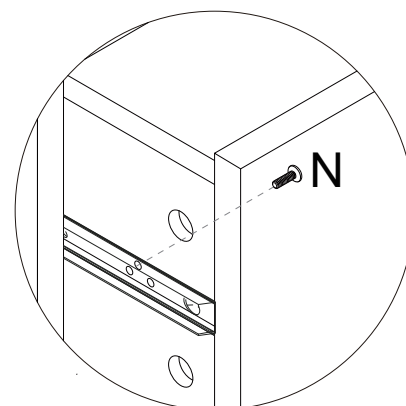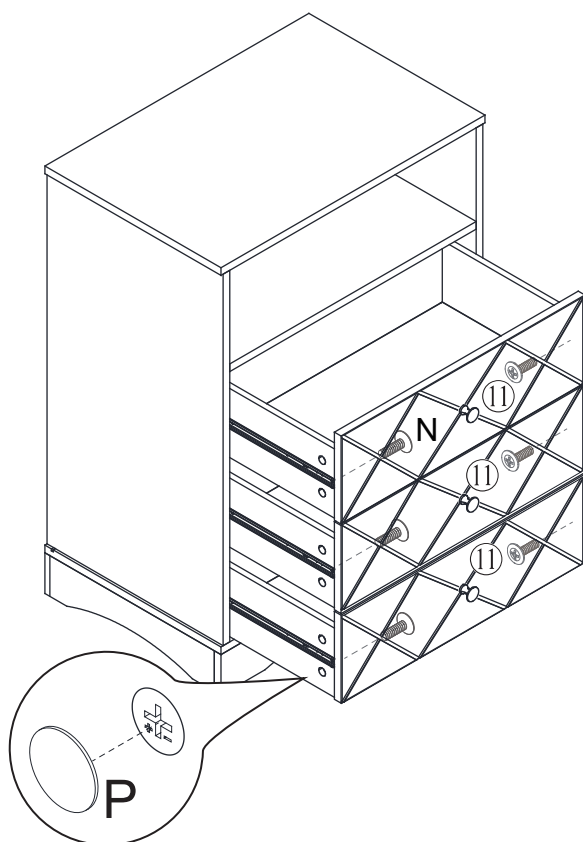  

STEP 15


	
Screw	
D	X1
	
Plastic Expansion Bolt	
I	X1
	
Screw	
L	X1
	
Anti-Tip Strap	
M	X1

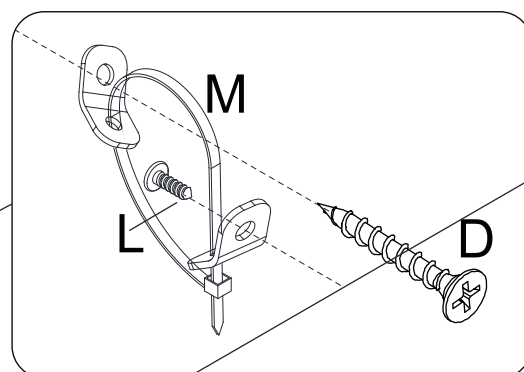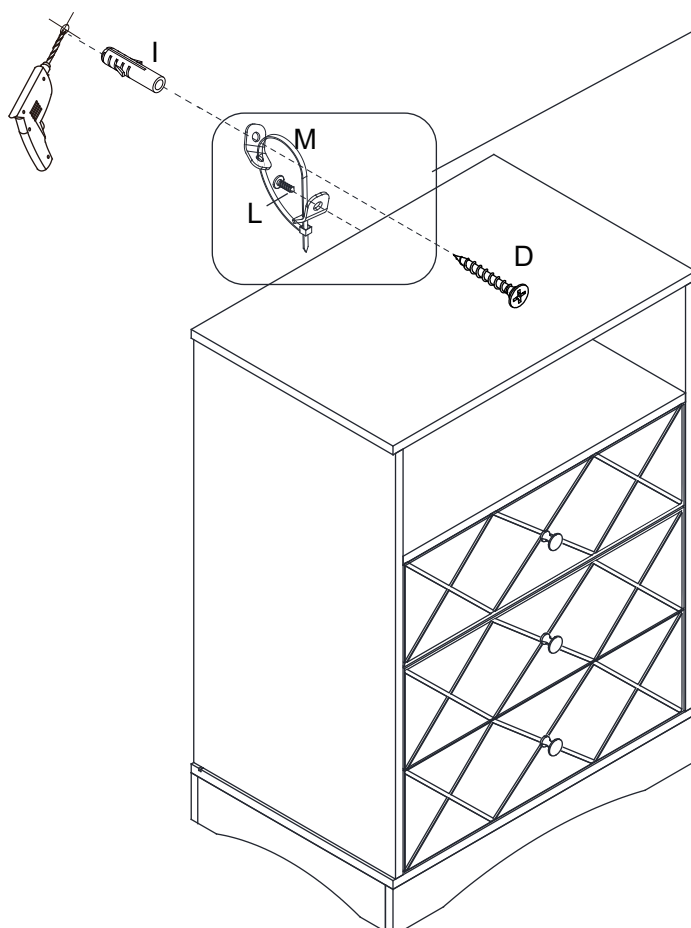  

ASSEMBLY INSTRUCTIONS


STEP 16

 Screw	
J	X4
 Allen Key	
O	X1


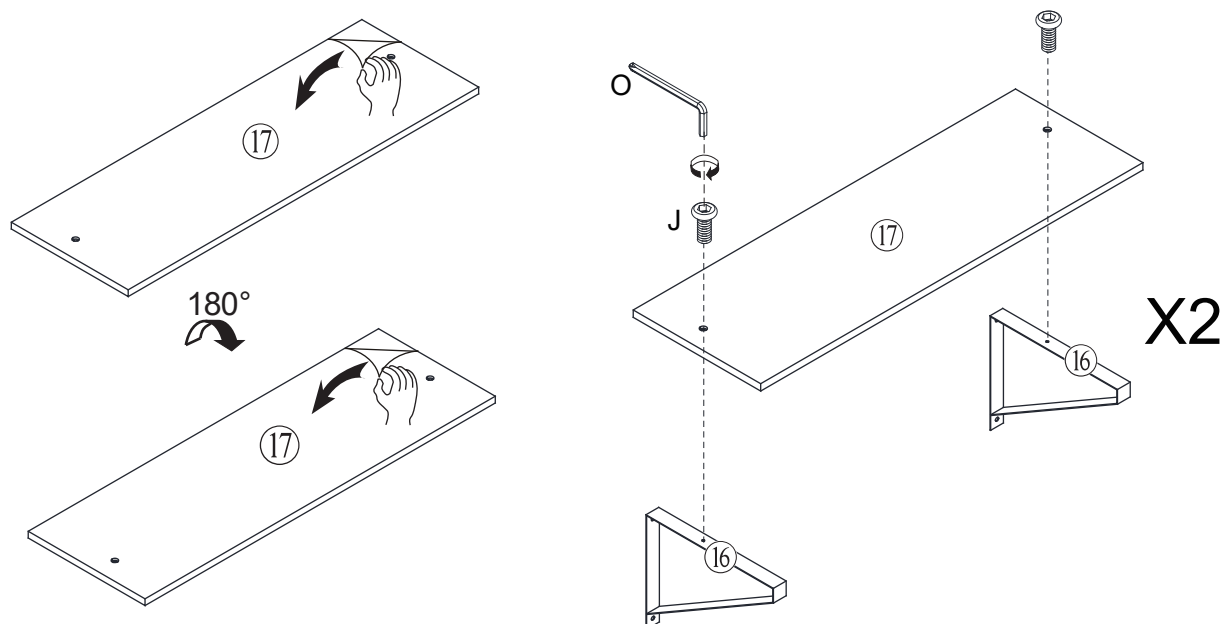 


STEP 17

 Screw	
D	X8
 Plastic Expansion Bolt	
I	X8

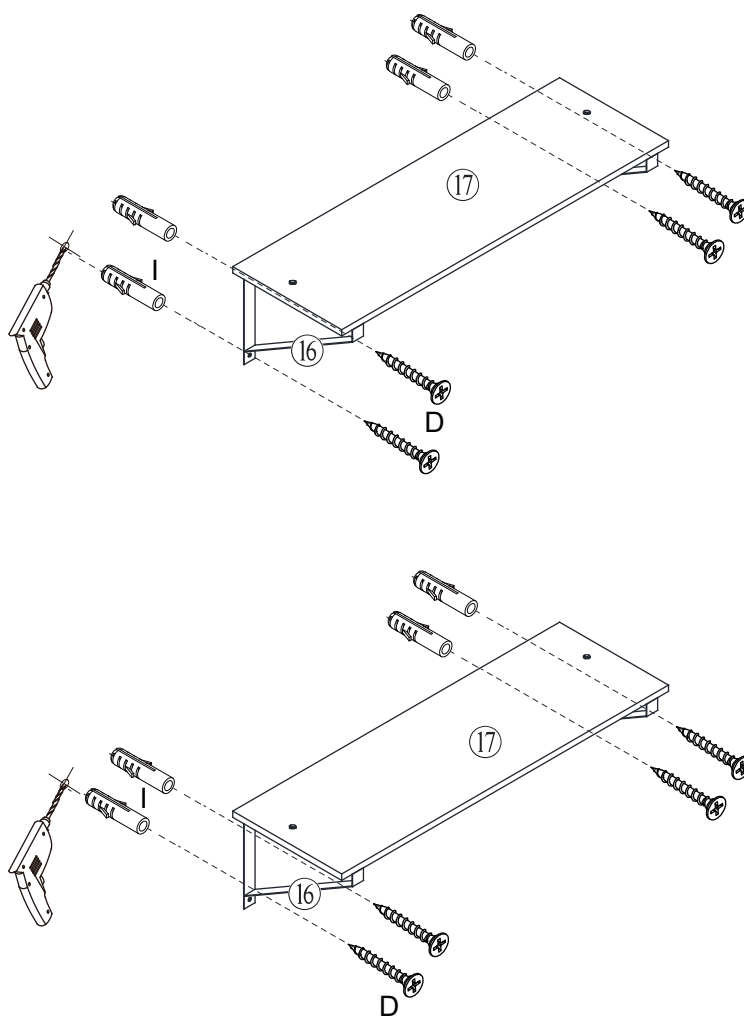 

  STEP 18

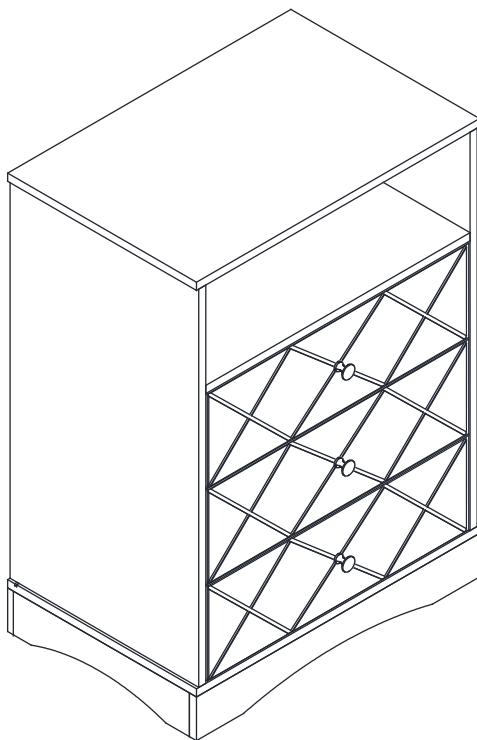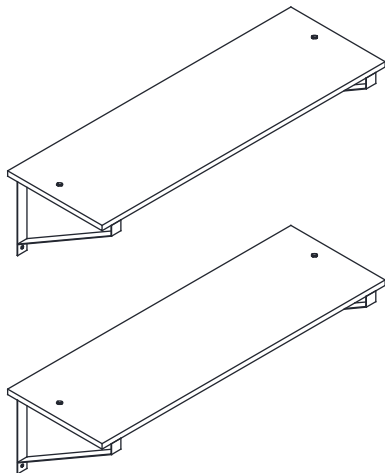



MAINTENANCE AND CARE

Clean regularly using a soft brush or vacuum with a brush attachment. Avoid harsh chemicals or abrasive cleaners.

Wash with a hose or pressure washer on a low-pressure setting for heavy soiling. Rinse thoroughly afterward.

Ensure proper drying after cleaning or exposure to rain to prevent mold or mildew growth.

Protect from extreme weather by moving furniture to a covered area or using furniture covers or tarps.

Avoid dragging or placing heavy objects on the furniture to prevent damage.

Apply UV protection spray or furniture wax to prevent fading and damage from the sun.

Regularly inspect for wear, loose strands, or damage and address issues promptly.



WARRANTY INFORMATION

Warranty Coverage: Our warranty provides protection against manufacturing defects in materials and workmanship for a specified period from the date of purchase, as outlined in the accompanying warranty documentation.

Exclusions: The warranty does not cover damages resulting from misuse, negligence, accidents, normal wear and tear, unauthorized repairs or modifications, improper assembly, or failure to adhere to the care and maintenance guidelines provided.

Warranty Claim Process

To initiate a return on Amazon, please follow these steps:

- 1 Log into your Amazon account and go to the "Your Orders" section.
- 2 Locate the order containing the item you wish to return.
- 3 Contact our customer service for assistance in obtaining a prepaid return label.
- 4 Once you receive the return label, securely affix it to the package.
- 5 You can then choose to drop off the package at a designated carrier location or arrange for a pickup.
- 6 After we receive and inspect the returned product, we will initiate the refund process.
- 7 The refund will be credited back to the original payment method used during the purchase.
- 8 Typically, refunds are processed within 3-5 business days.



Contact Information

If you have any questions, concerns, or need assistance,
please reach out to our customer support team using the contact information
provided below:

Customer Support Email

support@sunvivi.com
