
Assembly Instructions

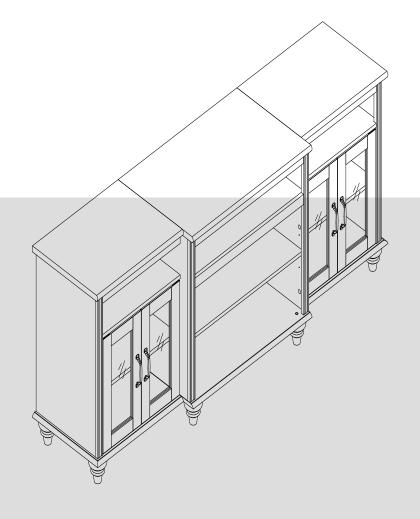

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

Tips and tricks

- 1.Do not attempt to move this furniture without first removing all equipment
- 2. Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over onto the child.
- 3.Please contact us using the details shown for further advice

 \triangle **WARNING** If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

★ ¡Gracias por elegir nuestros productos, por favor lea las instrucciones cuidadosamente antes de la instalación, y guárdelas correctamente!

Consejos y trucos

- 1. Si no quita todos los equipos en el primer lugar, no intente mover este mueble
- 2. Cuando los niños suben a los muebles con el equipo de audio y / o video, la muerte o las lesiones graves podrían ocurrir. El control remoto o los juguetes colocados en el mueble pueden estimar a un niño a subir en el él y el mueble podría volcarse sobre el niño.
- 3. Póngase en contacto con nosotros utilizando los detalles mostrados para obtener más sugerencias.

⚠ **ADVERTENCIA** Si las piezas faltan o están dañadas, no devuelva el producto dañado a su distribuidor; póngase en contacto con los Servicios al Cliente, ¡Nunca utilice las piezas dañadas!

★ Vielen Dank für Ihre Auswahl für unsere Produkte, lesen Sie bitte die Anweisungen sorgfältig vor Ihrer Installation und halten Sie bitte die Anweisungen richtig!

Tipps und tricks

- 1. Versuchen Sie bitte nicht, diese Möbel zu bewegen, ohne zuerst alle Geräte zu entfernen
- 2.Wenn die Kinder auf Audio und / oder Videogerätemöbel klettern, kann Tod oder schwere Verletzungen kommen. Eine Fernbedienung oder Spielzeug kann die Kinder ermutigen, die auf die Einrichtung gestellt wird, sich auf die Einrichtung zu klettern. Dies bewirkt, dass die Möbel auf Ihre Kinder umfallen könnte.
- 3. Bitte kontaktieren Sie uns mit den Details für weitere Beratung

⚠ **WARNING** Wenn irgendwelche Teile fehlen oder beschädigt sind, geben Sie bitte den beschädigten Artikel nicht an Ihren Händler zurück; Kontaktieren Sie bitte mit dem Kundendienst. Verwenden Sie bitte niemals beschädigte Teile!

★ 弊社の製品を選んでくれてありがとうございます。インストールする前に説明書をご覧にいただき、 それに当説明書を適切に保存してください。

提示と技巧

- 1.設備を全て開かない場合、当設備を移動することはできません。
- 2.子どもがステレオまたはビデオの設備の上に登ると、体を壊したり、ひどく傷ついたりする恐れがある。設備のリモコンと玩具によって、子どもが設備の上に登りたがっているかも知れないので、設備は子どもの身にに倒れる危険がある。
- 3.設備の使用に関わる詳細な情報を弊社にご連絡してください。

▲警告どんな部品が紛失したり壊れたりする場合でも、そのままディーラーのところへ返送しないでくだい、顧客サービスセンターに連絡してください。壊れた部品を使用しないてください。

5

★ Nous vous remercions d'avoir sélectionné nos produits, lisez les instructions attentivement avant l'installation, et gardez les instructions correctement s'il vous plaît!
Conseils et astuces

- 1.Ne tentez pas de déplacer ce mobilier sans enlever tout l'équipement.
- 2. Des dégâts ou des blessures graves pourraient survenir lorsque les enfants grimpent sur des meubles audio et / ou vidéo. Une télécommande ou des jouets places sur le meuble pourraient encourager un enfant à grimper sur le meuble, il en résulte que le meuble pourrait basculer sur l'enfant.
- 3. Contactez-nous en utilisant les détails affichés pour obtenir les conseils s'il vous plaît


⚠ **AVERTISSEMENT** S'ily a des pièces manquantes ou endommagées, ne renvoyez pas l'article endommagé à votre vendeur; Contactez le service clientèle. Ne jamais utiliser de pièces endommagées!

★ Grazie per aver scelto i nostri prodotti, si prega di leggere attentamente le istruzioni prima dell'installazione e rispettare le istruzioni corrette!

Suggerimenti e trucchi

- 1. Non tentare di spostare questo mobile senza prima rimuovere tutte le apparecchiature
- Possono verificarsi morti o gravi lesioni quando i bambini salgono su mobili per arredamento audio e/o video. Un telecomando
 o i giocattoli messi sull'arredamento possono incoraggiare un bambino ad arrampicarsi sull'arredamento, e di conseguenza
 l'arredamento può piegarsi sul bambino.
- 3. Vi preghiamo di contattarci utilizzando i dettagli mostrati per ulteriori consigli

⚠ **AVVERTENZA:** Sse mancano o sono danneggiate parti, non restituire l'elemento danneggiato al rivenditore; Contattare il Servizio Clienti. Non utilizzare mai parti danneggiate!

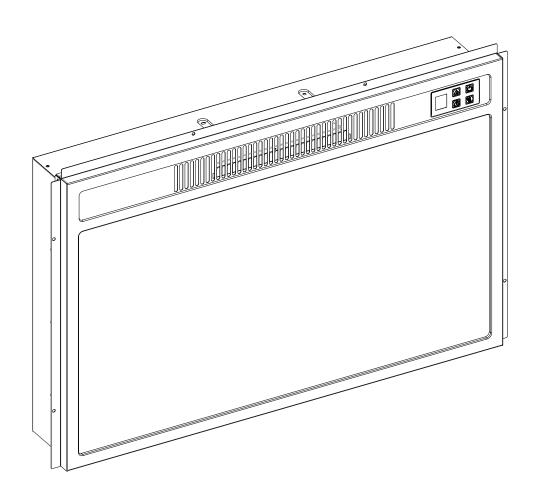


Fireplace Insert (individually wrap)




WHAT'S IN THE BOX


Wooden dowel Ø8x40mm	Wooden dowel Ø8x30mm	Wooden dowel Ø8x20mm	Cam bolt Ø6x35mm	Cam lock Ø15x9mm
A x 8	B x 44	© x 12	D x 35	a x 43
0	Time	Dummir.		ST.
Sticker	Screw Ø4x25	Screw Ø4x40	Plastic wedge	Flat-head screw Ø3x17mm
6 x 49	© x 18	a x 17	1 x 16	①x 16
				€ Januarian
Glue tube	Handle bolt Ø5/32*21mm	Handle	Magnetic catch	Ø3x14mm Screw
(x 1	1 x 8	M x 4	N x 4	© x 8
<u> </u>	Dun-	9	8	
Metal piece	Screw Ø3x12mm	Door shaft support Ø8x12mm	Hinge-bottom 40x16.5x15mm	Hinge-top 40x16.5x15mm
P x 4	Q x 4	R x 8	S x 4	1 x 4

WHAL'S IN THE BO

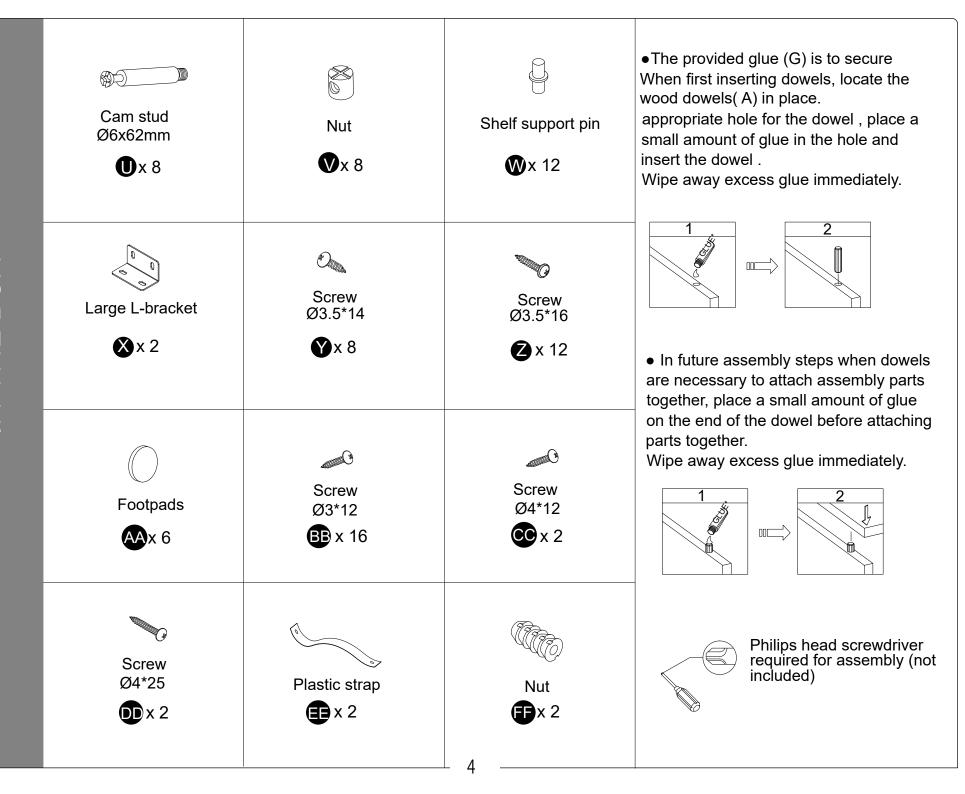


 
• Unpack the unit and confirm that you have all the hardware and required parts. Assemble the unit on a carpeted floor or the empty carton to avoid any scratches.




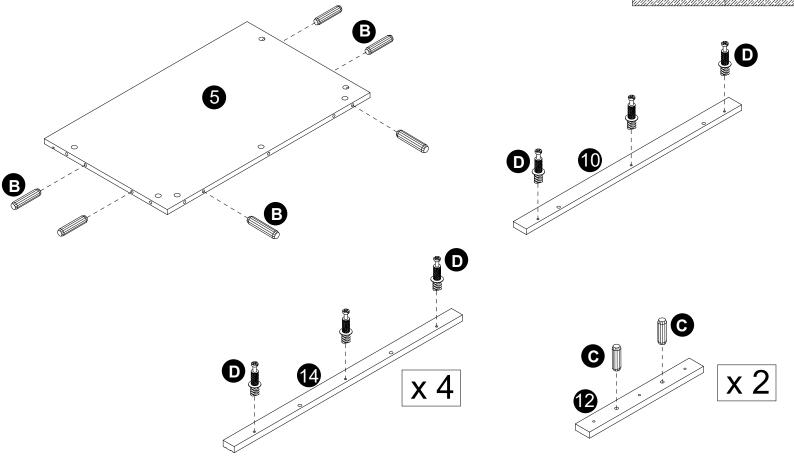

  - · Screw cam bolts (D) into panels (10,14).
- · Insert dowels (B) into panel (5).
- · Insert dowels (C) into panel (12).







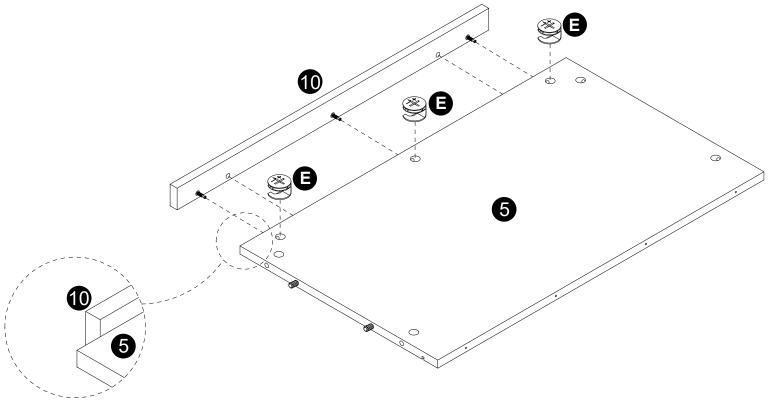


After installation is completed

  
- · Attach panel (10) to panel (5).
- · Insert and secure cam locks (E) to panel (5) to lock it.







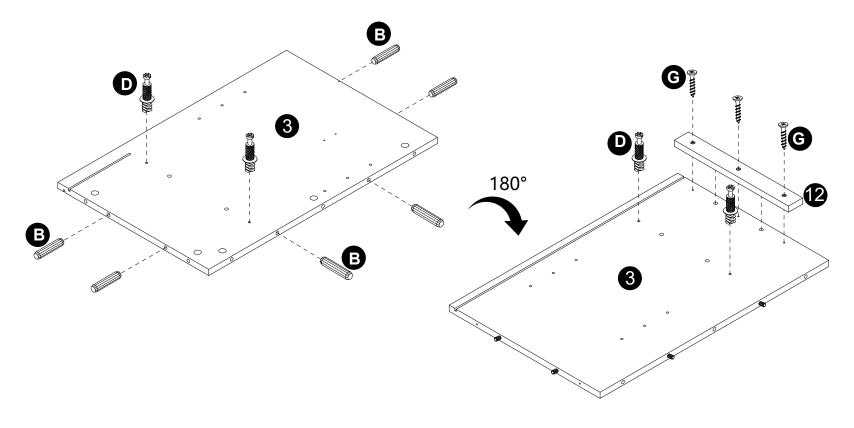

 - · Screw cam bolts (D) into panel (3).
- · Insert dowels (B) into panel (3).
- Screw cam bolts (D) into panel (3).
- · Attach panel (12) to panel (3) with screws (G).




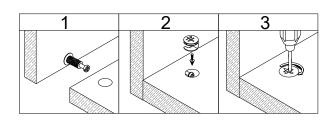


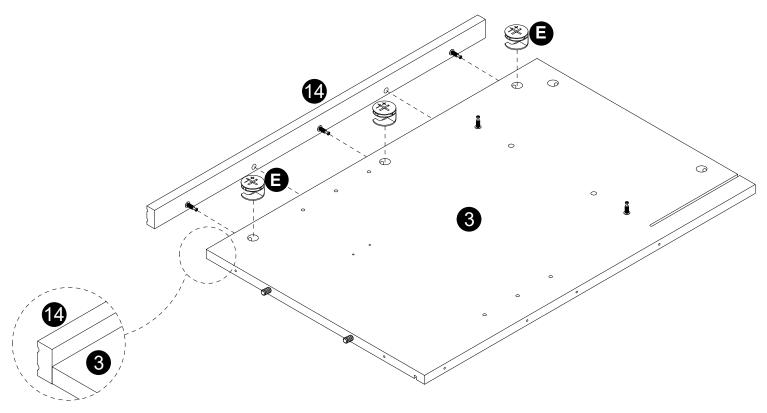


After installation is completed

 
- · Attach panel (14) to panel (3).
- · Insert and secure cam locks (E) to panel (3) to lock it.




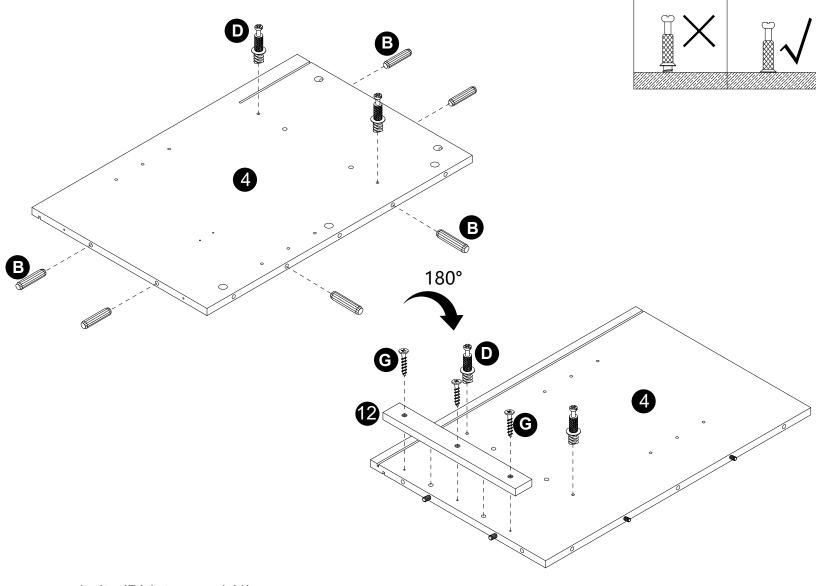

  
- · Screw cam bolts (D) into panel (4).
- · Insert dowels (B) into panel (4).
- Screw cam bolts (D) into panel (4).
- · Attach panel (12) to panel (4) with screws (G).






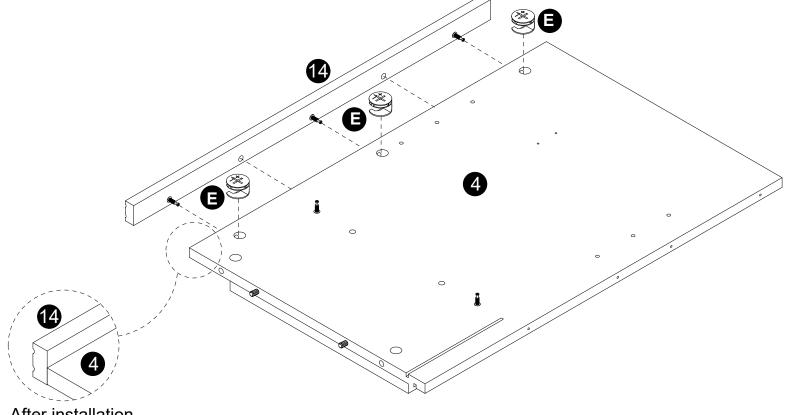


 
- After installation is completed
- · Attach panel (14) to panel (4).
- · Insert and secure cam locks (E) to panel (4) to lock it.



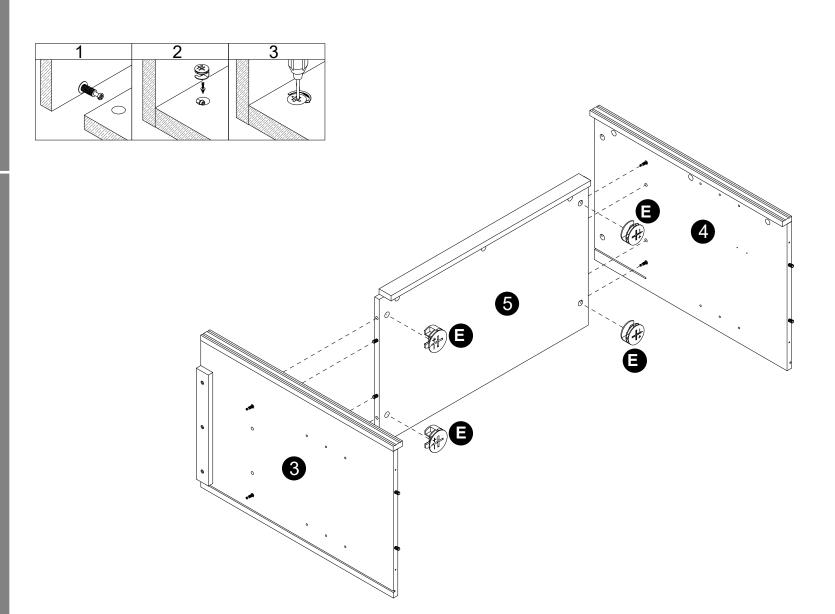


 
- · Attach panels (3,4) to panel (5).
- Insert and secure cam locks (E) to panels (5) to lock it.



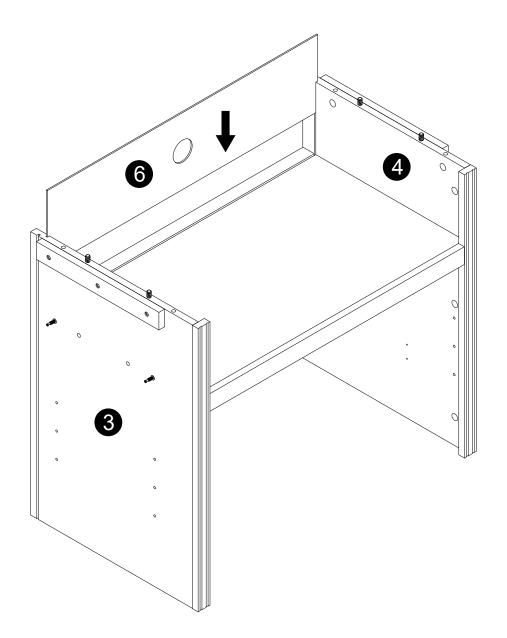



· Carefully slide part (6) into place along the back of the assembly.

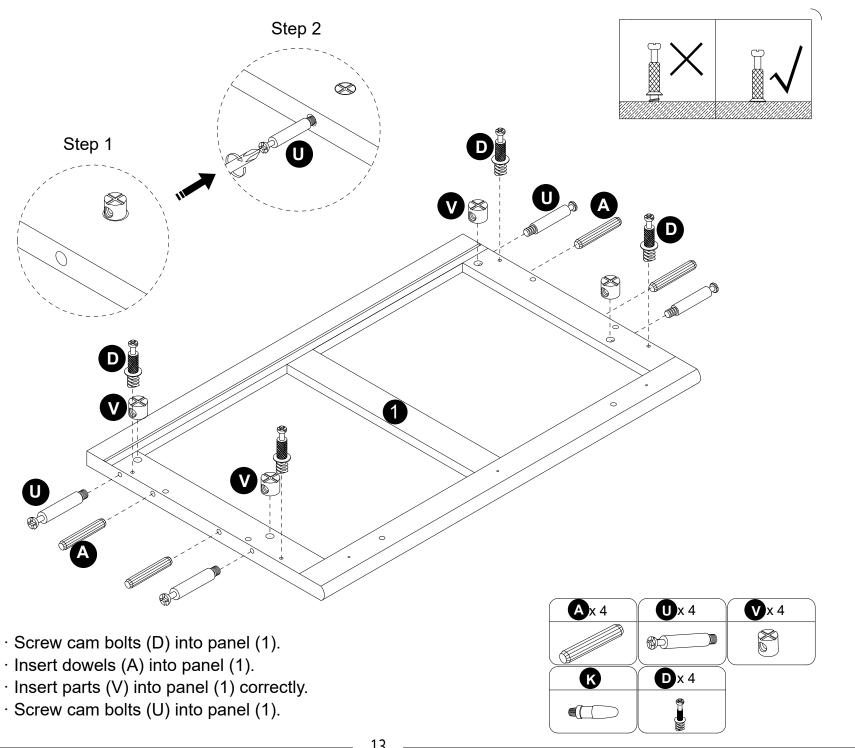


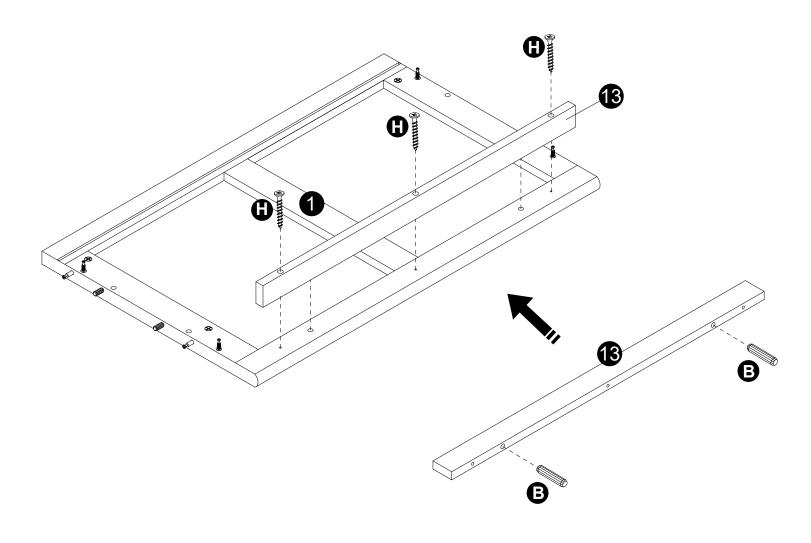

  
- · Insert dowels (B) into panel (13).
- · Attach panel (13) to panel (1) with screws (H) correctly.




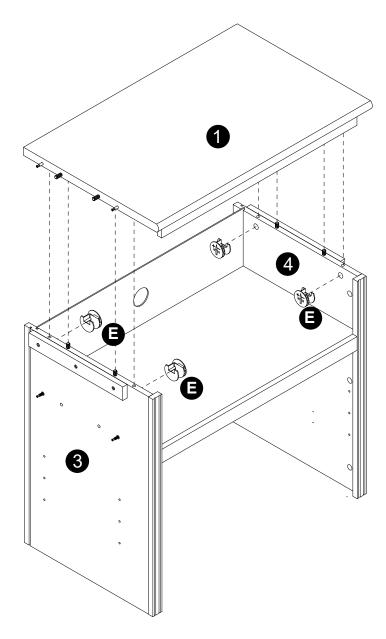




 
- · Attach panel (1) to panels (3,4).
- · Insert and secure cam locks (E) to panels (3,4) to lock it.



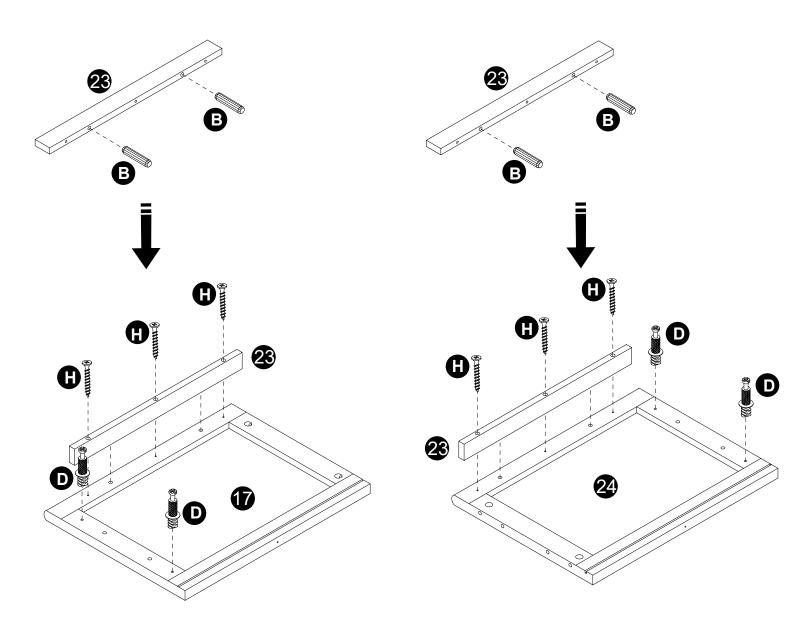


 
- · Insert dowels (B) into panels (23).
- · Screw cam bolts (D) into panels (17,24).
- · Attach panels (23) to panels (17,24) with screws (H) correctly.



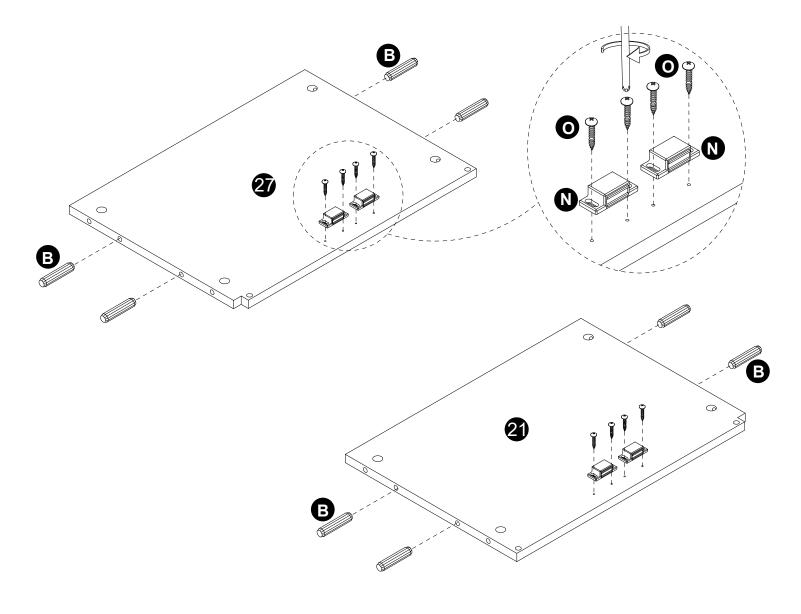


 
- · Insert dowels (B) into panels (21,27).
- · Attach parts (N) to panels (21,27) with screws (O) correctly.



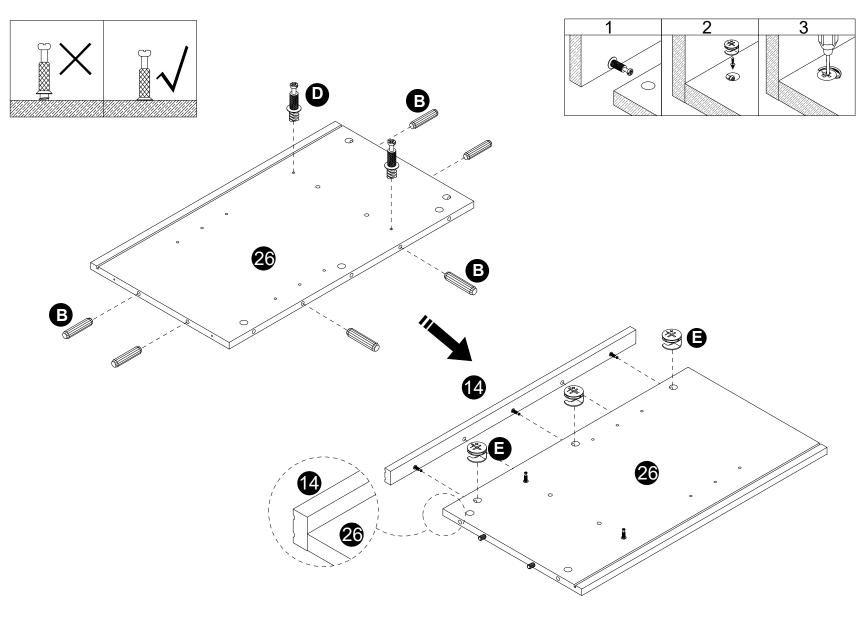


 
- · Screw cam bolts (D) into panel (26).
- · Insert dowels (B) into panel (26).
- · Attach panel (14) to panel (26).
- · Insert and secure cam locks (E) to panel (26) to lock it.



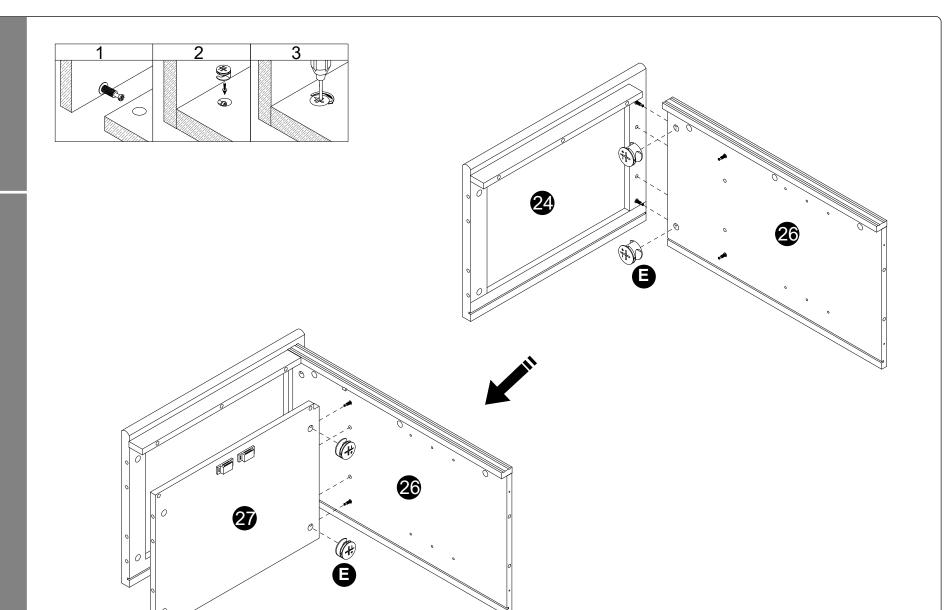


 
- · Attach panel (24) to panel (26).
- · Insert and secure cam locks (E) to panel (26) to lock it.
- · Attach panel (27) to panel (26).
- · Insert and secure cam locks (E) to panel (27) to lock it.



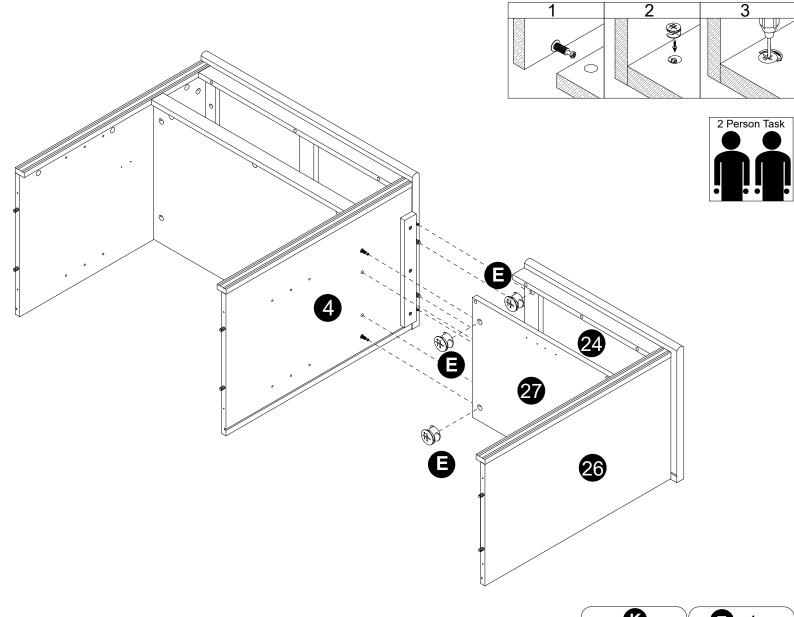

  
- · Attach panels (24,27) to part (4).
- Insert and secure cam locks (E) to panels (24,27) to lock it.








· Attach panel (14) to panel (19).

 · Insert and secure cam locks (E) to panel (19) to lock it.




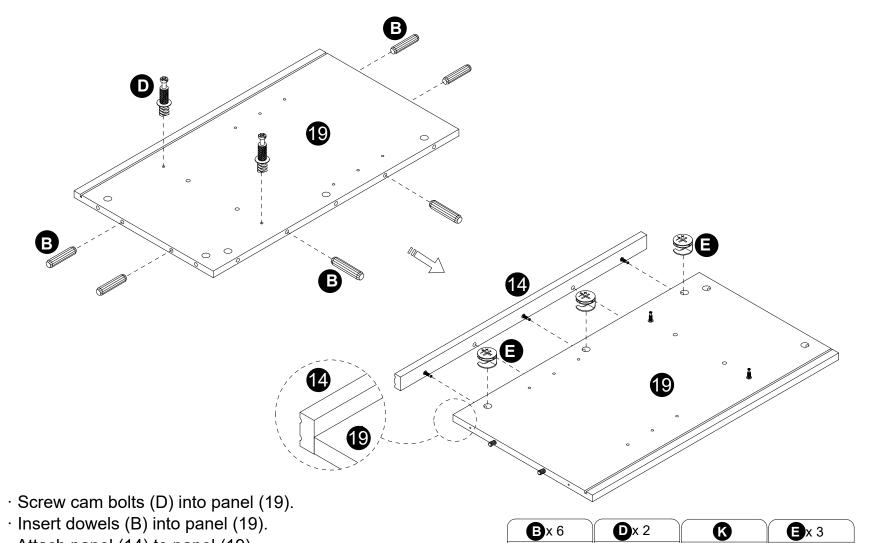


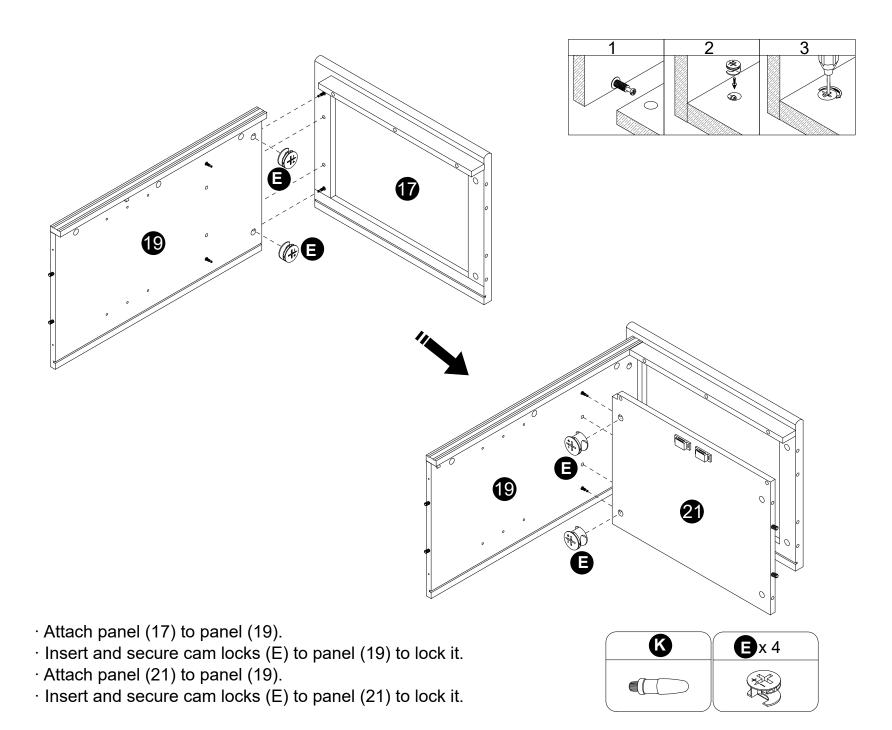

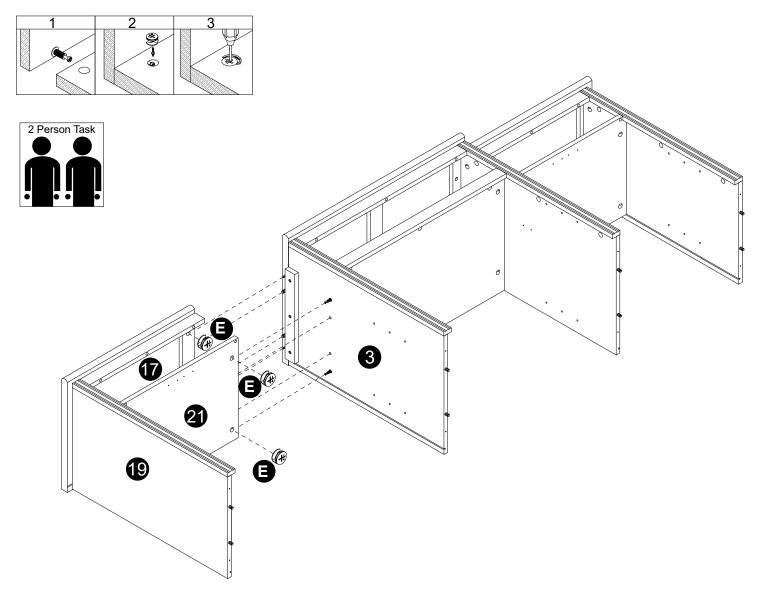


 - Attach panels (17,21) to part (3).
 Insert and secure cam locks (E) to panels (17,21) to lock it.




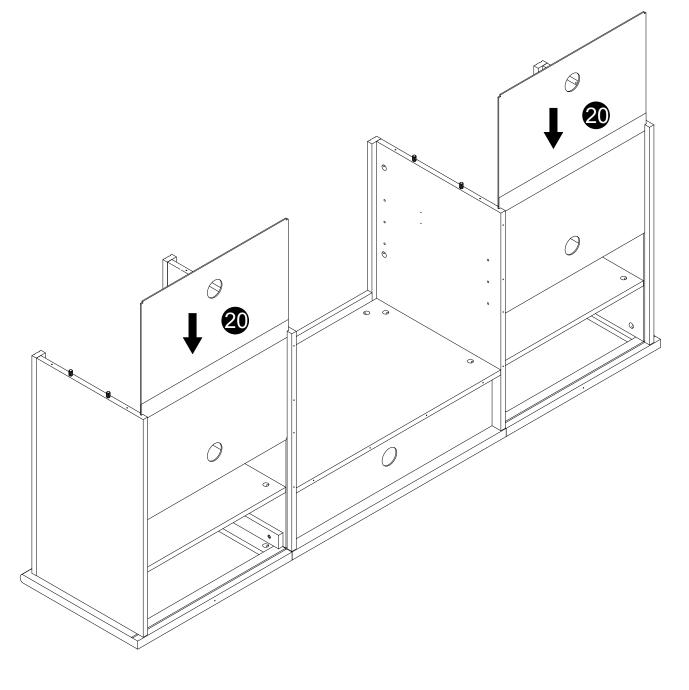



· Carefully slide parts (20) into place along the back of the assembly.

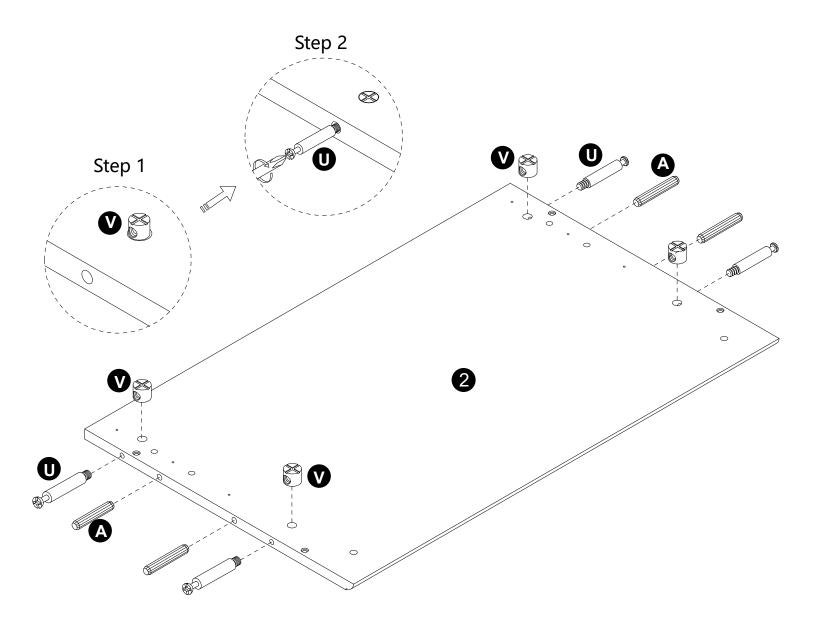


 
- · Insert dowels (A) into panel (2).
- · Insert parts (V) into panel (2) correctly.
- · Screw cam bolts (U) into panel (2).



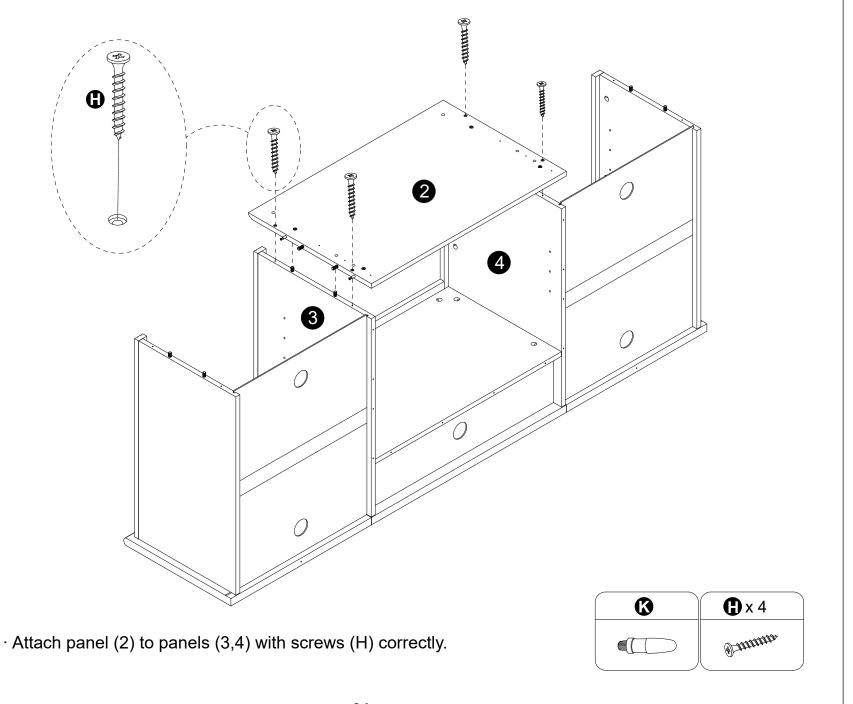


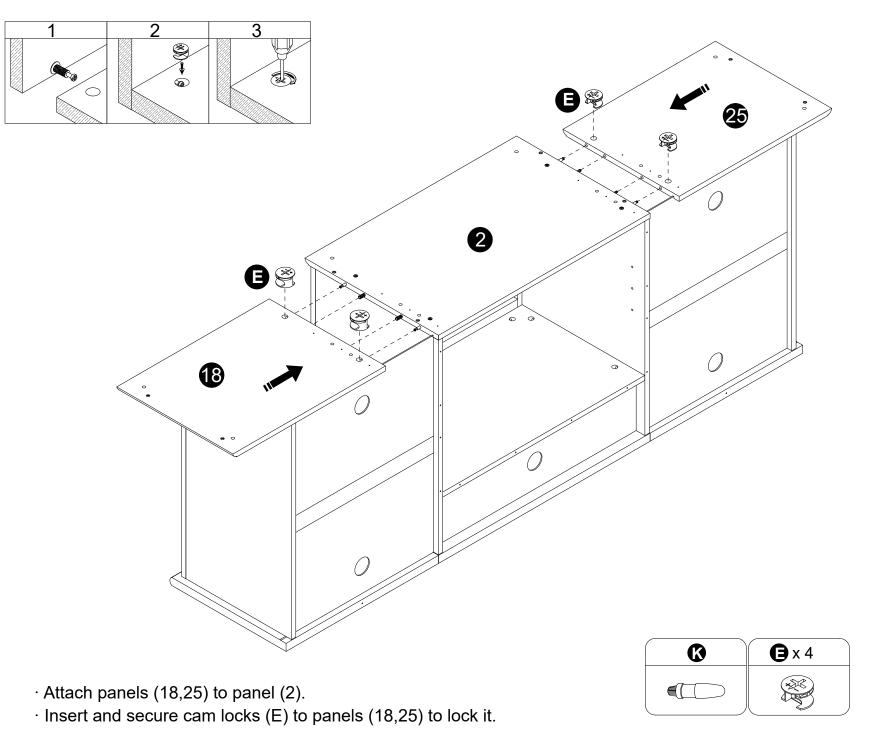


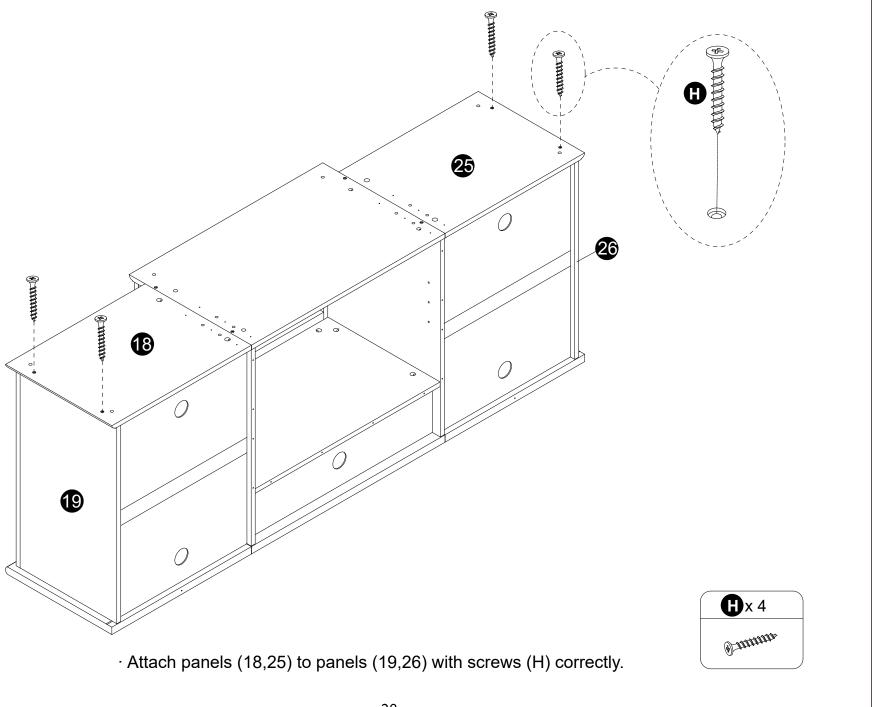

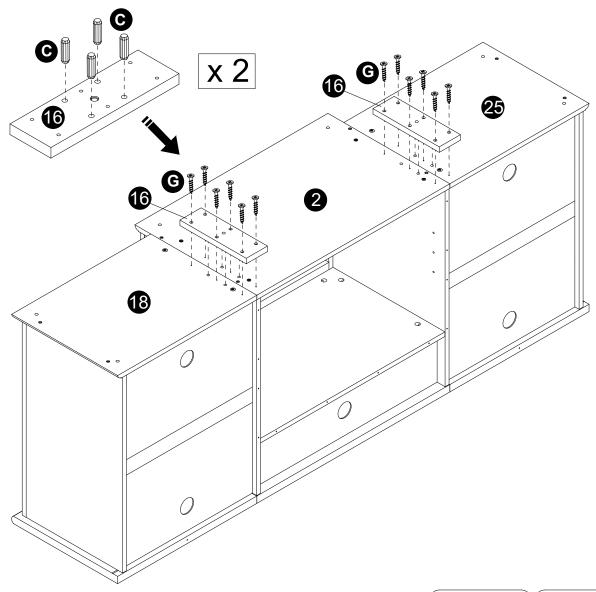


 
- · Insert dowels (C) into panel (16).
- Attach panels (16) to panels (2,18,25) with screws (G) correctly.




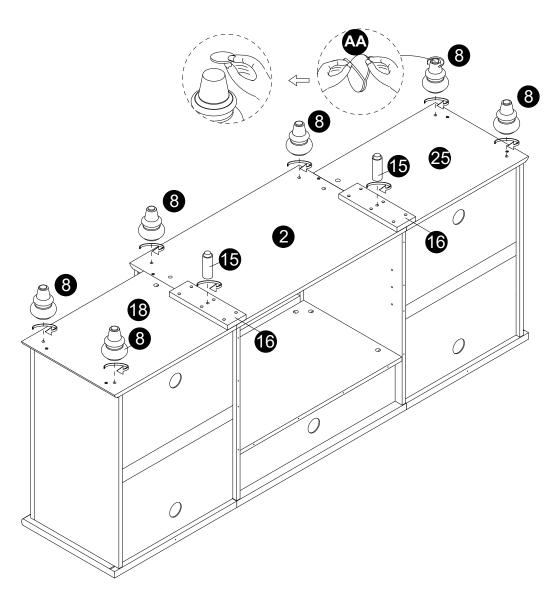


 
- · Attach legs (8) to panels (2,18,25).
- Attach legs (15) to panels (16).
- · Stick the skid pads (AA) on the bottom of the legs (8).



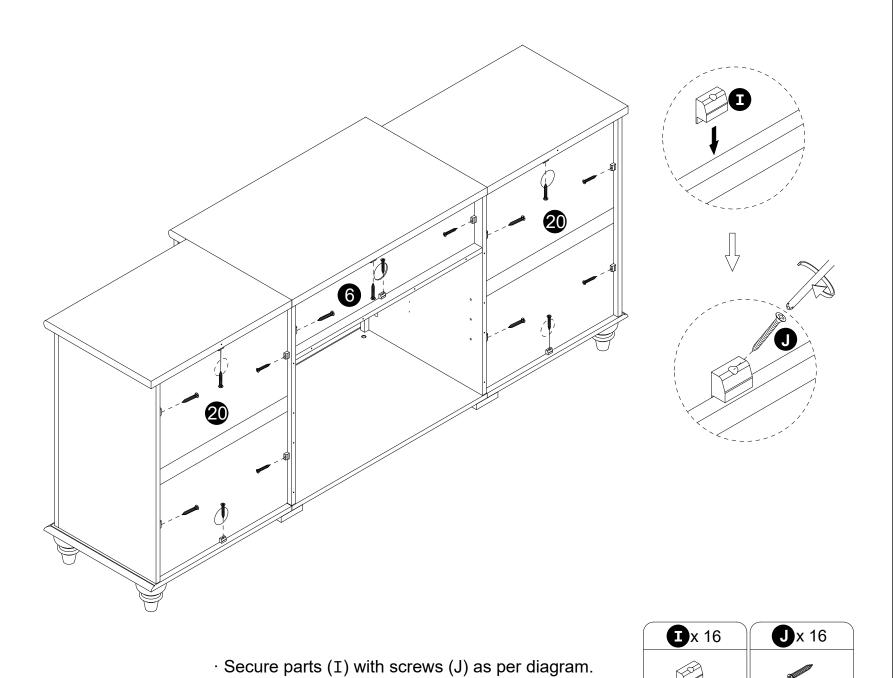


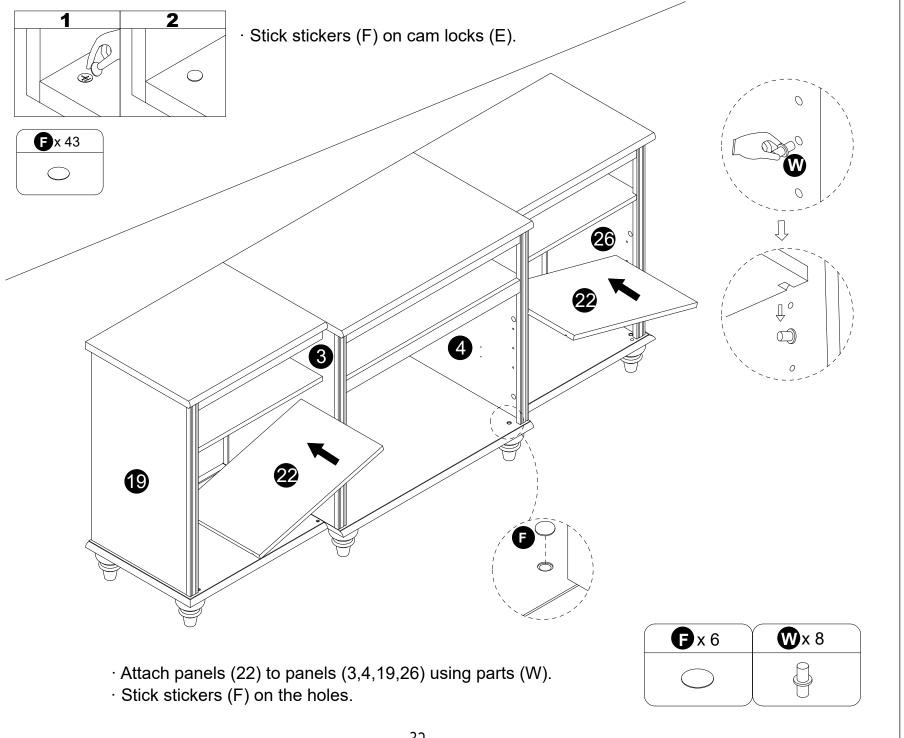

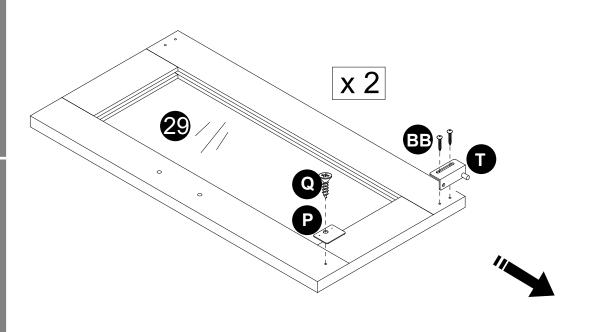

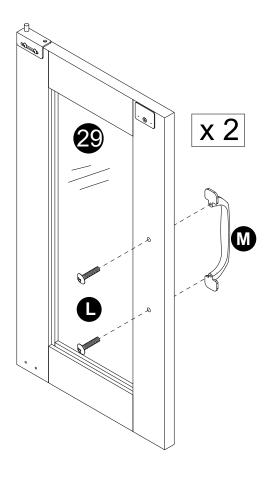



- · Attach part (P) to panel (29) with screws (Q) correctly.
- · Attach part (T) to panel (29) with screws (BB) correctly.
- · Attach part (M) to panel (29) with bolts (L) correctly.

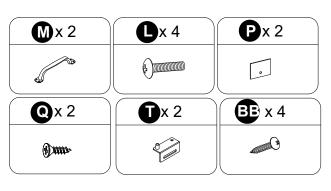


Note:


2 Person Task B If the DOOR does not go in smoothly. Loosen the screws (BB) on Door pivots, You can adjust lift or right by a few mm. Then tighten back up. **4** 25 29 18 **BB**x 4 **S**x 2 **R**x 4 Ontone Co 9 · Insert door shaft support (R) into panels (18,21,25,27). · Insert Hinge-bottom (S) to panels (18,25). Insert panels (29) to panels (18,25). · Attach Hinge-bottom (S) to panels (29) with screws (BB).

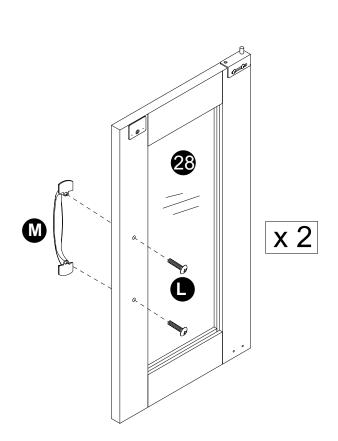

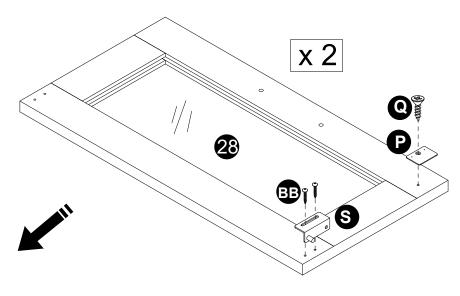


- · Attach part (P) to panel (28) with screws (Q) correctly.
- · Attach part (S) to panel (28) with screws (BB) correctly.
- · Attach part (M) to panel (28) with bolts (L) correctly.

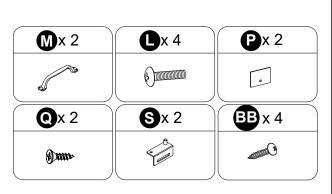


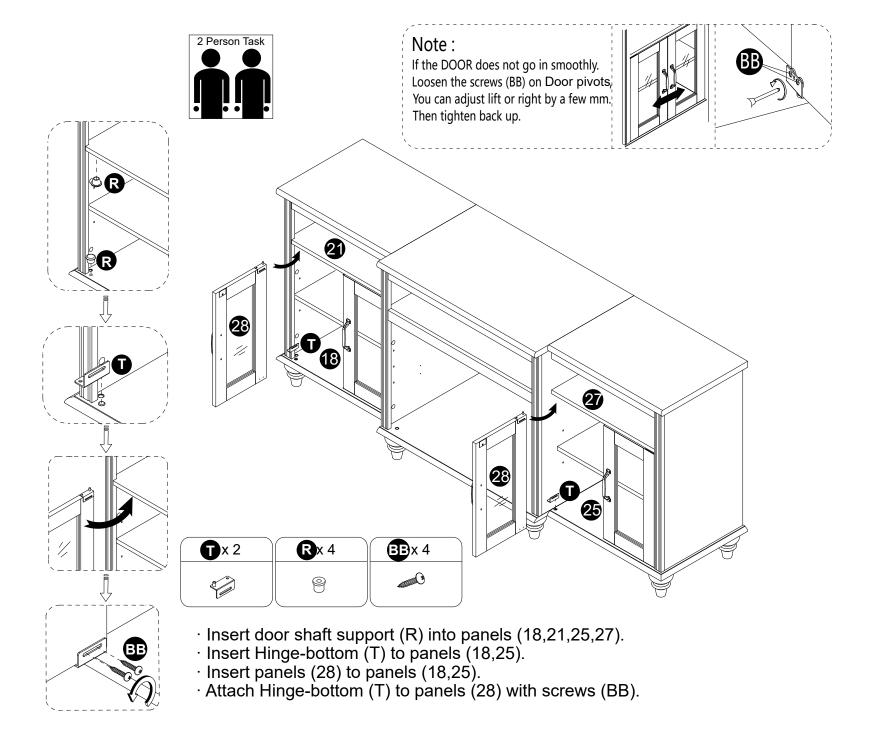


33


INSTALLATION STEPS

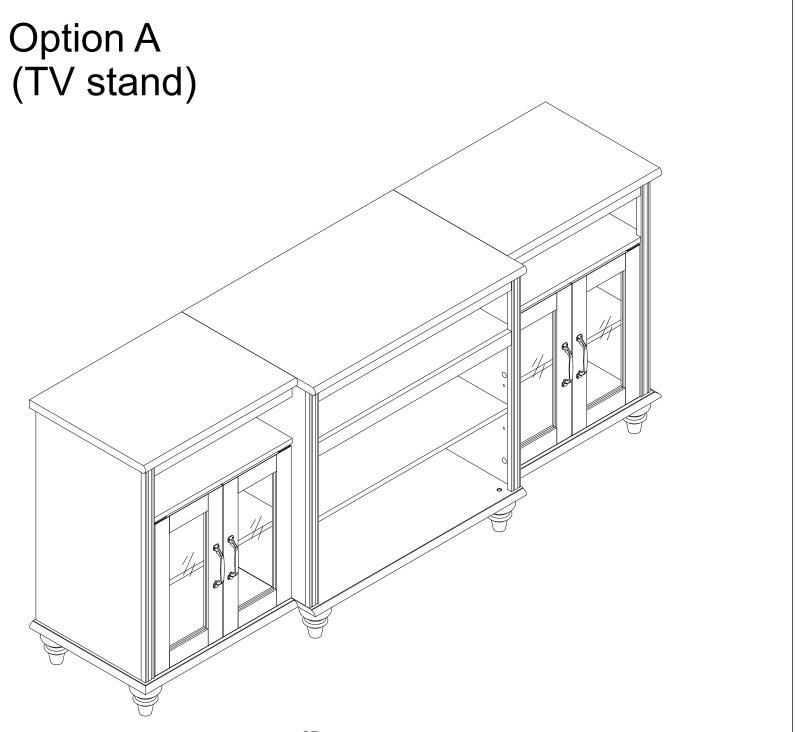


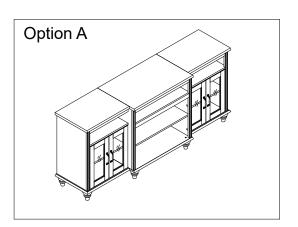

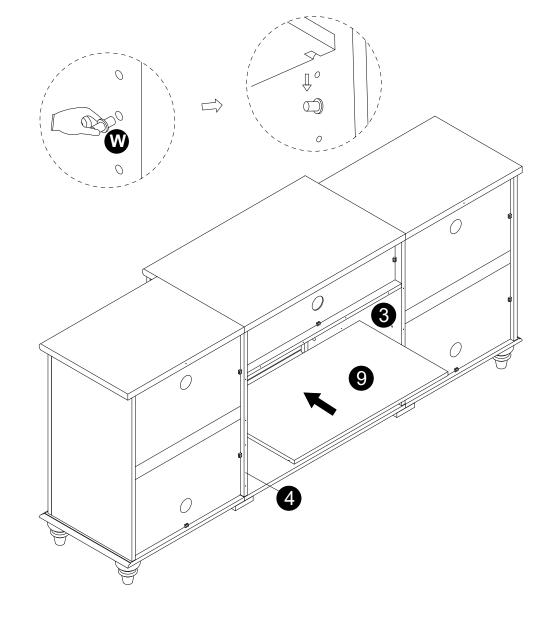


 
· Attach panel (9) to panels (3,4) using parts (W).



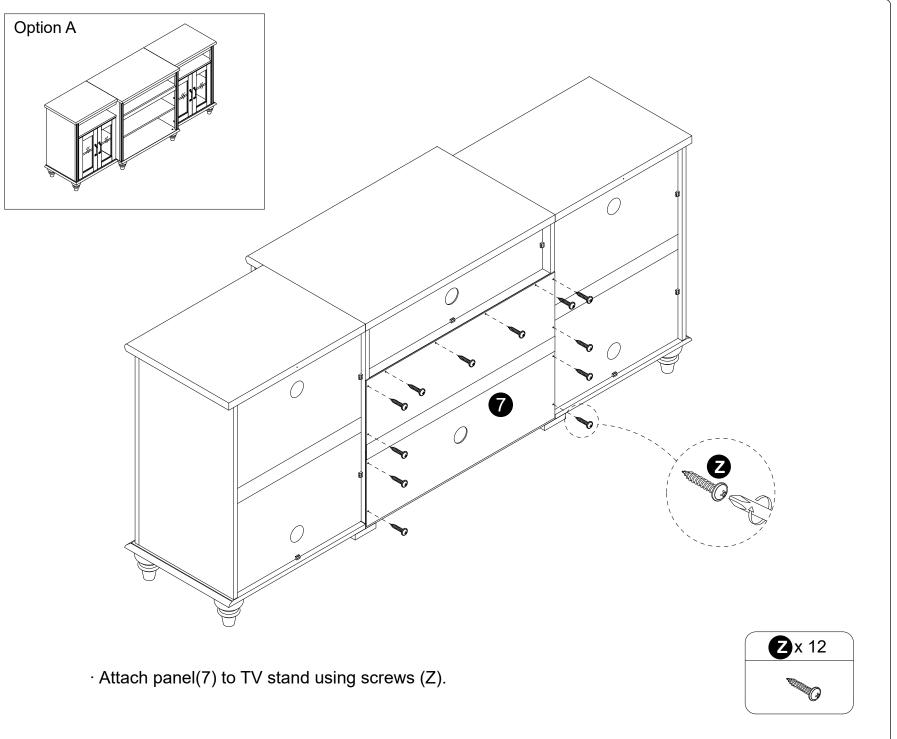


Option B (Fireplace TV stand)

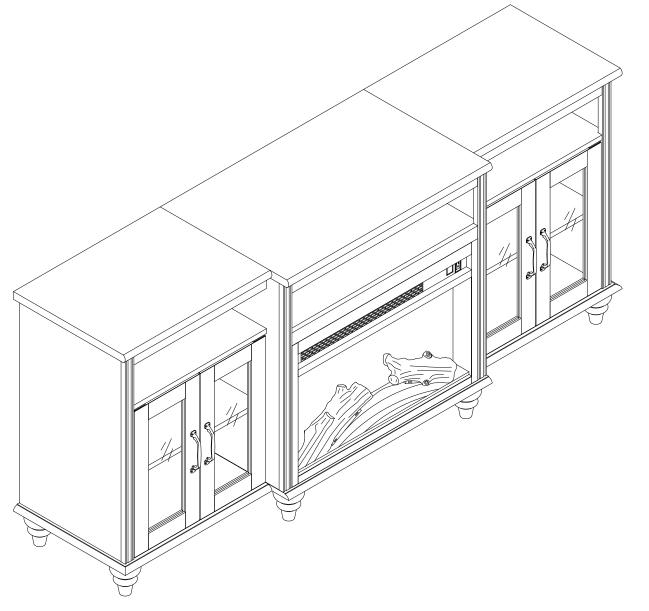

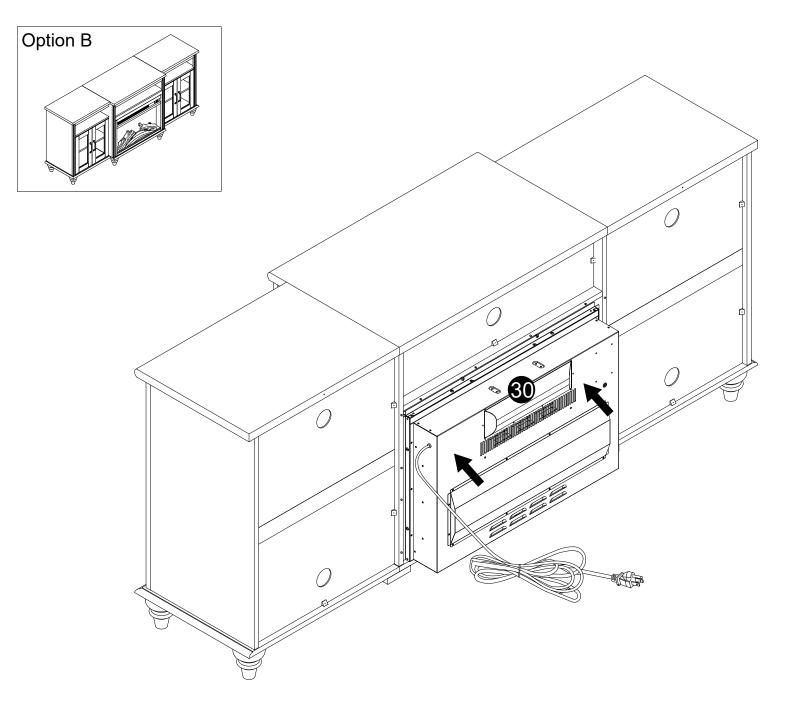


· Insert fireplace (30) from back of the TV stand.

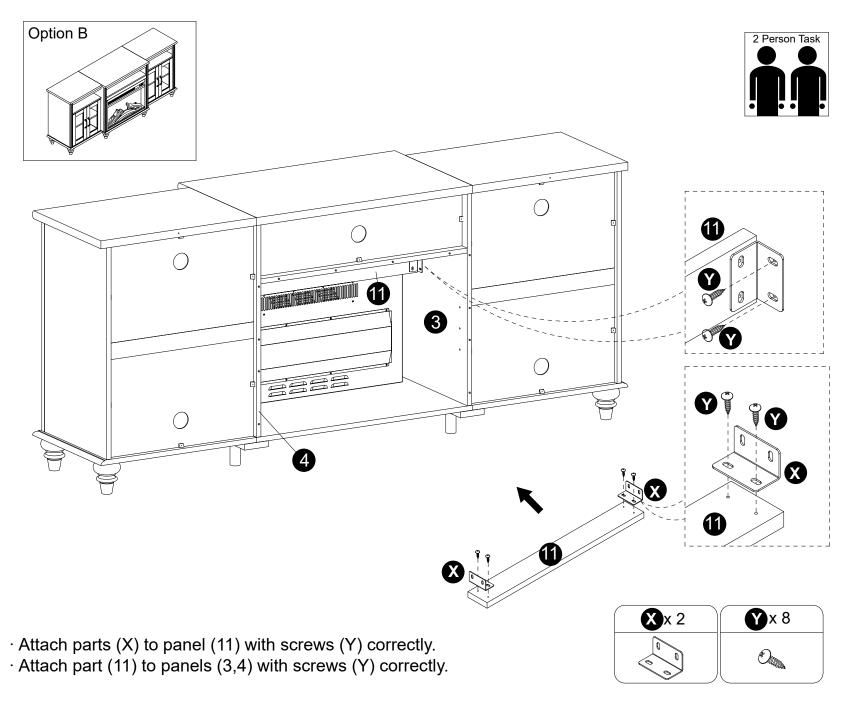



WARNING

 
Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.




Tools required: Phillips screwdriver, Power Drill, 15/64" Drill Bit and Rubber Mallet.

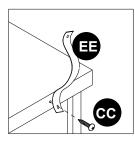

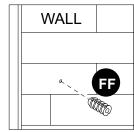

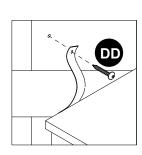

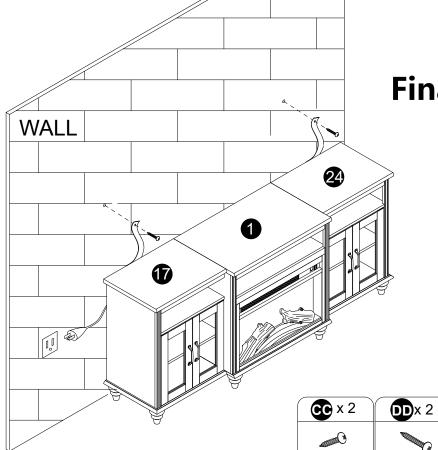

1 x 2

1 x 2