


2.7m Crank and Tilt Parasol with Strip LED

Assembly Instructions

Product size:
Dia270*H235 cm

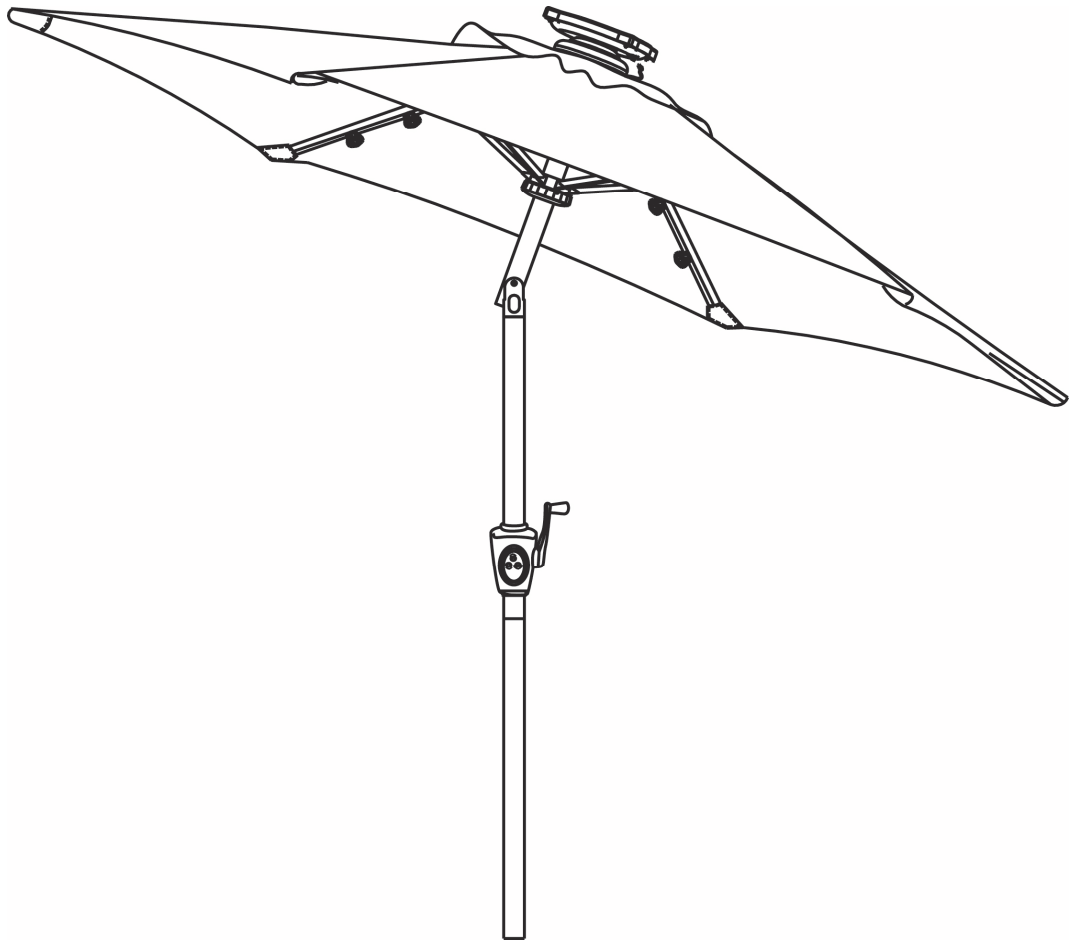

IMPORTANT, RETAIN FOR FUTURE REFERENCE
READ CAREFULLY

The schematics in this manual are for assembly and operation illustration only. They may differ from the actual appearance.

2.7m Crank and Tilt Parasol with Strip LED

Before you start



Warnings

IMPORTANT, RETAIN FOR FUTURE REFERENCE READ CAREFULLY

See enclosed instructions for assembly, safety and care information.

Failure to follow the warnings could result in serious injury.

Handle heavy parts with care.

Ensure that this product is fully assembled as illustrated before use.

This product should only be used on firm, level ground.

The product contains small parts which could pose a risk to young children. Keep small parts out of reach of children.

This product is intended for domestic use only.

Ensure the product is always placed on level ground.

Furniture can be dangerous if incorrectly used. No liability will be accepted for damage or injury caused by incorrect use of this product.

Keep hands away from folding mechanism and moving parts to prevent possible injury.

**NEVER USE OR OPEN THIS PARASOL
WITHOUT A SUITABLE BASE SET IN PLACE.**



Dos

When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.

Unwrap all packaging materials and place the components on suitable surface to prevent scratching your product.

Check the pack and make sure you have all of the parts listed.

Check all screws and bolts are tightened and inspect regularly.

We recommend the use of furniture covers to protect your product when not in use.

During bad weather or in winter months, the product should be stored in a cool, dry place. Before storage, ensure that the product is clean and dry.

To clean, wipe with a damp sponge and a little warm soapy water then dry with a clean, dry cloth. Do not use solvent-based cleaners or detergents as they can bleach or damage the product.

Clean the fabric using a little warm soapy water. The product must be thoroughly dried afterwards to prevent mildew and mould stains from forming. Most stains can be removed with a mild detergent. The parasol is not 100% waterproof and water may seep through the seams and/or fabric in heavy rain. Ensure that the parasol is fully dry before use.



Don'ts

Do not stand or climb onto the product.

Do not use power tools to construct this product.

Do not sit or lean onto the rims of this product.

Do not use this product if parts are missing, damaged or worn.

Do not leave the parasol open when there is a risk of high winds, as damage will occur to its structure.

Never use scourers, abrasives or chemical cleaner.

Never use a pressure hose or washer to clean the product.

Never drag furniture when moving it, always lift it.

Never move this parasol when fully assembled.

To avoid damage do not allow water to collect or "pool" on the fabric. Do not let children play with or around this parasol.

Do not use the parasol until all of the screws and fixings are tight and the parasol is fully assembled. Periodically check the tightness of all fixings.

It is recommended that before moving heavy objects to a new location they be completely disassembled to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

Please ensure you have correctly installed the parasol before use. A competent person should carry out assembly. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

Number of people required for assembly

One Person



Time to assemble

5 Minutes

Tools required

No

2.7m Crank and Tilt Parasol with Strip LED

Care & Maintenance

CANOPY CARE INSTRUCTIONS:

- Simply clean the parasol canopy with a soft brush and mild detergent.
- Do not machine wash.
- Do not iron.
- Air-dry the canopy thoroughly before storing for extended periods of time. Make sure the canopy is completely open during drying process to prevent shrinkage.
- If the painted finish gets chipped or scratched, therefore exposing the bare material beneath. It is advisable to remove any surface rust and treat with a suitable touch up paint.
- If the parasol is not to be used for long periods during the winter, store inside or under a suitable cover. Before putting into storage, ensure all of the items are clean and dry.

DANGER: Keep children out of the assembly area during assembly.

WARNING: Read the entire instructions before beginning and follow the steps outlined. Failure to assemble and install as instructed could result in the parasol tipping over causing personal injury and/or property damage.

WARNING: To prevent damage to the canopy, open the parasol facing the opposite direction that the wind is blowing.

WARNING: Do not use this parasol during periods of high winds and rain. Failure to do so may result in personal injury and/or damage.

CAUTION: Assemble and use parasol on a flat surface.

CAUTION: Placement of the parasol over or near a swimming pool can cause premature fading of the canopy. This is not covered under the warranty.

CAUTION: Close the parasol and use the canopy ties when parasol is not in use.


CAUTION: Schematics in this manual are for assembly and operation illustration only. They may differ from the parasol's actual appearance.

When raising the parasol please be aware of overhanging power cables, laundry lines and overhanging branches.

Care must be taken when opening or closing the parasol to ensure that you do not trap or pinch your fingers or clothing.

2.7m Crank and Tilt Parasol with Strip LED

Components, fixtures & fittings (not actual size)

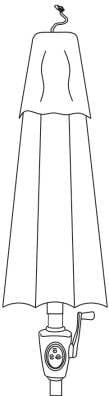Parts List					
Part No.	Diagram	Qty.	Part No.	Diagram	Qty.
A	 Main Parasol	1 PC	B	 Bottom Pole	1 PC
C	 Solar Panel	1 PC			


Step by step assembly instructions

CAUTION:
Do not use sharp tools or equipment such as a knife or scissors when removing the protective material, as it may damage the product.

2.7m Crank and Tilt Parasol with Strip LED


Step One

Insert the plug into the socket under the Solar Panel (C).

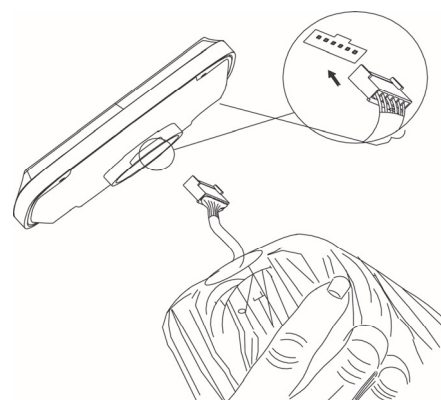


Step Two

Put the Solar Panel (C) on the top of parasol and hide the plug and wire inside the groove at the top of parasol. Then turn the Solar Panel (C) clockwise. Do not over tighten.

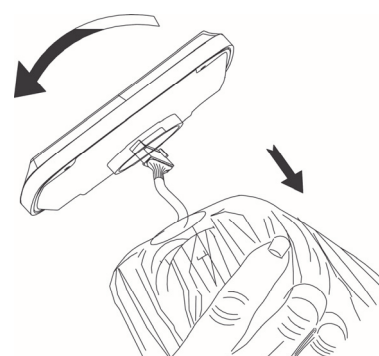

Step Three


Press the button and Insert the Bottom Pole (B) into the Main Parasol (A).

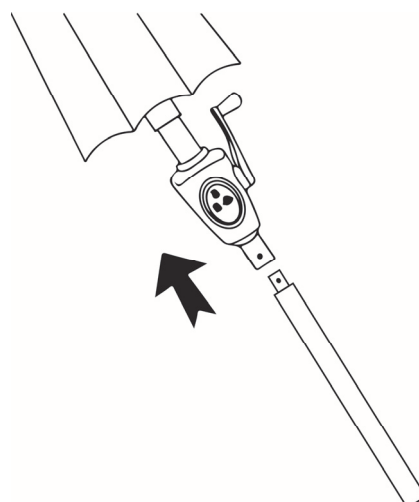

2.7m Crank and Tilt Parasol with Strip LED

Step Four

A Parasol Base is recommended to use to stand and secure the Parasol by tightening the locking bolt. (Parasol Base is not included)

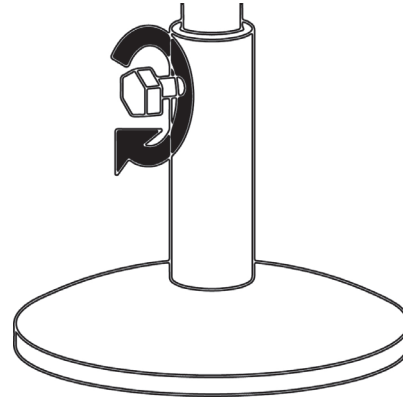



Step Five

YOU MUST CHARGE BATTERIES BEFORE FIRST USE.

Put the solar parasol in direct sunlight to charge the batteries for 8 hours before the first use.

MAKE SURE THE LIGHT SWITCH IS IN THE “OFF” POSITION WHEN CHARGING THE SOLAR PANEL.

Please remove the film on the solar panel. This film is to prevent damage during shipping. Failure to remove the film will result in the solar panel not functioning properly.

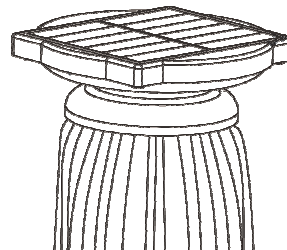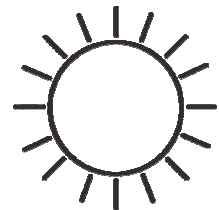

Important

Make sure the light switch is in the “OFF” position in the daytime for the solar panel to recharge the batteries.

Failure to charge the batteries will result in premature dimming of the lights in your new solar umbrella.

For everyday normal use, turn on the light switch at night time when you want to use the solar light and turn off the light switch after every use.


2.7m Crank and Tilt Parasol with Strip LED

Step Six

Turn the Crank Handle clockwise to open the canopy and close in the opposite direction.


Press the Lights Switch to switch on/off the solar lights.

There are three options for different lights shining.

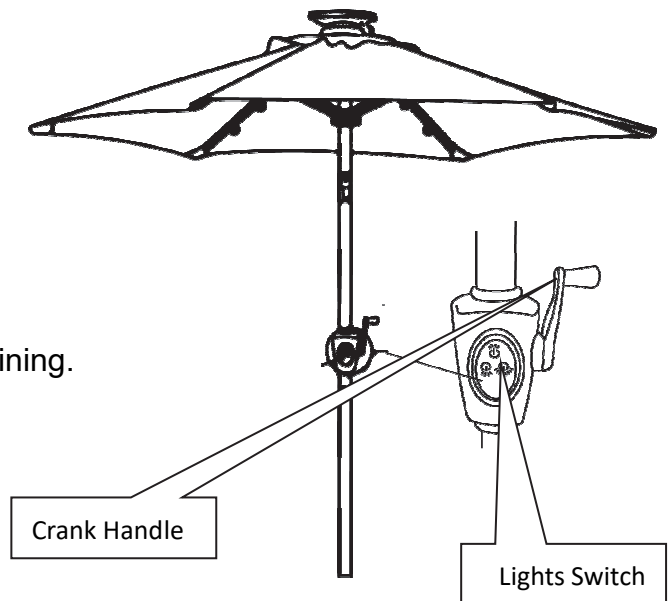

To tilt the canopy (Diagram for illustration purpose only)

Press and hold the button on the plated tilt mechanism and allow the canopy to tilt into place release the button and the parasol will lock into the tilted position. To raise to the upright position- press and hold the button and gently lift the canopy into the level position. Release the button and the parasol will lock into the upright position.

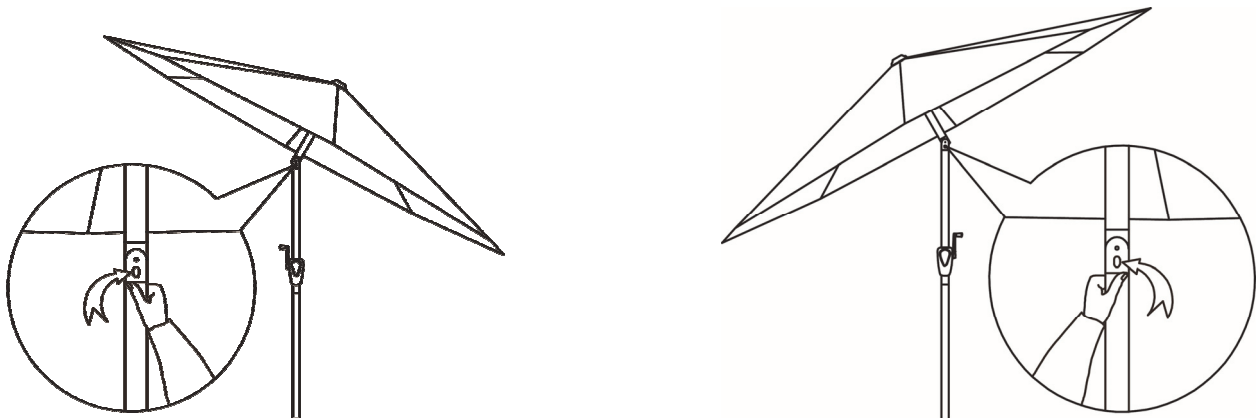

WARNING

Please take care to keep fingers away from moving parts to prevent possible injury.

2.7m Crank and Tilt Parasol with Strip LED

Battery Replacement


Tools required: Phillips head screw driver (not included)

We recommend that you change the batteries in your solar light parasol every year or when you feel the light output is diminished. Use only three (3) AA size Ni-MH 1600mAh rechargeable batteries from any major retailer.

- Install only new batteries of the same type in your product.
- Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
- Do not mix old and new batteries.
- Do not mix Alkaline, Nickel Cadmium or Lithium rechargeable batteries.
- Do not dispose of batteries in fire.
- Batteries should be recycled or disposed of as per state, provincial and local guidelines.

Step One


Twist counterclockwise and remove the Solar Panel (M) from the top of the parasol.

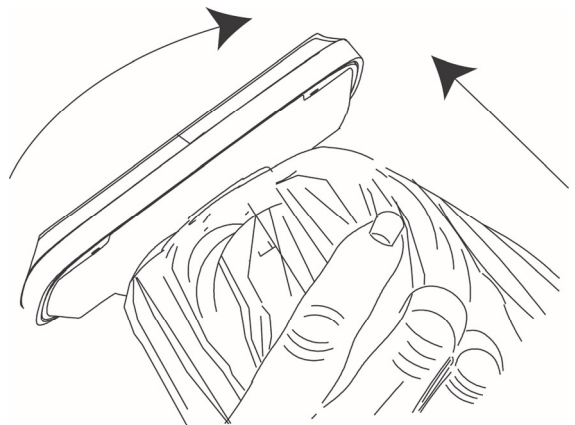

2.7m Crank and Tilt Parasol with Strip LED


Step Two

Pull the plug out of the socket under the Solar Panel (M). Pull by holding the plug, not by pulling on the wires.

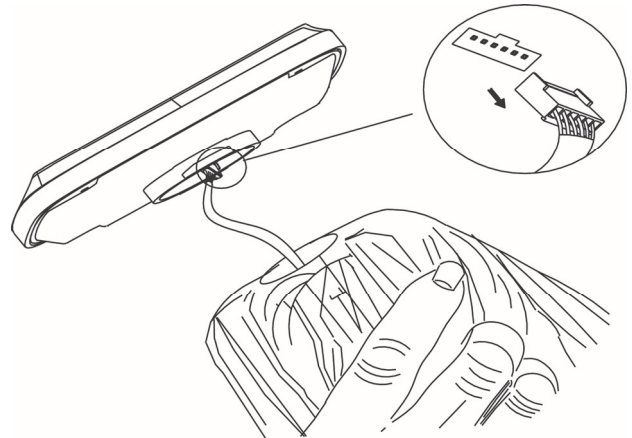


Step Three

Place the Solar Panel (M) upside down on a non-abrasive surface to avoid scratching. Remove four (4) screws on the bottom case.

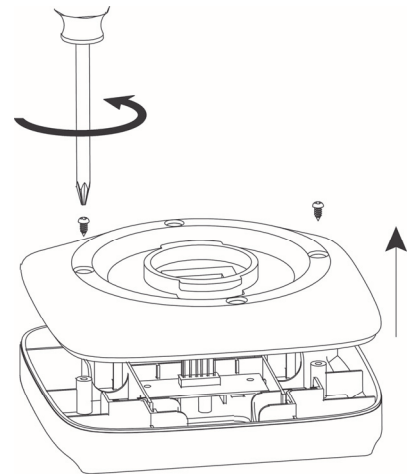

Step Four

Carefully open the bottom case and set aside. Replace the battery, matching the +/- on the battery with the +/- on the battery case.

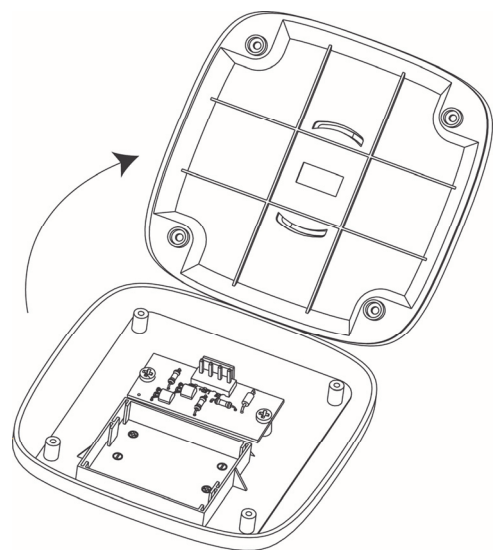


2.7m Crank and Tilt Parasol with Strip LED

Step Five

Carefully replace the bottom case.
Align the screw holes and replace the screws.
Do not over tighten the screws.

Follow the previous assembly steps
to assemble the Solar Panel (M).

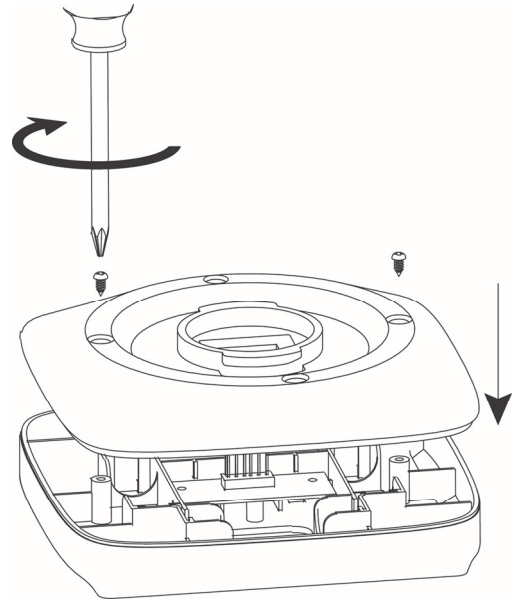

Suitable parasol bases should be used together with this parasol!

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE