

ASPEN

4 PIECE SEATING SET

INSTRUCTION MANUAL





THANK YOU FOR PURCHASING OUR MIRADOR ASPEN SEATING SET!



This manual will provide you with clear and detailed instructions on how to safely and correctly assemble and maintain your product, to ensure it brings you many years of use and enjoyment.

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

Warning: Important safety instructions. It is important for the safety of persons to follow these instructions. Please keep these instructions in a safe place.

Any use or modification to the product not included in this manual shall be considered as improper use, which may cause considerable danger to users and property and will void the product warranty.

Please only use this product for its intended purpose within a residential environment. Failure to do so will void your warranty.


We reserve the right to make changes for product improvements.

For parts and customer service, please call +1 (877)-506-4777 in the U.S. and Canada (English and Spanish) Monday - Friday: 5:00 am - 11:00 pm, Saturday – Sunday: 8:30 am – 4:30 pm, Pacific Time. For other regions, email: support@miradoroutdoor.com

Digital instruction manual is also available on our official website **www.miradoroutdoor.com/pages/help-center** for your reference.

TABLE OF CONTENTS

 — Minimum Recommended Outdoor Space

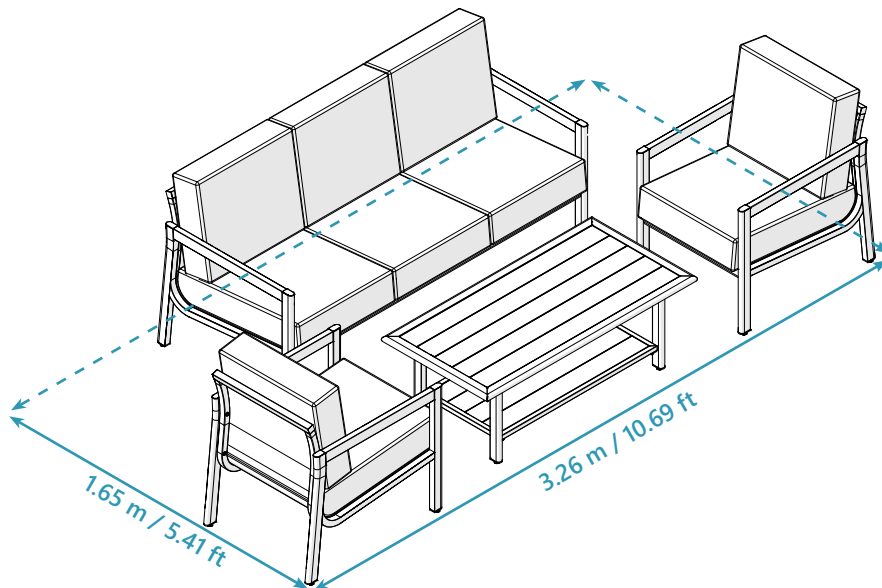

04 Important Safety Advice

25 Enjoy Your Furniture

05 List of Parts

27 Care & Maintenance

08 Assembly

28 Warranty & Complaints Procedure

IMPORTANT SAFETY ADVICE

For the safety of all persons using the product, it is important to follow the safety guidelines below.

Preparation



Prepare, assemble, and use only on a flat, level surface.



Recycle packaging and dispose of plastic bags safely, out of children's reach.



Wear work shoes, gloves, and eye protection where appropriate.



Keep children and pets away from the work area - small parts, tools, and packaging can pose choking or injury risks.

During Usage



For outdoor use only.



Keep flames, grills, and other heat sources away.



Do not stand on the product, tilt it, or use it in any unsafe manner.



 
Do not drag the product while cleaning or moving to avoid scratches.




Do not exceed the weight limit
(Sofa, per seat: 250 lbs / 113.4 kg,
Coffee table: 165 lbs / 74.8 kg).

LIST OF PARTS


A1 x2

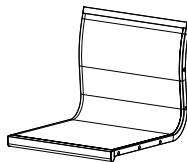


A2 x3

 


A3 x3

 


B1 x1

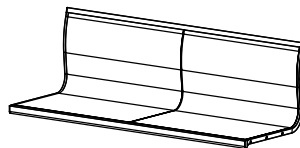 


C1 x1

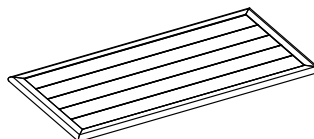 


C2 x2

 


C3 x2

 


C4 x1

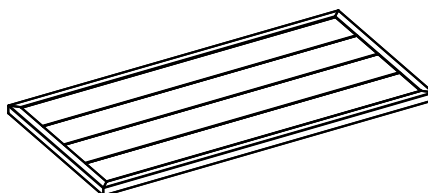 


D x5

 


E x5

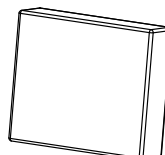 

J x12+1*

 


S x30+3*

 


X x2



 
Z x2



Z1 x1






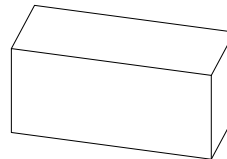 


Z2 x1

 

ASSEMBLY

      Sofa

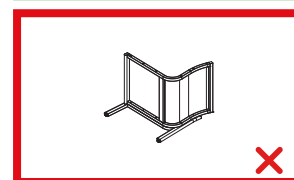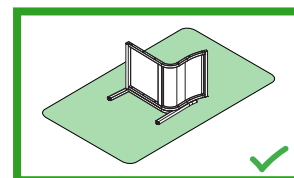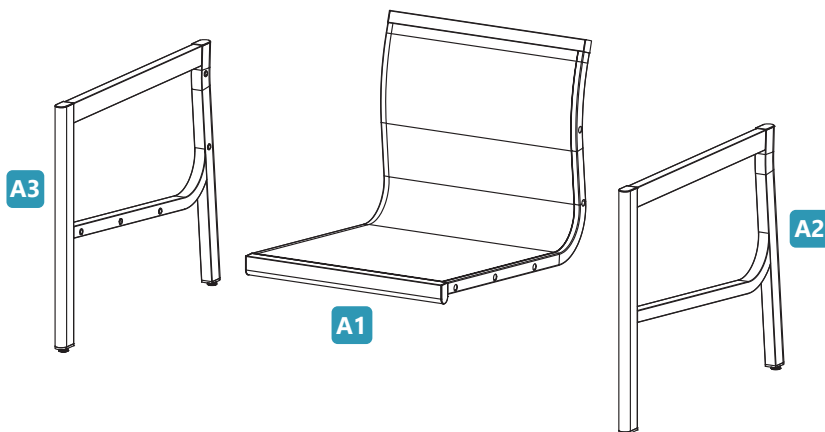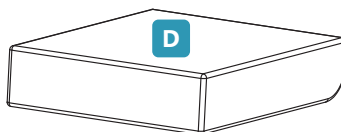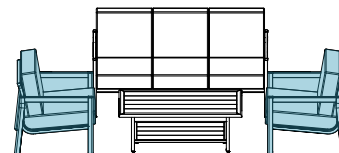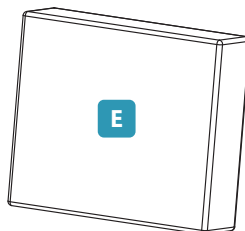

01

A1 x1



 
 
A3 x1



S x2






X

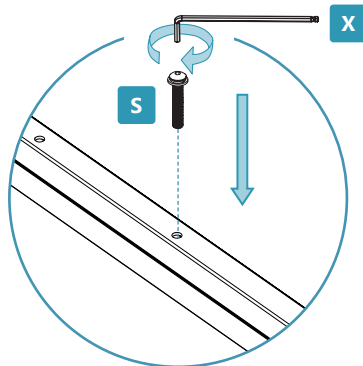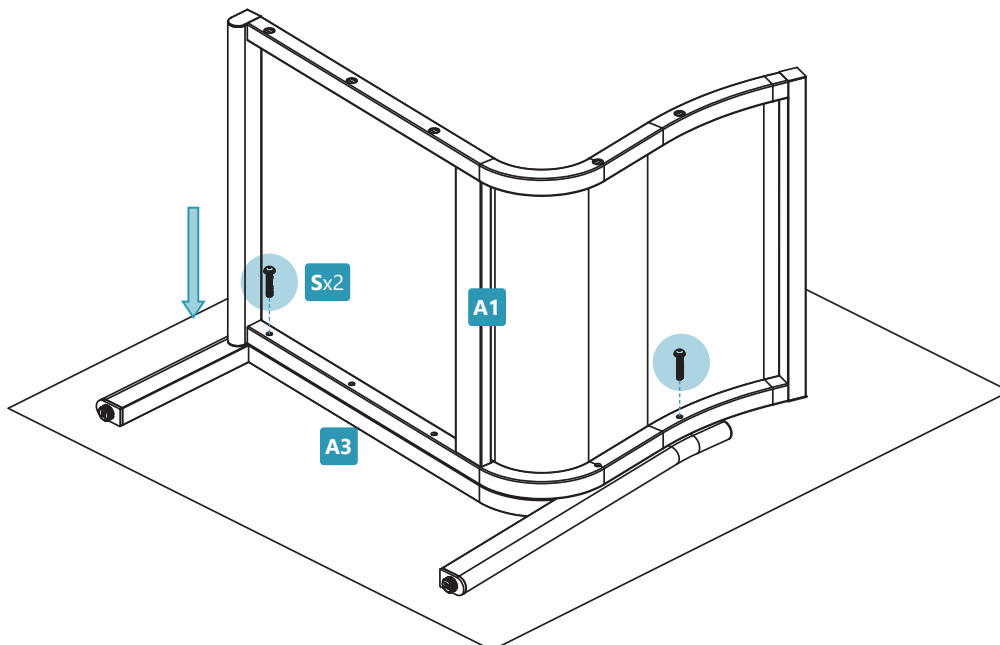



02

S x3

   X

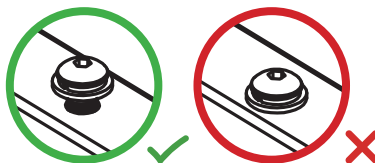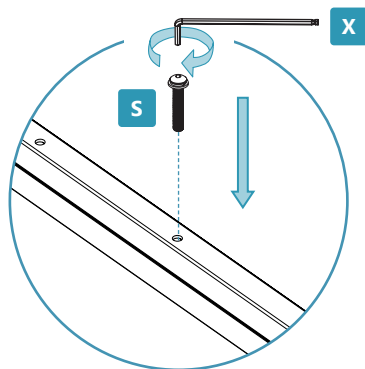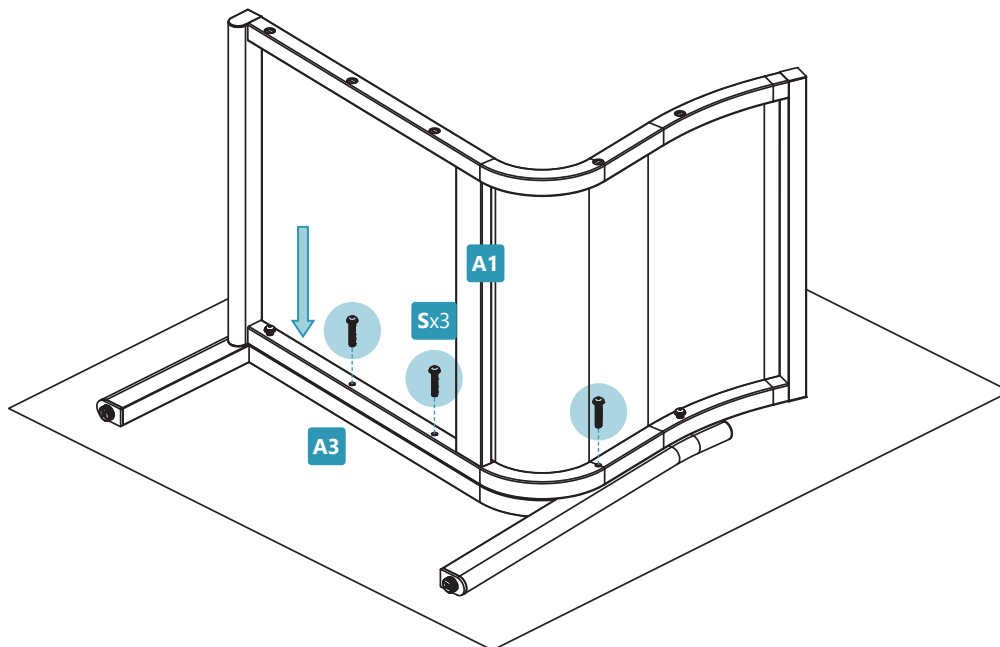

03

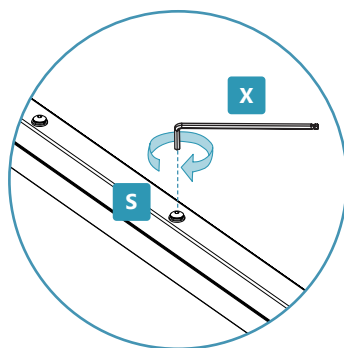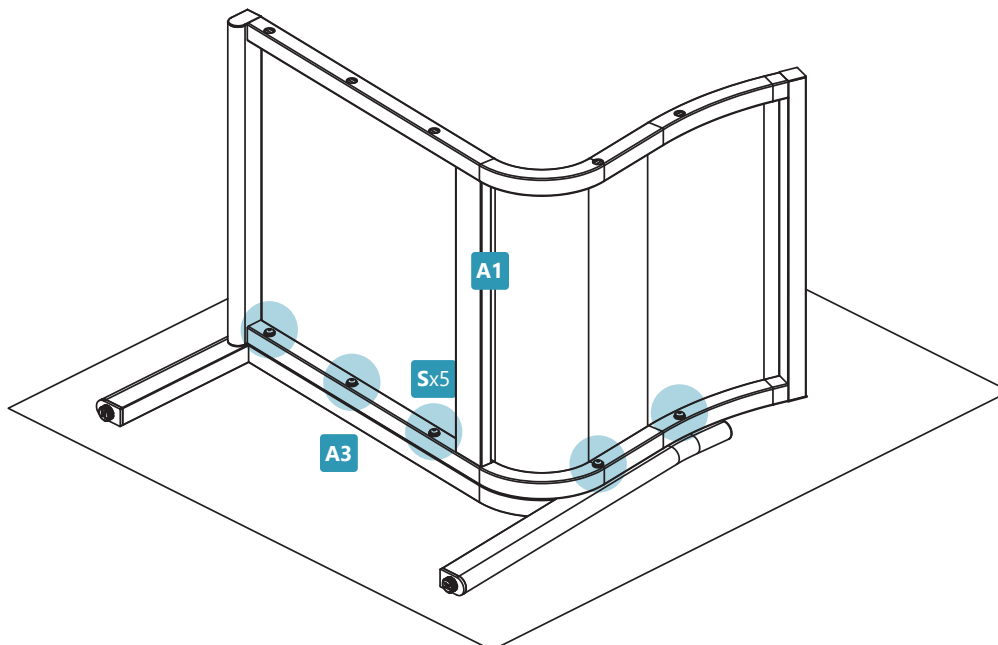  

04

A2 x1



 
S x5



X



01~03

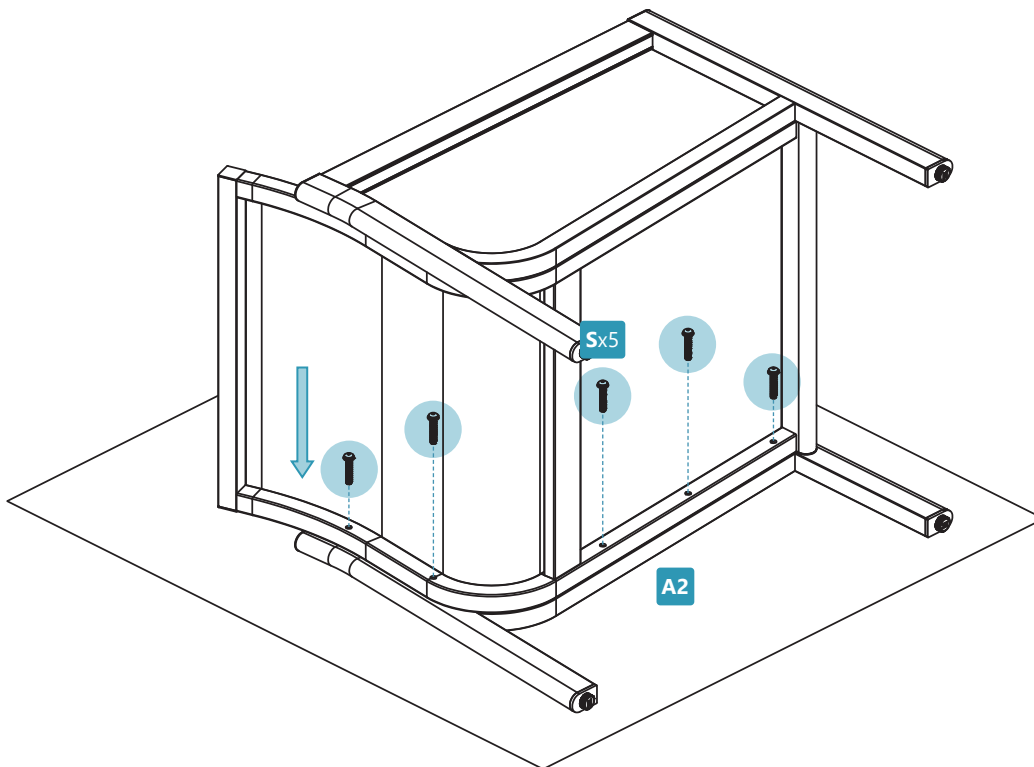


05





D x1



 E x1

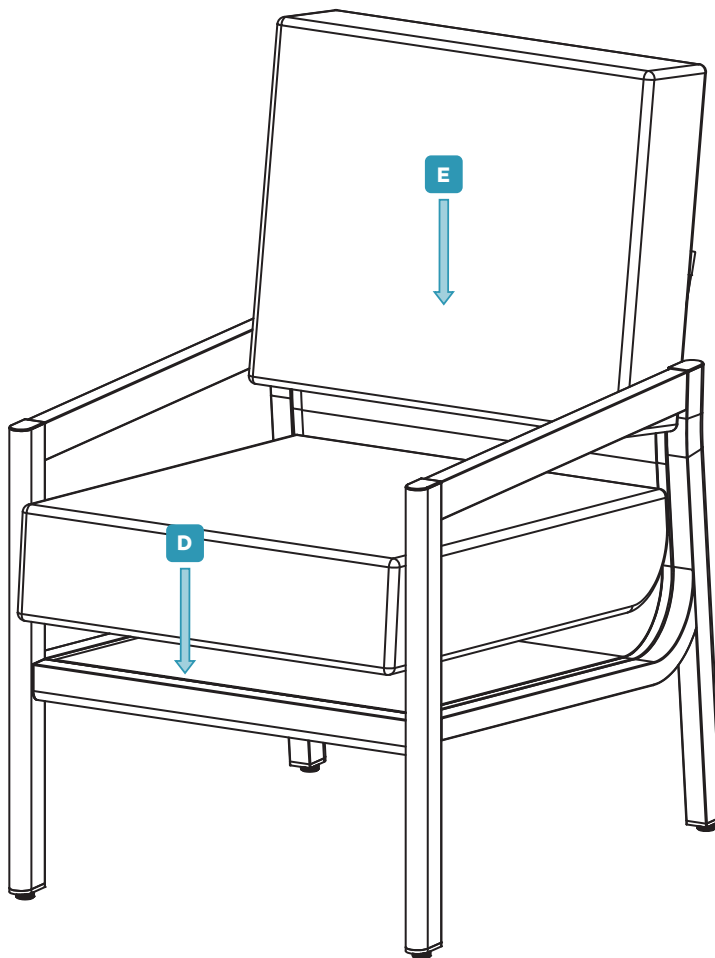

3-Seat sofa

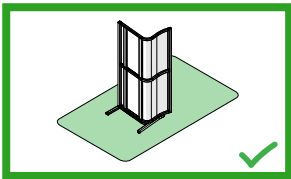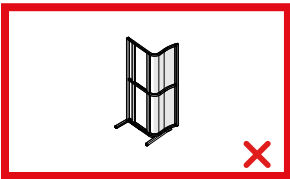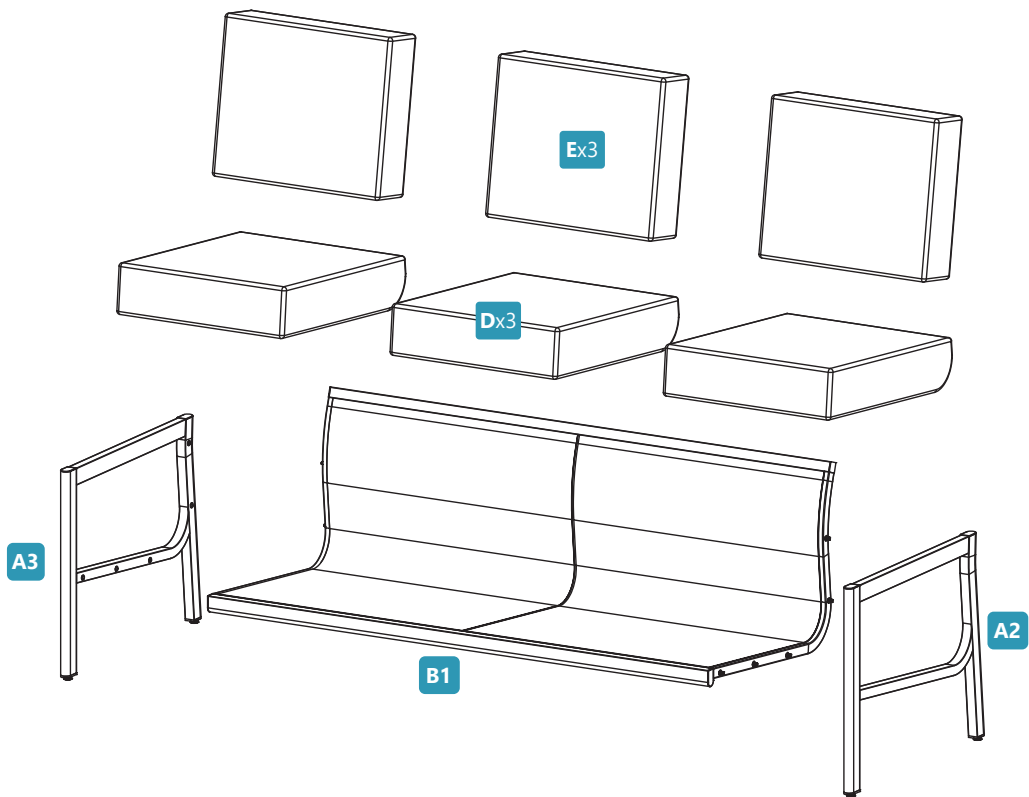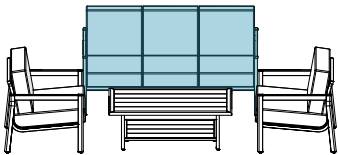    

01

B1 x1



 
 
 
A3 x1



S x2






X

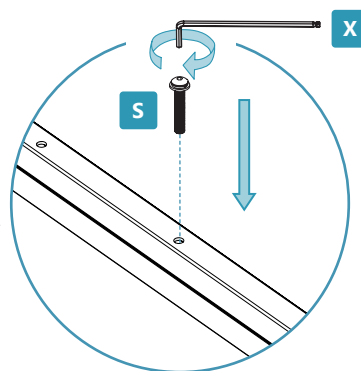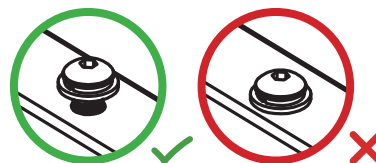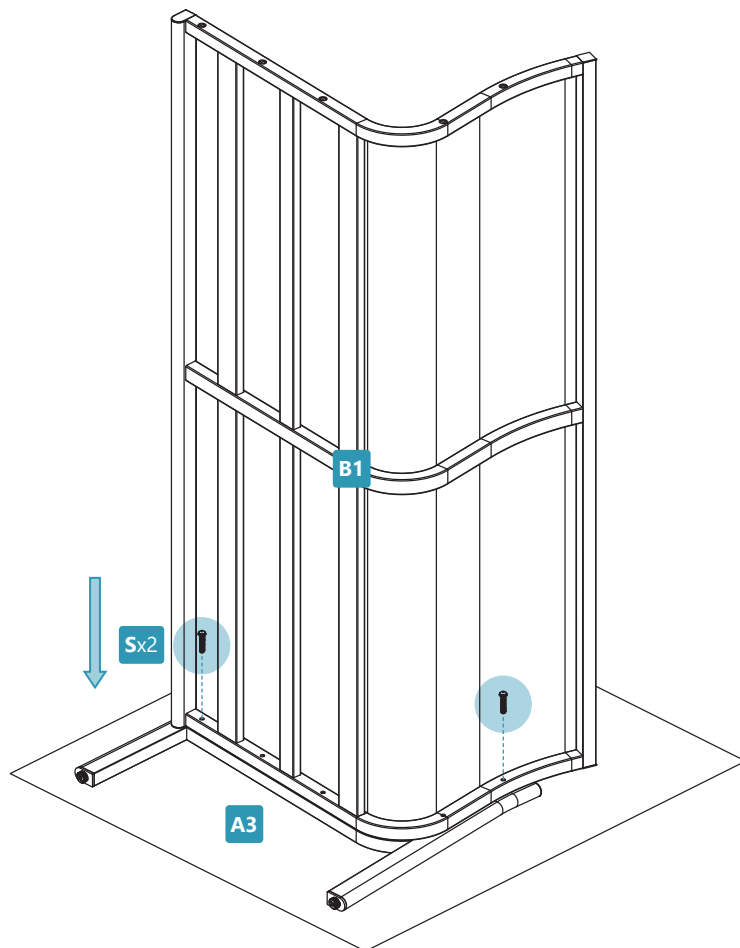



02

S x3

   X

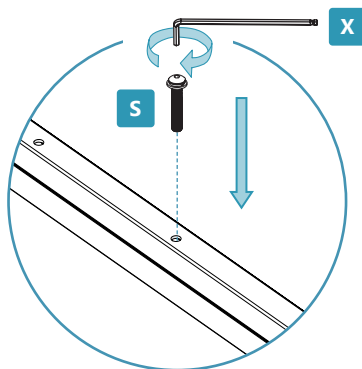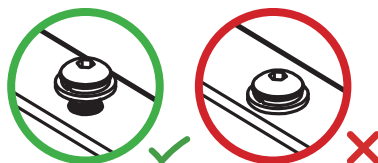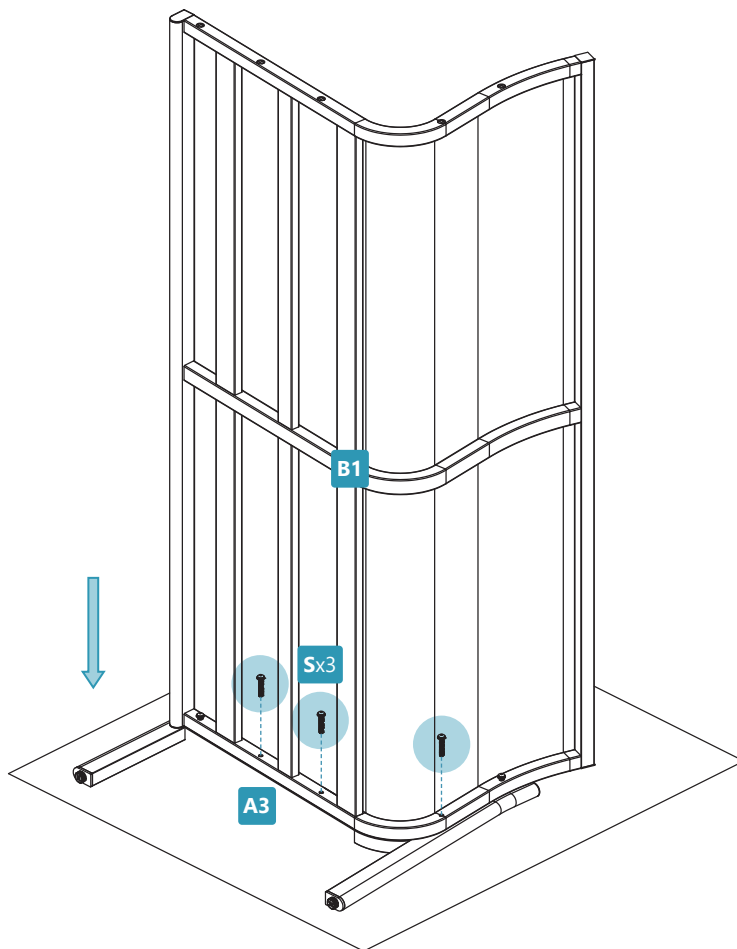

03

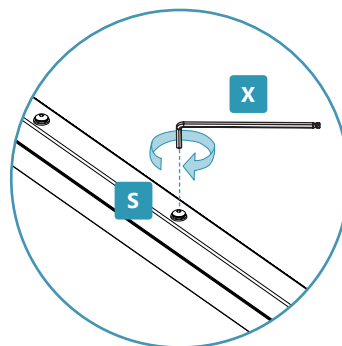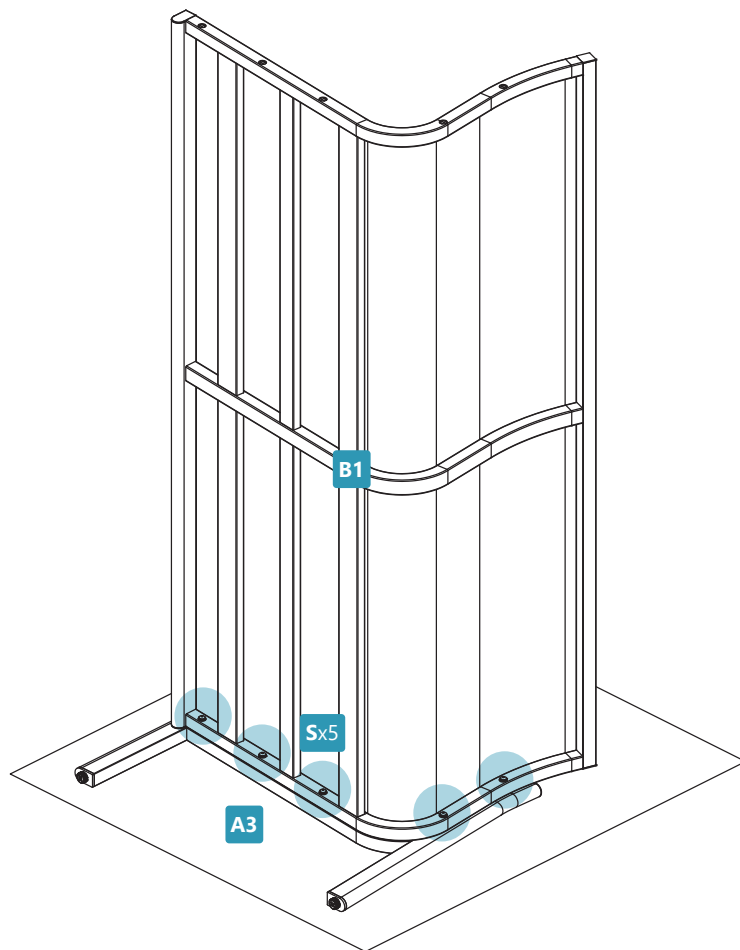  

04

A2 x1



 
S x5



X




01~03

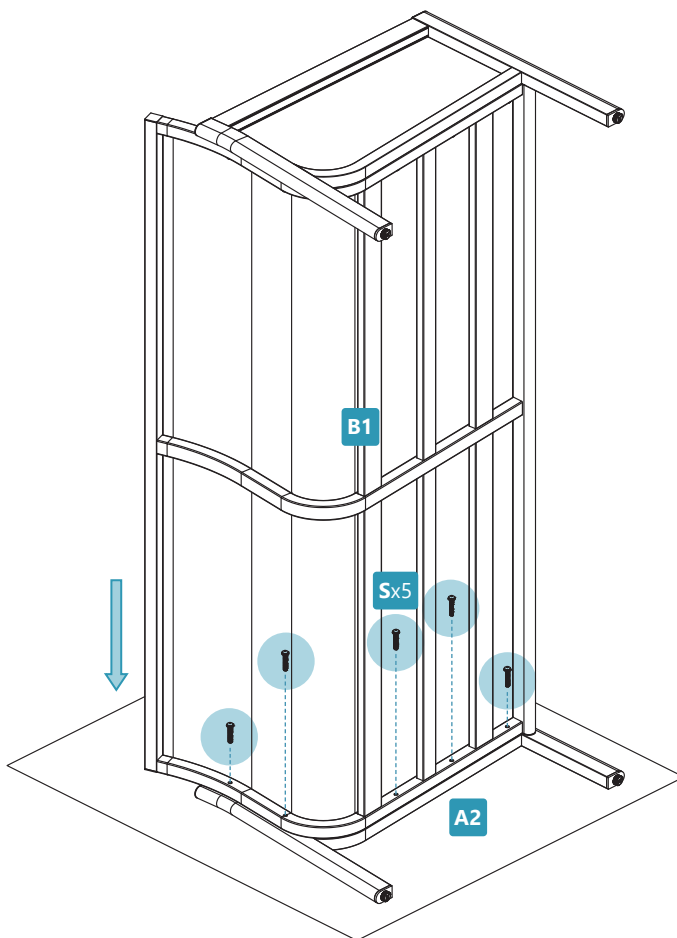


05




 
D x3



E x3

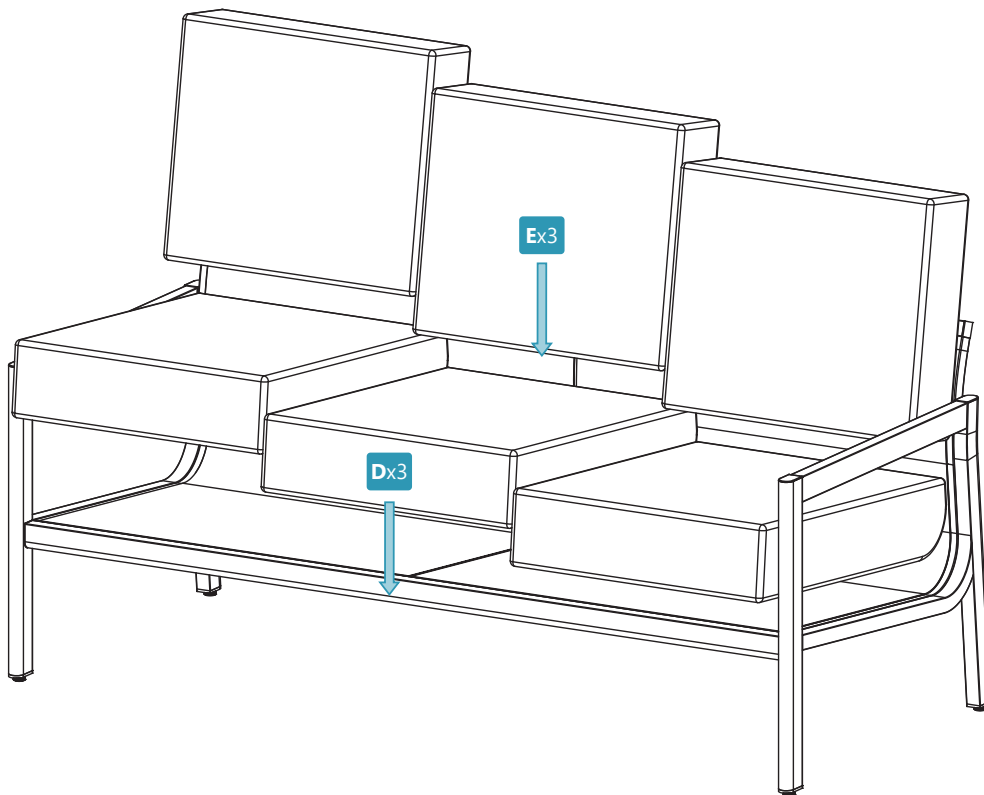 

Coffee table

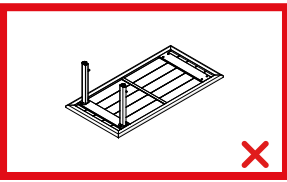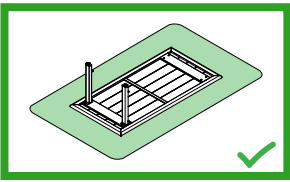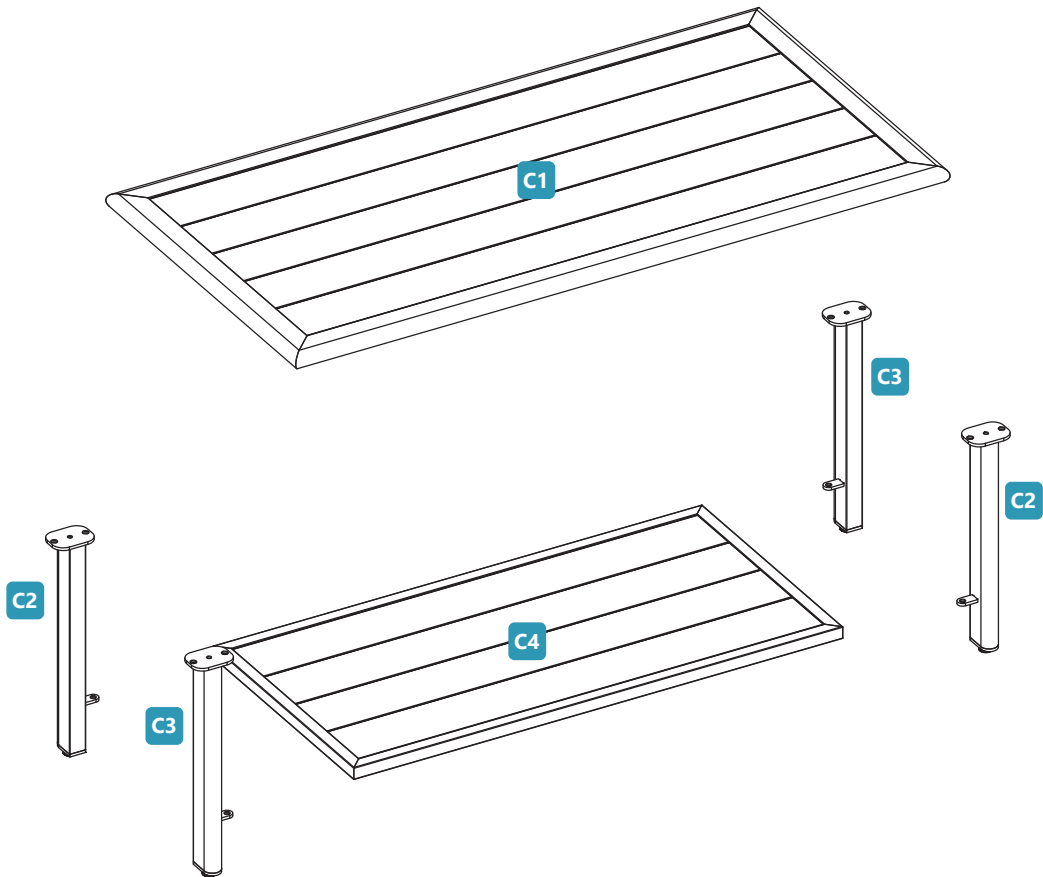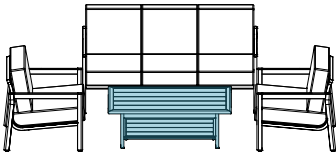    


01

C1 x1



 C2 x1





C3 x1



J x4




  X

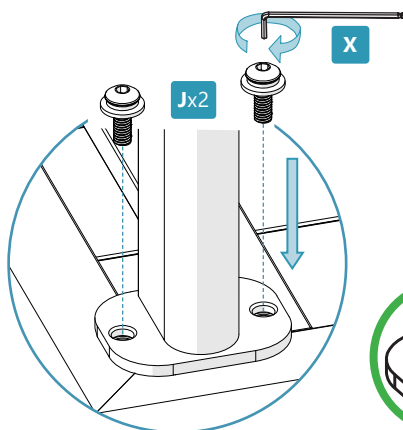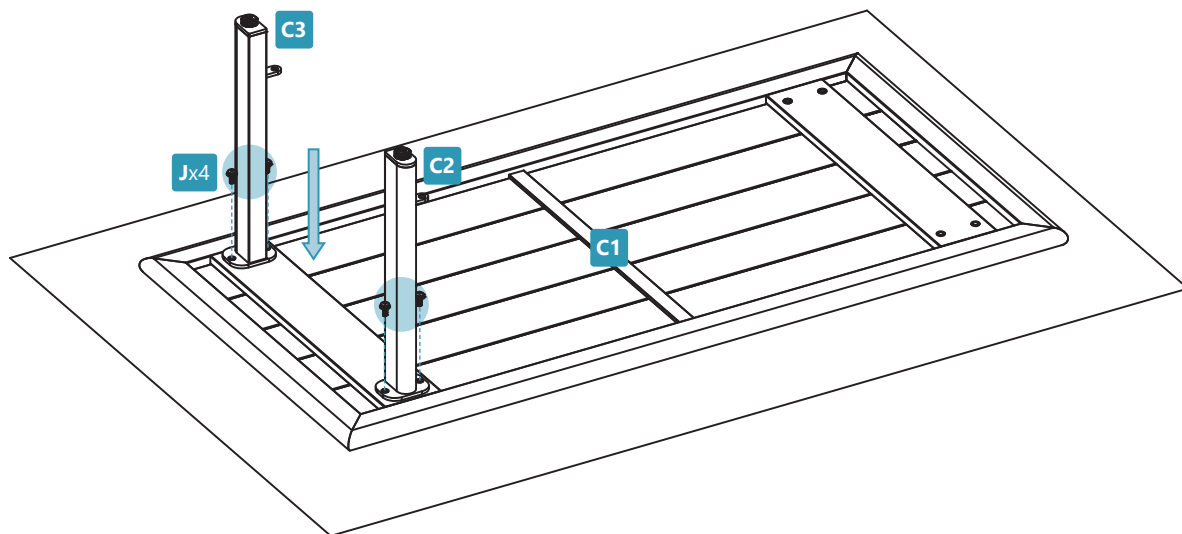


02

 C2 x1





C3 x1

 

J x4



  X

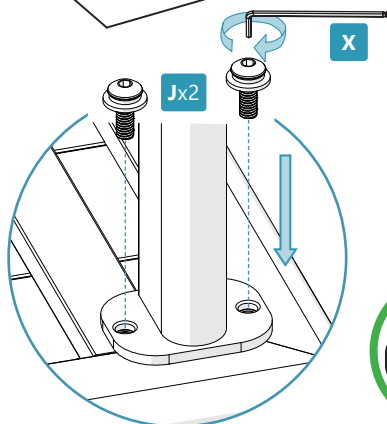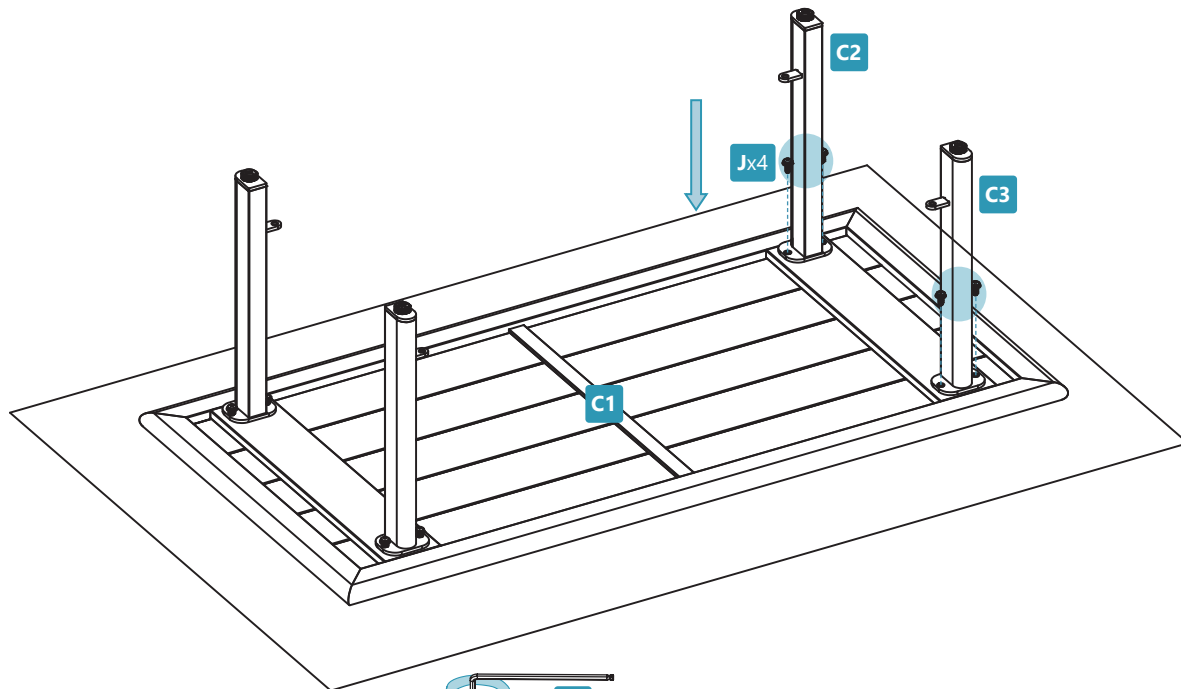

03

 
 
C4 x1








J x4






X

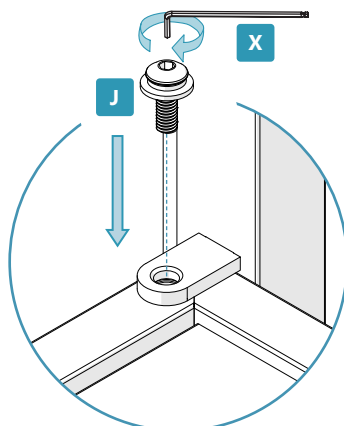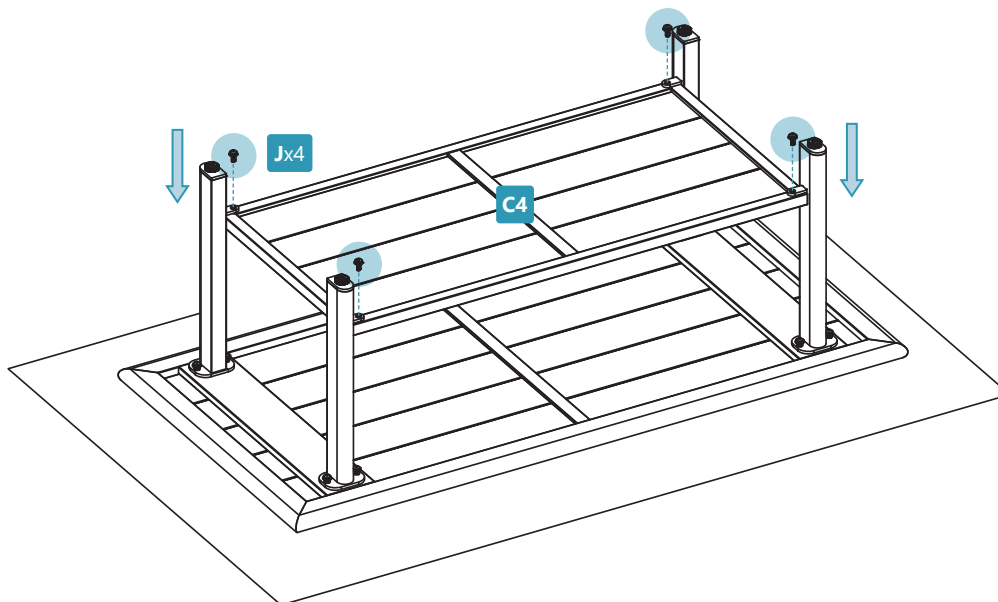


04

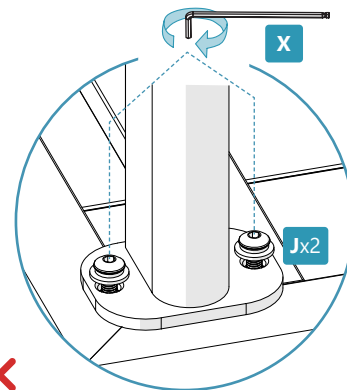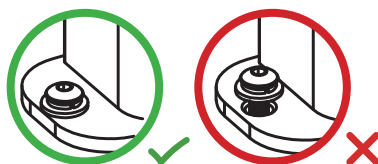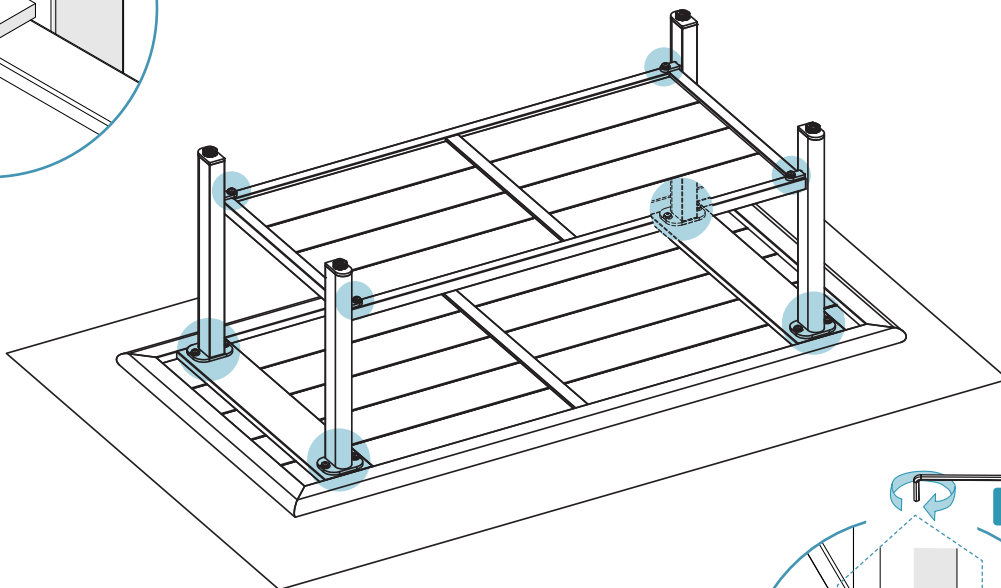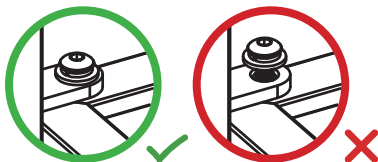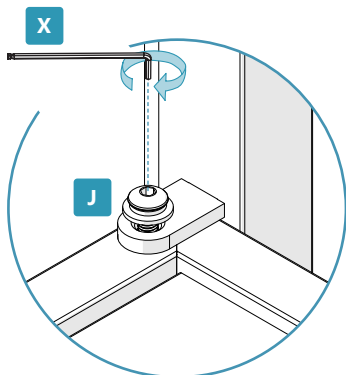     

ENJOY YOUR FURNITURE

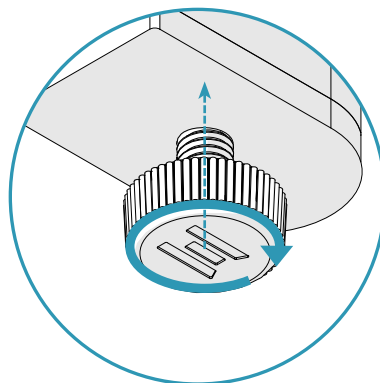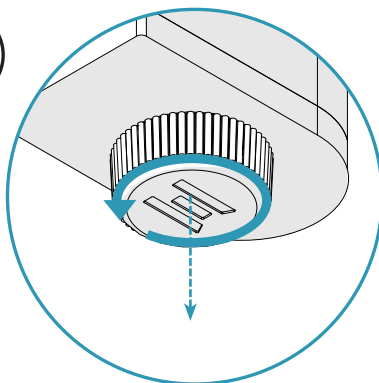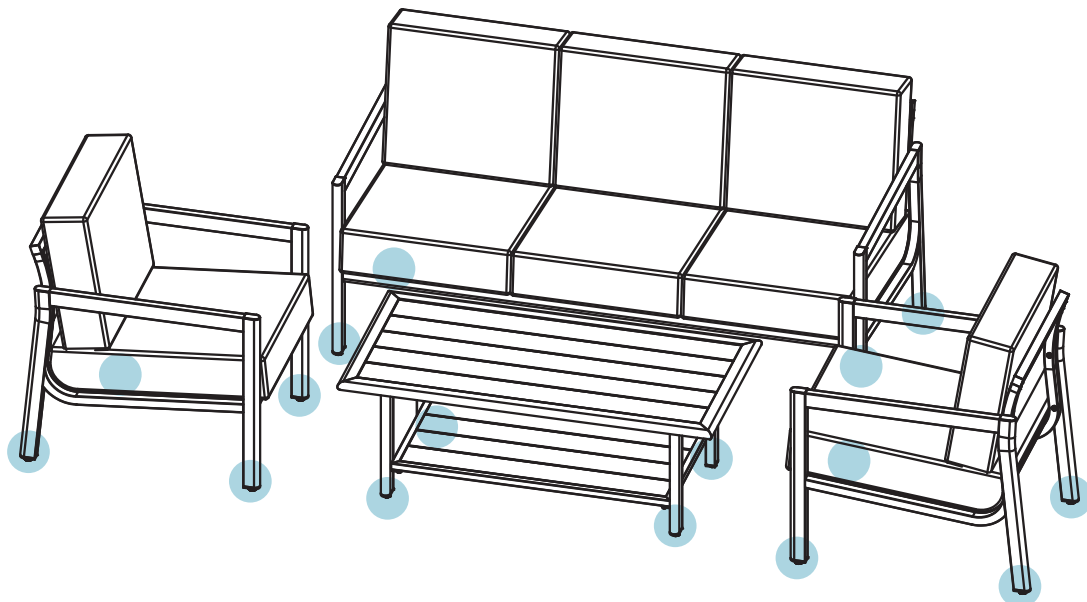   

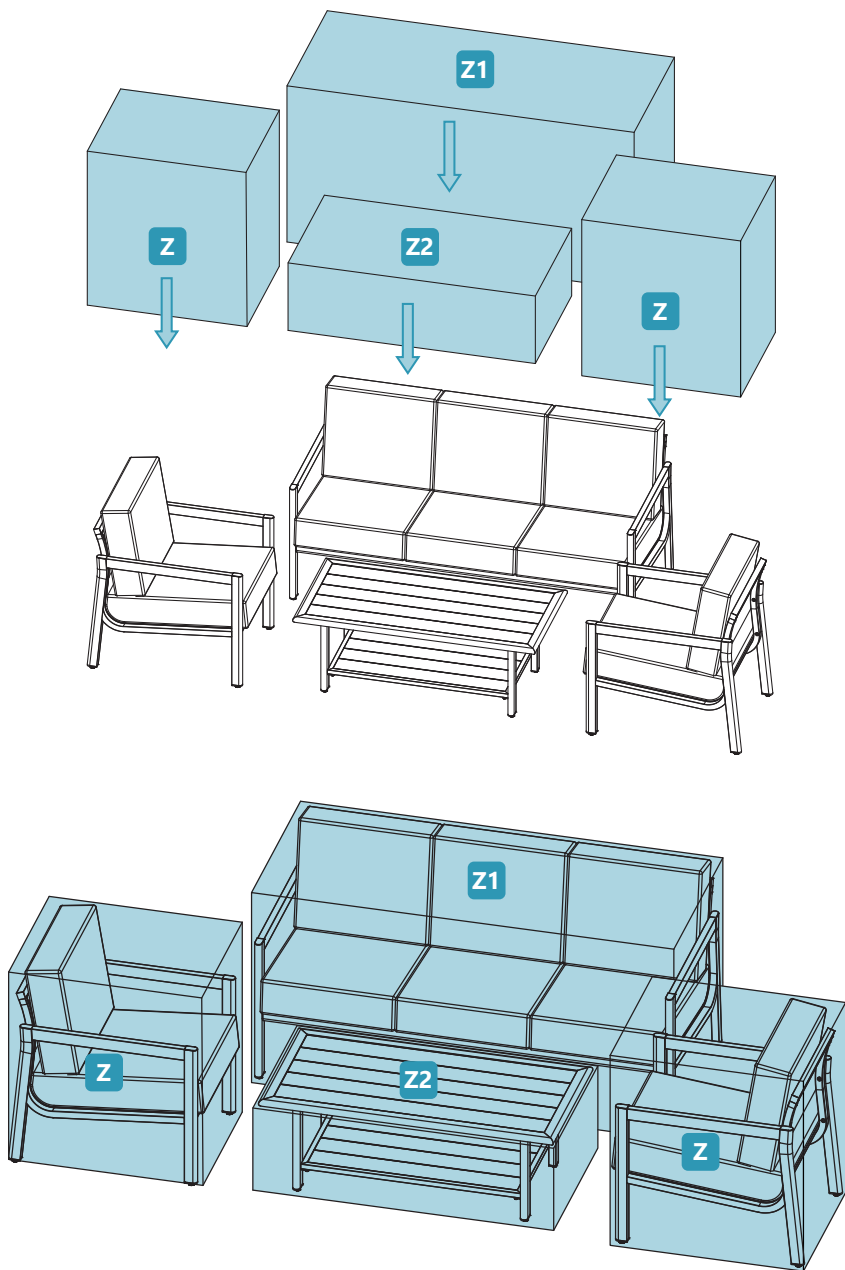 

CARE & MAINTENANCE



FURNITURE COVER

- Use the furniture cover included to protect your set from harsh weather and UV rays.
- Ensure both the furniture and cover are clean and dry before covering.
- Remove the cover promptly after rain or humid weather to prevent moisture buildup.



FRAME

- Use only manufacturer-approved replacement parts.
- Regularly check that all bolts and fittings are secure; Tighten if needed.
- Dust and dirt will collect on the frame and will require periodic cleaning.
- Wipe with water or a mild soap, and avoid using any alcohol-based cleaners.
- Keep frame free of accumulated water. Air dry or wipe with a soft clean cloth.



CUSHION

- When the cushion becomes water-saturated, unzip the cushion cover to allow for ventilation and facilitate the drying process. Place the cushions upright with the zipper facing down to drain excess moisture more quickly.
- Store cushions indoors during inclement weather and rainy seasons.



PHIFER SLING FABRIC

- Prepare simple cleaning solution using liquid dish detergent and water.
- Clean fabric using a sponge or soft cloth dipped in solution.
- Rinse thoroughly with clean water and air dry.
- Avoid direct contact with oil-based products, which may cause accelerated aging of fabric. If direct contact occurs, clean promptly.



CUSHION COVER FABRIC

- Cover fabric should be cleaned regularly.
- Brush off any loose dirt and clean with a mild soap and lukewarm water solution.
- Do not use hot water, bleach, fabric softener, or alkaline detergents. Do not soak for extended periods.
- Rinse thoroughly to remove soap.
- Allow fabric to air dry.
- Machine washable. Do not use high-speed spin cycles or high-temperature tumble drying. Avoid washing with sharp objects or heavy garments, as this may reduce the water-repellent performance.

WARRANTY & COMPLAINTS PROCEDURE

For terms and conditions of our limited warranty, please visit www.miradoroutdoor.com/pages/warranty or contact your local Mirador sales representative.

Complaints procedure:

- The complaint must include an order number or transaction number. Goods without an order number or transaction number are not covered under the warranty.
- The complaint must include a detailed description of the defect, the name of the company which assembled the product if a 3rd party was used and the date when the defect was discovered.
- Customer must offer supplier the photos/videos of the issue/damaged parts. Otherwise, supplier reserves the right to refuse replacement parts or credit.
- Please save a copy of your purchase receipt.

Contact: North America



Phone

+1 (877)-506-4777

Operation hours: Monday - Friday: 5:00 am - 11:00 pm, Saturday – Sunday: 8:30 am – 4:30 pm, PST.

Language: English and Spanish



E-mail

support@miradoroutdoor.com

Operation hours: We are available 24 hours a day. Please allow up to 24 hours for a response.

Language: English, Spanish and Canadian French



Online

miradoroutdoor.com

Operation hours: Monday - Friday: 5:00 am - 11:00 pm, Saturday – Sunday: 8:30 am – 4:30 pm, PST.

Language: English, Spanish and Canadian French

Contact: Europe



Online

miradoroutdoor.com

Operation hours: Monday - Friday: 9:00 am - 6:00 pm, CET.

Language: English, French, German and Dutch



E-mail

customerservice
@miradoroutdoor.com

Operation hours: We are available 24 hours a day. Please allow up to 24 hours for a response.

Language: English, French, German and Dutch

Note: Our team is available to assist you during these hours. If you have any inquiries or require support outside of these hours, please leave a voicemail, send an email, or use our online contact form. We will get back to you promptly during the next available support hours. Thank you for choosing Mirador Outdoor!

more to
enjoy

FOLLOW US ON
WWW.MIRADOROUTDOOR.COM

 @miradoroutdoor  @MiradorOutdoor
 @miradoroutdoor  @miradoroutdoor

