

TV STAND



ASSEMBLY INSTRUCTIONS

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish .
Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give you years of enjoyment .



Please do not return to the store
. Broken or missing parts?
. Need help with assembly?

Hardware List



Wood dowel (8pcs)



Flat head screw (8pcs)



Allen bolt (8pcs)



Lock washer (8pcs)



Flat washer (8pcs)



Allen Wrench (1pc)

Part List

(1)




Crossbar (1pc)

(2)




Crossbar (1pc)

(3)

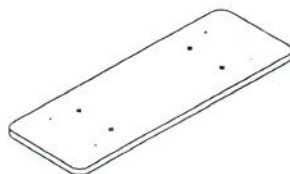


Shelf (1pc)

(4)

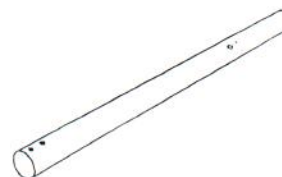

Leg (2pcs)

(5)

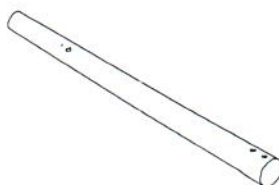

Leg (2pcs)


(6)



Top (1pc)


step1

1. Insert wood dowels (A) to shelf (3) as shown.
2. Connect the crossbar (1) (2) to shelf (3) as shown using flat head screws (B).

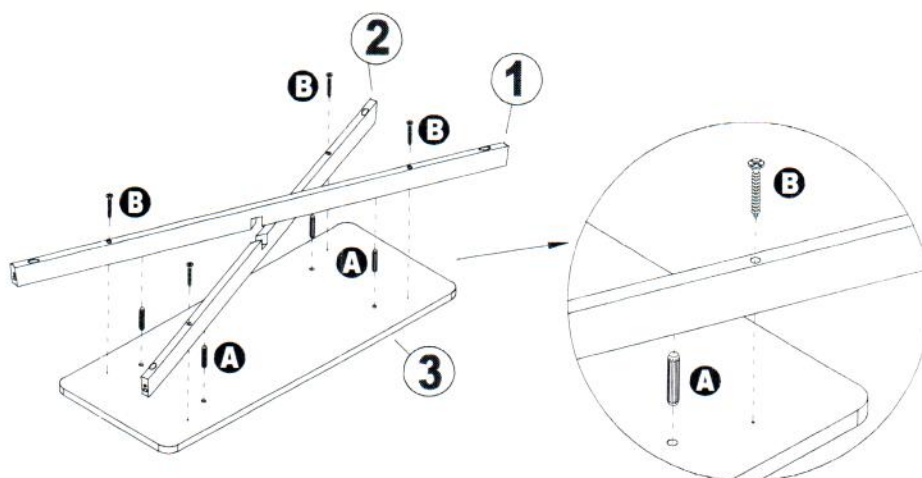

step2

1. Attach the legs (4) (5) to shelf assembly as shown using wood dowels (A) and flat head screws (B).

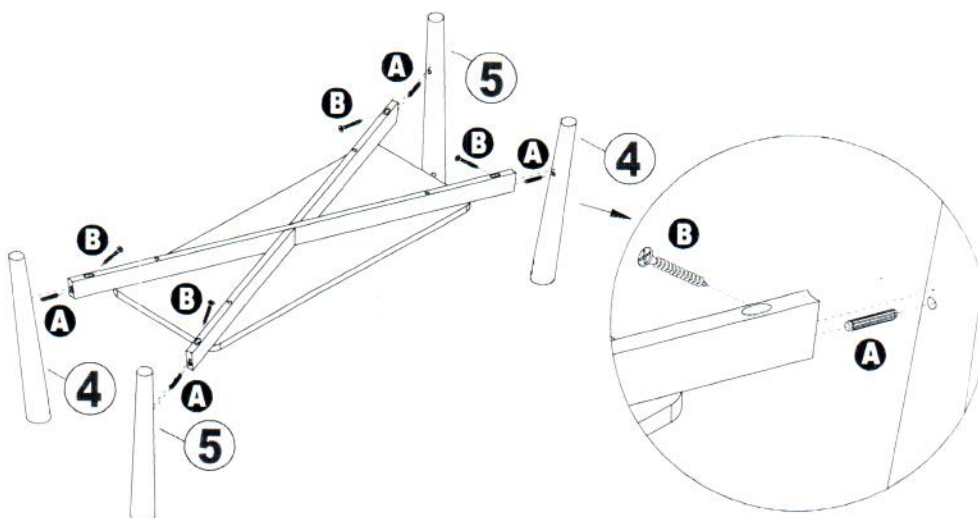

step3

1. Connect the top (6) to leg assembly as shown using allen bolts (C), lock washers (D) , flat washers (E) ,and allen wrench (F).

Note: See diagram below for correct parts sequence.

