 
 


ASSEMBLY INSTRUCTIONS

 
 
 
 
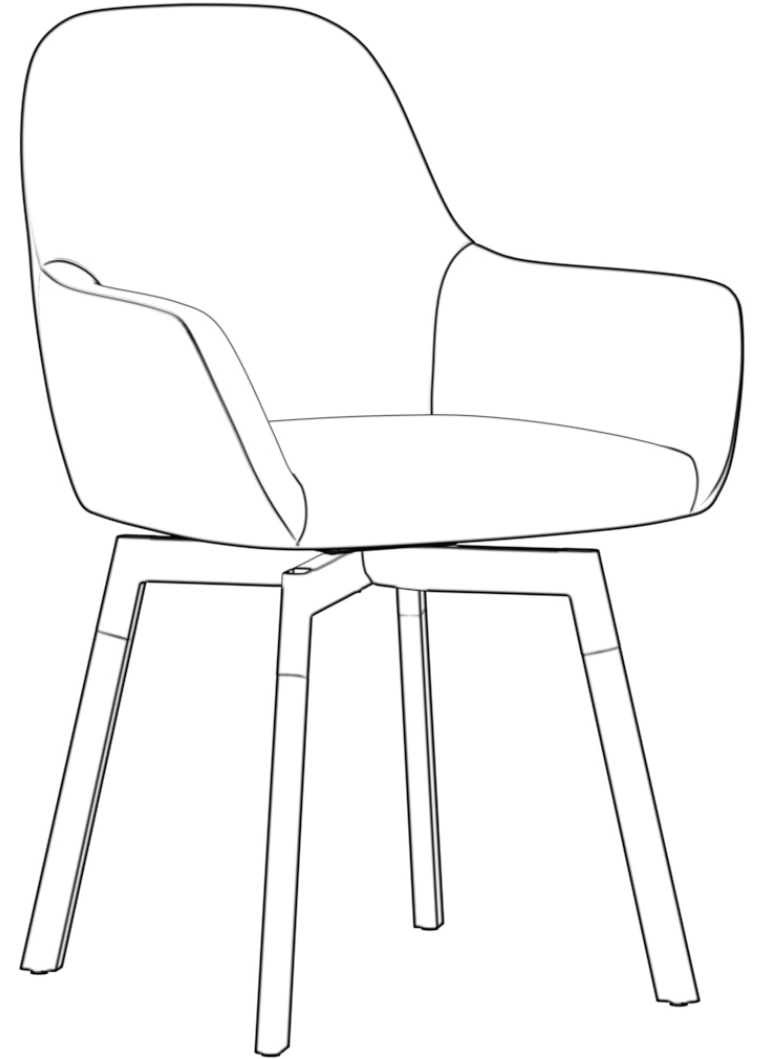 


**If you feel that the chair is not balance
you can adjust the foot nails to level according to your needs**

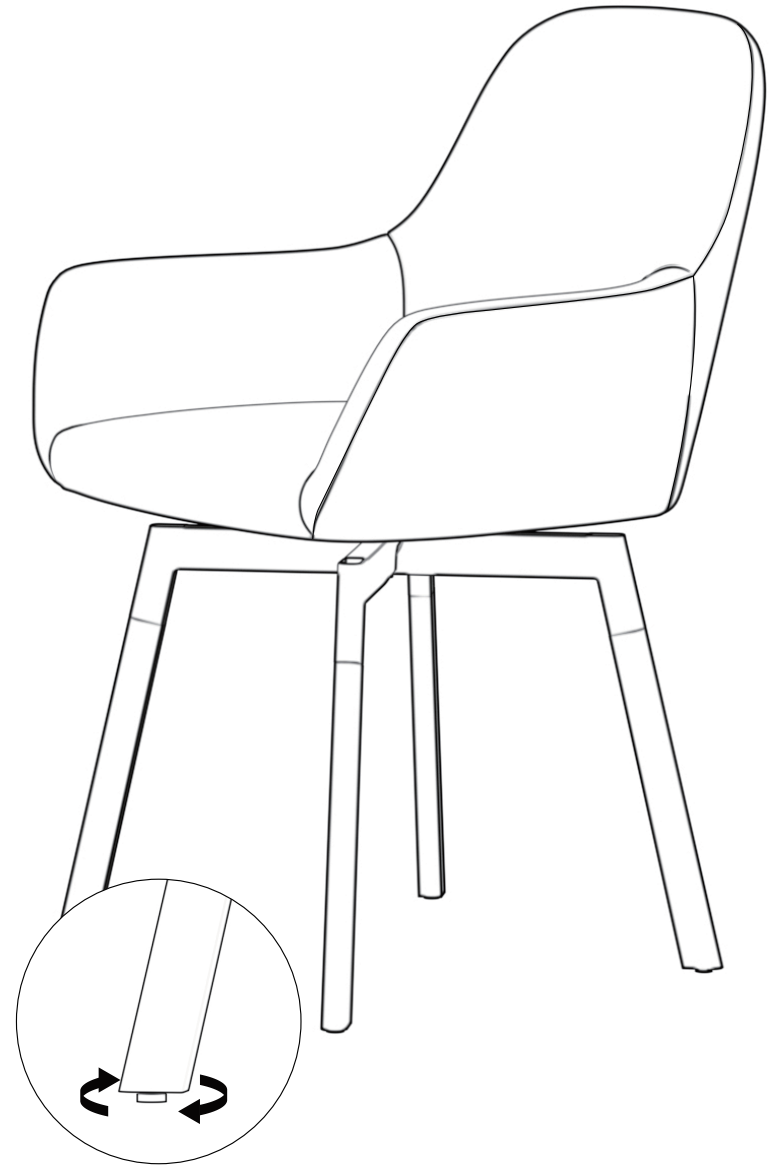


Be sure to keep spare parts.


If screws or nails of a product are damaged or lost,
or screws or nails of a subsequent product are
damaged or aged, spare parts can be used to replace them.

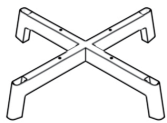1**Ax1****Bx4****Fx4****Gx4****Ix4****2****Dx1****Hx4**

 
1-1 First remove the pre-installed screws counterclockwise.

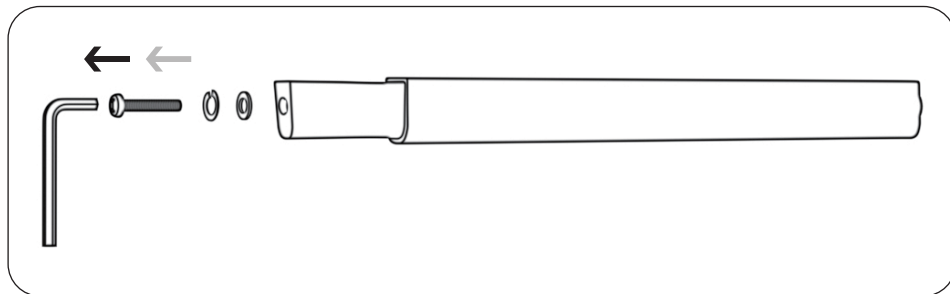


1-2 Please install 4 screws I to 100%.

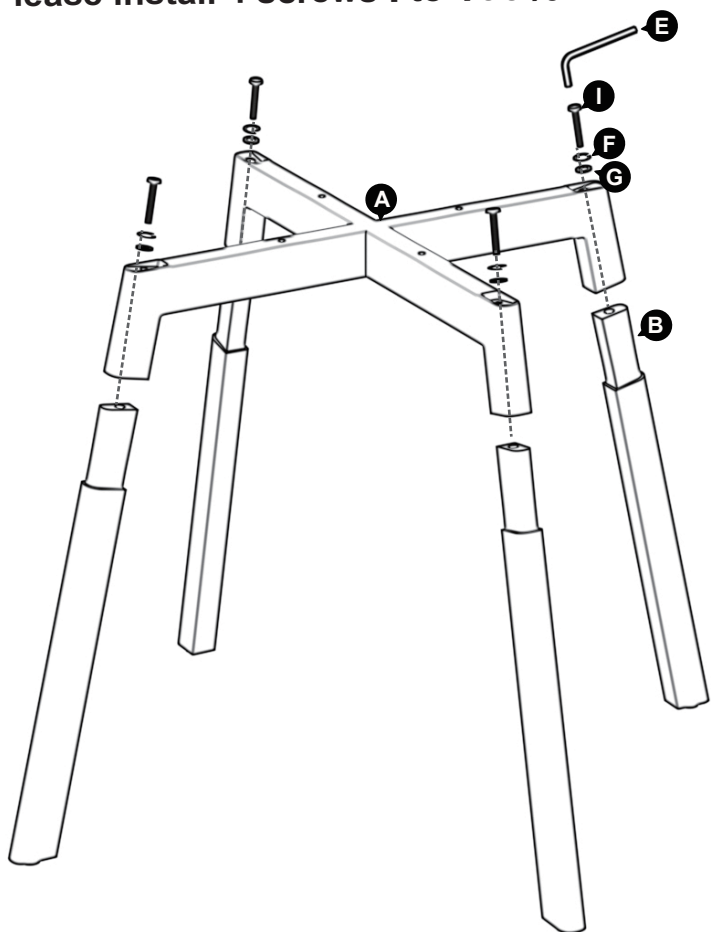 

2-1 Please rotate part D by 45°.

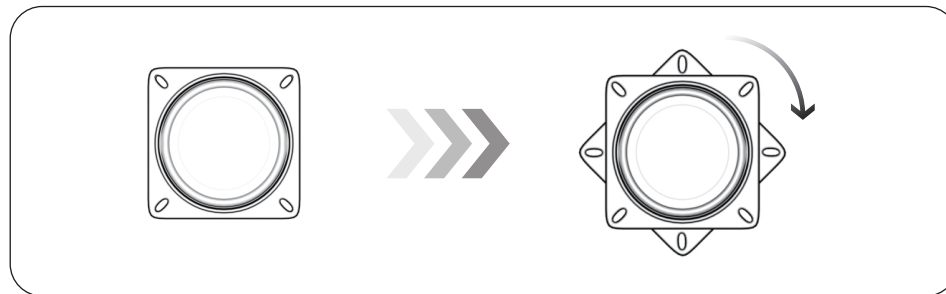 

 
2-2 Please install screw H to 50% in sequence first
After 50% of screw H is pre-install, tighten all screws to 100%

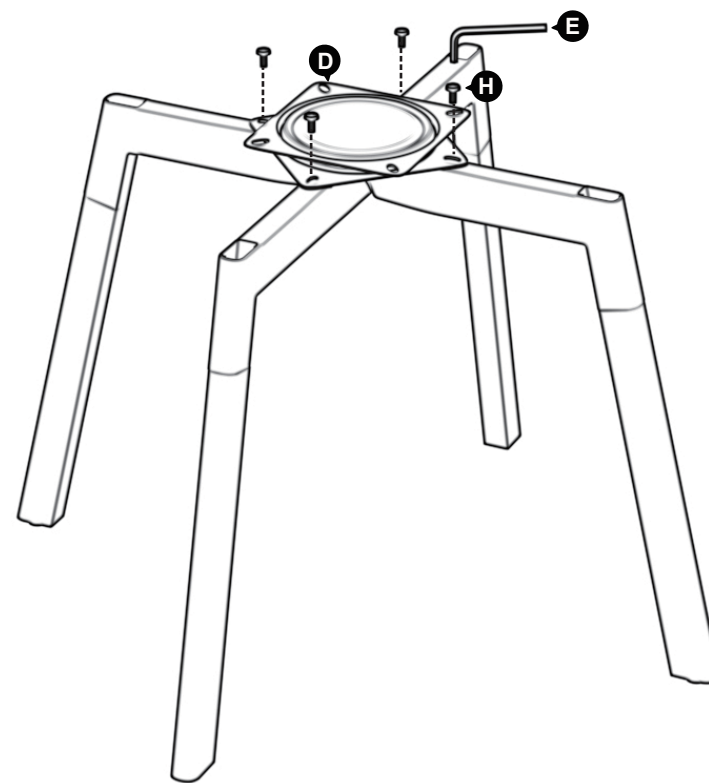

3




 Cx1




Hx4

 
Please install screw **H** to 50% in sequence first
After 50% of screw **H** is pre-install, tighten all screws to 100%

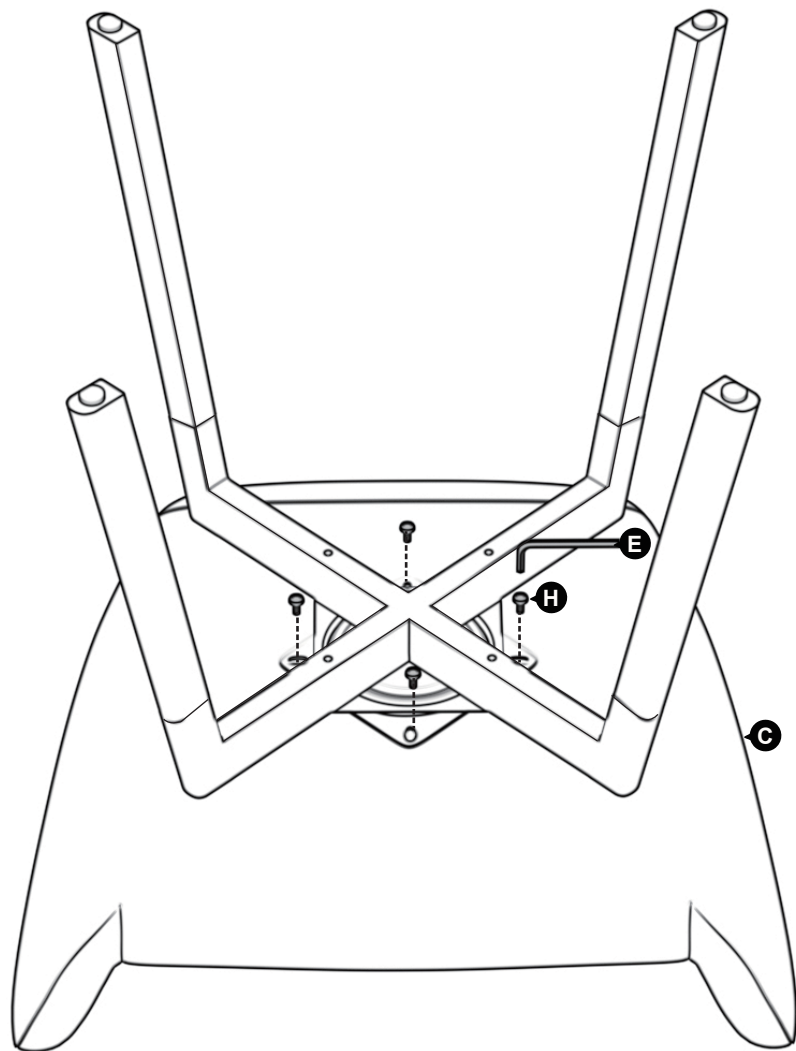

SPARE PARTS

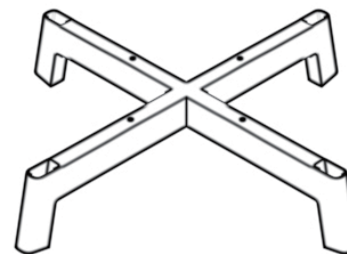 


Ax1

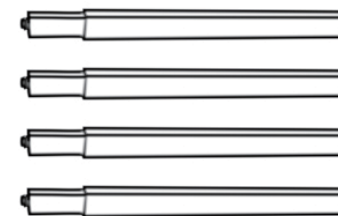 

Bx4



 Cx1

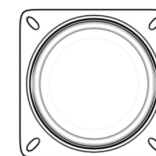

Dx1




Ex1




Fx4



 Gx4



Hx8+1extra
(M6*16mm)

 

lx4+1extra
(M6*40mm)