

TOWEL WARMER

ITEM NO: 850-057

Model No: BK-109A



Instruction manual:

This towel warmer is intended for the use in bathrooms or laundry areas.

Read the instructions carefully before operating.

Specification

Voltage: AC120V

Frequency: 60Hz

Rated power:100W

Unit size: 870*530mm

OPERATING INSTRUCTION

1. Please read the wall-mounted installation carefully to understand how to install on your ideal location of the wall.
2. Make sure to complete the installation.
3. Plug the power cord into an electrical outlet.
4. Power on/off switch:
 - a. Connect to the suitable power, press the switch at (1) position, the power indicator will light up and the heater will operate.
 - b. Press the switch at (o) position, the power indicator is off and this heater will not operate.

Maintenance

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

WARNING

 
 
 
 
 
 
This appliance is intended only for drying textiles washed in water.

 
THE TOWEL AND CLOTH WARMER IS ONLY ALLOWED TO BE INSTALLED AT A DISTANCE OF AT LEAST 0.6M FROM BATH TUBES SHOWERS.

WARNING: In order to avoid a hazard for very young children, this appliance should be installed so that the lowest heated rail is at least 600 mm above the floor

The towel rail is to be installed so that switches and other controls cannot be touched by a person in the bath or shower.

WALL-MOUNT INSTALLATION INSTRUCTION

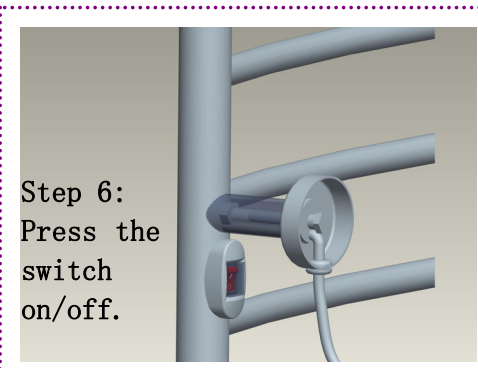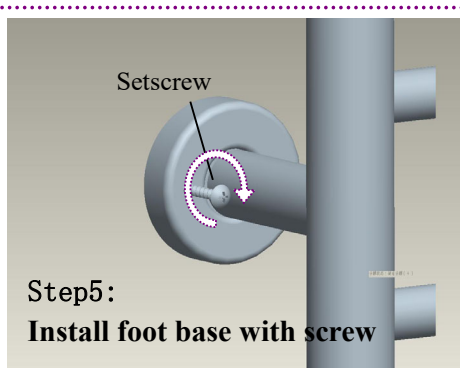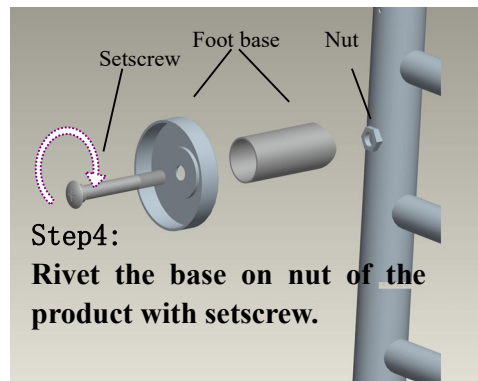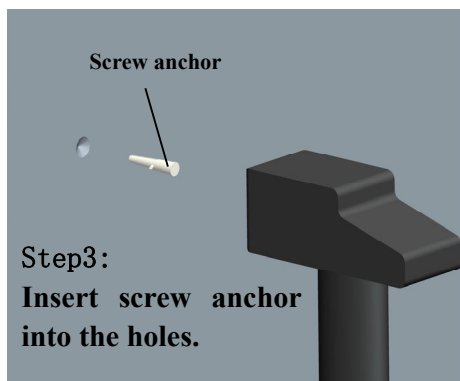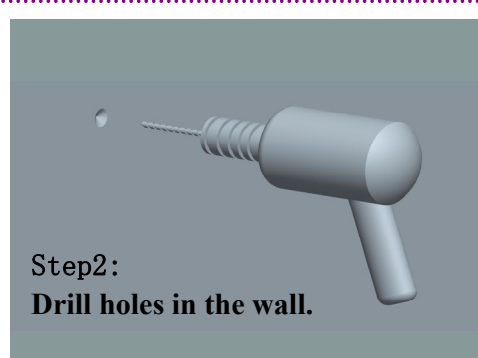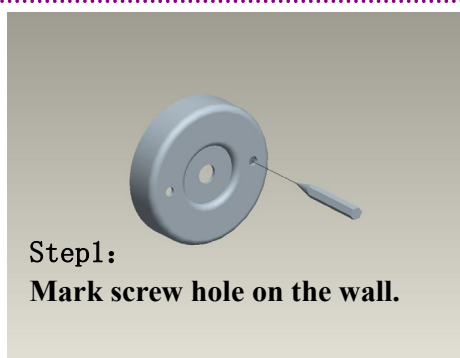

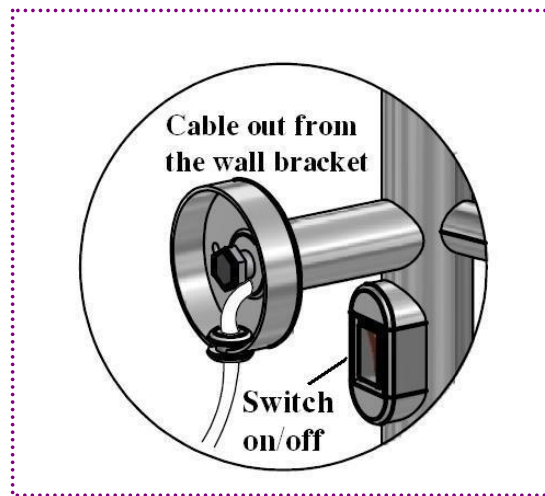

IMPOTANT SAFEGUARDS

1. Read all instructions before using this heater.
2. Extreme caution is necessary when towel warmer is used by or near children or invalids and whenever the heater is left operating and unattended.
3. Always unplug heater when hot in use.
4. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner .Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
5. Do not use outdoors.
6. Never locate heater where it may fall into a bathtub or other water containers.
7. Does not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like?
Arrange cord away from traffic area and where it will not be tripped over.
8. To disconnect heater, remove plug from outlet.
9. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire or damage the heater.
10. Do not use it in area where gasoline, paints, or flammable liquids.
11. Use this heater only as described in this manual .Any other use not recommended by the manufacture may cause fire, electric shock, or injury to persons.
12. Keep these instructions for your late reference.

CAUTION:

- THIS HEATER ONLY OPERATES IN UPRIGHT POSITION.**
- STORE THE HEATER IN COOL DRY LOCATION WHEN NOT IN USE.**
- DO NOT STORE UNTIL THE HEATER HAS COOLED DOWN.**
- ANY OTHER SERVICING SHOULD BE PERFORMED BY AN AUTHORIZED SERVICE REPERSENTATIVE**
- THE HEATER MUST NOT BE LOCATED IMMEDIATELY BELOW A SOCKET-OUTLET.**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.