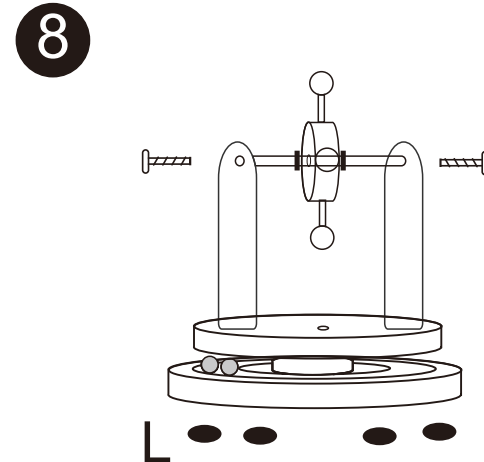 
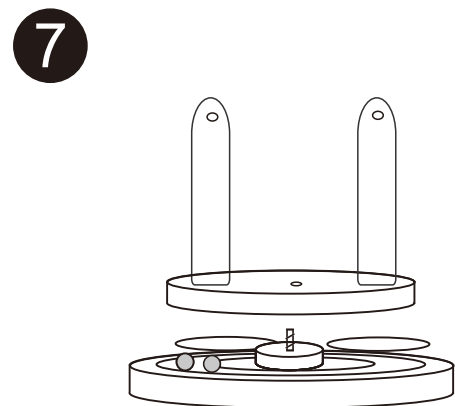 
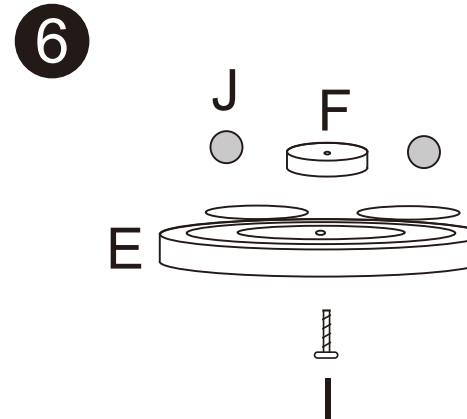 
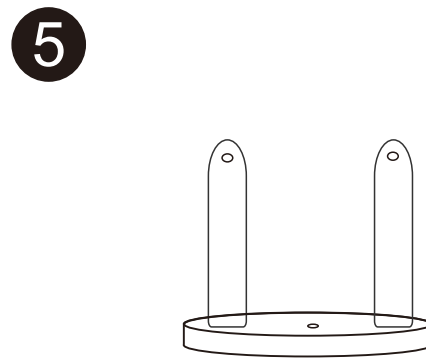 
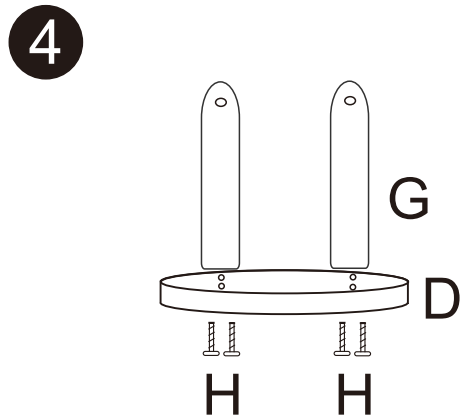 
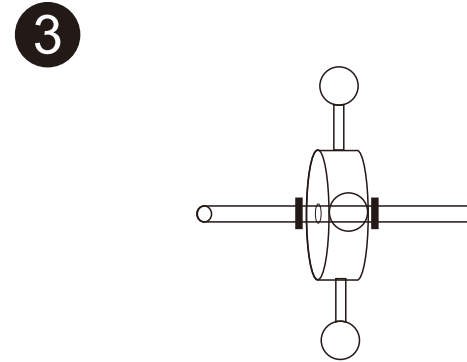 
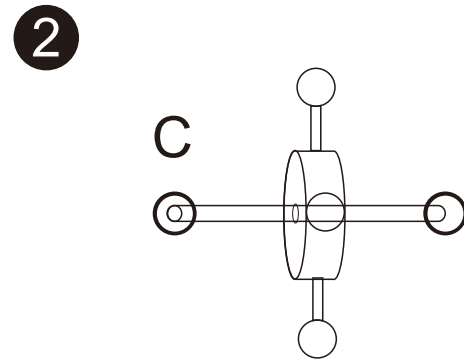 
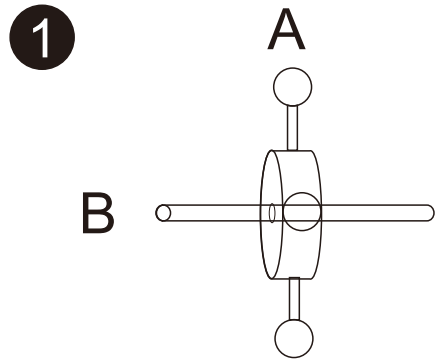 
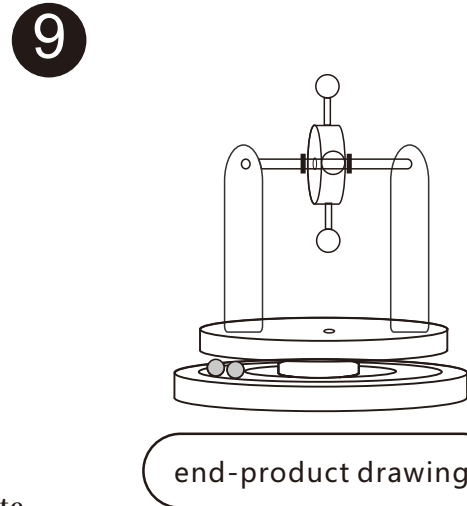 



 






 

 

S1602



Stick anti slip pads on the bottom plate



mm

A	 270*270	x1
B	 120	x1
C	 24*24	x2
D	 195*195	x1
E	 290*290	x1
F	 70*70	x1
G	 70*220	x2
H	 5*30	x6
I	 8*40	x1
J	 24*24	x2
K	 5*75 3*60	x2
L	 25*25	x4

Step 1: Use a wooden stick to pass through the turntable

Step 2, 3: Place two rubber bands on the wooden stick (near the turntable)

Step 4, 5: Connect two wooden boards G and circular board D with screws H

Step 6: Thread screw I through the bottom plate E and F, and place a mint ball on the track

Step 7: Connect the installed fourth part to the bottom plate

Step 8: Install the wooden stick onto wooden board G