


ASSEMBLY INSTRUCTIONS

CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE.

1. SCREW POLE (G) TO BASE (H).
2. SCREW THE POLE OF UPPER SOCKET PART (F) TO POLE (G).
3. INSTALL HANDLE (E) TO THE REAR OF UPPER SOCKET PART(F).
4. ALIGN THE METAL SHADE (C) TO SOCKET (D) AND TIGHTEN WITH SOCKET RING (B).
5. INSTALL RECOMMENDED BULB (NOT INCLUDED IN THIS PACKAGE).
6. ALIGN THE MESH SHADE (A) TO SHADE (D) AND FIX WITH SCREWS (I).
7. INSERT THE PLUG TO AN OUTLET.

ENJOY YOUR LIGHT!

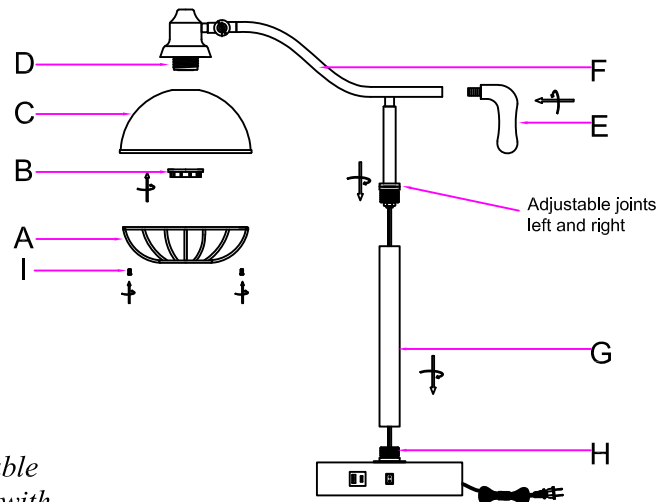

*Please Note: This fixture is adjustable to get desired location of the light with the handle at the rear of the arm. ****

USE MAX 60W TYPE
A BULB (BULB NOT INCLUDED)

EQUIPPED WITH 1 USB CHARGING
PORT AND 1 TYPE C CHARGING PORT

TO REPLACE THE BULB:

TURN OFF POWER (UNPLUG FROM THE WALL OUTLET) BEFORE REPLACING THE BULB, MAKING SURE THE BULB HAVE SUFFICIENT TIME TO COOL DOWN.

DO NOT SUBJECT THIS FIXTURE TO ANY SHOCK WHILE LIT AS SHATTERING OF BULBS MAY RESULT.

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.