 


**ZFK011WT-11**

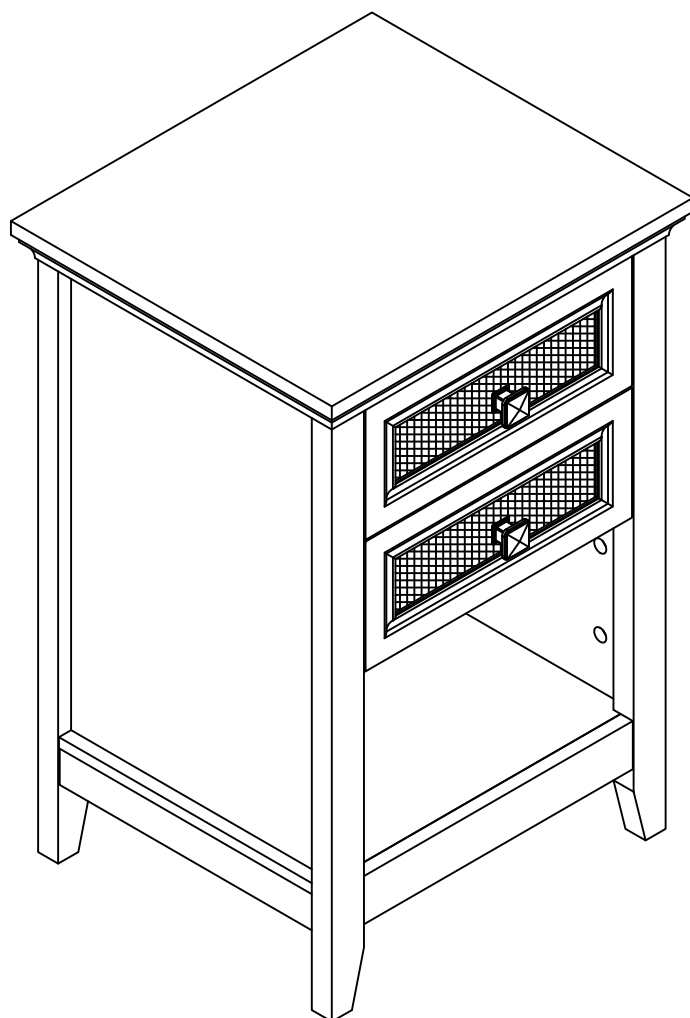

**INSTRUCTION MANUAL**



# ASSEMBLY INSTRUCTIONS

 
Carefully unpack all the components and verify that all the necessary parts are included as listed in the packaging.

Identify each component and refer to the provided assembly diagram or step-by-step instructions. Assemble the furniture in the order specified to ensure proper alignment and fit.

 
Use the provided tools or recommended tools for assembly. Do not use excessive force when tightening screws or bolts.

If any difficulties arise during assembly, consult the troubleshooting section or contact our customer support.

## Tools Required

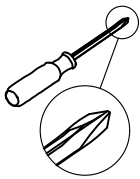
 

 

 



 


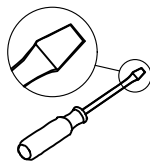 



Phillips Head Screwdriver

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 


 
Flat Head Screwdriver

## Hardware parts List

NO.	PICTURE	QTY	NO.	PICTURE	QTY	NO.	PICTURE	QTY
①	 Ø15X9.5mm Cam Lock	42+3	⑥	 Ø3.5X12mm Screw	24+3	11 CL	12" 300mm  Left Cabinet Slide Rail	2
②	 Ø6.5X35mm Cam Bolt	42+3	⑦	 M4X8mm Screw	2+1	11 CR	12" 300mm  Right Cabinet Slide Rail	2
③	 Ø6X30mm Wooden Dowel	14+2	⑧	 31X31X26mm Handle	2	11 DL	12" 300mm  Left Drawer Slide Rail	2
④	 Ø4X35mm Screw	18+2	⑨	 Ø3X14mm Back Panel Buckle	8+2	11 DR	12" 300mm  Right Drawer Slide Rail	2
⑤	 Ø4X20mm Screw	12+3	⑩	 Ø21mm Screw Hole Sticker	42+3			

 
## Board parts List

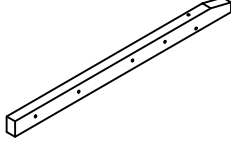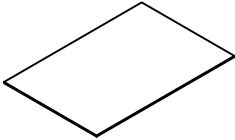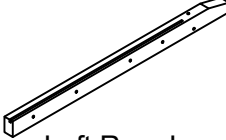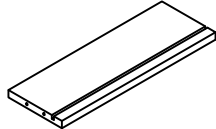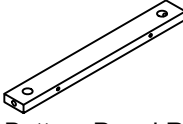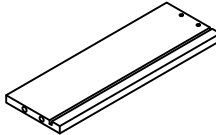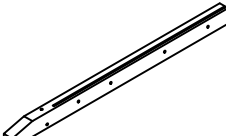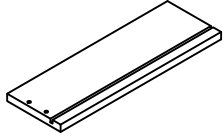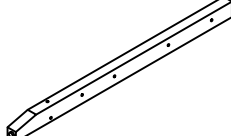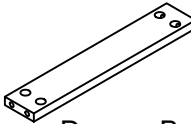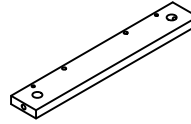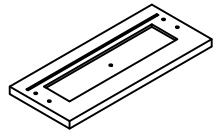NO.	PICTURE	QTY	NO.	PICTURE	QTY	NO.	PICTURE	QTY
(A)		1	(H)		1	(O)		1
(B)		2	(I)		2	(P)		1
(C)		1	(J)		1	(Q)		2
(D)		1	(K)		1	(R)		2
(E)		1	(L)		1	(S)		2
(F)		1	(M)		1	(T)		2
(G)		1	(N)		1	(U)		2

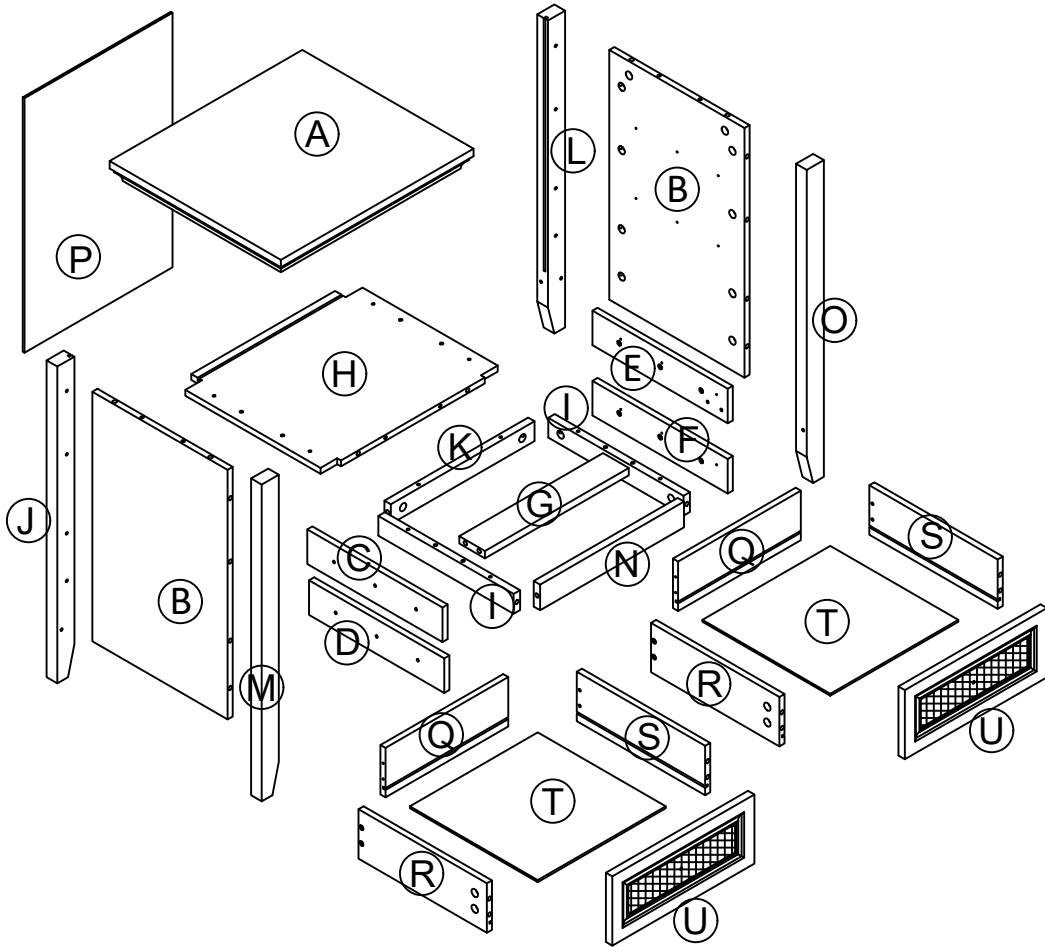

 
 
 
 
 
 
# Cam Lock Fastening System

Insert the cam bolt into the designated hole and secure it in place by inserting the cam lock.

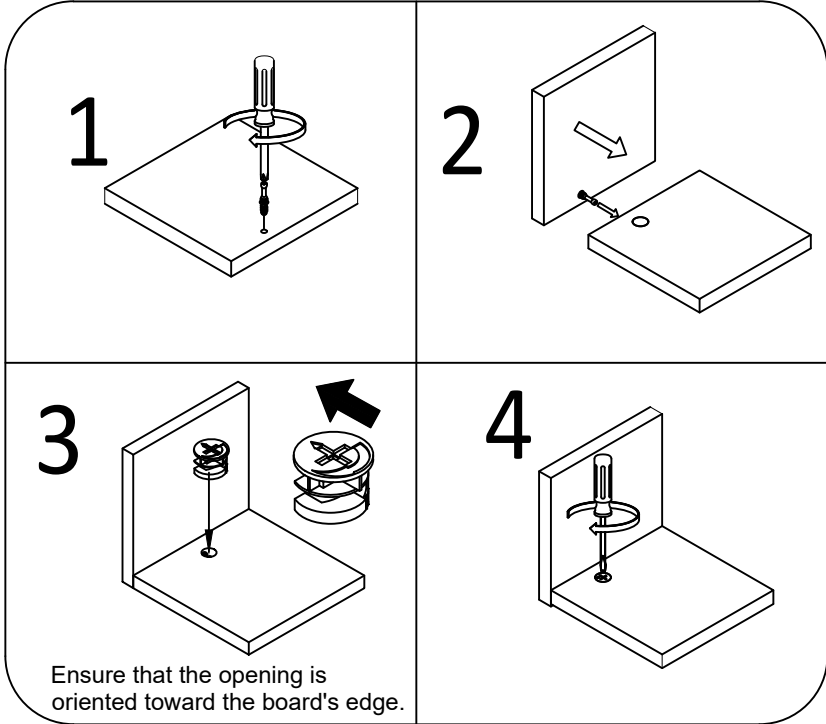

 
# PRODUCT ASSEMBLY

 
## STEP 1

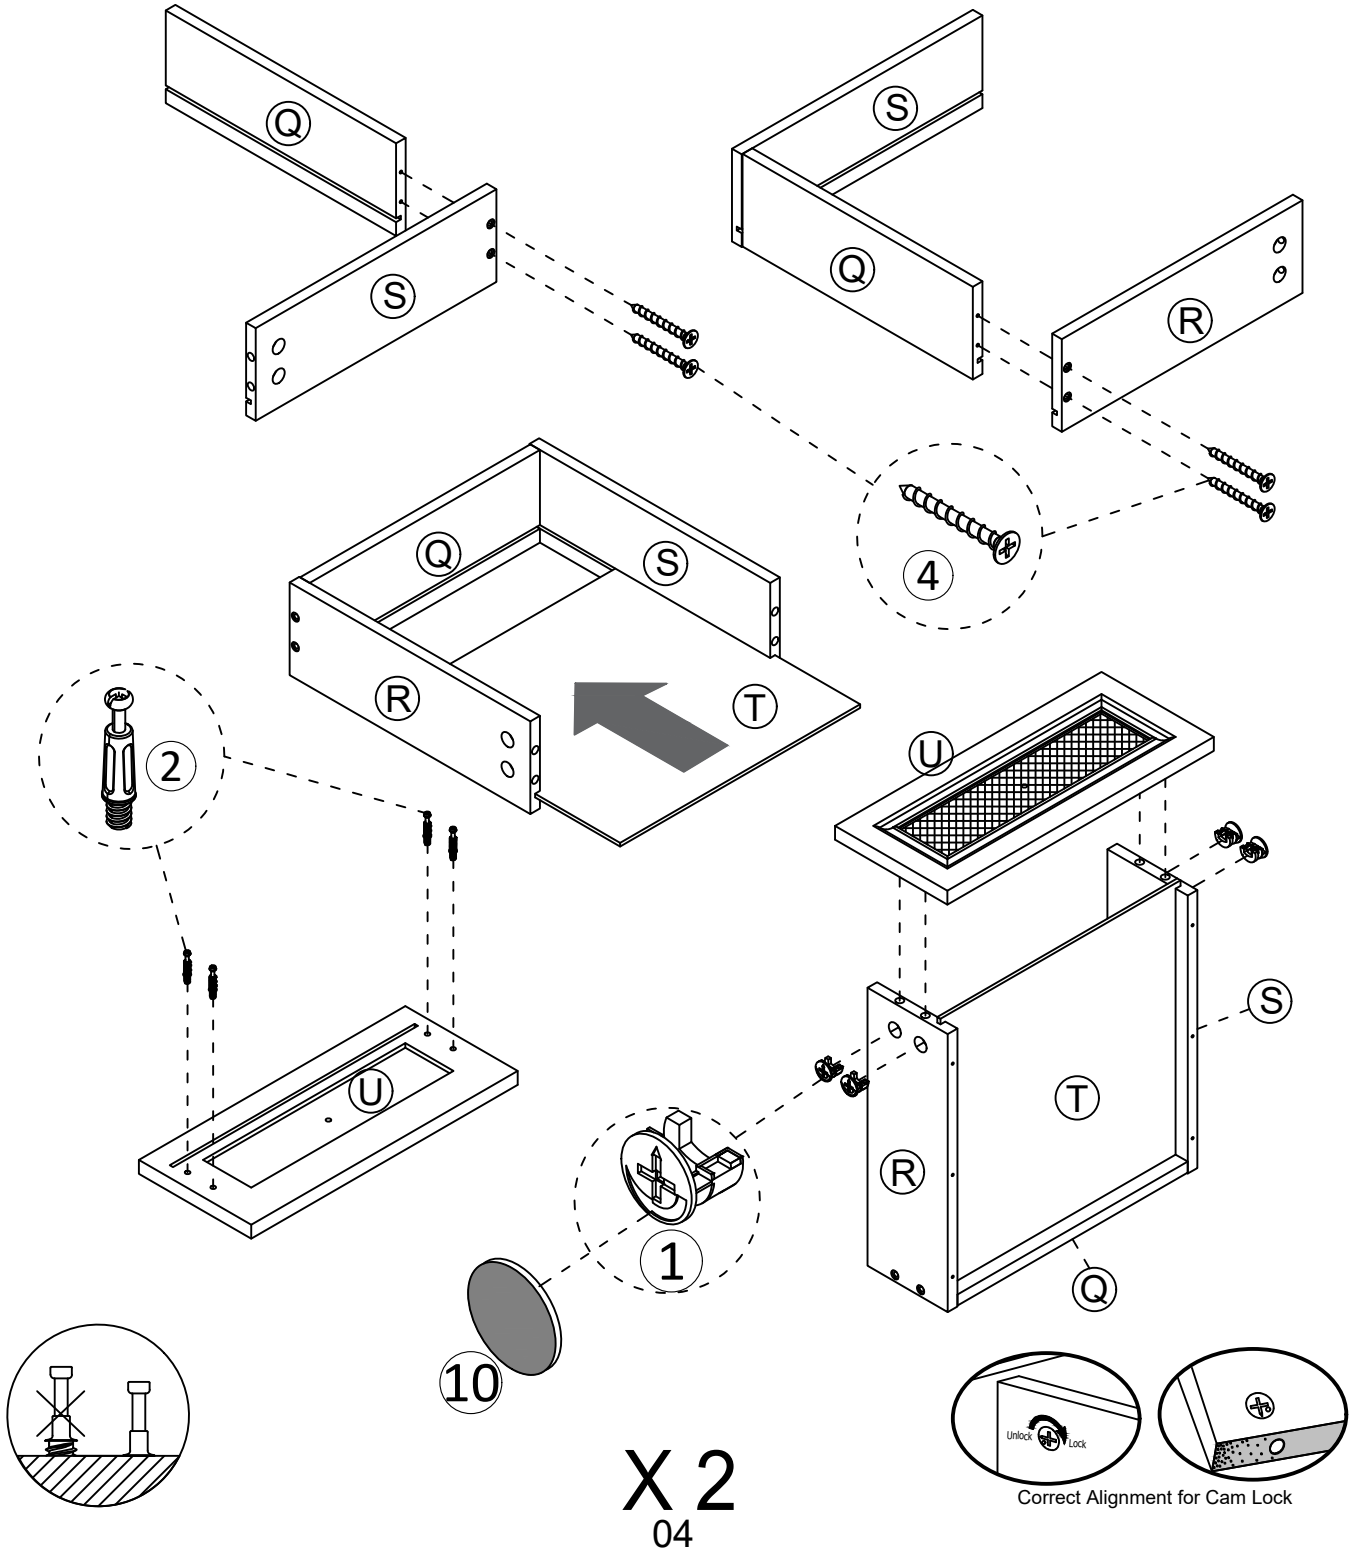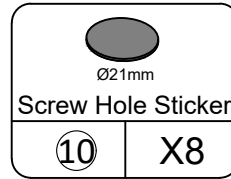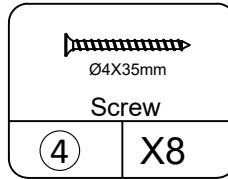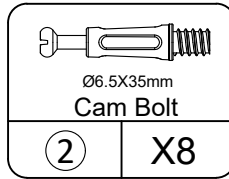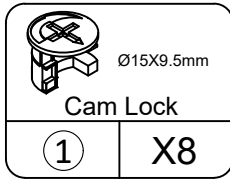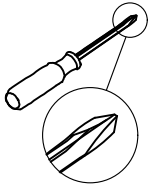



# PRODUCT ASSEMBLY

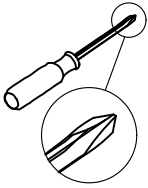 
## STEP 2



 Ø3.5X12mm Screw	
6	X12

12" 300mm 	
Left Cabinet Slide Rail	
11DL	X2

 
12" 300mm 	
Right Cabinet Slide Rail	
11DR	X2

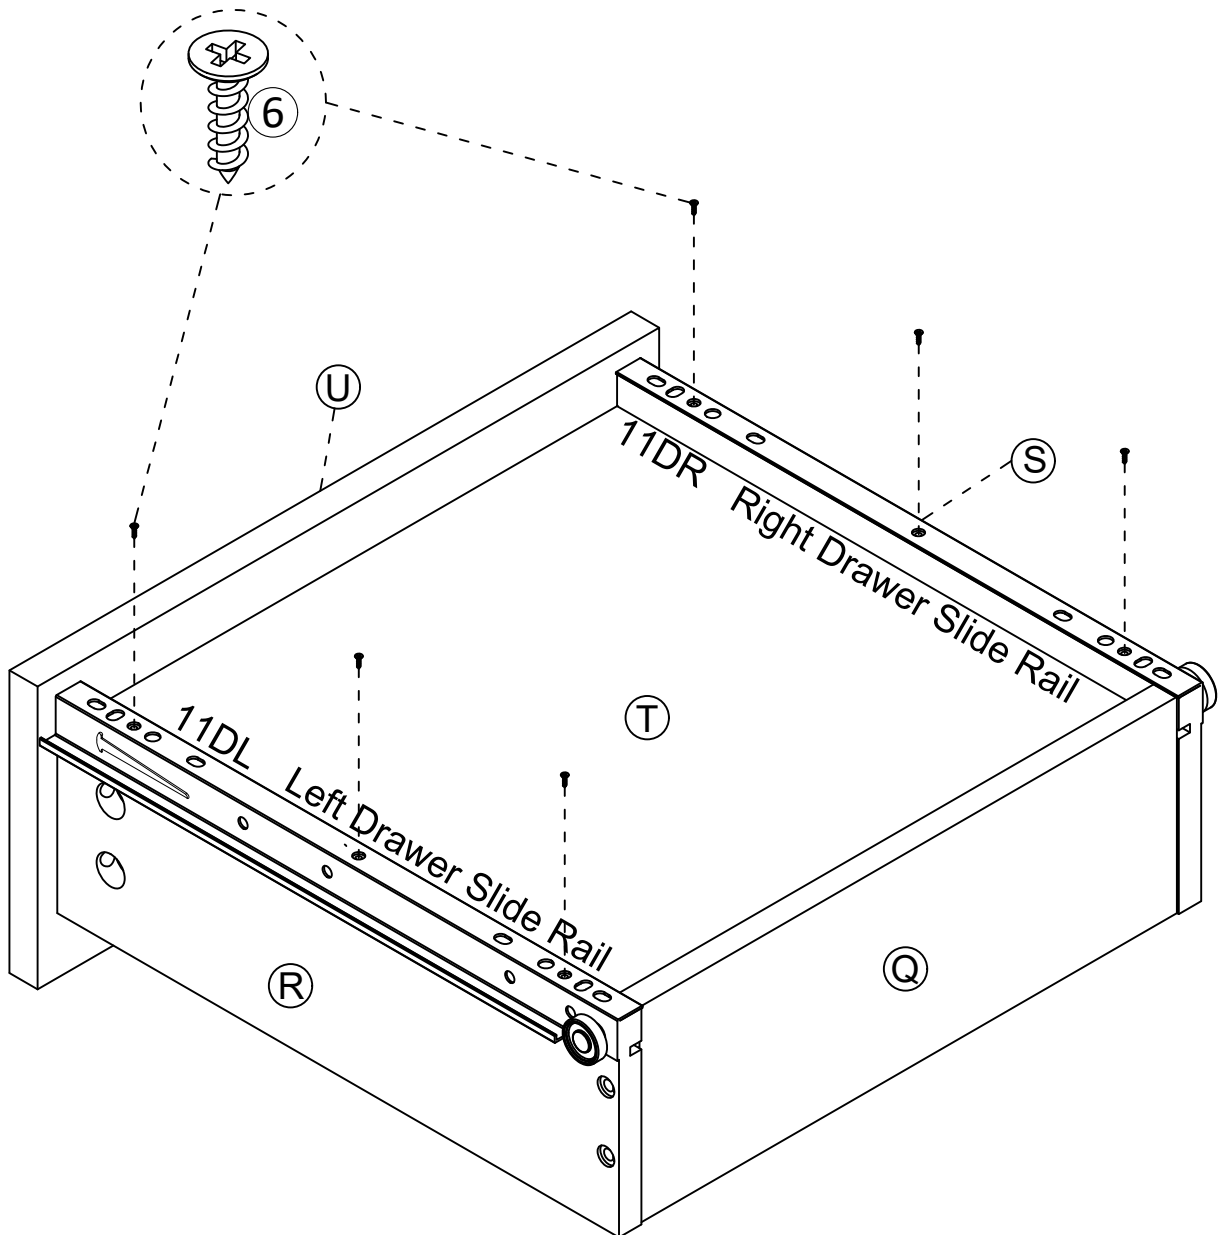 


 
X 2  
05

 
# PRODUCT ASSEMBLY

 
## STEP 3

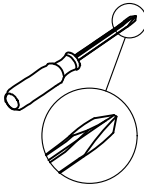 


	Ø6.5X35mm Cam Bolt
2	X2

 
 
	Ø4X20mm Screw
5	X6

	Ø3.5X12mm Screw
6	X6

12" 300mm 	Left Cabinet Slide Rail
11CL	X2

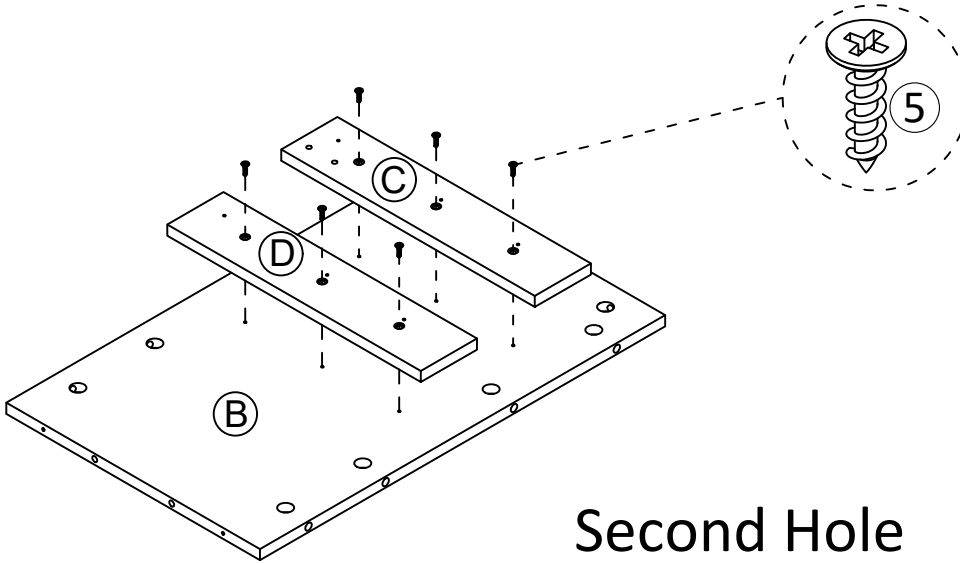 



### Second Hole

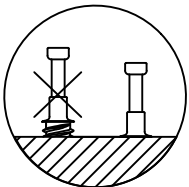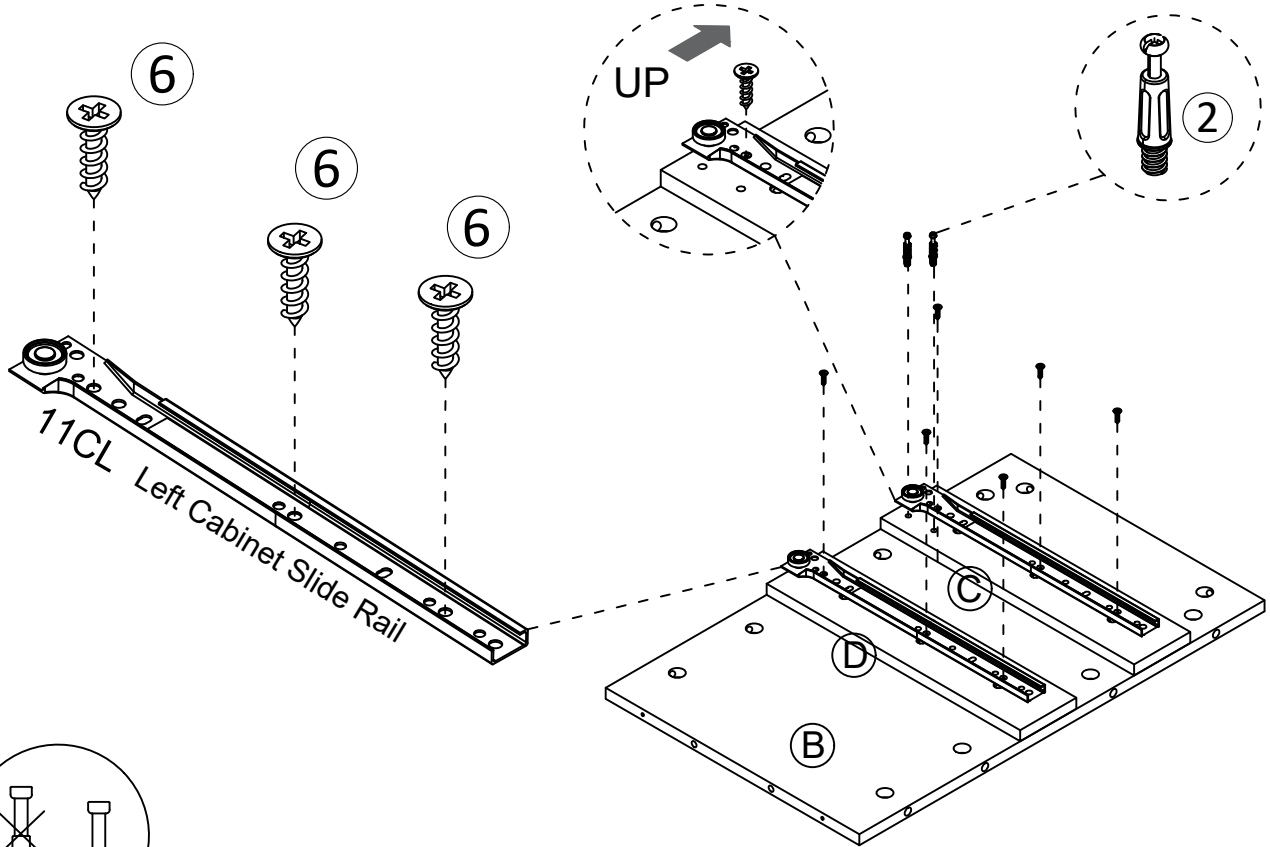 


 
# ☰ PRODUCT ASSEMBLY

 
## STEP 4

 
 
 
 
 
 
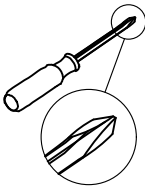 


 Ø6.5X35mm <b>Cam Bolt</b>	
2	X2

 Ø4X20mm <b>Screw</b>	
5	X6

 
 Ø3.5X12mm <b>Screw</b>	
6	X6


12" 300mm  <b>Right Cabinet Slide Rail</b>	
11CR	X2

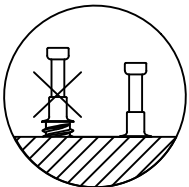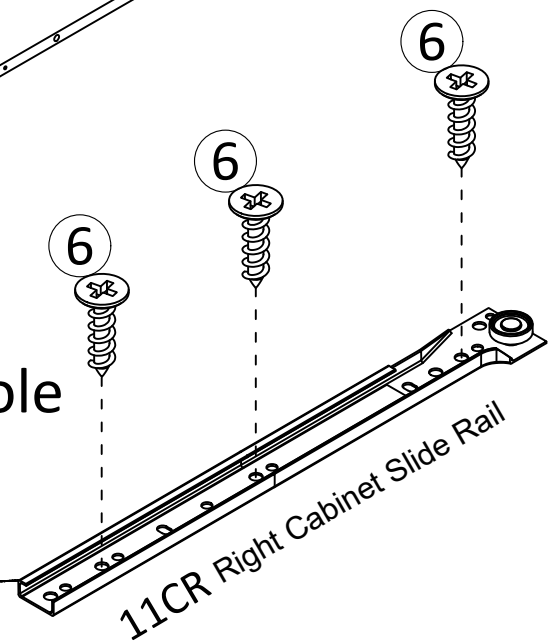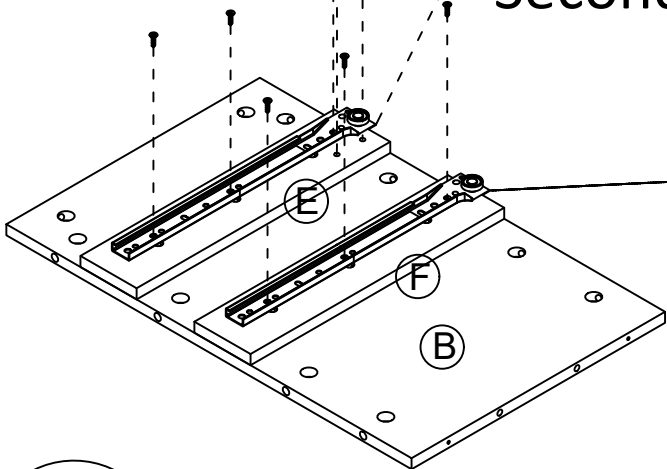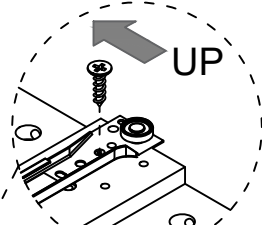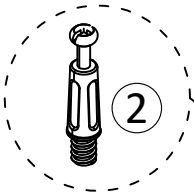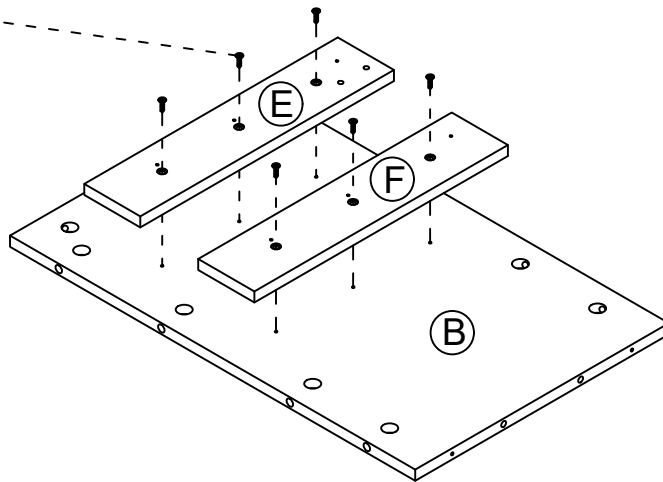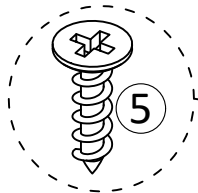


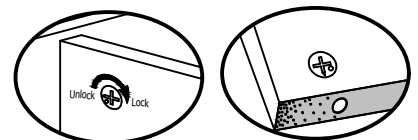 
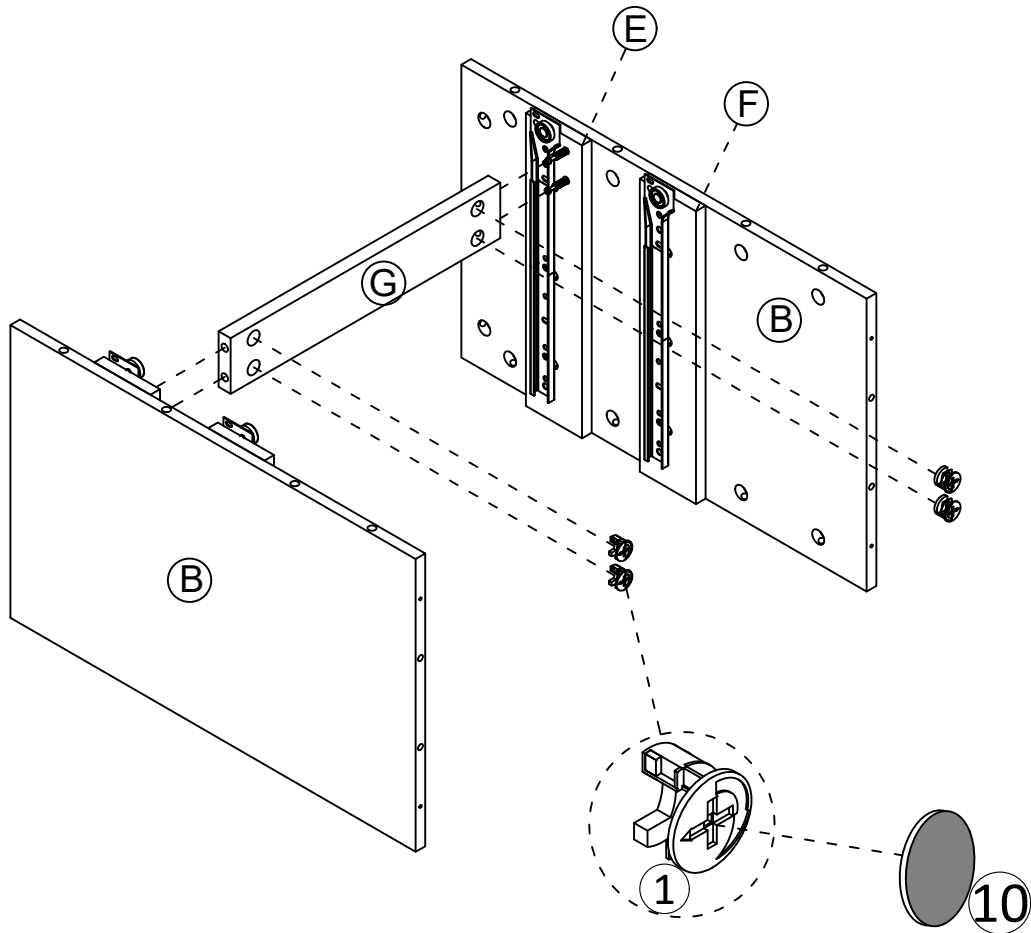 
# PRODUCT ASSEMBLY

## STEP5

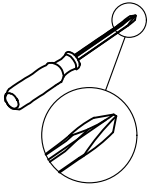

	Ø15X9.5mm
Cam Lock	
①	X4

 
 
 
 
	Ø21mm
Screw Hole Sticker	
⑩	X4



Correct Alignment for Cam Lock

 
 
 
 
# ☰ PRODUCT ASSEMBLY

## STEP 6

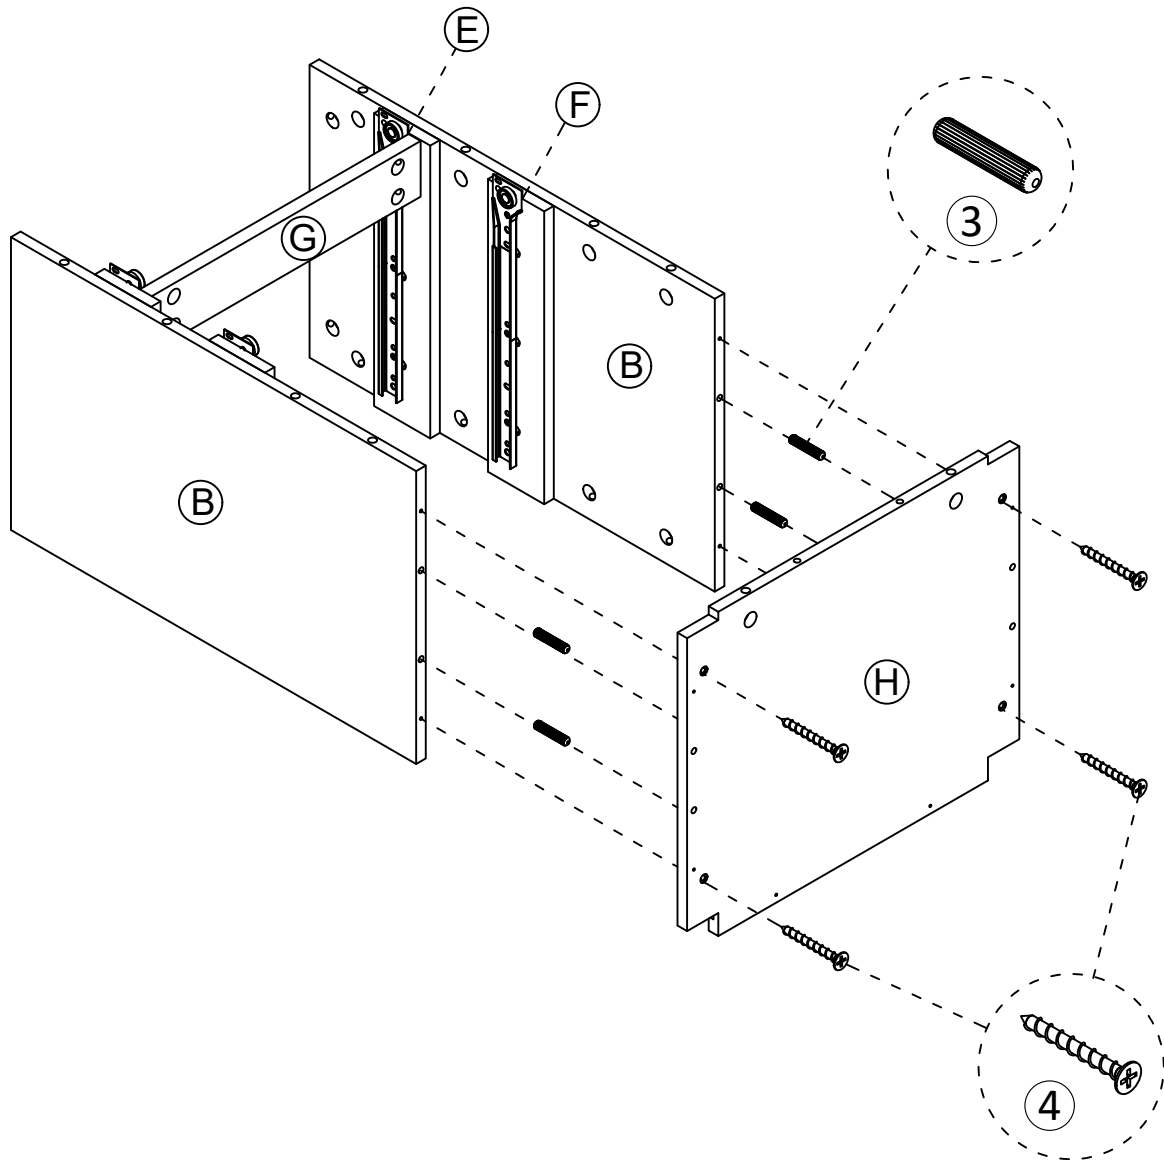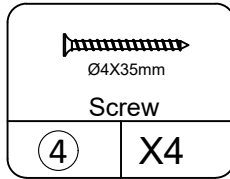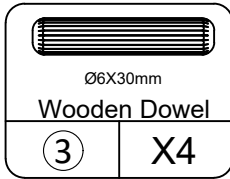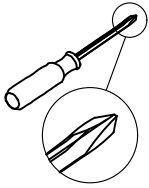

 
 
 
 
# PRODUCT ASSEMBLY

## STEP 7

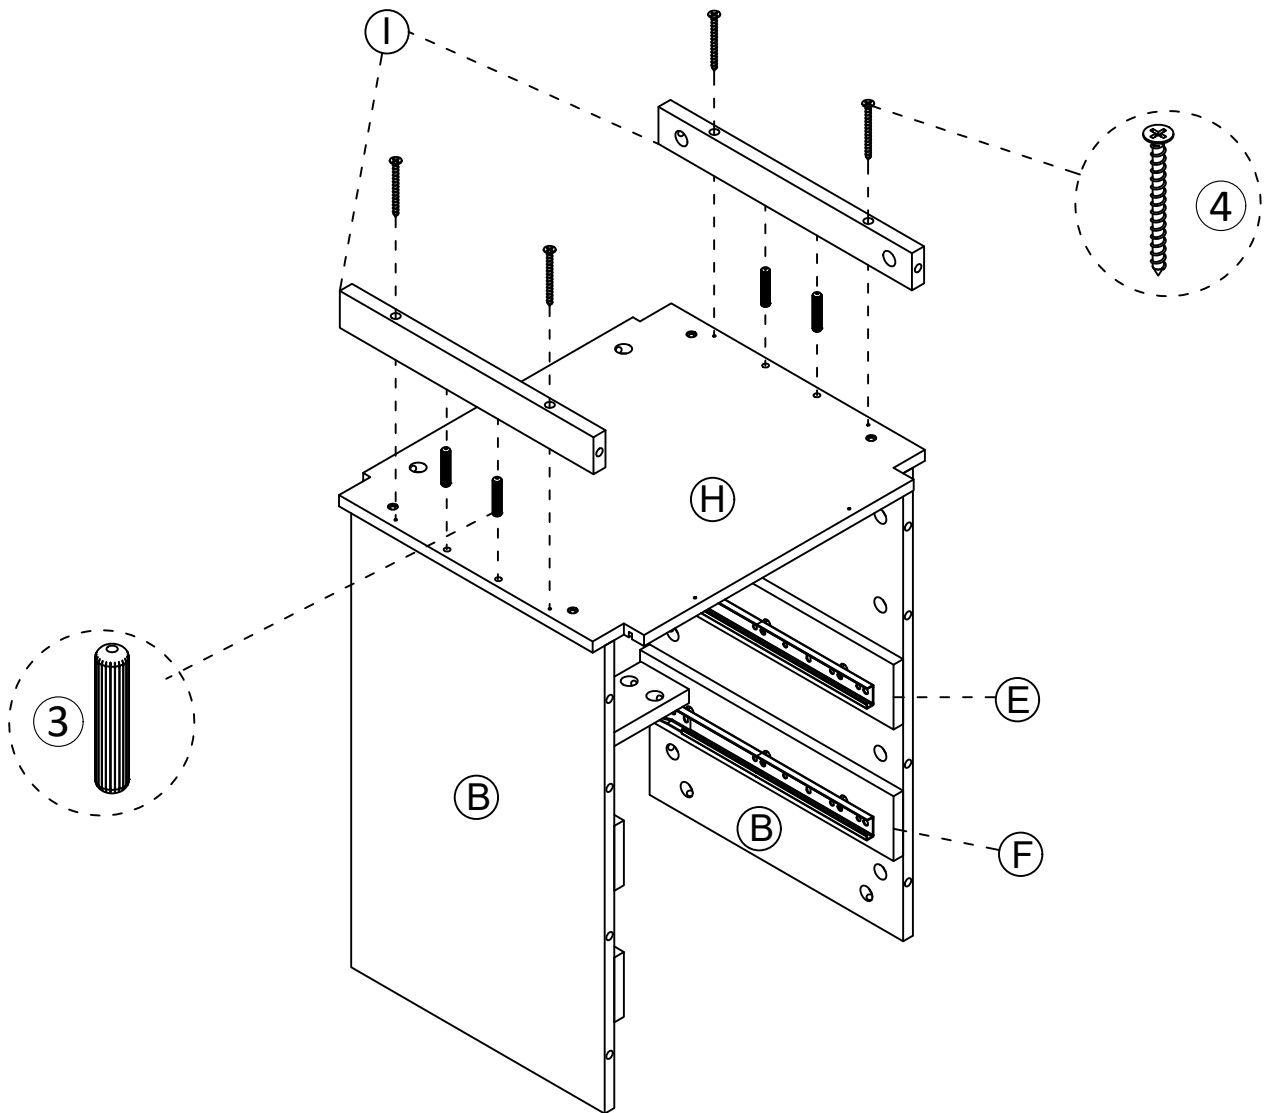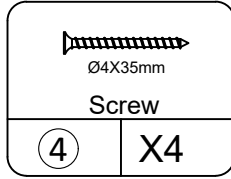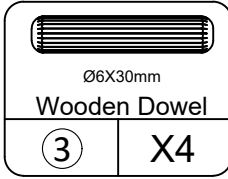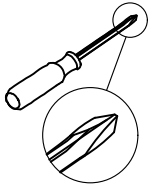

 
 
 
 
 
 
 
# ☰ PRODUCT ASSEMBLY

## STEP 8

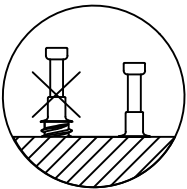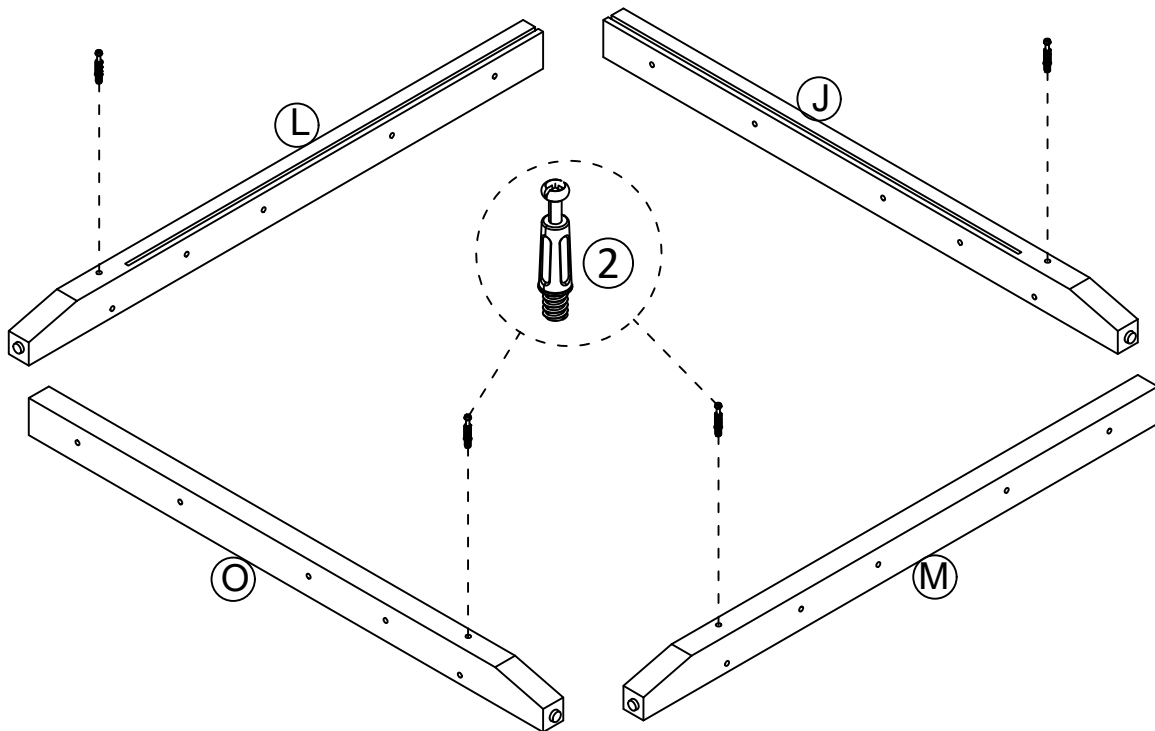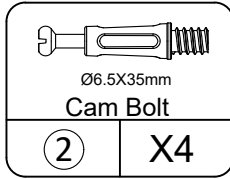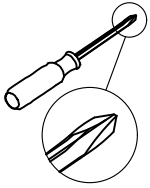

# ☰ PRODUCT ASSEMBLY

 
 
 
 
 
 
## STEP 9

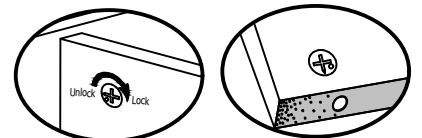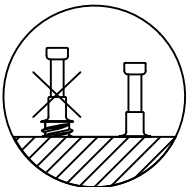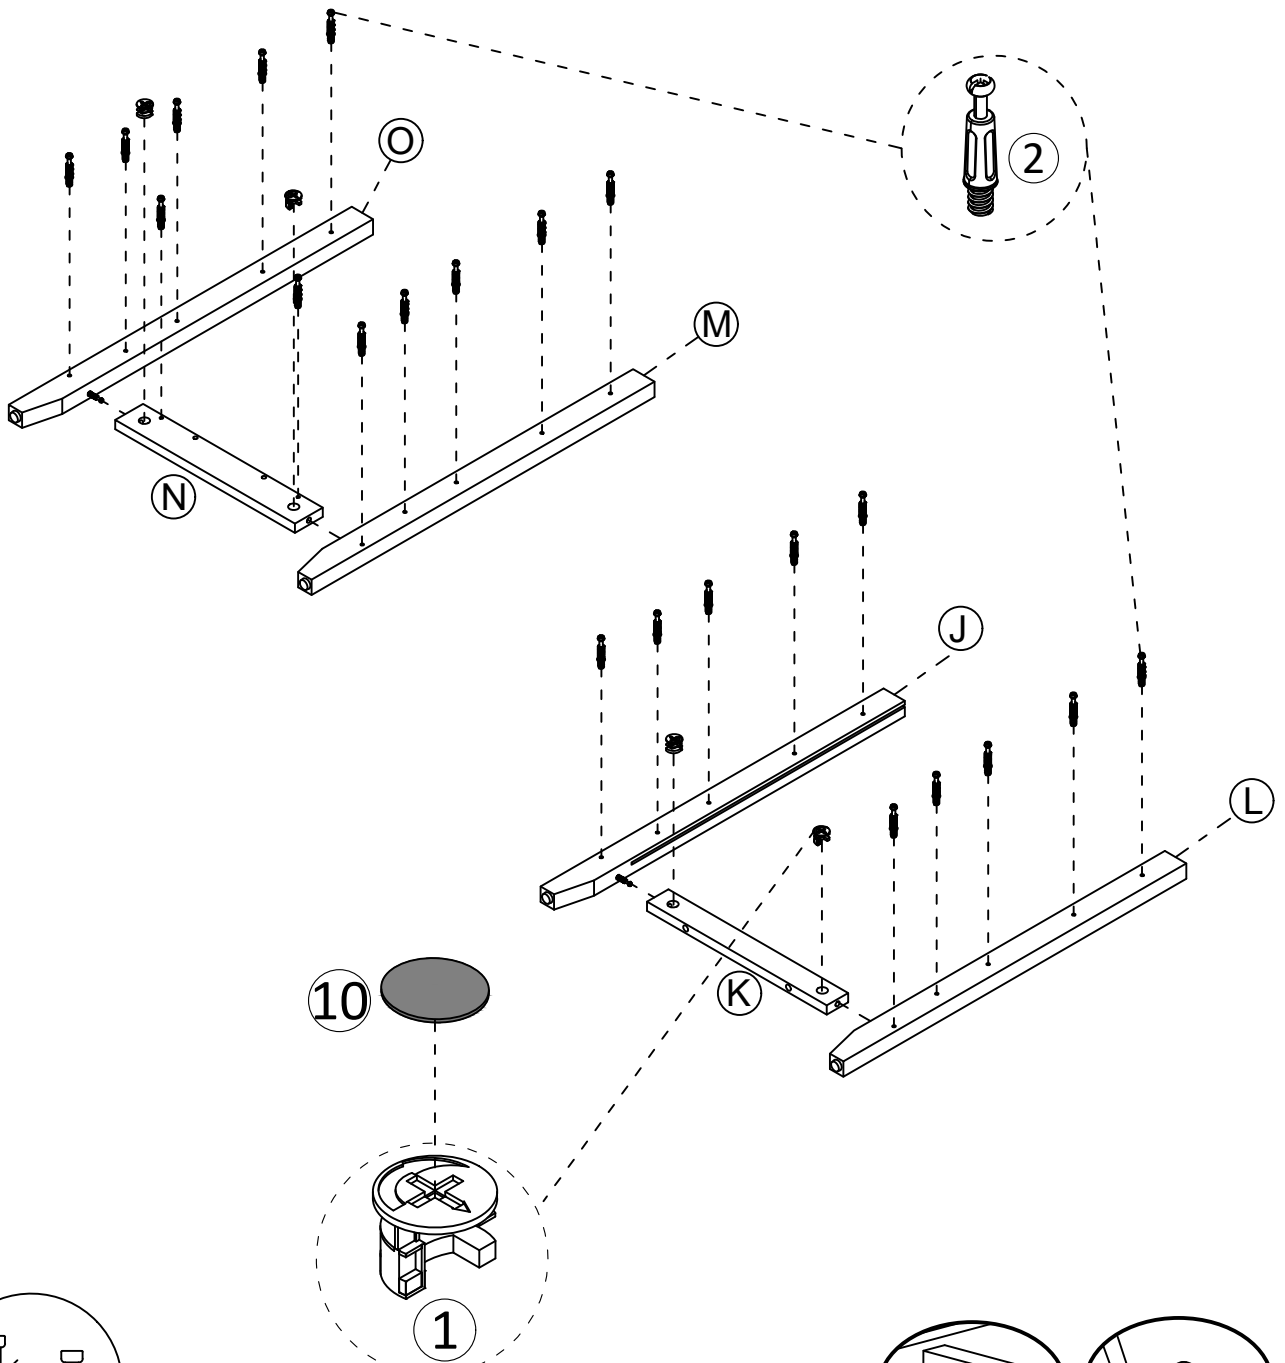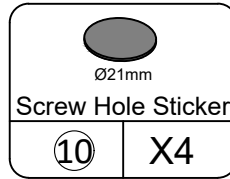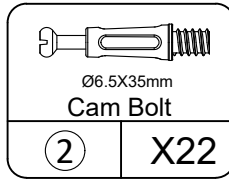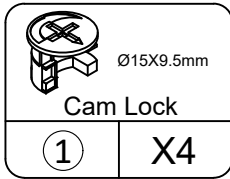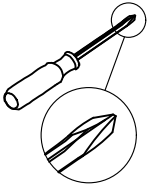

Correct Alignment for Cam Lock

# PRODUCT ASSEMBLY

 

 
 
## STEP 10

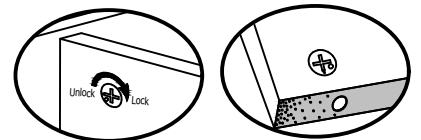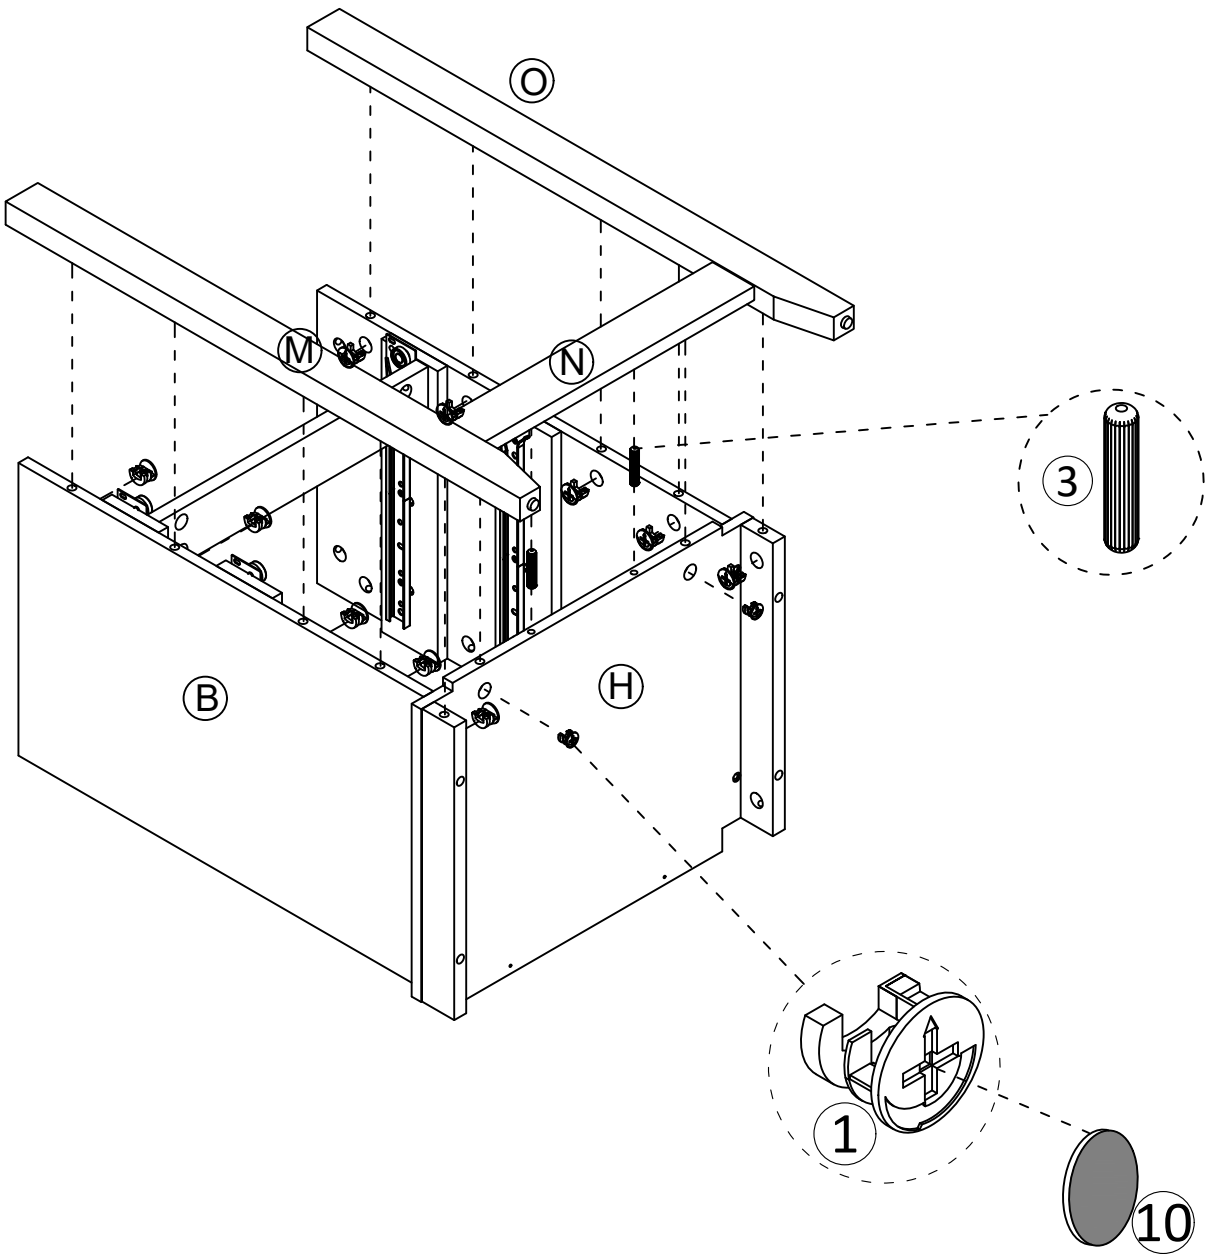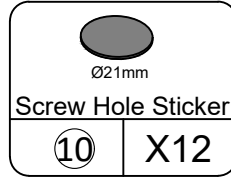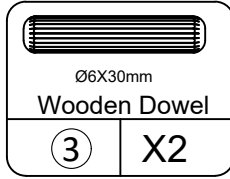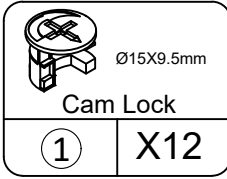 
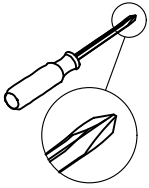 


Correct Alignment for Cam Lock

# PRODUCT ASSEMBLY

## STEP 11

 
 
 
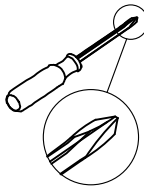 
	 Ø15X9.5mm Cam Lock	 Ø4X35mm Screw	 Ø21mm Screw Hole Sticker
	① X10	④ X2	⑩ X10

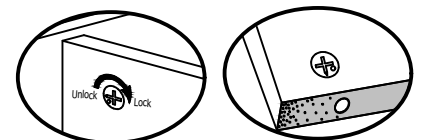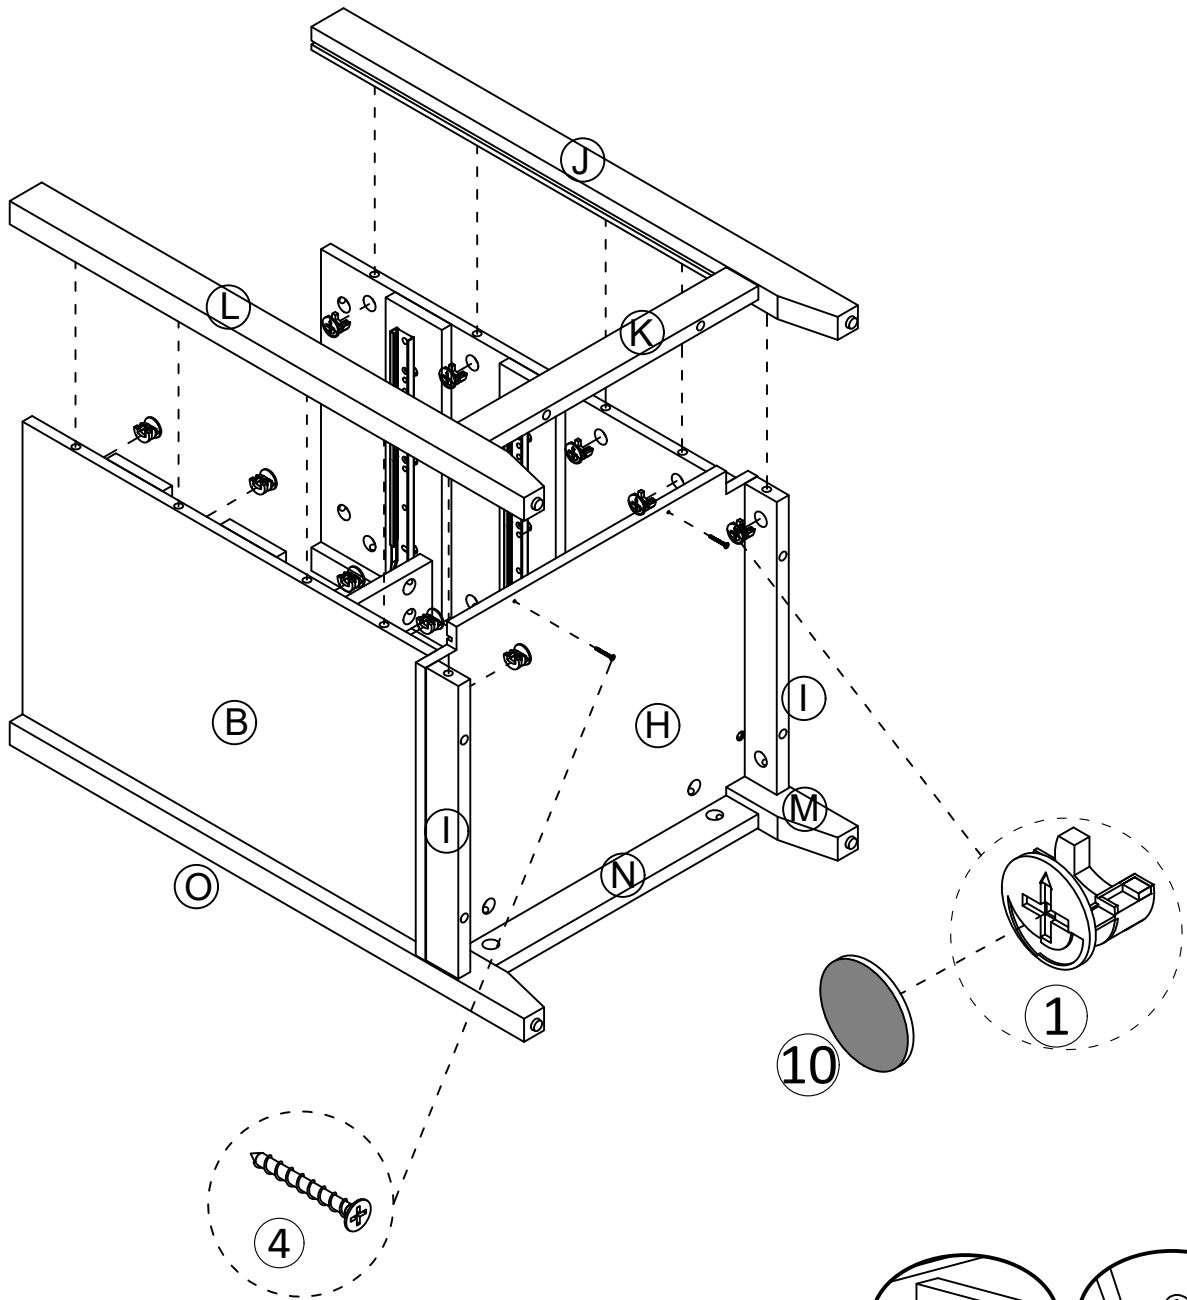

Correct Alignment for Cam Lock

 
# ☰ PRODUCT ASSEMBLY


 
## STEP 12

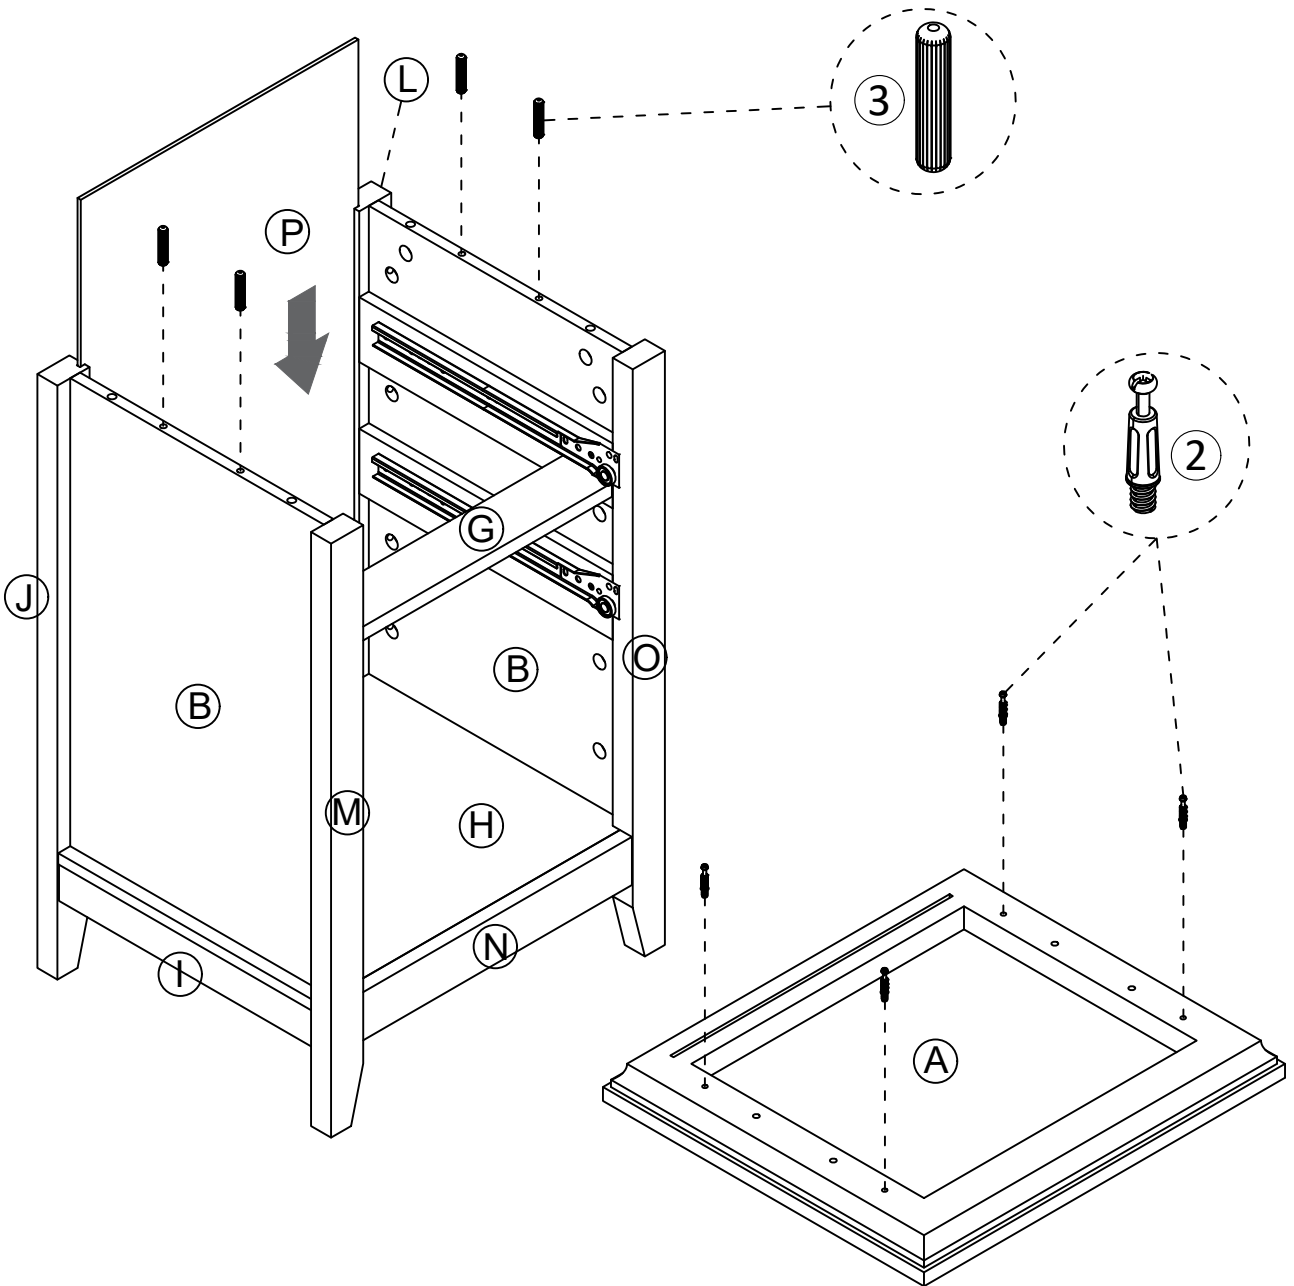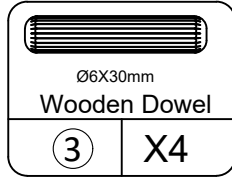 
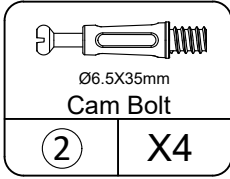 
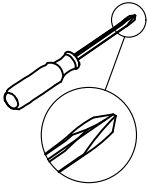 


# ☰ PRODUCT ASSEMBLY

## STEP 13

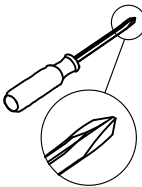

 
 
 
	Ø15X9.5mm		Ø21mm
Cam Lock		Screw Hole Sticker	
1	X4	10	X4

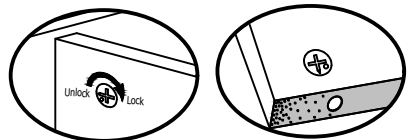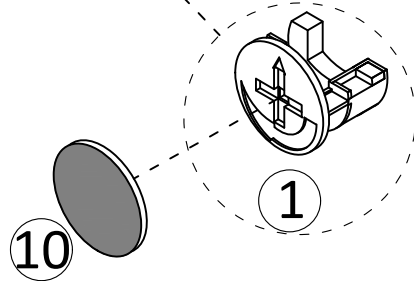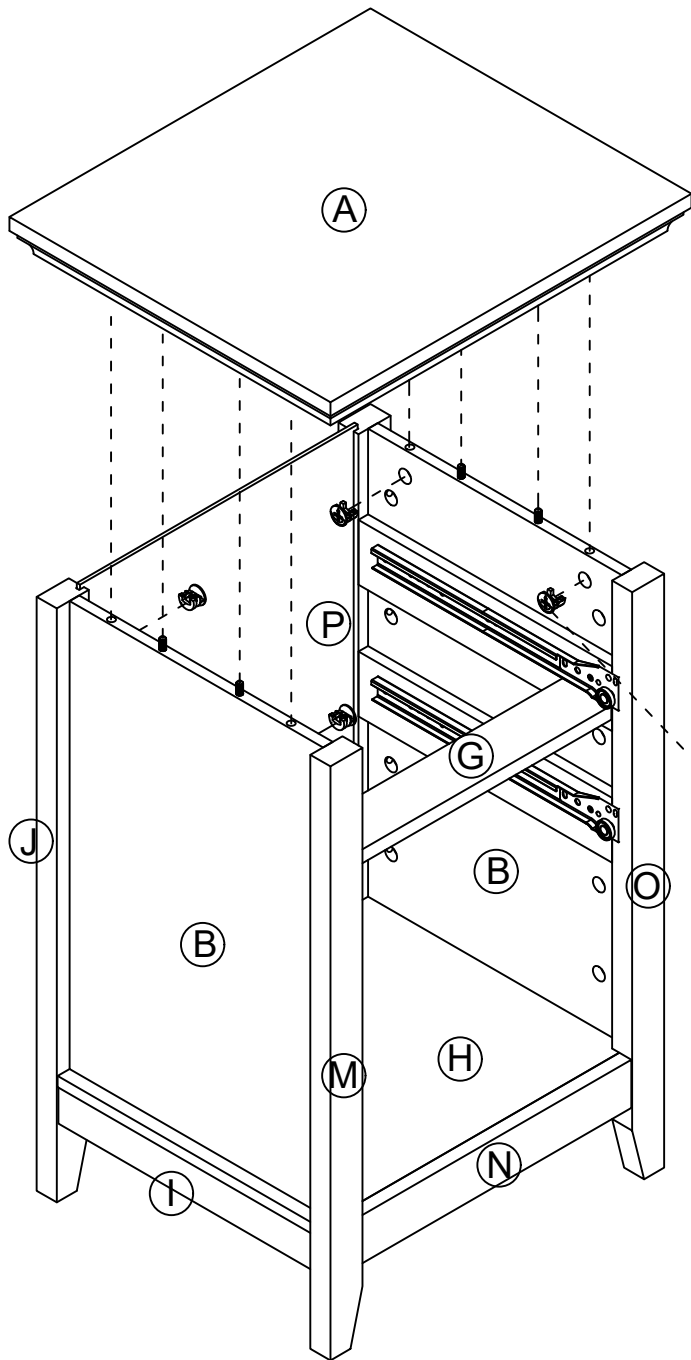

 
Correct Alignment for Cam Lock

# ☰ PRODUCT ASSEMBLY

## STEP14

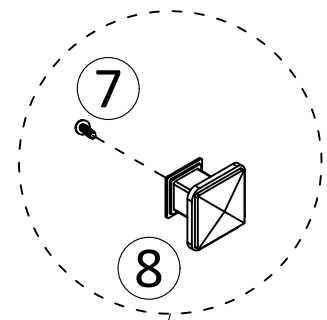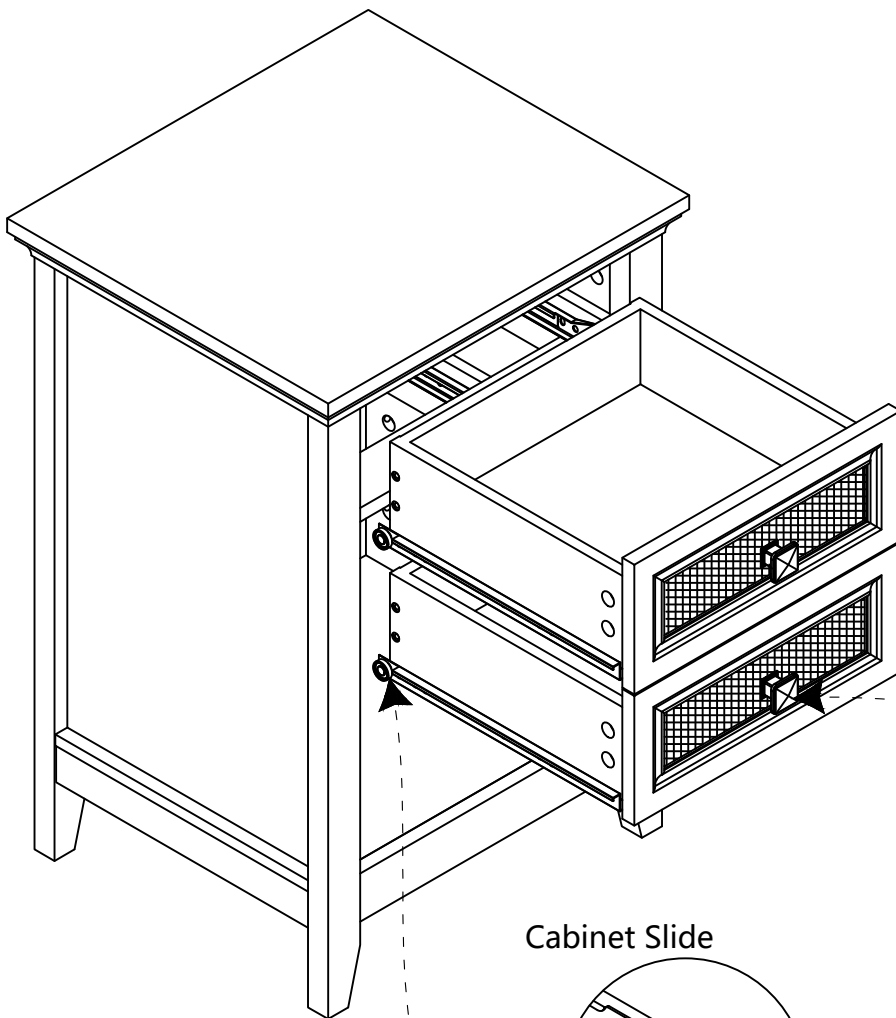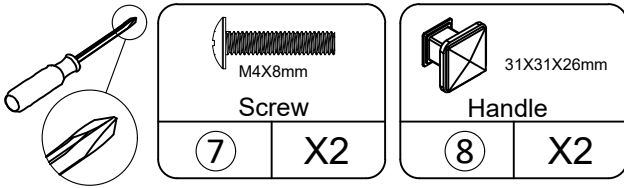

 
 
Cabinet Slide

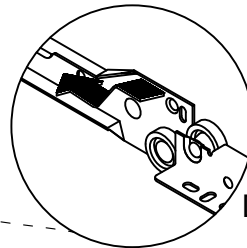

Drawer Slide

# ☰ PRODUCT ASSEMBLY

## STEP15

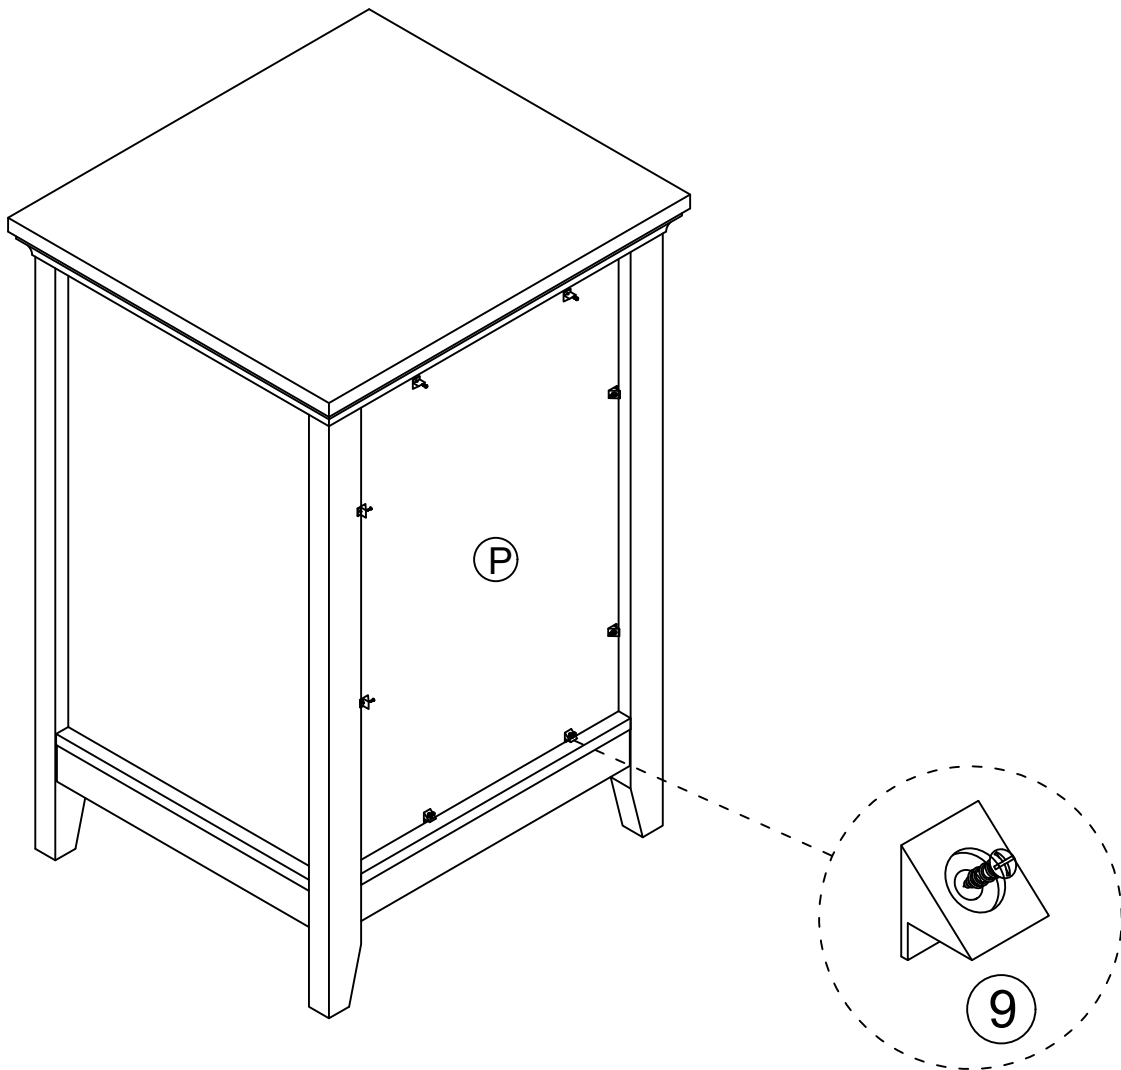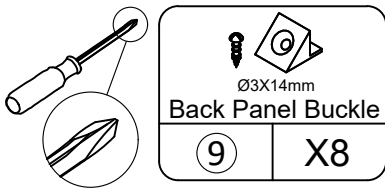



## MAINTENANCE AND CARE

Clean with a chicken feather duster or a soft cloth, avoiding water. Use a damp, soft cloth if necessary, preferably made of pure cotton knit. Use a soft wool board brush for dust in recesses or embossed details.

If the edges of the furniture lift or separate, place a thin cloth on top and gently iron with a heated iron to re-adhere.

When placing the furniture, avoid contact with hard or sharp objects to prevent scratching.

Avoid dragging or placing heavy objects on furniture to prevent scratching and deformation.

Keep furniture away from dampness, high temperatures, and direct sunlight. Use curtains during summer to shield furniture from sun exposure.

Refrain from contact with corrosive liquids such as acids or alkalis.

Do not use harsh chemicals or abrasive cleaning agents.

Periodically apply furniture wax to the surface to prevent fading and sun damage.

Regularly inspect furniture joints and promptly reinforce any loose components.



## WARRANTY INFORMATION

**Warranty Coverage:** Our warranty provides protection against manufacturing defects in materials and workmanship for a specified period from the date of purchase, as outlined in the accompanying warranty documentation.

**Exclusions:** The warranty does not cover damages resulting from misuse, negligence, accidents, normal wear and tear, unauthorized repairs or modifications, improper assembly, or failure to adhere to the care and maintenance guidelines provided.

### Warranty Claim Process

To initiate a return on Amazon, please follow these steps:

- 1 Log into your Amazon account and go to the "Your Orders" section.
- 2 Locate the order containing the item you wish to return.
- 3 Contact our customer service for assistance in obtaining a prepaid return label.
- 4 Once you receive the return label, securely affix it to the package.
- 5 You can then choose to drop off the package at a designated carrier location or arrange for a pickup.
- 6 After we receive and inspect the returned product, we will initiate the refund process.
- 7 The refund will be credited back to the original payment method used during the purchase.
- 8 Typically, refunds are processed within 3-5 business days.



## Contact Information

---

If you have any questions, concerns, or need assistance, please reach out to our customer support team using the contact information

provided below:

Customer Support Email

[support@royalcraft.store](mailto:support@royalcraft.store)

---