

ASSEMBLY INSTRUCTIONS

TEAK PORCH SWING



CUSTOMER SERVICE INFORMATION

 
GENERAL INFORMATION & TIPS

1. Please read the assembly instructions prior to assembling the Swing.
2. To avoid damage, assemble the swing on a non-abrasive surface such as carpet.
3. Make sure all bolts tightly fastened before the swing is used.
4. This swing is not for commercial use.

 
 
 
 
 
 

 



 



Please make sure you have all parts before beginning assembly. Please wait until all steps are completed before tightening bolts.

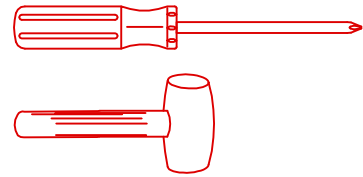TOOLS REQUIRED :


1. 8" Philips screwdriver (Not provided).
 - For tightening all bolts and screws.
3. Rubber Mallet (Not provided).
 - For tapping in the wooden caps.

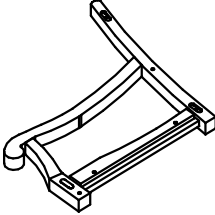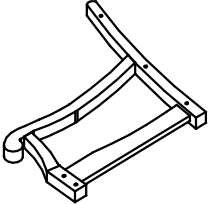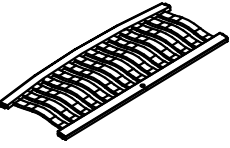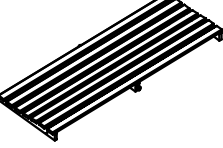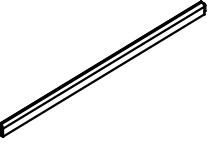

 PARTS AND HARDWARE LIST


A. Right Armrest	B. Left Armrest	C. Back rest	D. Seat	E. Apron
				
Qty : 1Pc	Qty : 1Pc	Qty : 1Pc	Qty : 1Pc	Qty : 1Pc
F. 1" Screw	G. 1 1/2" Screw	H. 1 1/2" Bolt	I. Wooden Cap	J. Washer
				
Qty : 4 + 1 Pcs	Qty : 2 + 1 Pcs	Qty : 6 + 1 Pcs	Qty : 6 + 2 Pcs	Qty : 12 + 1 Pcs
K. Hanger bolt with chain & Chain lock	L. Hanger Bolt	M. Nut	N. Head Nut	O. Wrench
				
Qty : 2 Pcs	Qty : 2 Pcs	Qty : 6 + 1 Pcs	Qty : 4 Pcs	

 STEP 1

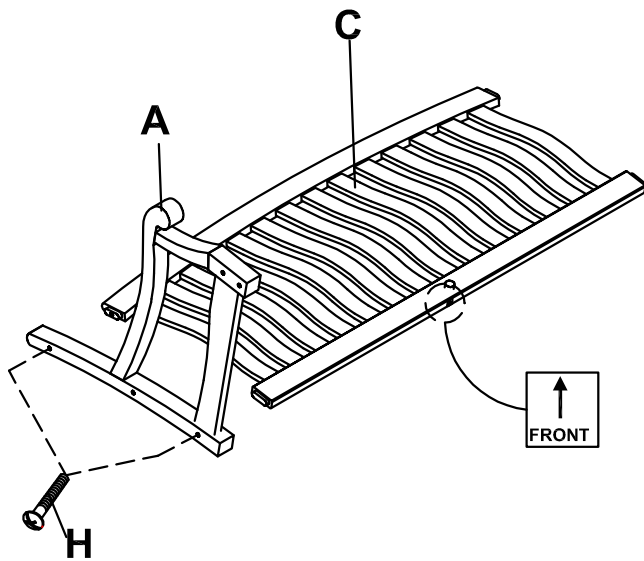


Install on level ground.
Attach the right armrest (A) to the back rest (C), secure using 1 1/2" bolt (H).

 STEP 2

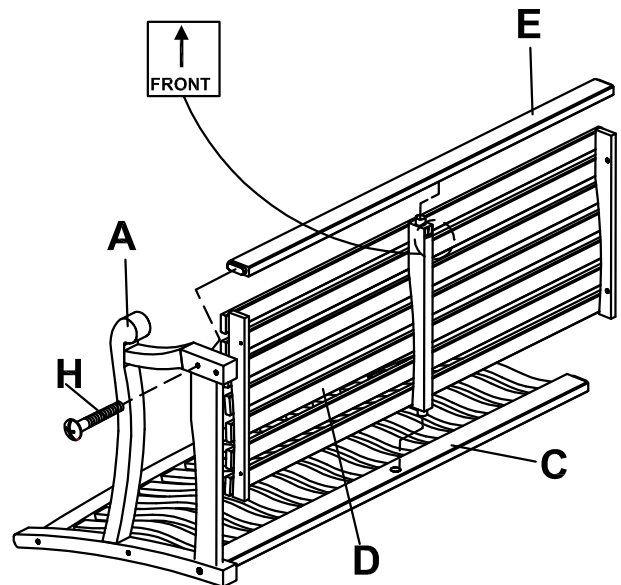


Attach the apron (E) onto the seat (D). And then attach the seat (D) onto the back rest (C) and to right armrest (A) secure using 1 1/2" bolts (H), position as shown.

 STEP 3

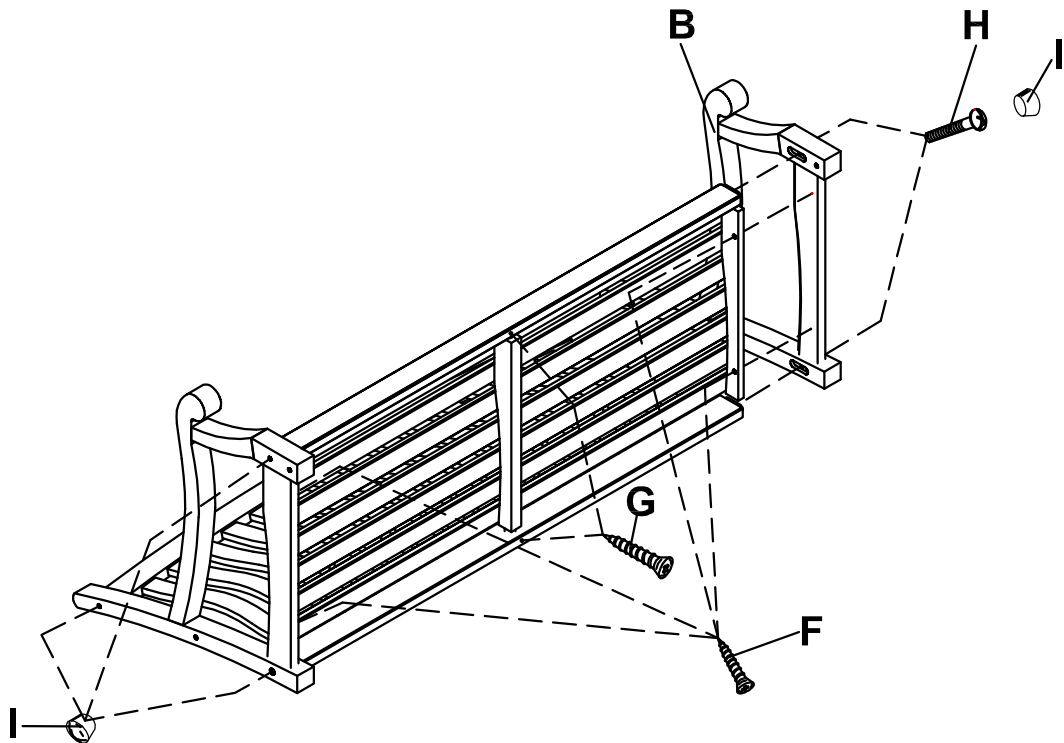

Attach the left armrest (B) to the assembly from step 2, secure using 1 1/2" bolts (H), 1" screws (F) and 1 1/2" screws (G) from underneath, position as shown, tighten using screwdriver. Tap in wooden caps (I) to cover bolt heads using rubber mallet.

 STEP 4

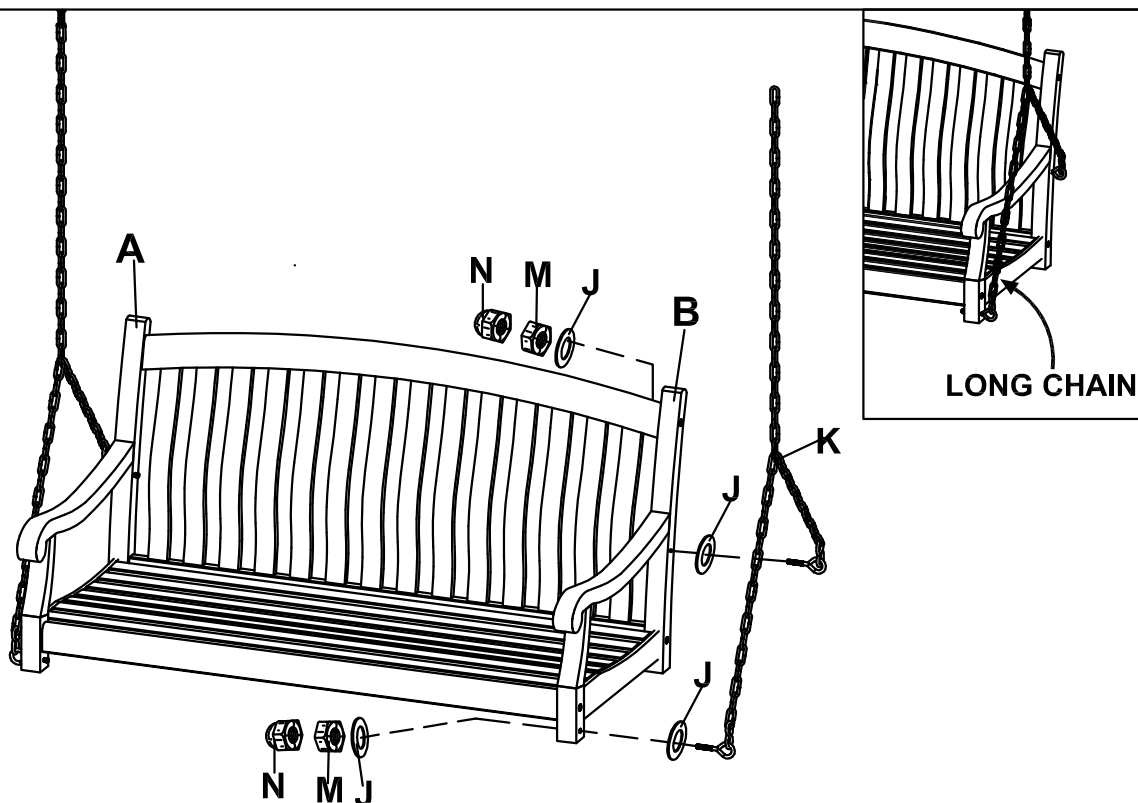


Secure the hanger bolts with chain (K) into predrilled holes of left armrest (B) using washers (J), nuts (M) and head nut (N), as shown. (The hanger bolt with long chain must be installed in front, short chain must be installed at the back).

Repeat the same procedure to install the hanger bolts (K) into right armrest (A).

Make sure all parts are correctly connected and tighten all nuts completely using wrench.

 STEP 5

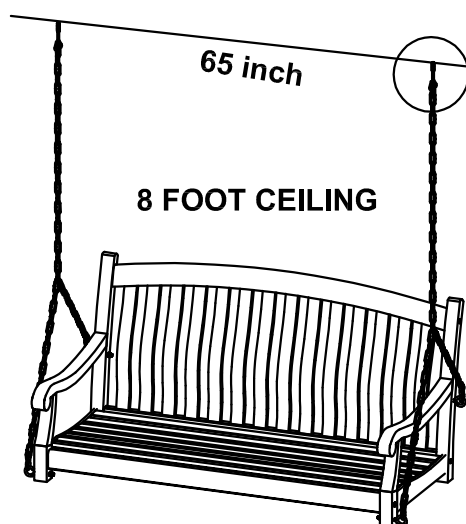

To hang up the swing :

 
Drill pilot holes on your swing frame/overhead beam of your porch, at the width of 65 inch.

Insert the hanger bolt (L) into predrilled holes of swing frame and secure with washers (J) and nut (M) as shown. Tighten the nut using wrench.

Once the hanger bolt (L) are in place, attach a chain lock (provided in the chain kit "K") to the hanging bolt (L) by open the thread. Then tighten the chain lock manually.

Repeat the same procedure to install the other side.

Adjust the swing height for comfortable. Recommended height is 23.5 inch from the bottom of the seat to the ground.

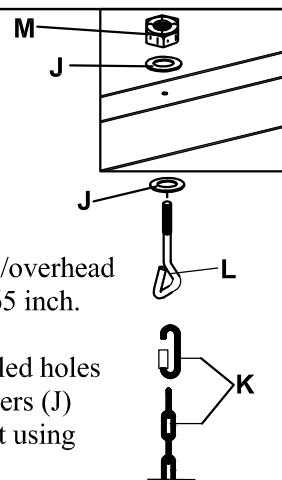

NOTICE :

Install not less than 6.5 feet from any obstruction such as fence, garage, house, overhanging branch laundry lines or electrical wires.