




Parts List				
Label	Picture	Description	QTY	
A		Table Top	1	
В		Leg	4	
Hardware				
Label	Picture	Description	QTY	
1		Bolt (M8x50 mm)	9	
2	\bigcirc	Washer (M8.5/16x2)	9	
3		Spring Washer (M8.5/11x1mm)	9	
4		Allen Key	1	

Assembly Preparation

Before Beginning Assembly:

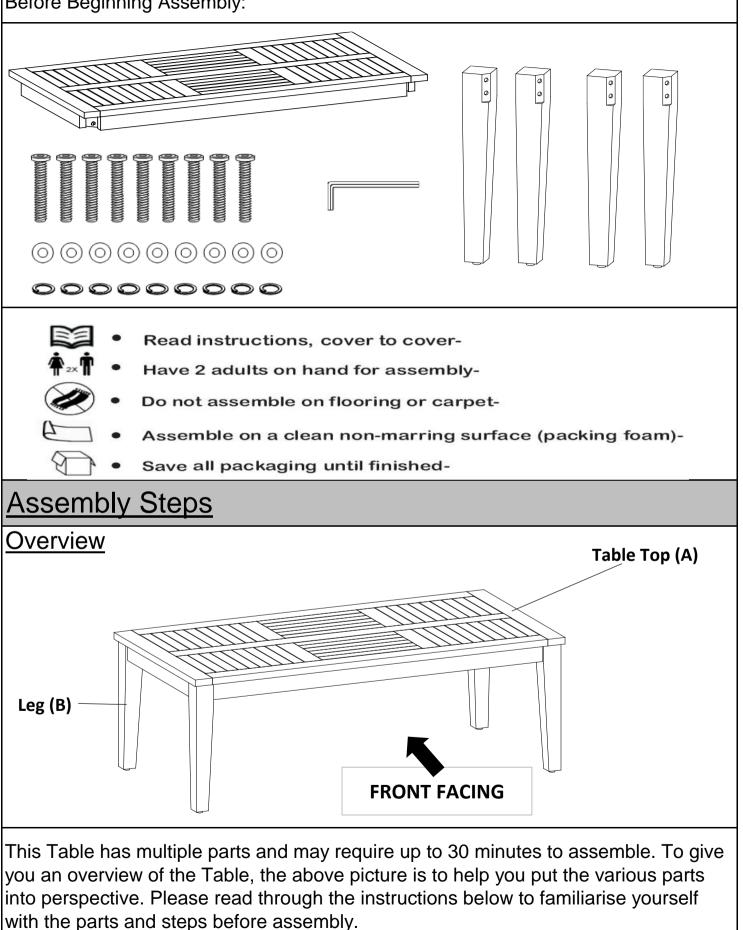

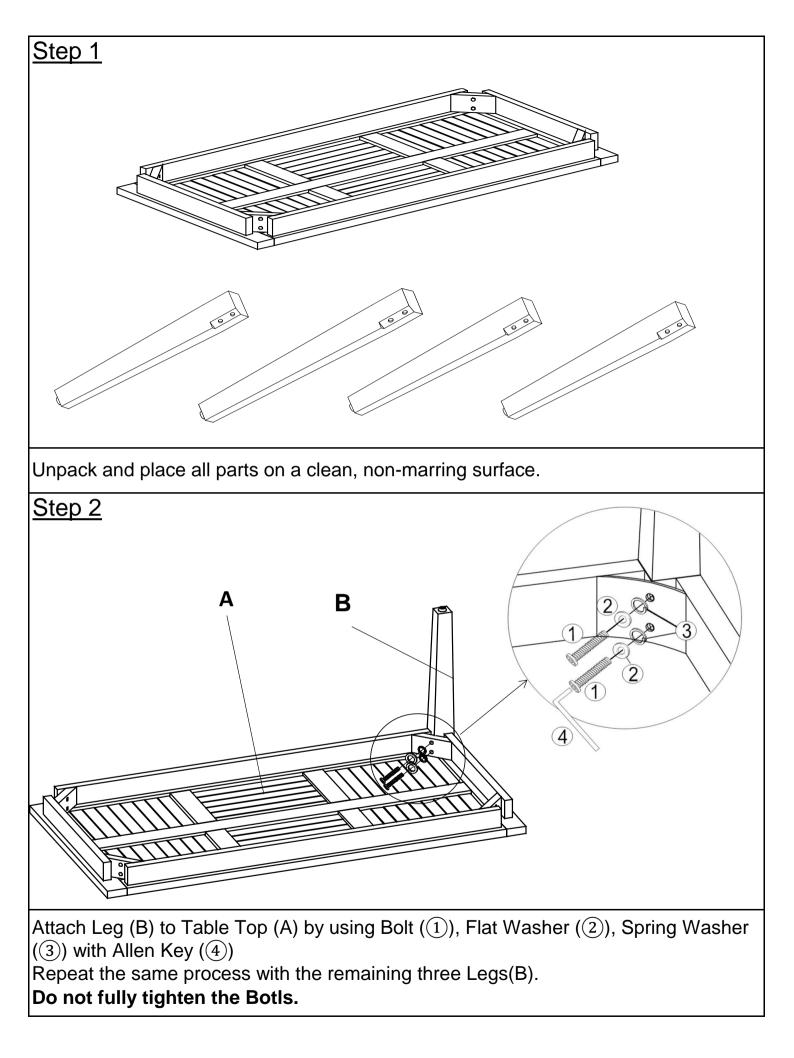

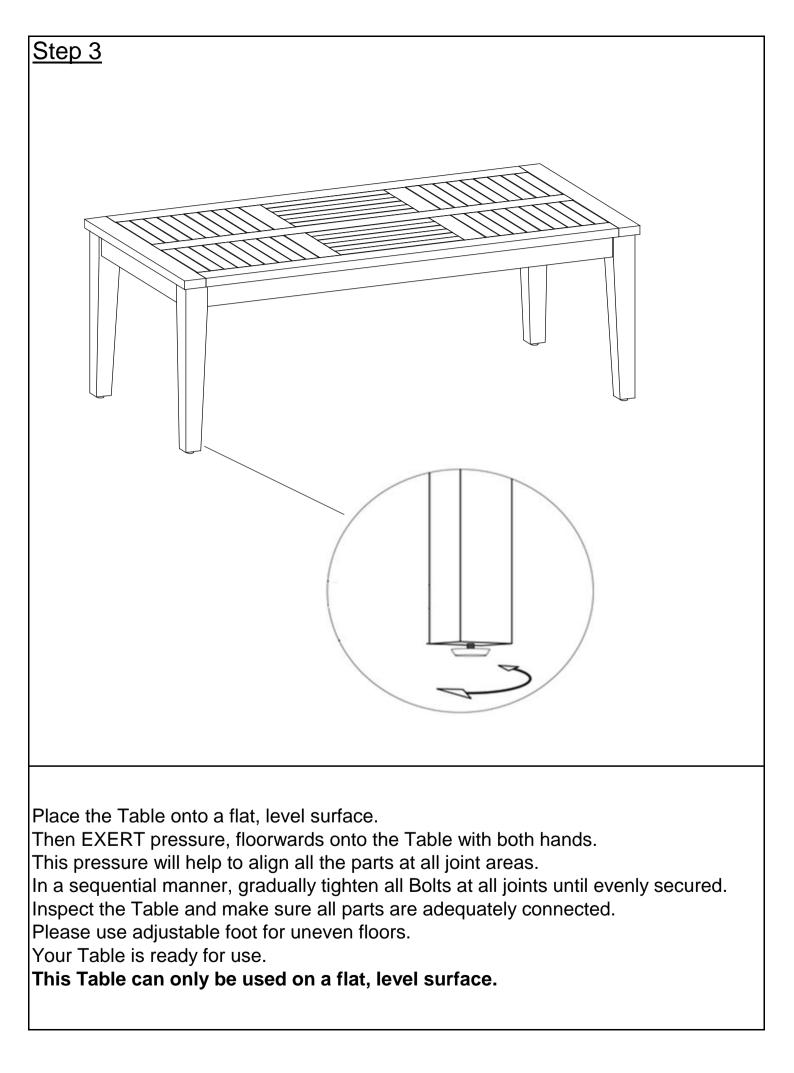

Care & Maintenance		
• Do not put hot items directly on furniture surface.		
• Do not clean furniture with harsh cleansers or polish.		
 To obtain the longest lifespan of your outdoor prodcts, minimizing exposure to direct sunlight is recommended. 		
Children should not climb or jump on the furniture.		
 Do not write on furniture without a padded barrier to protect the surface. 		
 To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings. 		
Not for commercial use. For residential use only.		
Stains may be removed with mild soap solution and damp cloth.		
Solution of the second state of the second		