

Dresser TV Stand Instruction Manual

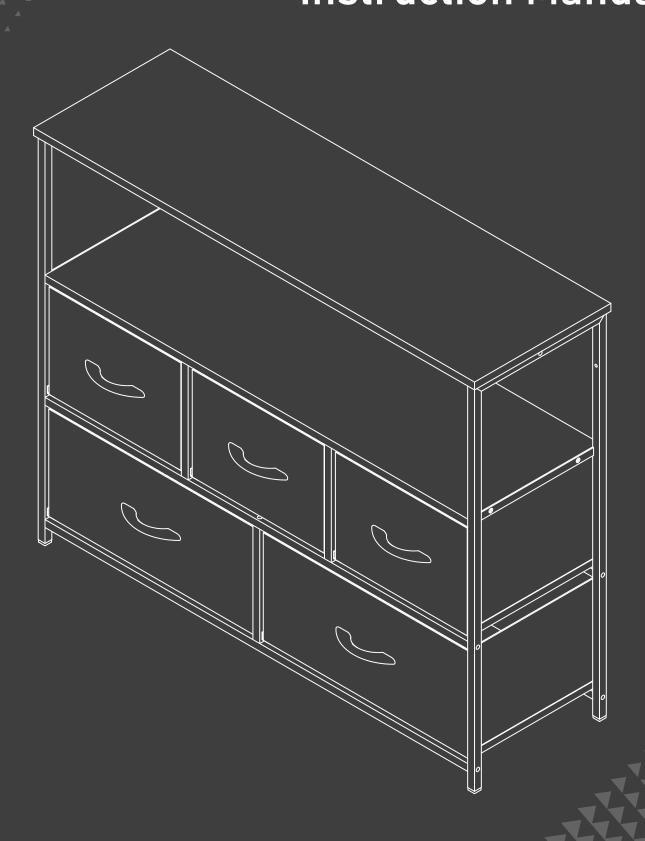


1 Component List

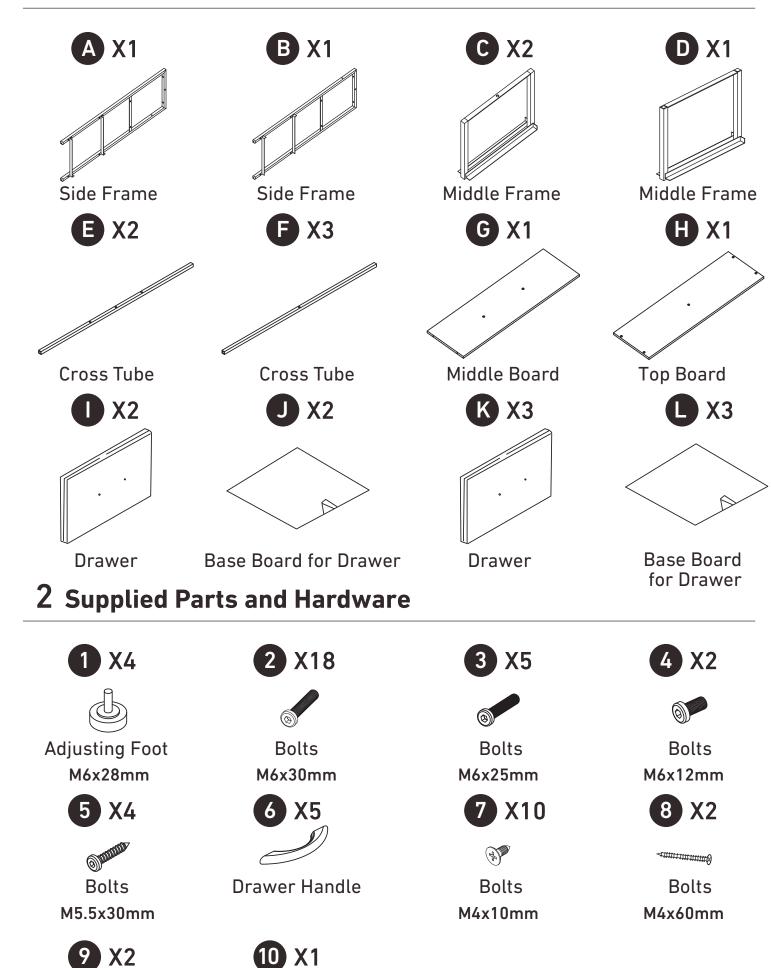


Expansion Tube

Wrench

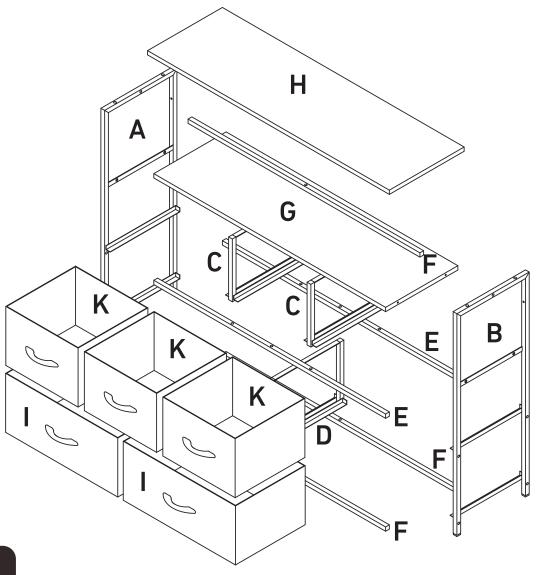


Step 1

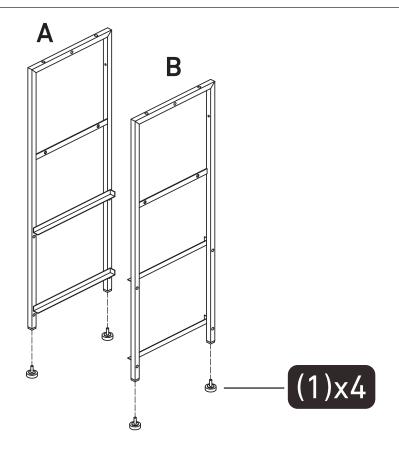

Install Adjusting Foot (5)*4 to the Side Frames (B&C).

Step 2

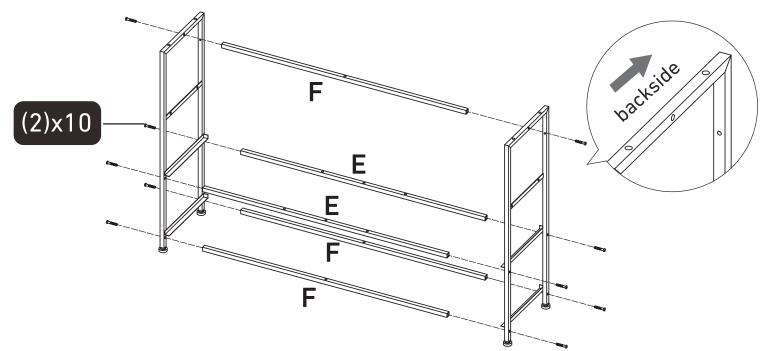


As shown, use Bolts (2)*10, and install Cross Tube (F) to the top of Side Frames (A&B)

Install Cross Tube (E)*2 to the middle of the Side Frames (A&B), and install Cross Tube (F)*2 to the bottom of the Side Frames (A&B).


NOTE:

Side Frames (A&B) face the same direction, with holes facing backward.

Step 3

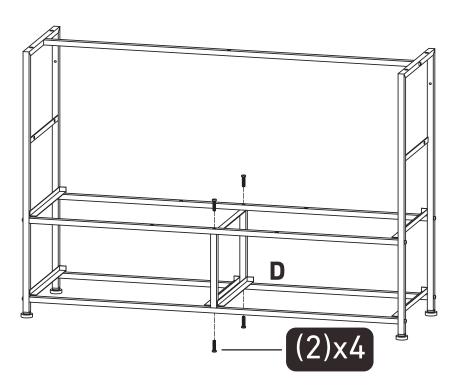


Install Middle Frame (D) to the Cross Tubes (E&F) with Bolts (2)*4.

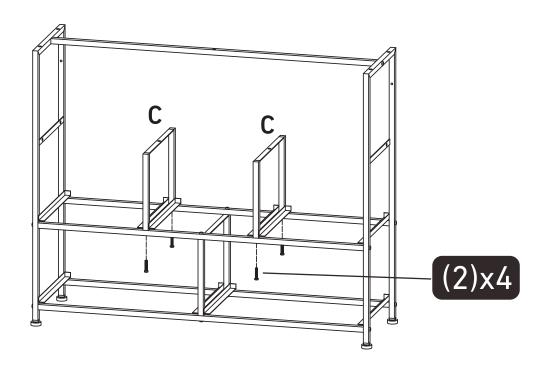


Install Middle Frame (C)*2 to the Cross Tube (E) with Bolts (2)*4.

Step 5

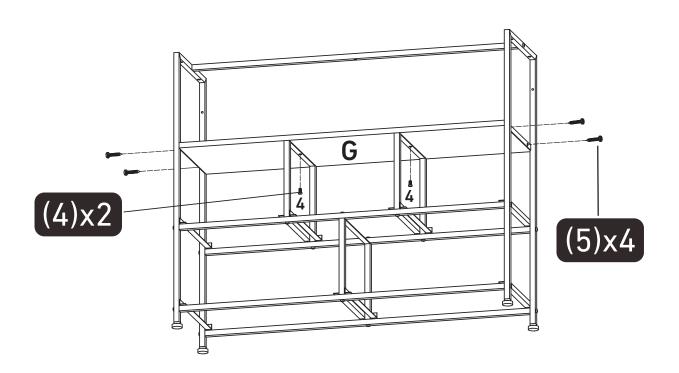


As shown, Install the Middle Board (G) to the Side Frames (A&B) with Bolts (5)*4 and to the Middle Frame (C)*2 with Bolts (4)*2.

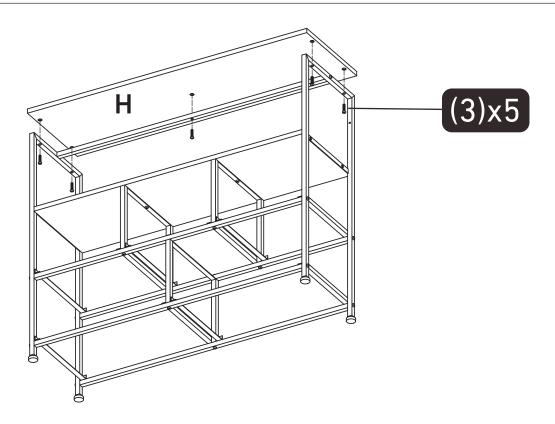


Attach Top Board (H) to the Frame, and tighten the Bolts (3)*5.

Step 7

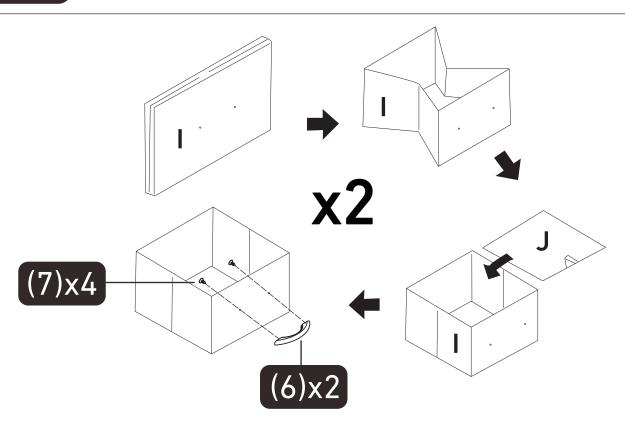


Place Base Board for Drawer (J) into the expanded Drawer (I), and install the Drawer Handle (6) with Bolts (7)*2.

Install the two Drawers (I)*2 in the same way.

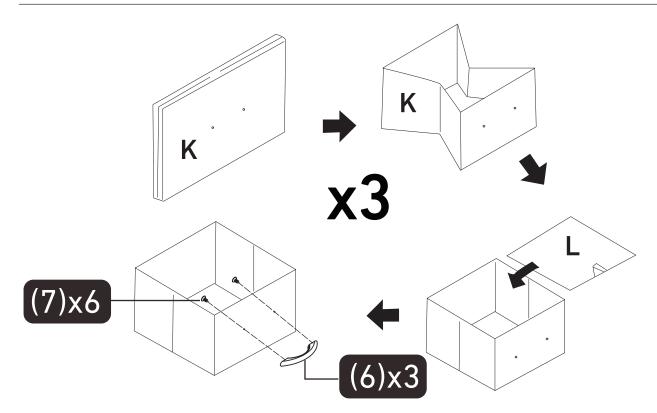


Install Drawer (K)*3, Base Board for Drawer (L)*3 and drawer handle (6)*3 in the same way as in the previous step.

Step 9

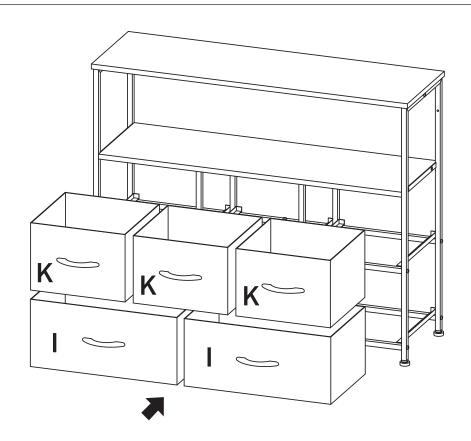

Put the installed Drawers (K&I) into the frame in turn.

Step 10

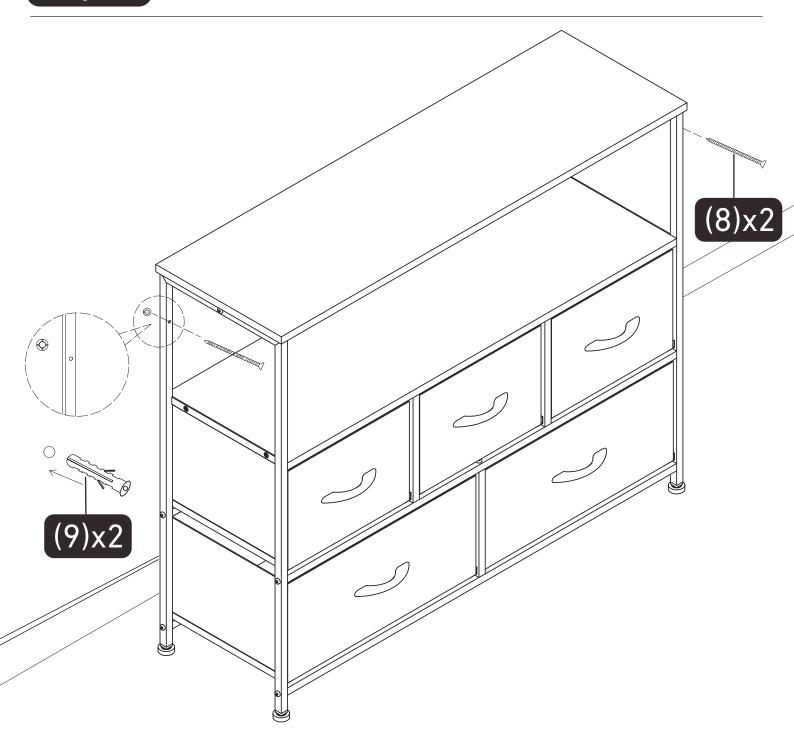

If you need to fix the Dresser TV Stand to the wall, drill holes in the wall with an electric drill, then insert Expansion Tube (9)*2 and fix the Dresser TV Stand with Bolts (8)*2.

