
 


MODEL: GT23028

 

 
 
 

 


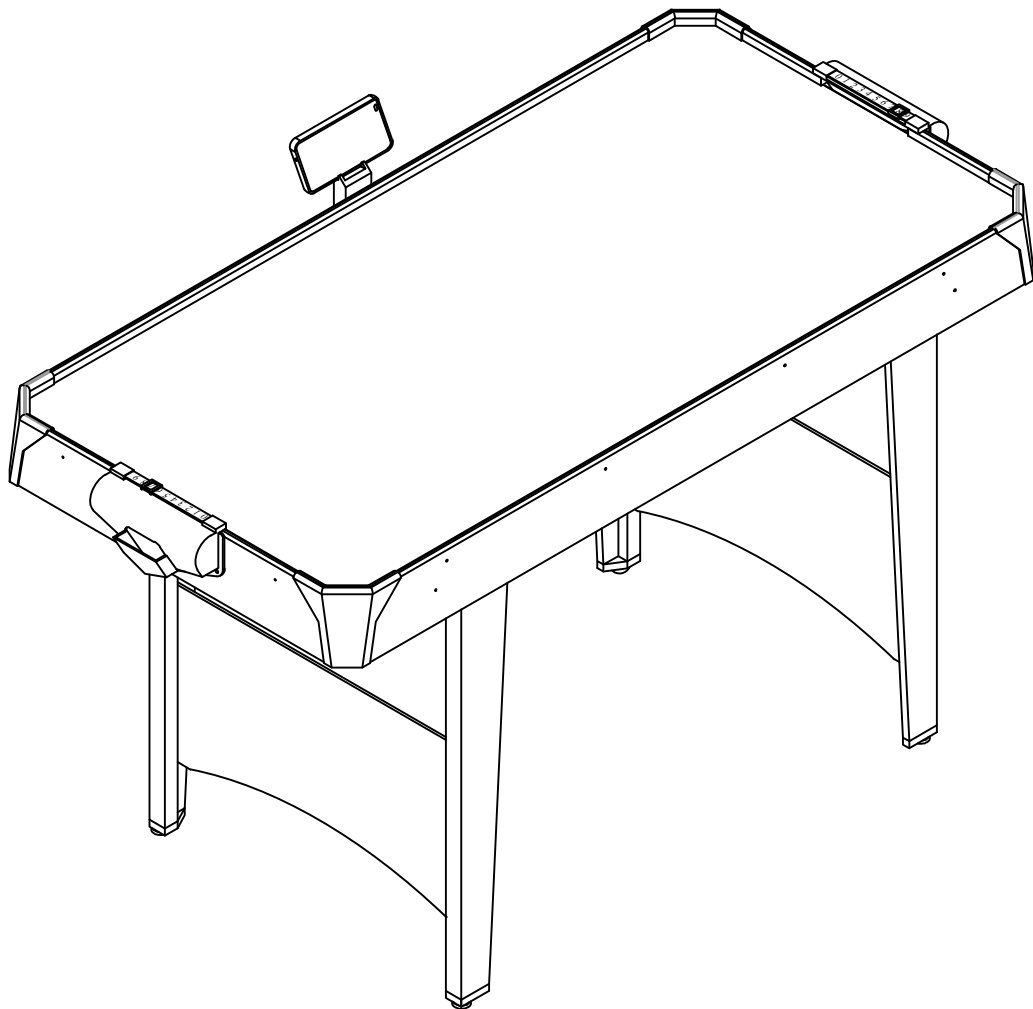




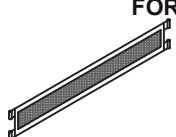


 
 
 


Missing parts, damages, and any other problems, please contact us via email.

 



 



[raykeepgoods@outlook.com](mailto:raykeepgoods@outlook.com)

## PART LIST










1	FOR FIG. 1	2	FOR FIG. 1	3	FOR FIG. 1	4	FOR FIG. 4
	x1		x2		x2		x1
Mainframe		Leg - A		Leg - B		Table Tennis Surface	
5	FOR FIG. 2	6	FOR FIG. 3	7	FOR FIG. 2	8	FOR FIG. 3
	x2		x1		x2		x1
End Leg Panel		Phone holder		Goal Box		Adapter	
9	FOR FIG. 3	10	FOR FIG. 3	11		12	
	x2		x2		x2		x2
Pusher		Felt Pad		Round Puck		Table Tennis Paddle	
13		14	FOR FIG. 4	15	FOR FIG. 4	16	FOR FIG. 3
	x2		x2		x1		x4
Table Tennis Ball		Net Post		Net		Plastic Screw	
17	FOR FIG. 3	A1	FOR FIG. 3	A2	FOR FIG. 1	A3	FOR FIG. 2
	x4		x2		x12		x12
Leg Leveler		4x15mm Screw		4x22mm Screw		3x20mm Screw	


## PRE-INSTALLED PARTS





 
P1	FOR FIG. 1	P2	FOR FIG. 1	P3	FOR FIG. 1	P4	FOR FIG. 2
	x1		x4		x8		x2
Motor		Apron Corner		Bracket		"TT" Score Button	
P5	FOR FIG. 2	P6	FOR FIG. 2				
	x1		x4				
Main Device		T-Nut					


**ASSEMBLY INSTRUCTIONS:**

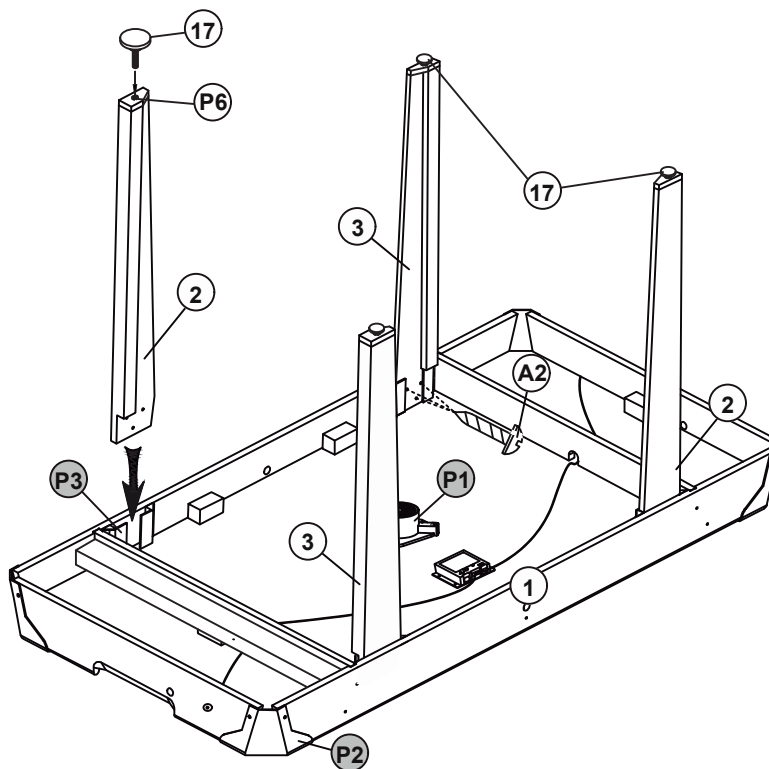1. Find a clean, level place to begin the assembly of your Product.
2. Remove all the parts from the box and verify that you have all of the listed parts as shown on the Parts list p  
Carefully cut or tear the four corners of the box so that the bottom of the box can be used as your work surface


1		X 1
2		X 2
3		X 2
17		X 4
A2		X 12
P1		X 1
P2		X 4
P3		X 8
P6		X 4

**FIG. 1**

5		X 2
7		X 2
A3		X 12
P4		X 2
P5		X 1

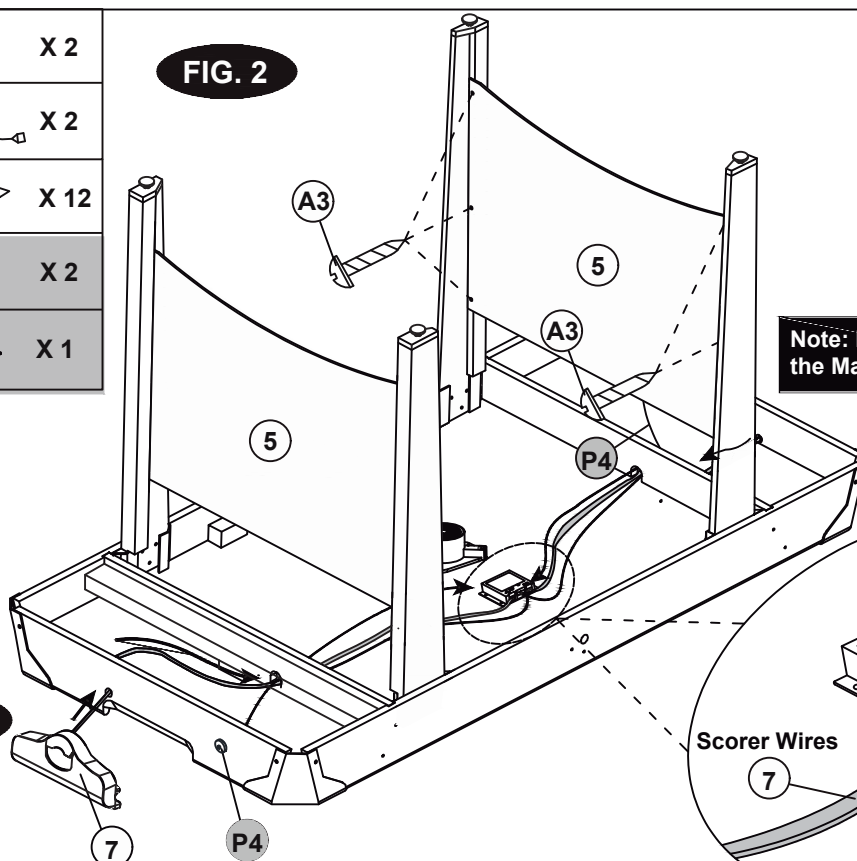**FIG. 2****FIG. 2A**

Note: Insert the Scorer Wires into the Main Device (#P5).

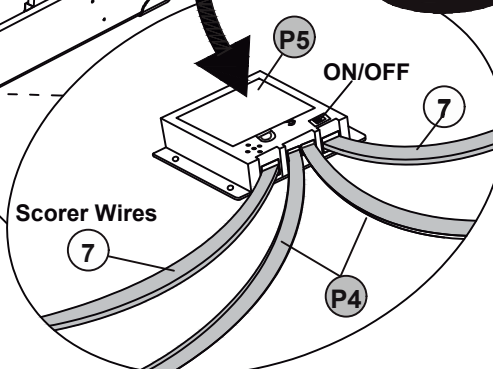**FIG. 2B**







16		X 4
6		X 1
8		X 1
9		X 2
10		X 2
A1		X 2

FIG. 3

FIG. 3C

Phone Holder

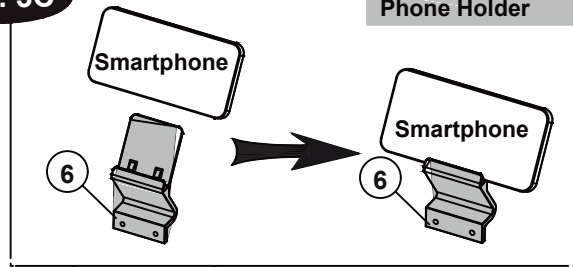


FIG. 3A

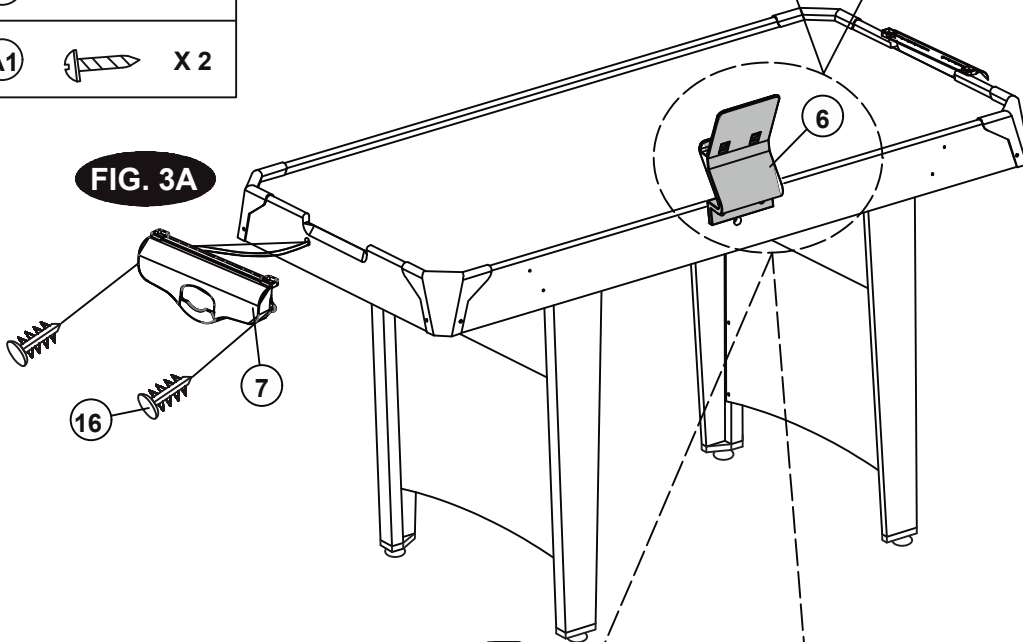


FIG. 3B

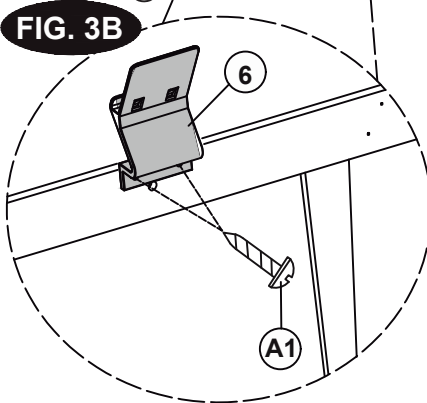


FIG. 3D


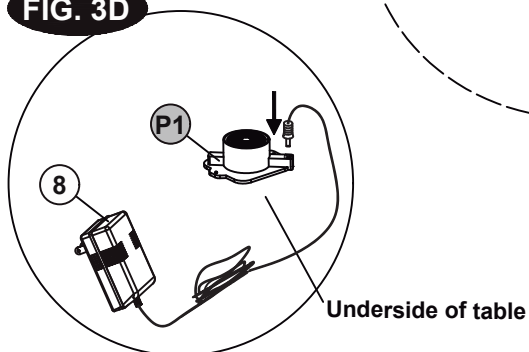


FIG. 3E



Note: Tear off the backside papers of the Felt Pads (#10) and stick them onto the bottom of the Pushers (#9).

 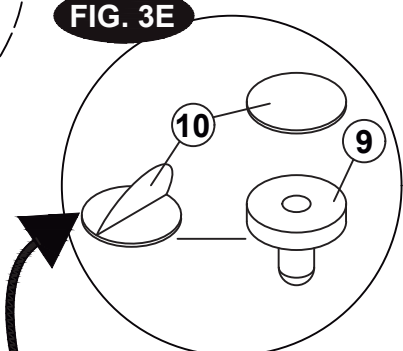



4		X 1
14		X 2
15		X 1

FIG. 4




# HOW TO OPERATE BLUETOOTH E-SCORER

## 1. Install Batteries:

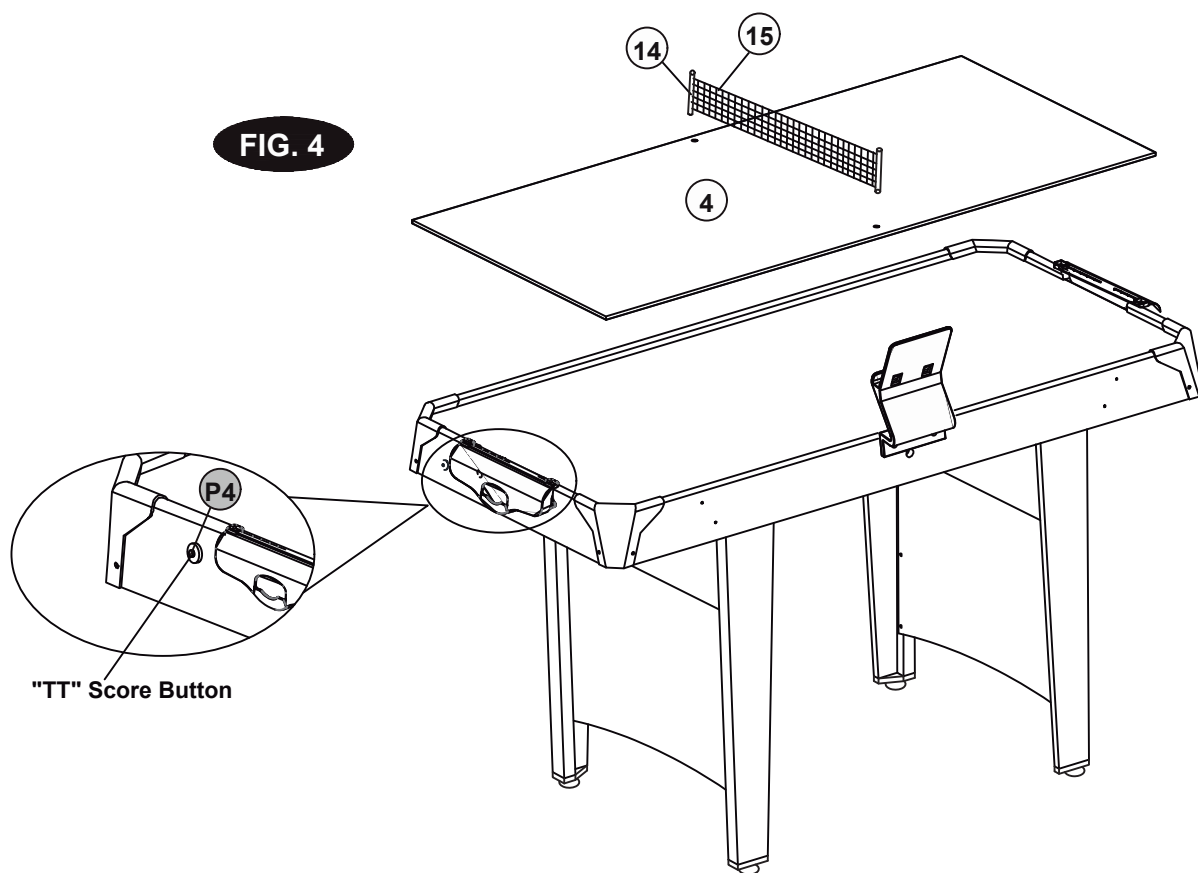Battery Box: Remove the battery cover and insert 3 "AAA" Batteries into the battery box. ( 3 "AAA" Batteries not included.).

## 2. Reminding:

- Batteries must be installed according to the correct polarization (+ and -) required.
- Please clean the battery contacts and also those of the device prior to battery installation.
- If the game will not be used for a long period of time, we recommend that the batteries should be removed.

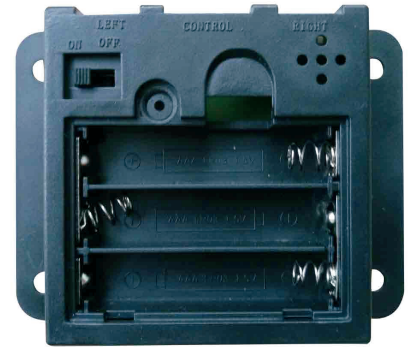

## 3. Download APP for bluetooth E-scorer

### a. For phone system IOS:

Download the App "2 IN 1 SCORER" to your smartphone from App Store, or scan the below QR code.



**Phone System Requirements:**  
IOS 13.0 and above.

### b. For phone system Android:

Download the App to your smartphone by using the link  
"<http://www.nsosuo.com/tuzi/z/o/ther/hockeyTennisN.apk>" or scan the below QR code.



**Phone System Requirements:**  
Android 5.0 / 16G and above.

## 4. Bluetooth settings

- Turn on the main device, open the "2IN1 SCORER" APP on the phone and then the main device will automatically pair to the phone.
- Only one main device can be paired to the phone at a time.
- Only open the APP on one phone at a time otherwise the main device will be interrupted.
- Keep the phone within 3 meters of the main device to ensure constant Bluetooth connectivity.

**Note: If the main device is not paired within 10 minutes, it will turn into sleep mode. Press the "TT" score button to wake up or restart the main device by using the button "ON/OFF"**

## HOW TO PLAY?

### HOCKEY

- Edit the name for "PLAYER 1" and "PLAYER 2".
- Take a photo or choose a picture from album.
- Choose either 3 or 5 minutes for the game time.
- Press "START" to play the game.
- When the "PLAYER 1" scores, the display on the "PLAYER 1" side increases by 1.
- When the "PLAYER 2" scores, the display on the "PLAYER 2" side increases by 1.
- The winner is the first player to reach 100 points, or the player with the highest score when the game time ends.

Note: Press "RESTART" to reset the scores to zero.

**Note: Press "RESTART" to reset the scores to zero.**

**Note: If the game becomes slow or unresponsive, change the batteries.**

**Note: Remove the batteries when the main device is not in use.**

### TABLE TENNIS

- Edit the name for "PLAYER 1" and "PLAYER 2".
- Take a photo or choose a picture from album.
- Press "START" to play the game.
- When the "PLAYER 1" scores, press the "TT" score button and the display on the "PLAYER 1" side will increase by 1.
- When the "PLAYER 2" scores, press the "TT" score button and the display on the "PLAYER 2" side will increase by 1.
- The winner is the player who first scores 11 points, unless both players score 10 points. Then a game will be won by the first player to gain a two point lead.
- If you press the "TT" score button in error, press it for 5 seconds to return the score