

SWING ARM FLOOR LAMP


ASSEMBLY INSTRUCTIONS

Note: The electrical wire is connected continuously through the body arm. Do not pull wires during unpacking, bad connections may result.

- 1) Connect the lamp body(**B**) to the base(**A**), and use hex wrench(**D**) to tight screw(**C**) into lock in place.
- 2) Clasp spring(**J**) into the card slot(**K**) then pull the spring into the card slot(**L**) with enough force(2pcs). As the same time, clasp spring into(**M**) card slot then pull the spring into the card slot(**N**) with enough force(2pcs).
- 3) Place the lamp shade(**H**) into lamp holder(**F**), and tighten by lamp holder outer ring(**G**)
- 4) Install the light bulb(**I**) (not included) within the lamp holder.
*use 100W incandescent light bulb maximum
(23W CFL equivalent)
- 5) Use handles(**E**) to adjust the lamp height.

WARNING:

The lamp produces very high temperature. Always unplug electrical wire and allow sufficient time for bulb to cool down before replacing bulb.

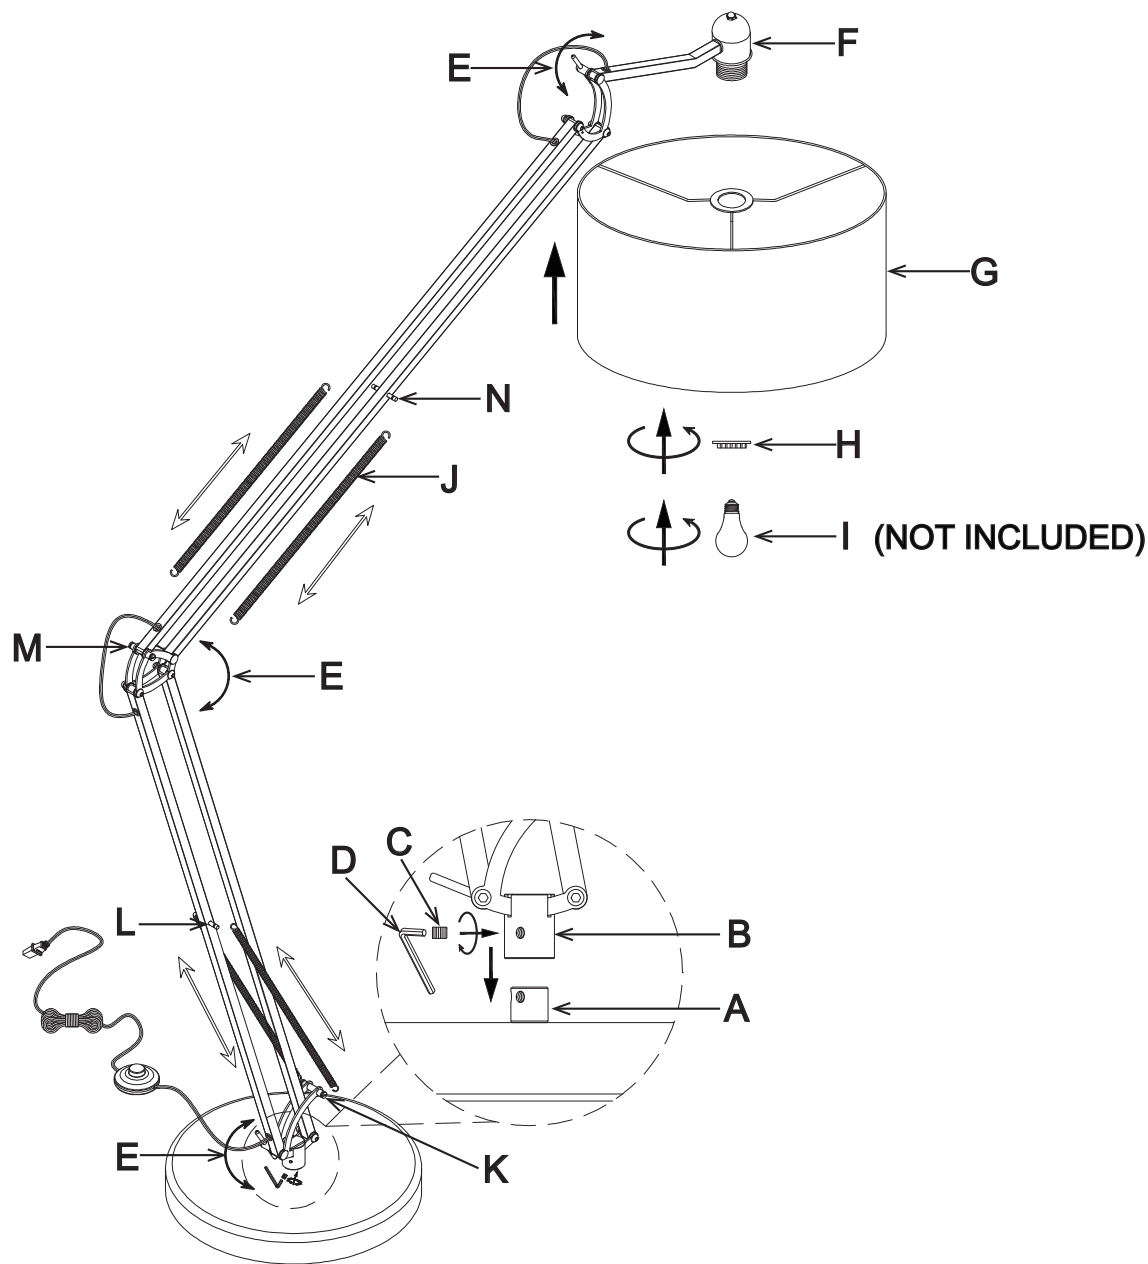

A	B	C	D	G	H	J
						4PCS