
Kids Desk

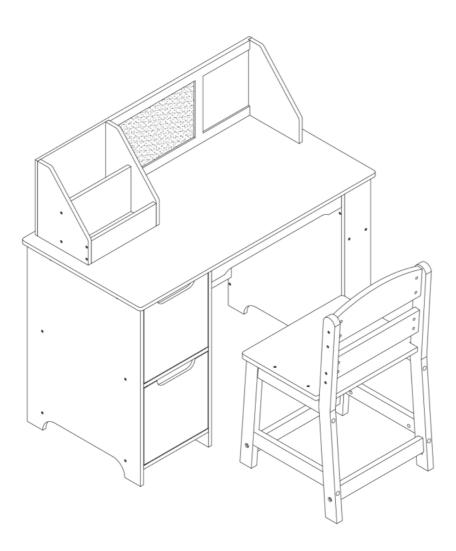






MARNING

CHOKINGHAZARD-small parts: Not for children under 3 yrs, The product is to be assembled by an adult.



🗥 WARNING

Prior to assembly this package contains sharp edges and sharp points. Keep away from children until assembled.

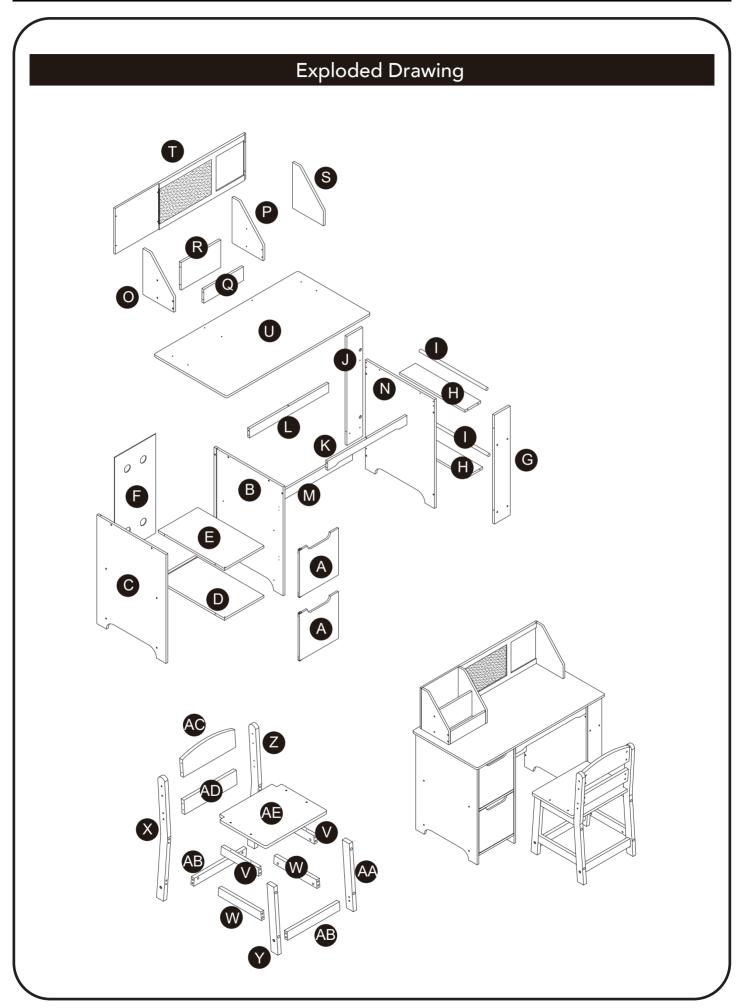

Product Parts **B** B D C $\dot{2}$ pcs G 2 pcs $2 \, \mathsf{pcs}$ Q R M N 0 S U W 2 pcs 2 pcs Z AB AC AD $2 \, \mathrm{pcs}$

Product Parts





Hardware

1

2

3

4

5

4

aaaaaaaaaaaaaaa

Ø3*7mm

Ø4*28mm

Ø5*25mm

 $2 \, \mathrm{pcs}$

 $8 \, \mathrm{pcs}$

 $2 \, \mathsf{pcs}$

65 pcs

 $2 \, \mathrm{pcs}$

6

7

8

9

Cacacacacaca(+)







Ø4*22mm


6 pcs


Ø8*30mm


12 pcs


M4*40mm 12 pcs


1 set

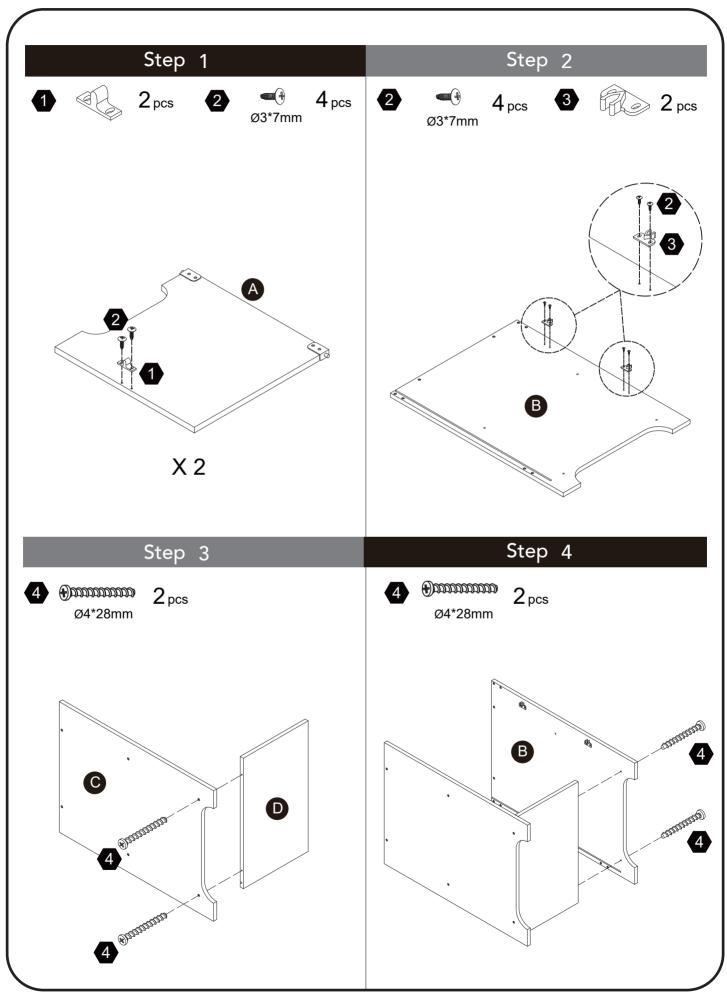


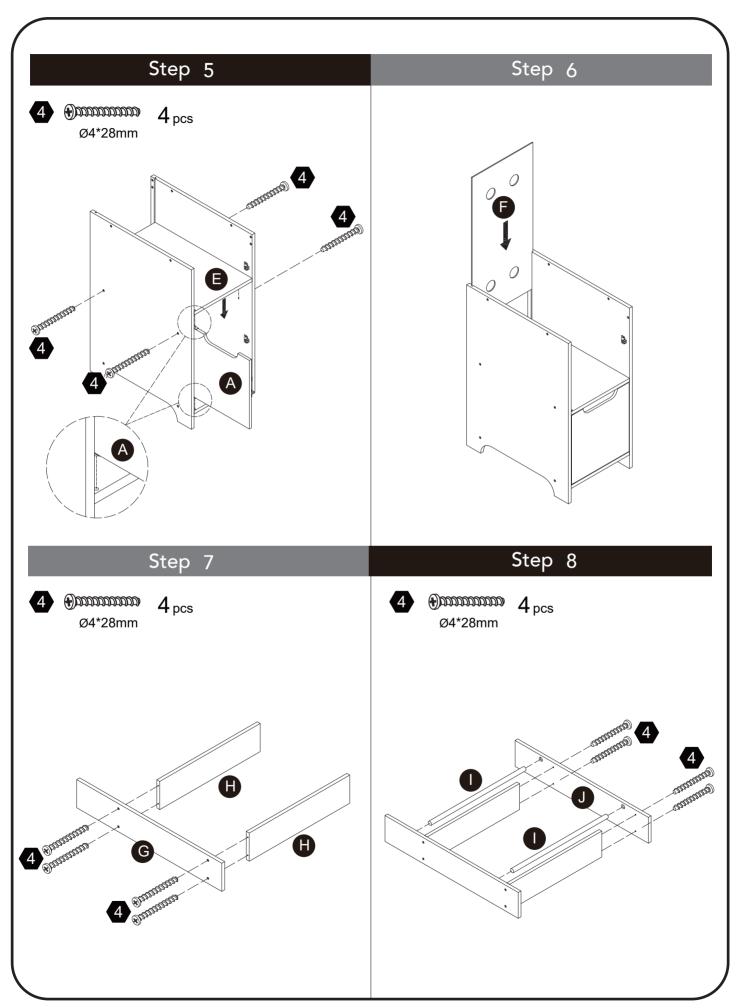

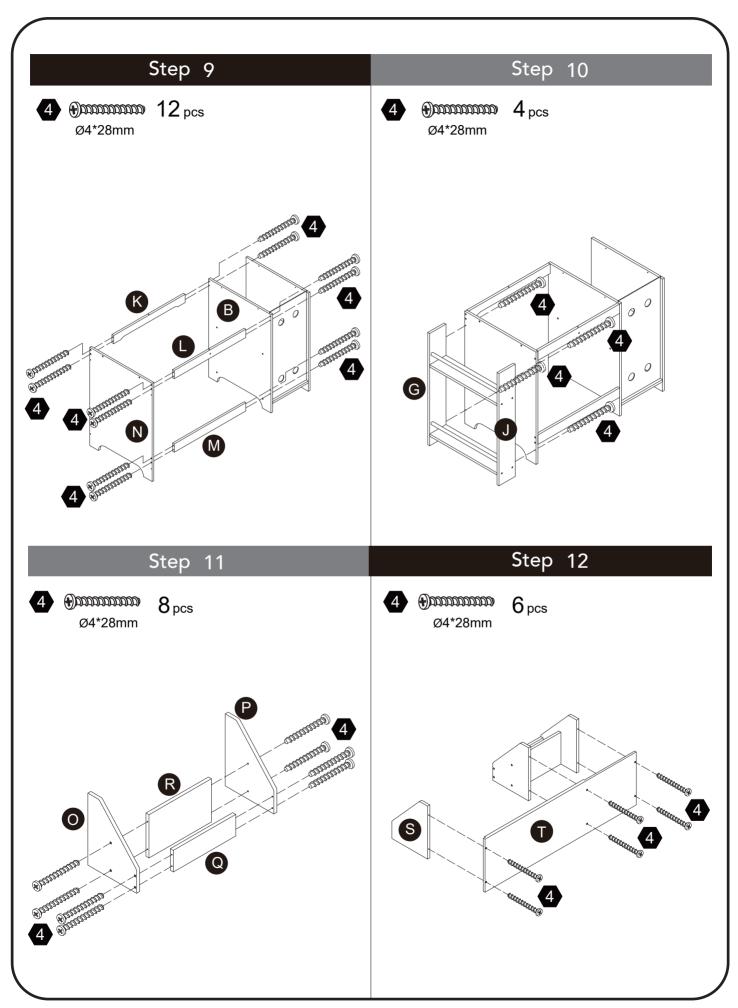

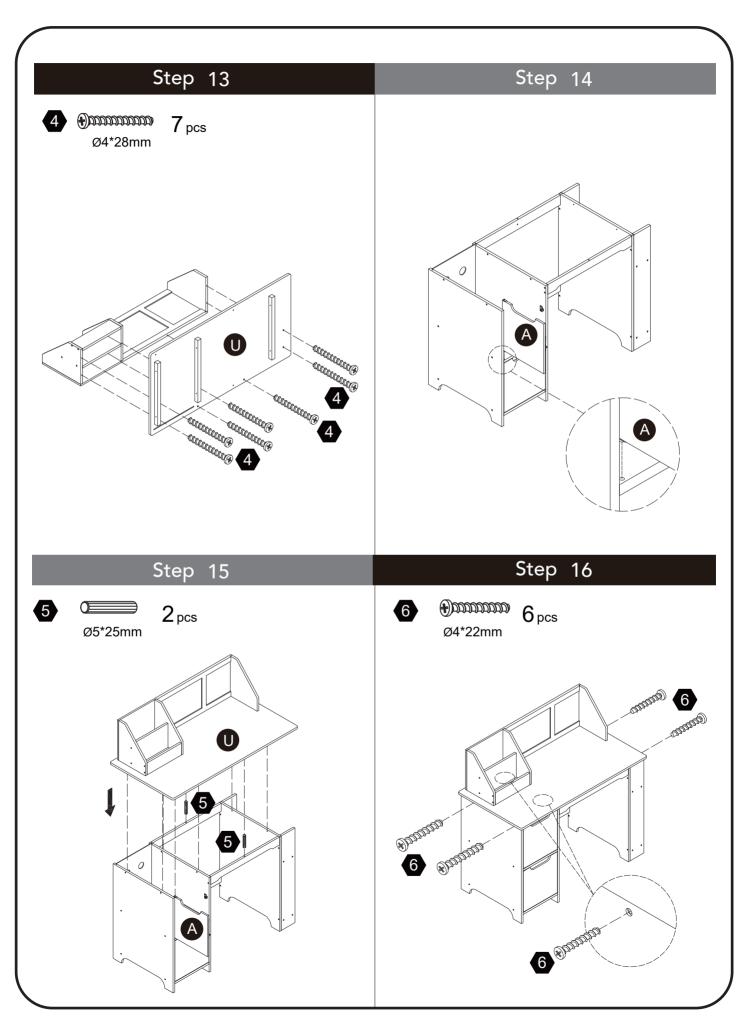

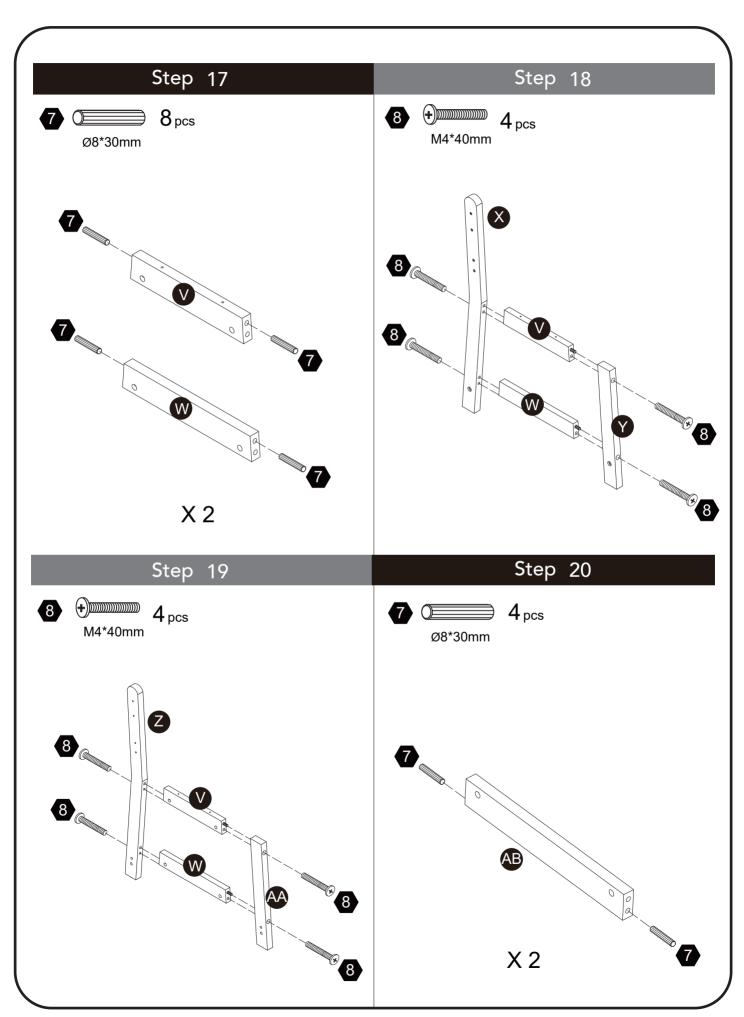

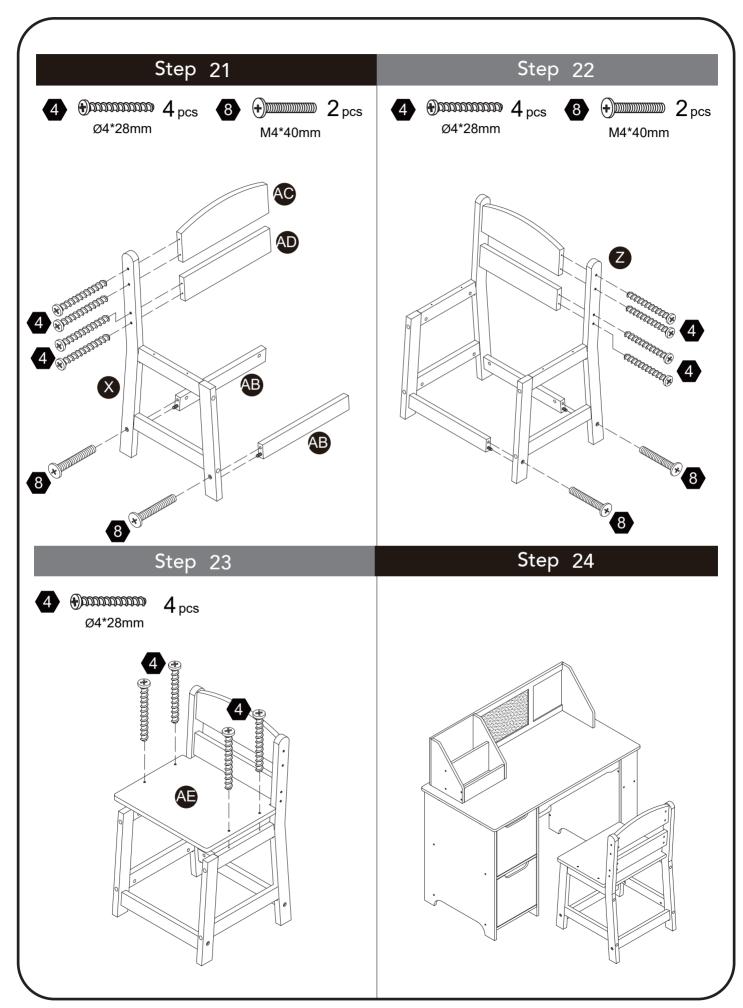

WALL MOUNTING ASSEMBLY

For added safety and stability, it is recommended that the wall mounting hardware be installed. For safe mounting, it is essential to use wall anchors appropriate to your wall type (i.e. plaster, drywall, concrete, etc.). Mount to wood studs whenever possible.

Use a 1/4"(6.5 mm) drill bit to pilot the hole. If mounting to plaster, wood panels, brick or other drywall please consult a qualified professional.

Please make sure you use the right hardware for your wall type for your safety.

E. Wood Screw x 1

Φ4X32mm

 $G. Large\ was herx 1$

Wrench ×1

Ф16ХФ6Х1тт

F.Nut x1

Do not install on a wall where items can fall off and injure a child.

WARNING:

may be choking hazard to children 3 years and younger.

Adult assembly required.
Hardware contains small screws with sharp points. Keep unassembled parts out of reach of small children

Hardware

- A. Screw x 1 M4x25mm
- B. Small Washer x 2 Φ10ΧΦ5X1mm
- C. Plastic Anchor x 1
- D. Plastic Anchor x 1

The following tools (not included) are repuired for assembly:




1/4" (6.5 mm) Drill Bit

Phillips® Screwdriver

Step 1

Attach Plastic strip to back of product.

Hole predrilled in product backboard #L

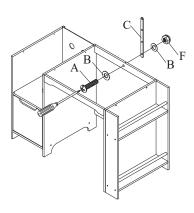


Use 1/4" (6.5mm) drill Step 2 bit to drill hole in wall

Do not drill an oversized hole or the wall anchor will not hold tightly into the wall.

Tap wall anchor into hole.

Secure product to wall with screw "E" through Plastic strap and into wall anchor.

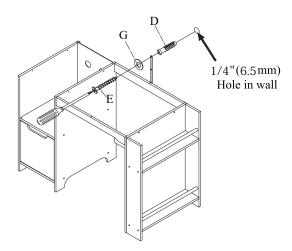

Warning:

Serious or fatal injuries can occur from furniture tip-over. To help prevent furniture tip-over:

Use provided mounting hardware to secure furniture to the wall.

This may reduce but not eliminate the risk of furniture tip-over.

Do not allow children to climb on furniture.

Keep remote controls, toys, and other items that might attract children off of this product.

Unless specifically designed to accommodate, do not set televisions or other heavy objects on top of this product.