 


TV STAND

USER MANUAL

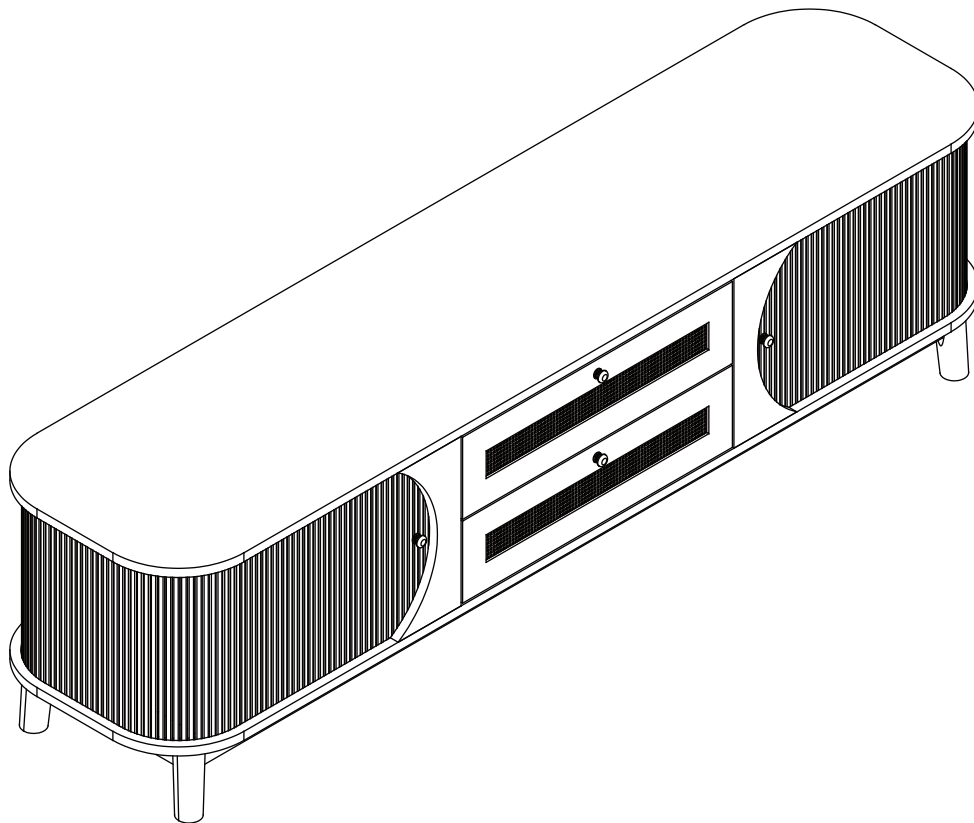

SAVE THESE INSTRUCTIONS FOR FUTURE USE

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.







Before Installation



Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

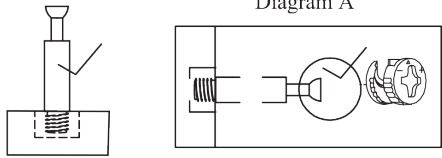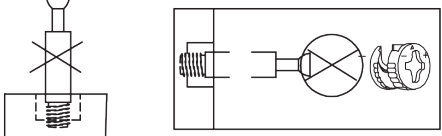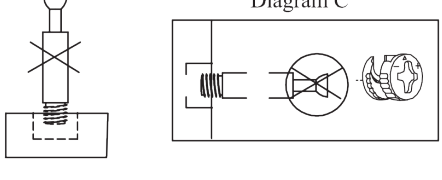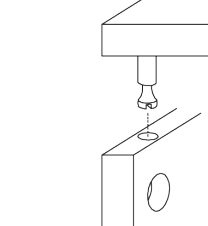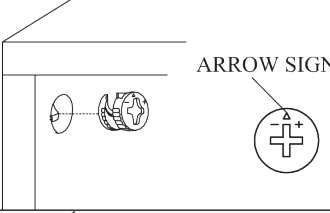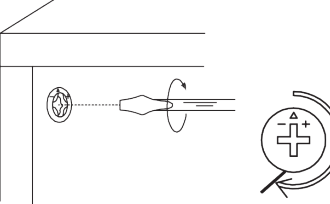      	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
 Connect the panels together.	
	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

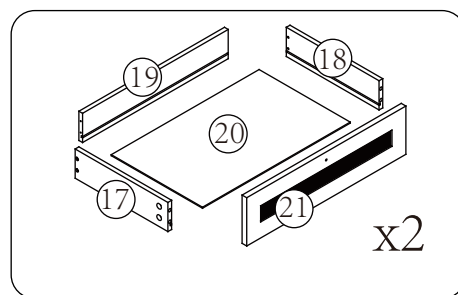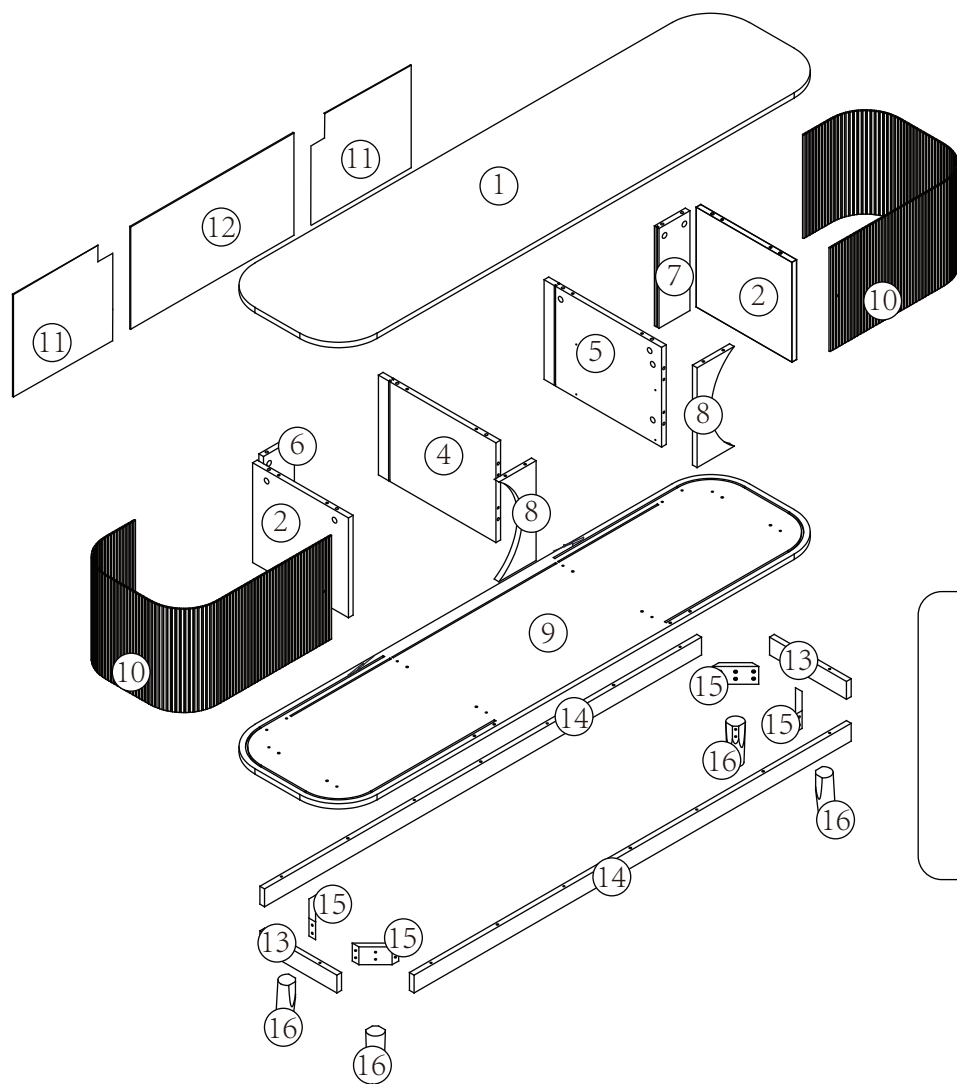  

Ax24



Bx24



Cx 22



M4x40

Dx 8



M4x30

Ex 2



M4x30

Fx 32



M6x30

Gx 8




M6x60

Hx 4



 Ix 1



Jx16



M3x12

Kx 24



Lx4



Mx 8



Nx 16




M4x25

Ox 12



 Px2




M4x12

Qx 2



 R x2




M4x35

CRx2




300mm

 CLx2



300mm

 DRx2




300mm

DLx2




300mm

 S x2




T x2

 


M4x20


 
STEP 1

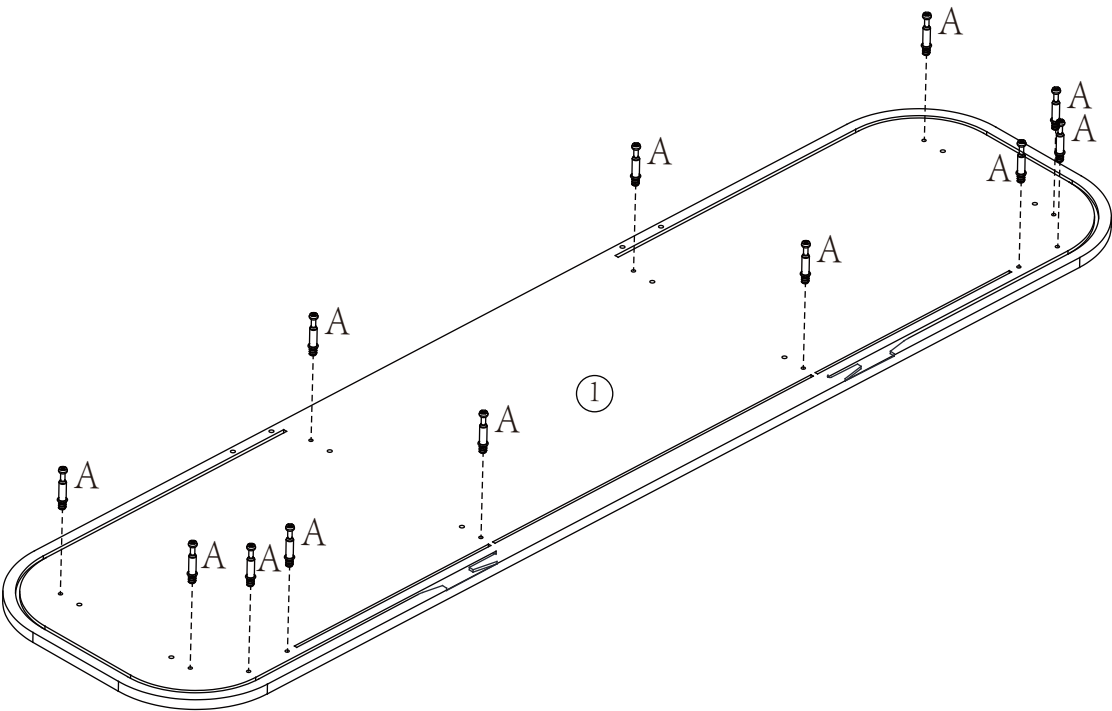


Ax12

 

 
 
STEP 2

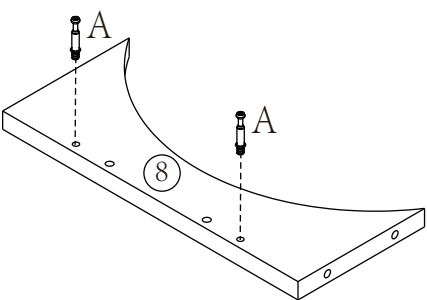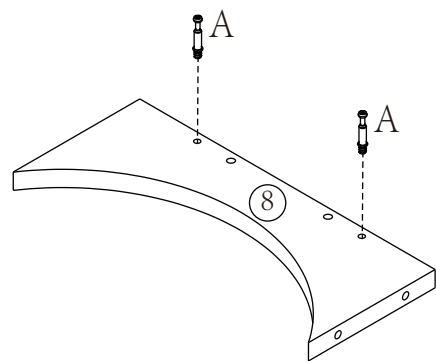




Ax4

 



 
 
STEP 3

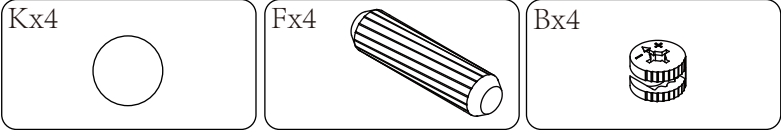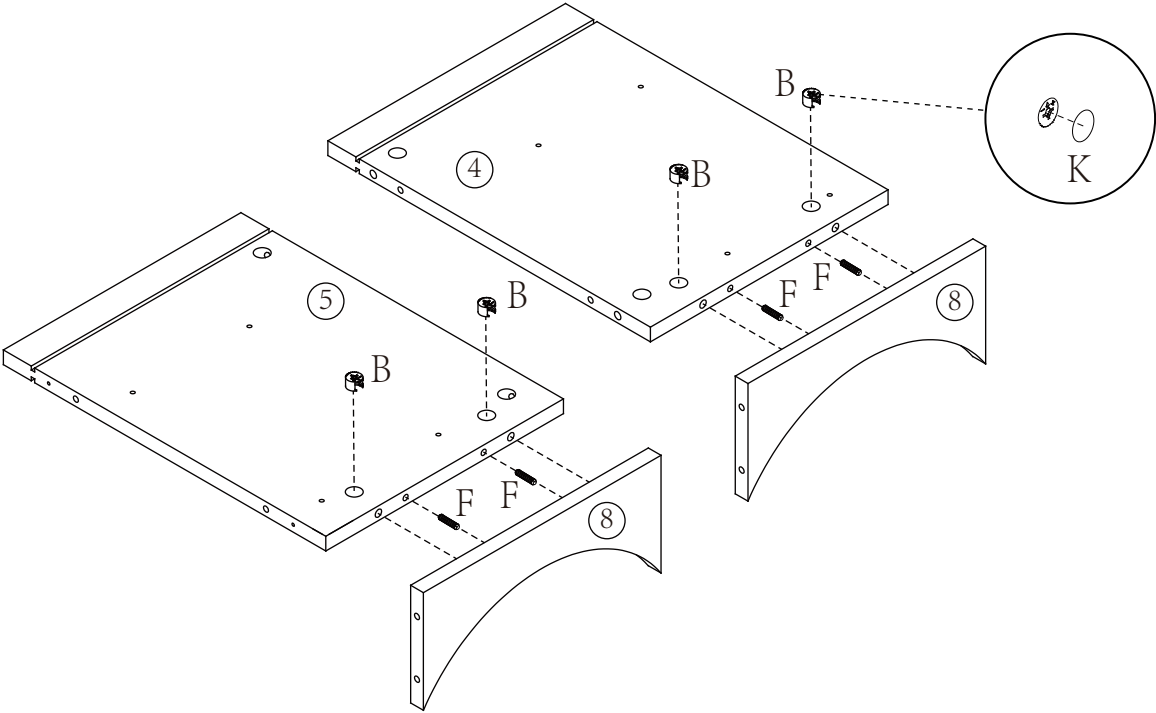

   
STEP 4

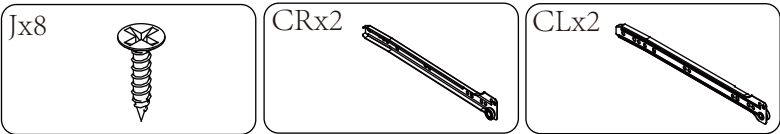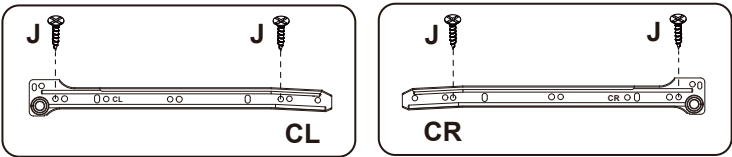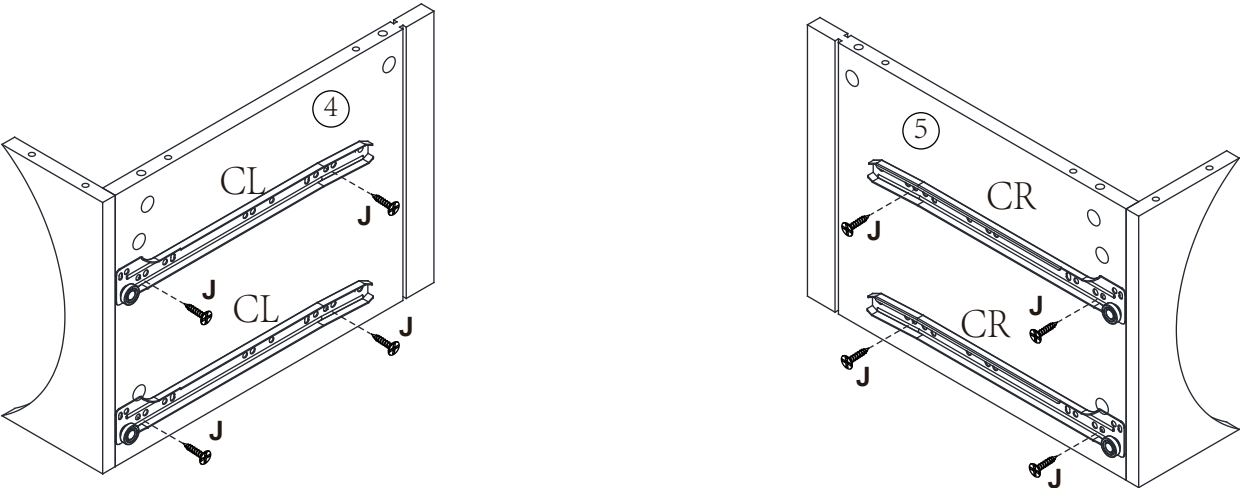

  
 
 
STEP 5

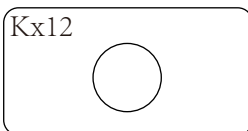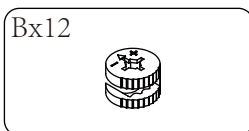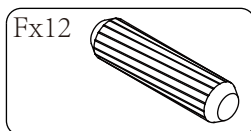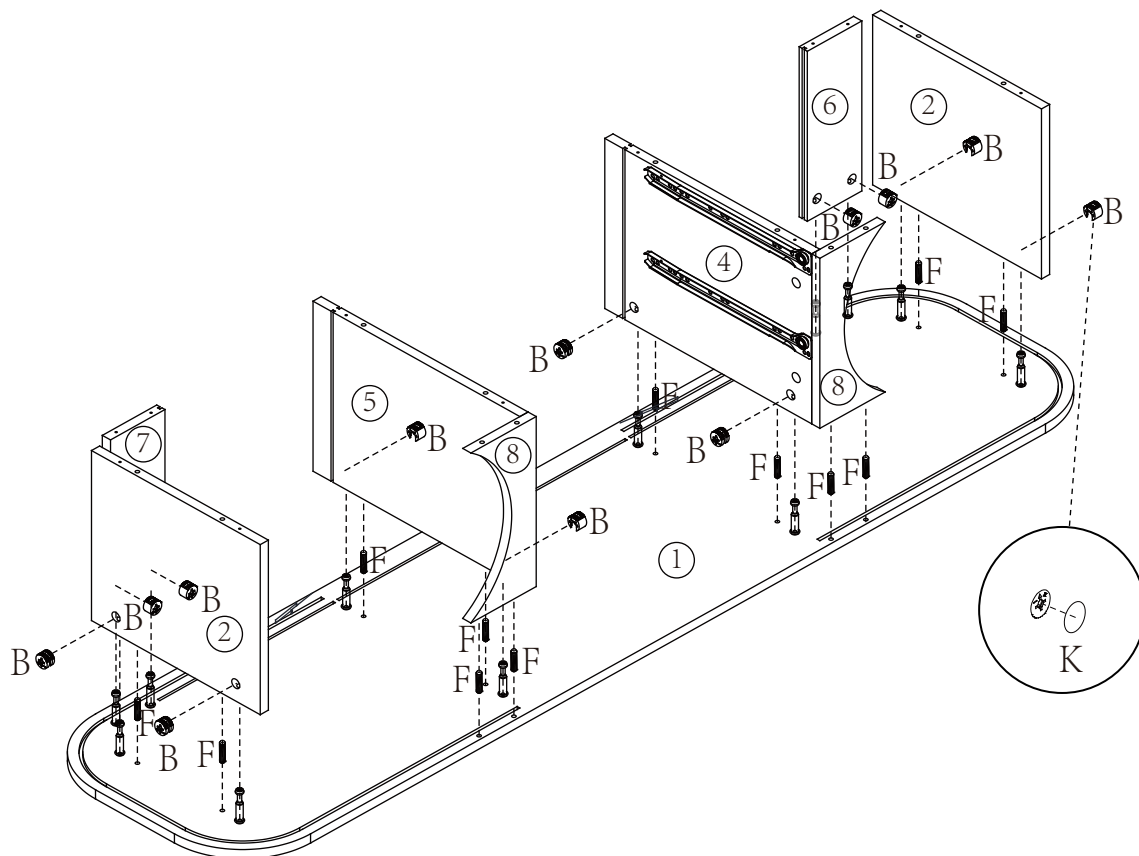


 
STEP 6

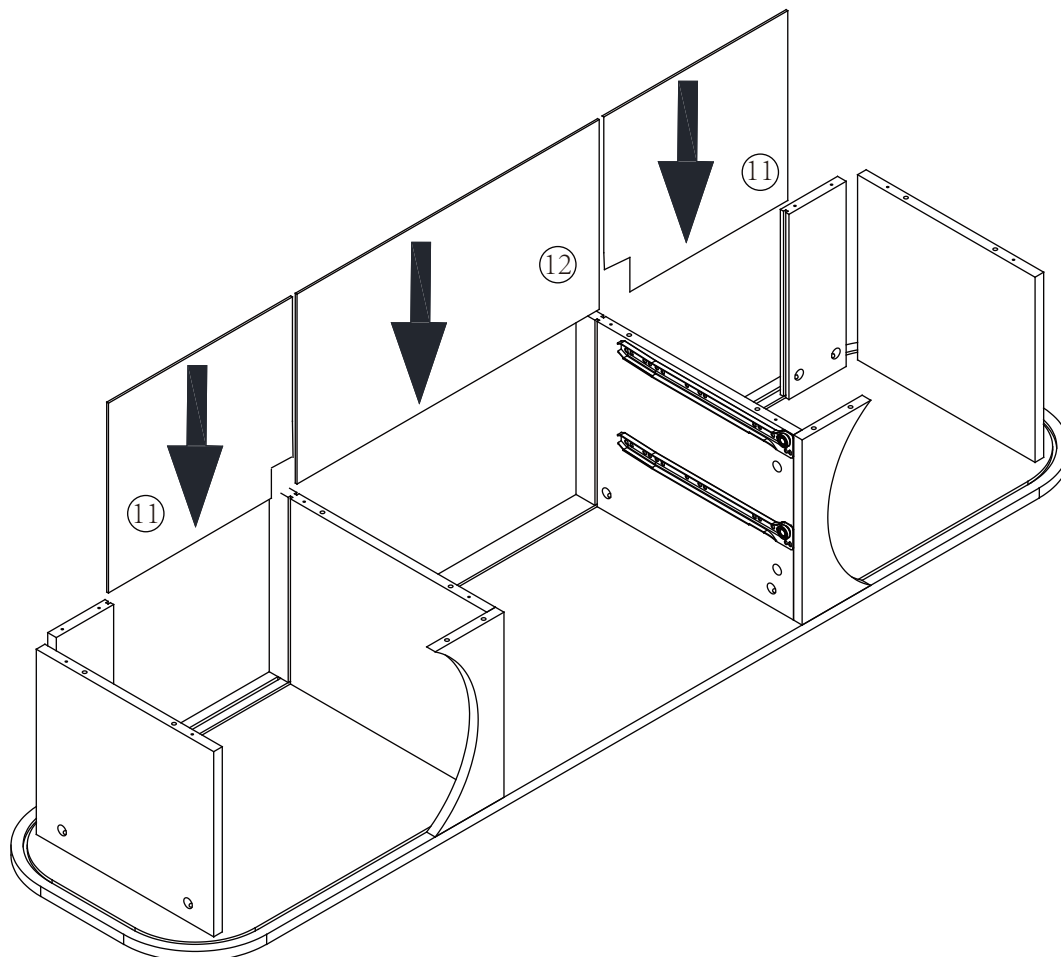


 
 
 
STEP 7

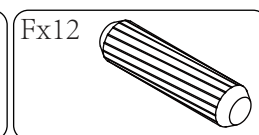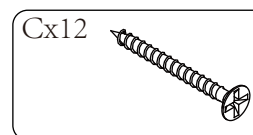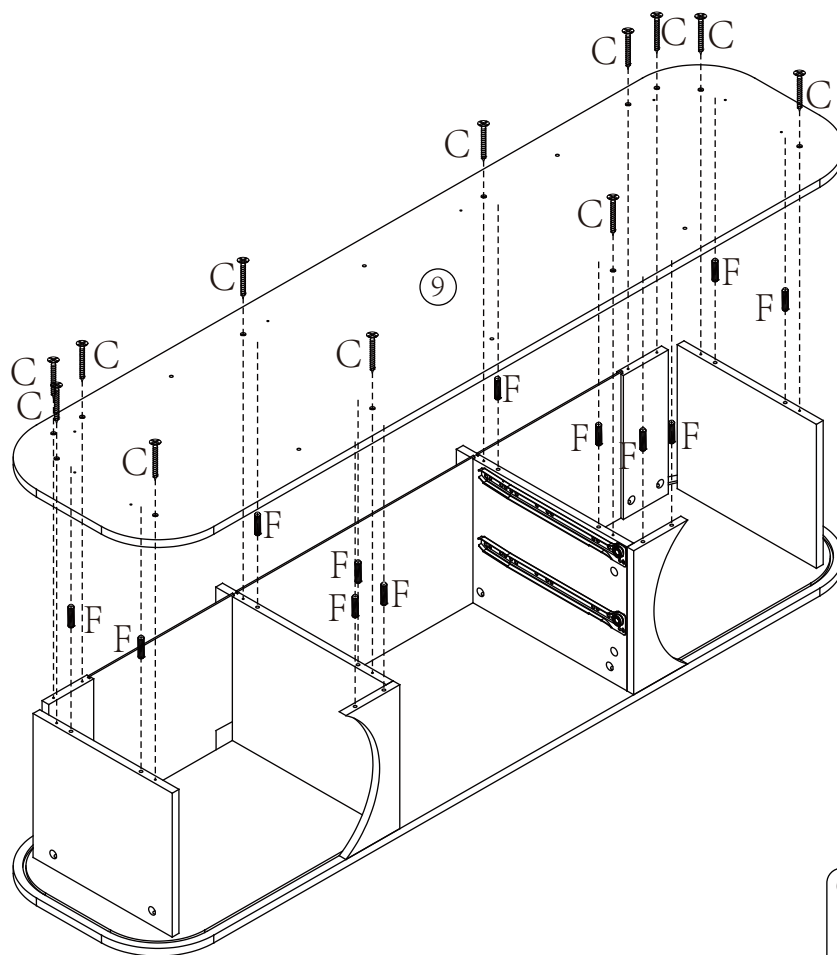



 
 
STEP 8

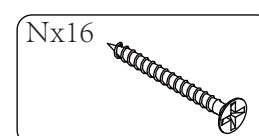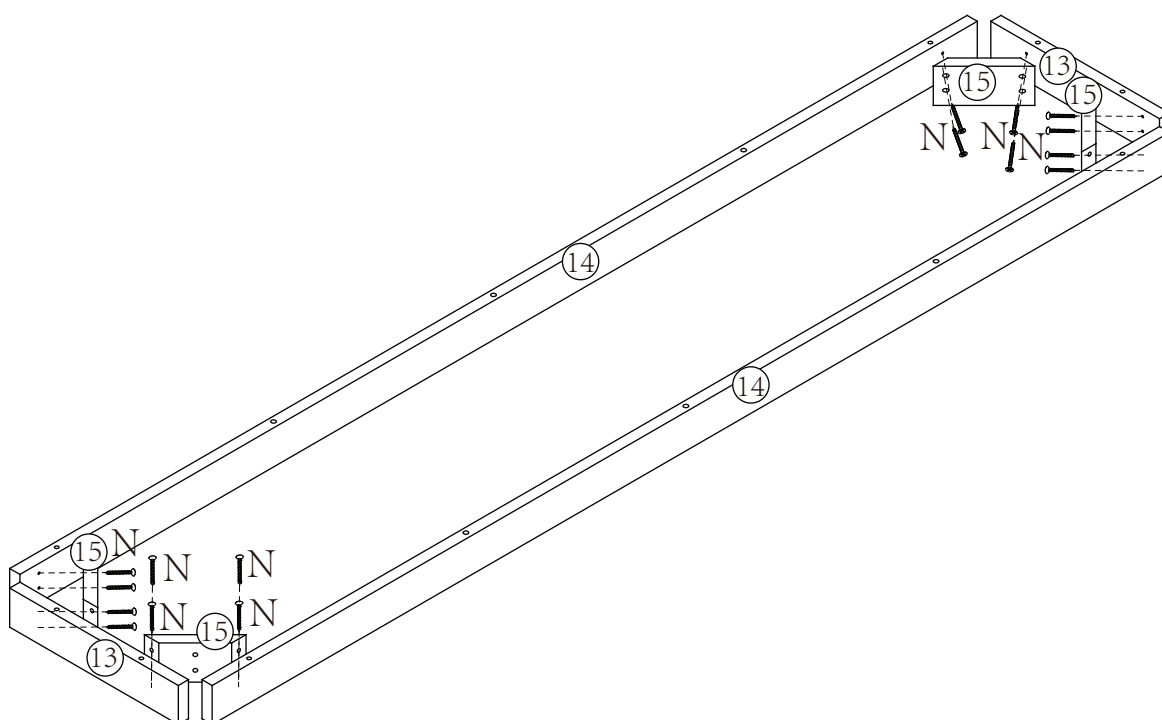

    
STEP 9

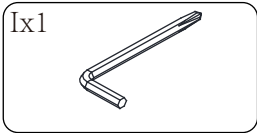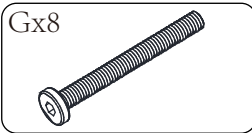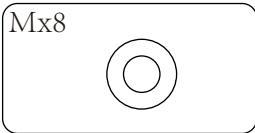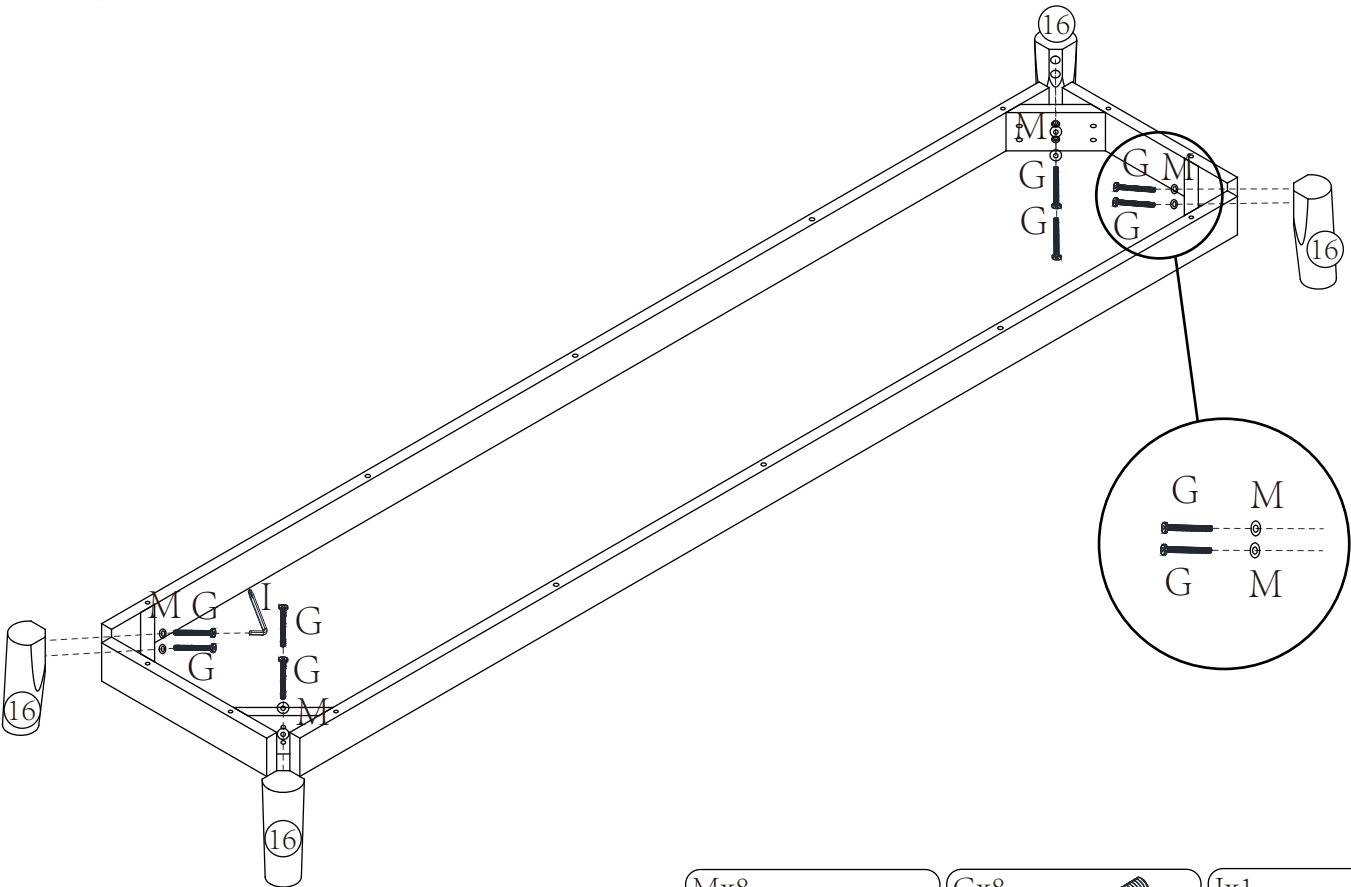

    
STEP 10

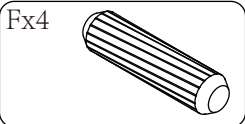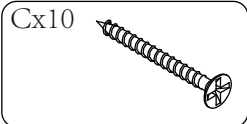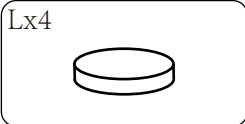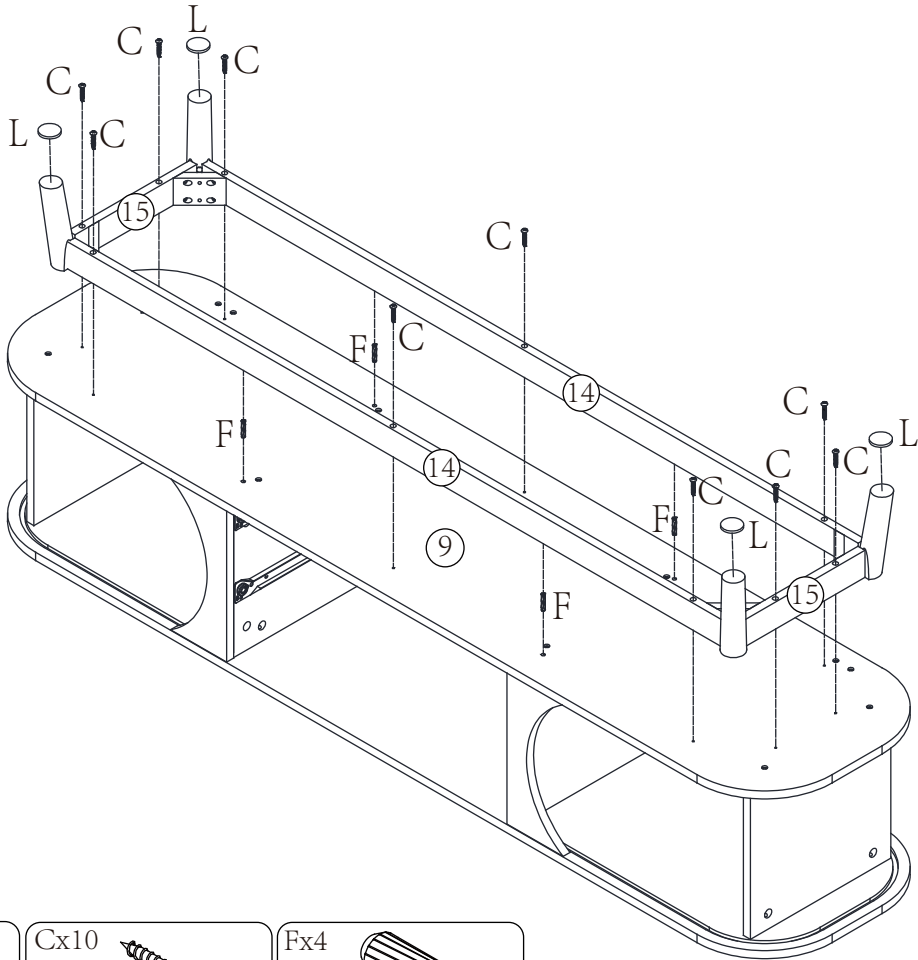

 STEP 11

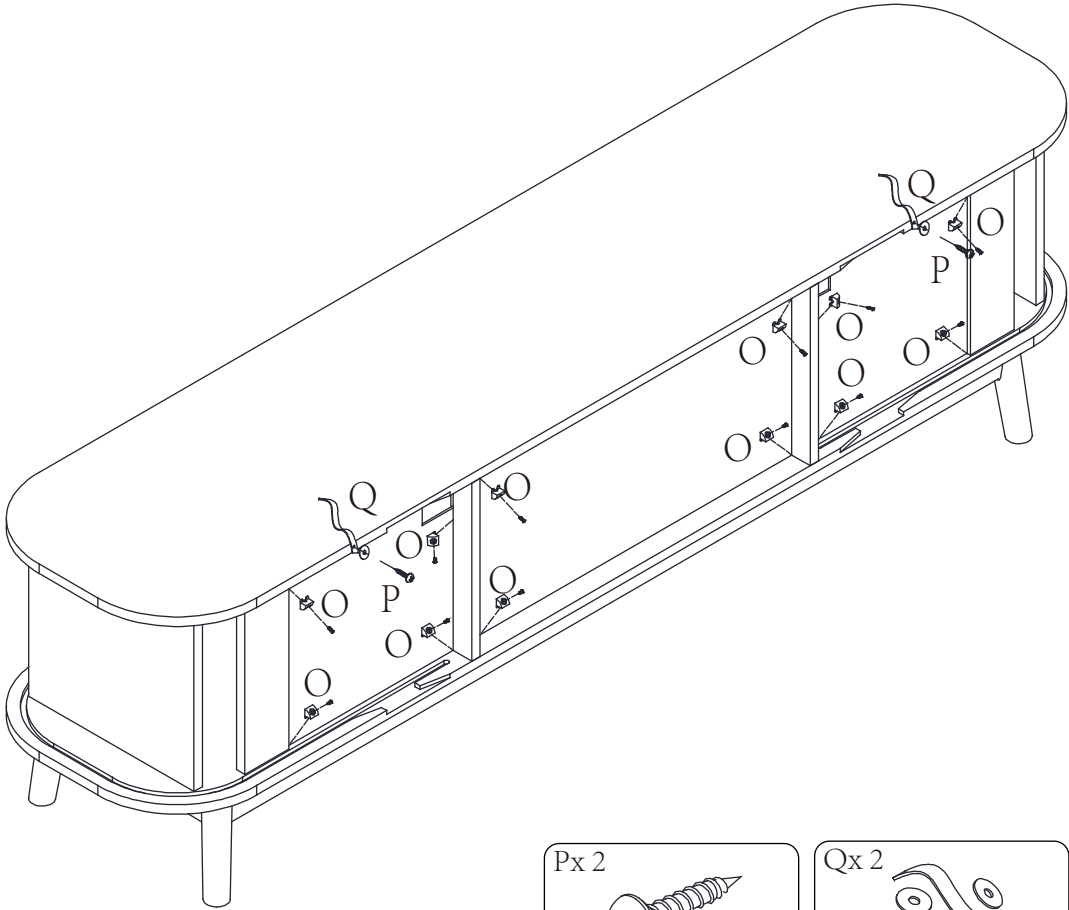


Px 2

 


Qx 2



 
Ox12



 STEP 12

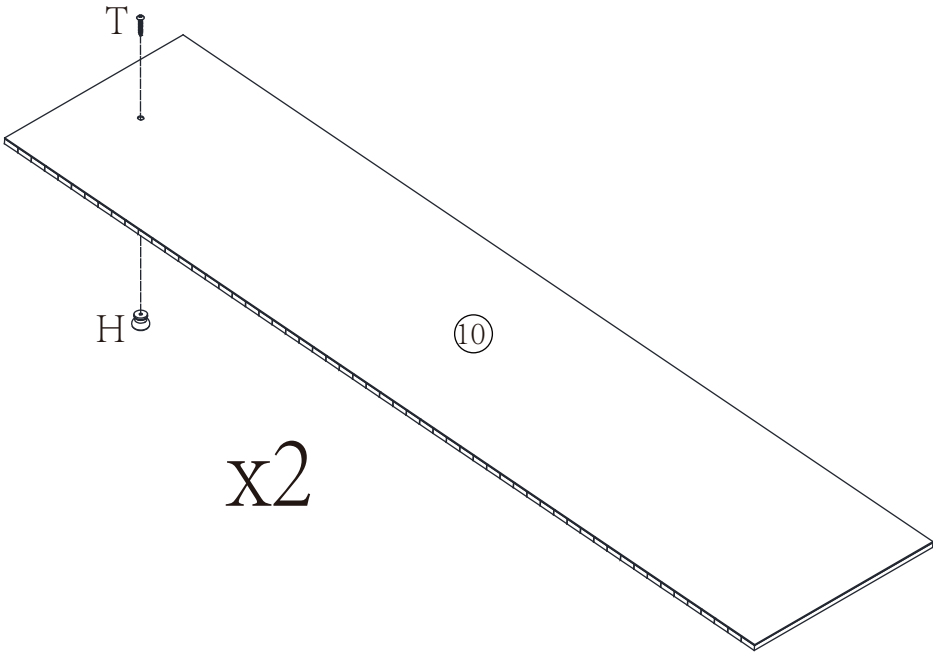


Tx2

 


Hx2



 
STEP 13

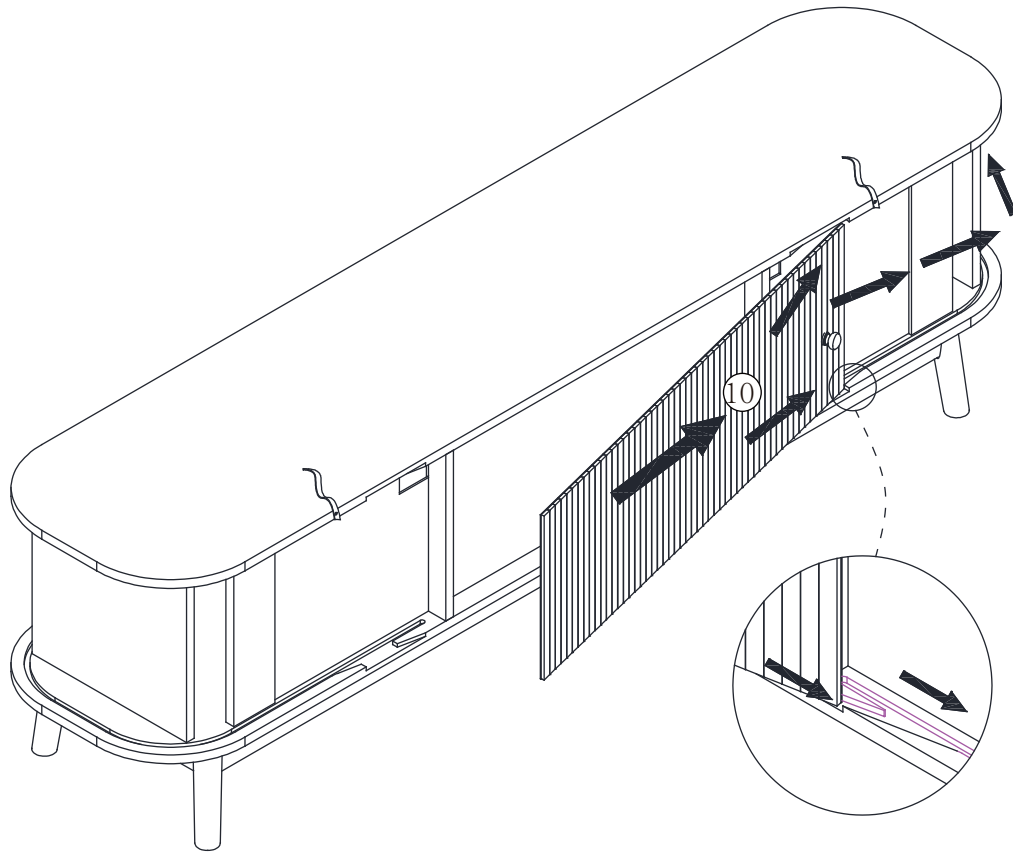

 
STEP 14

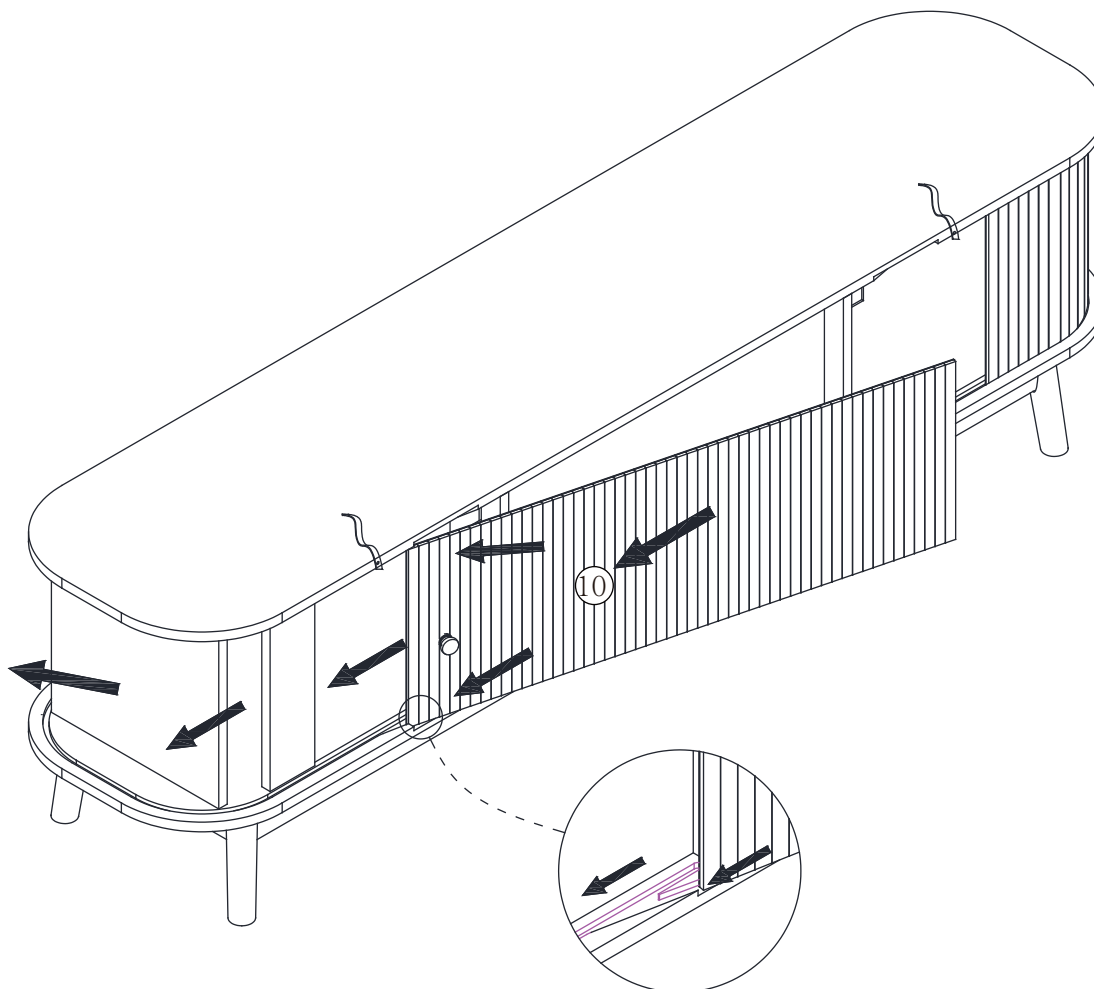

 
STEP 15

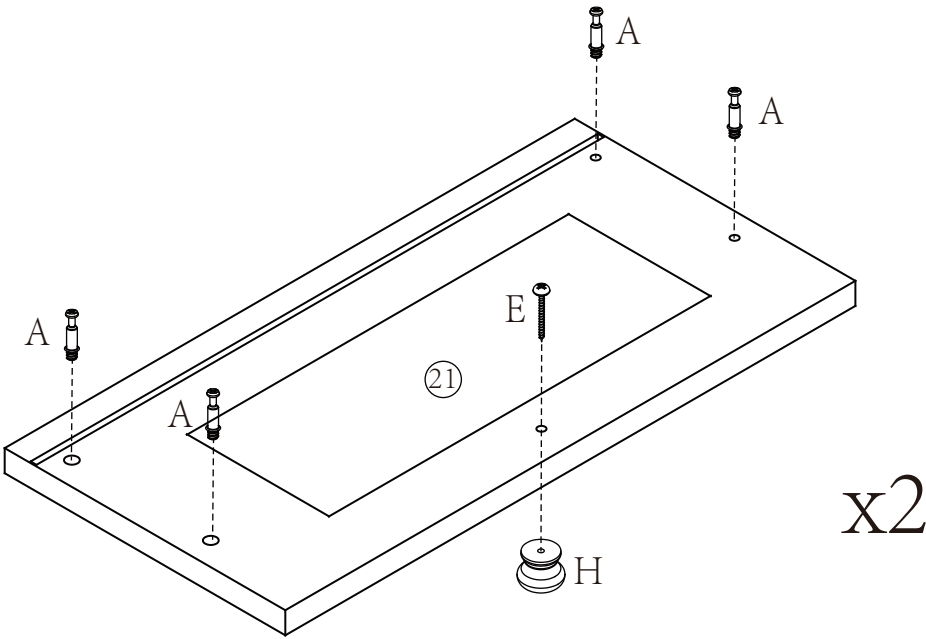

Ax8

 


Ex2

 

Hx2



 
STEP 16

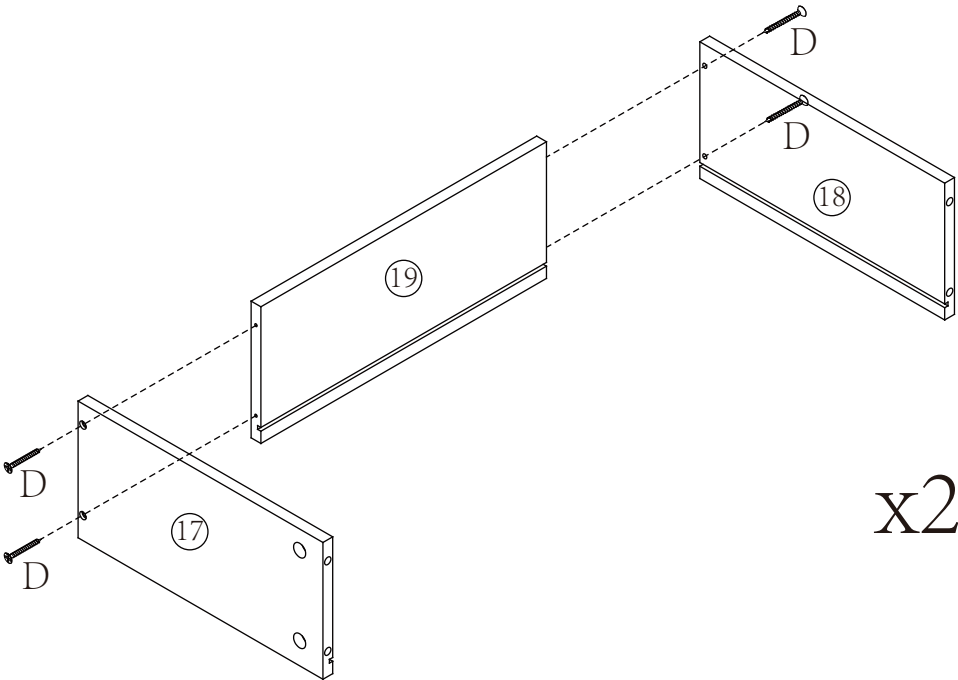




Dx8



 
STEP 17

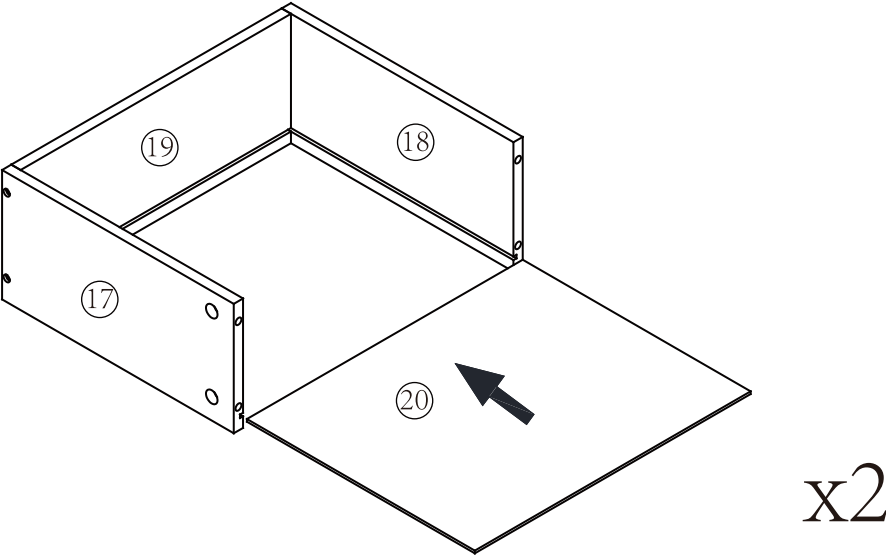

   
STEP 18

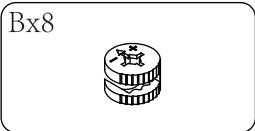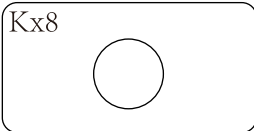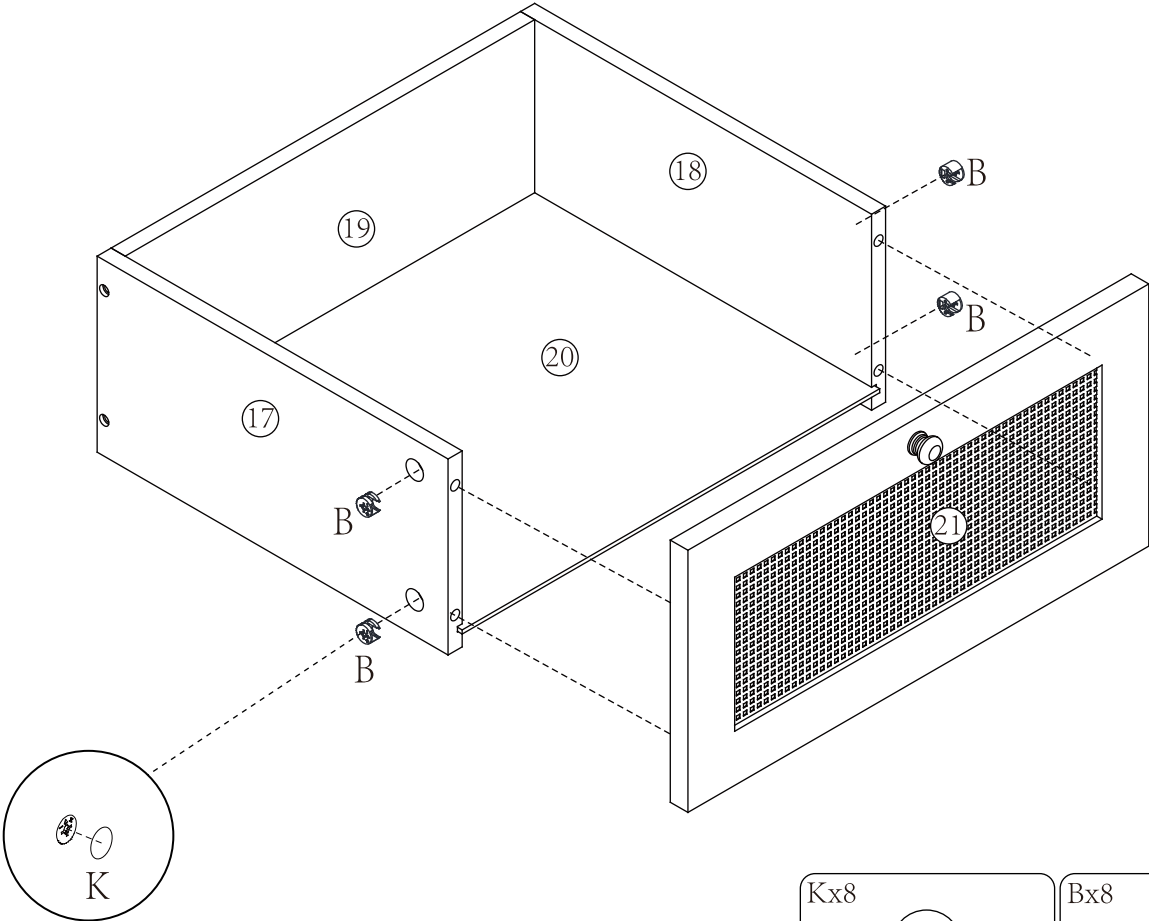

 STEP 19

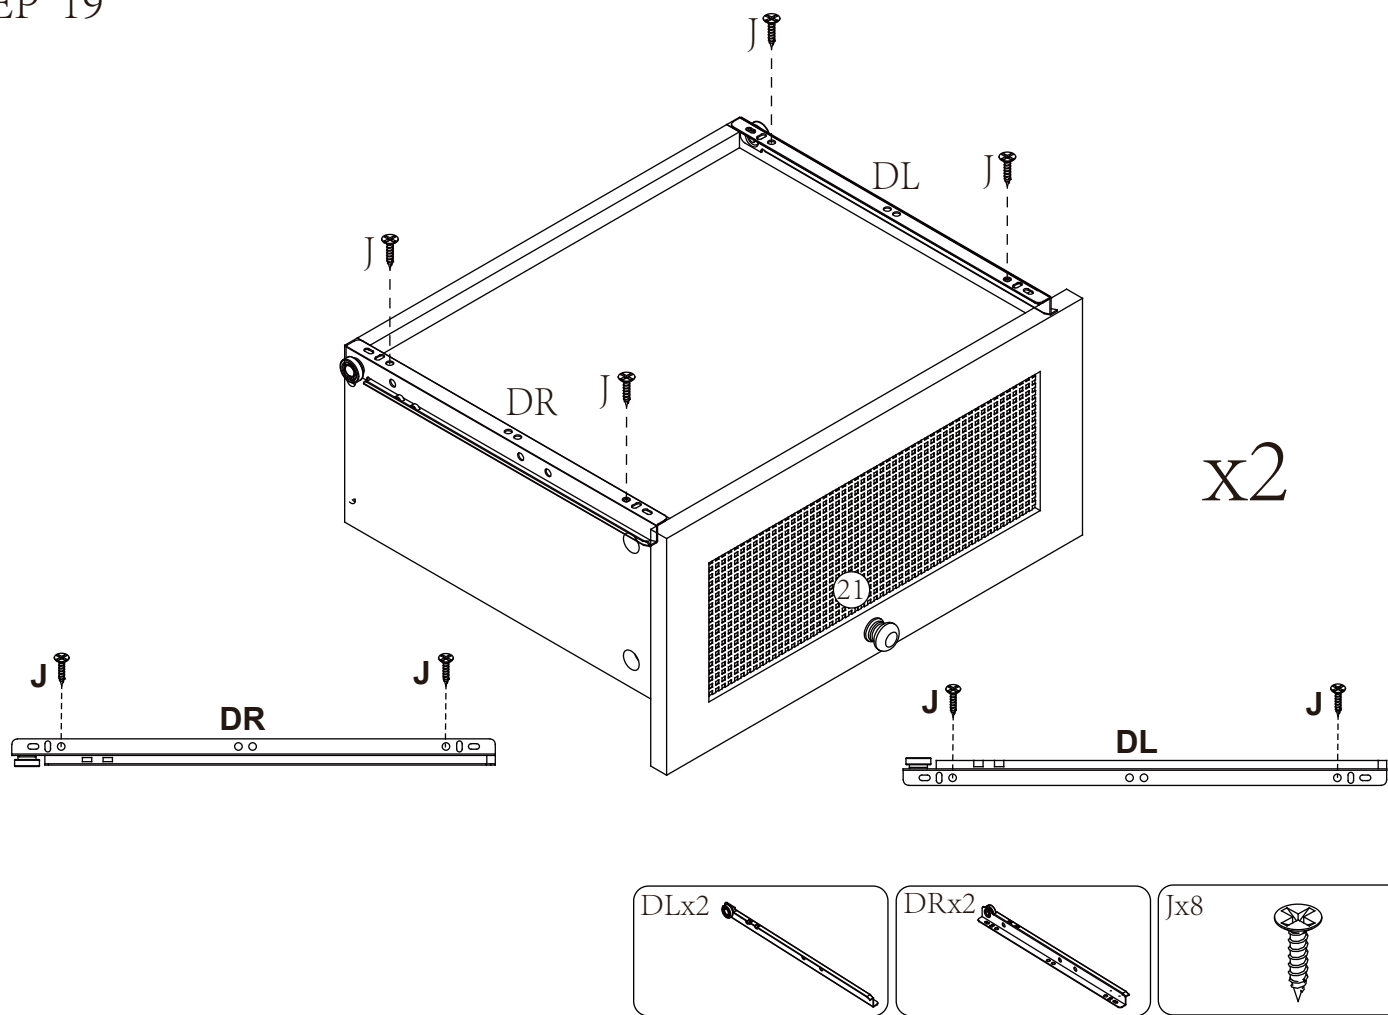

 STEP 20

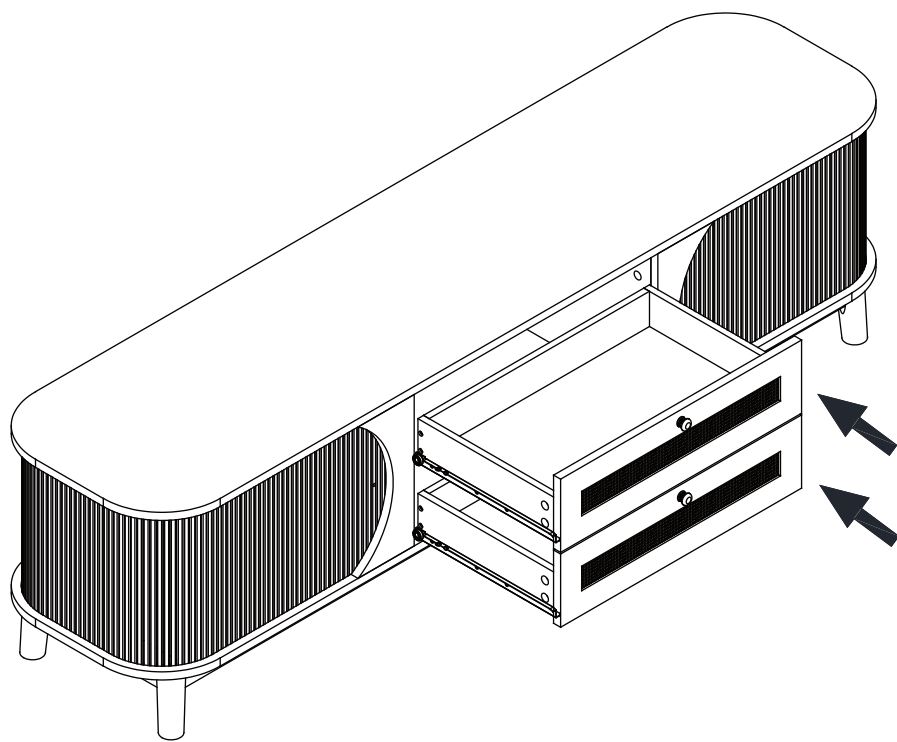

STEP 21

