

Thank you for choosing our products. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. If you have any questions, comments or concerns, feel free to contact us.

## Wishing Well Outdoor Fountain with LED Lights

### Warning

- Keep fountain out of reach of children.
- Use proper power source as indicated on water pump label.
- Keep electrical cords away from all heat sources. Do not place electrical cords in high temperatures.
- Check water level at pump location regularly, avoid damage the pump must be fully submerged.

### Parts:


1. Pump with tubing- 1 pc
2. Fountain Body-1 pc
3. Transformer- 1 pc
4. 2<sup>nd</sup> Plug- 1 pc

### Assembly:

1. Connect pump with tubing and place into fountain via the back opening.
2. Attach power cords inside the fountain to external wire harness.
3. Connect transformer to pump, leave outside of the fountain, do not get wet.
4. Add water.
5. Plug in pump.



- ⌚ Clockwise- Full Flow
- ⌚ Counter-clockwise Slow Flow

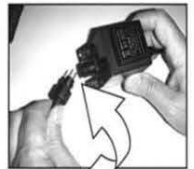

Push cable with 2 pins into the transformer and screw over the plastic collar.

### Troubleshooting:

**Pump operates but no water flow:** Make sure pump is fully submerged in water. If there is still no water flow, please turn pump on then off several times.

**Water speed:** Adjust the switch control located on the pump housing.

**Noise from pump/Fountain:** Make sure pump is fully submerged in water.

**(Optional) Light does not shimmer:** Check the light bulb to make sure that it is connected to socket.