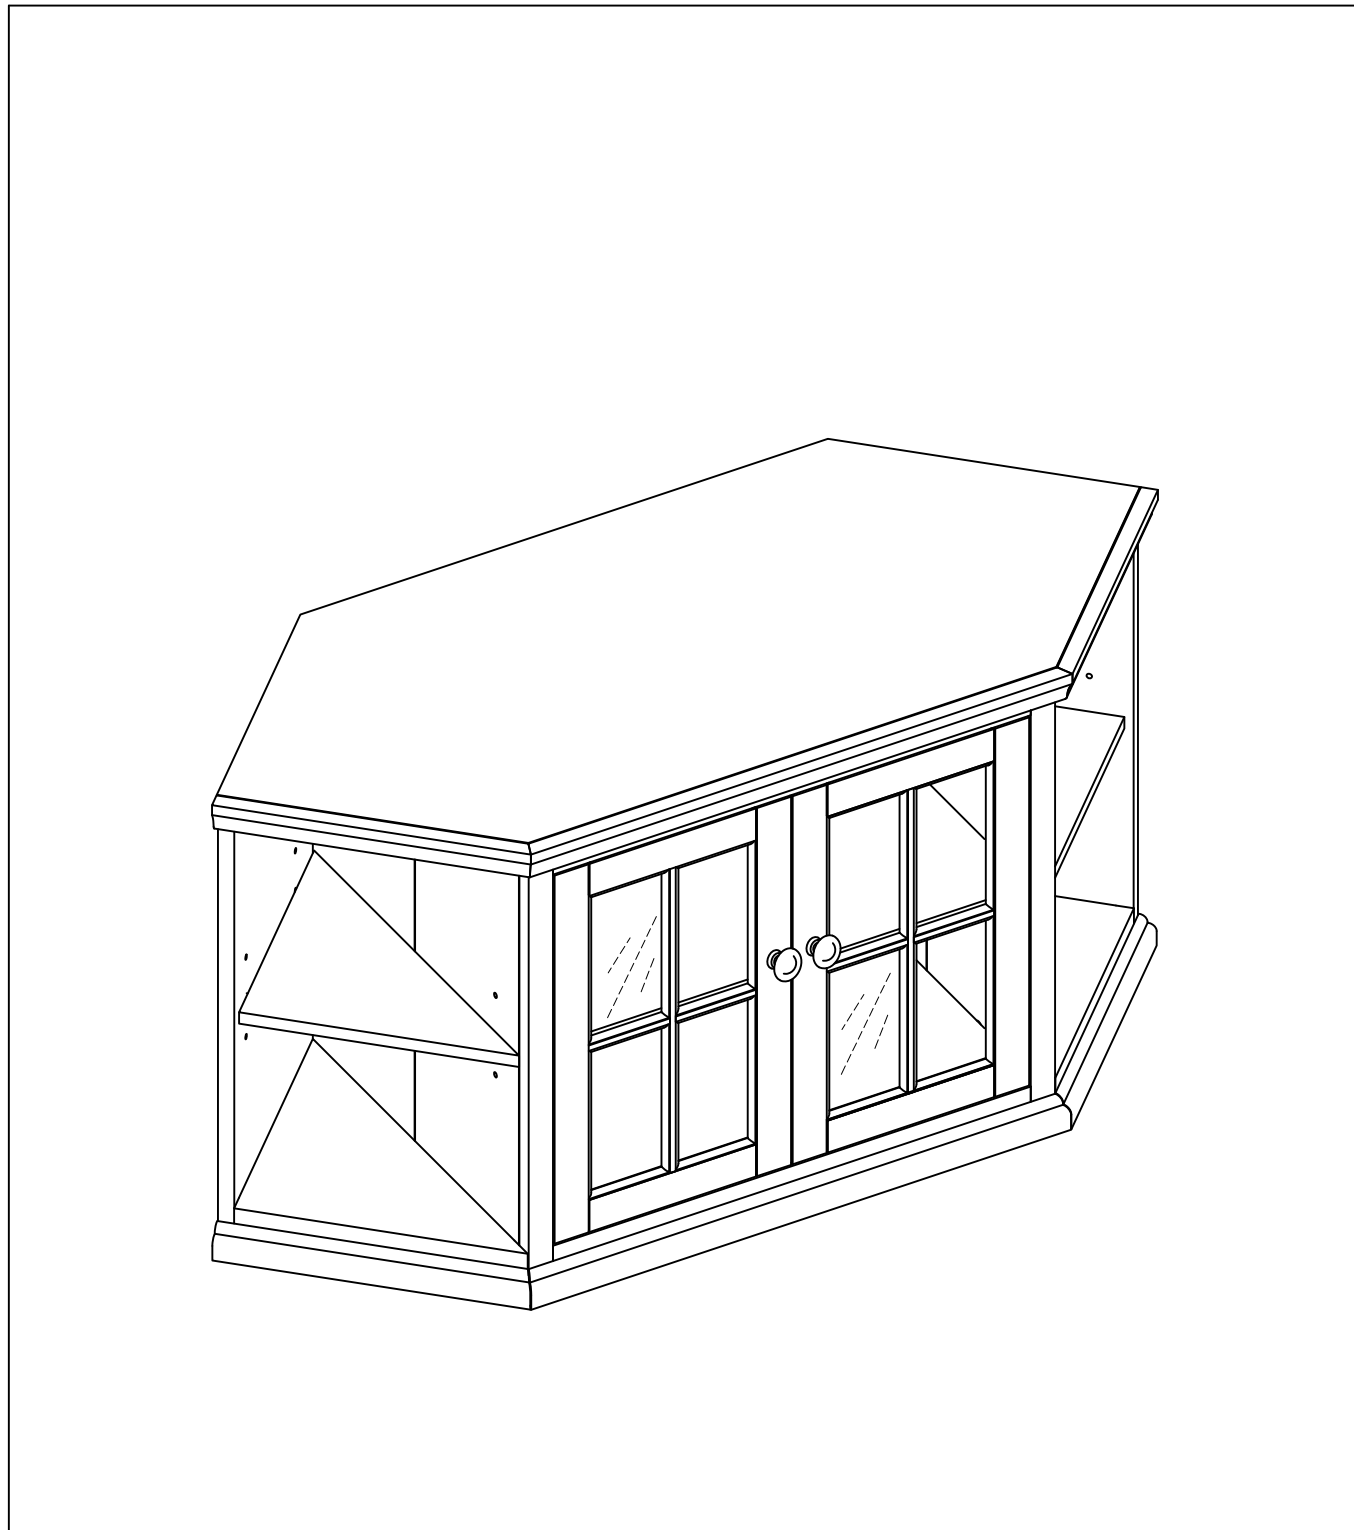 


 


 
 



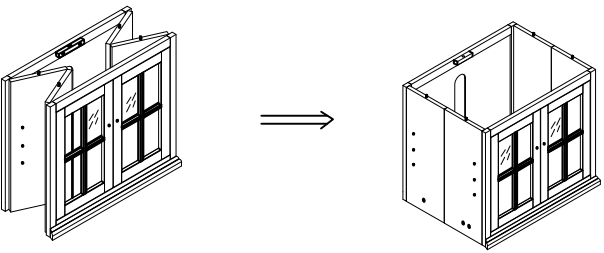 
 
 
 

 
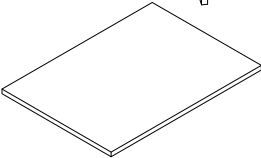 

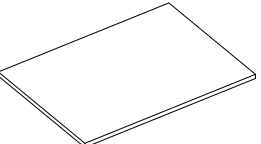 
Corner TV Cart With Corner Open Display



Hardware List

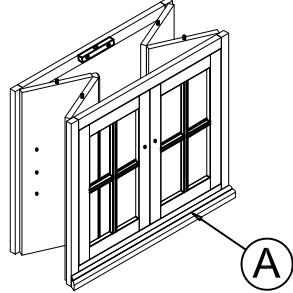 
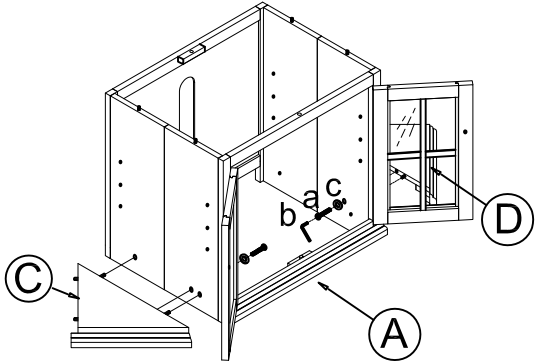 
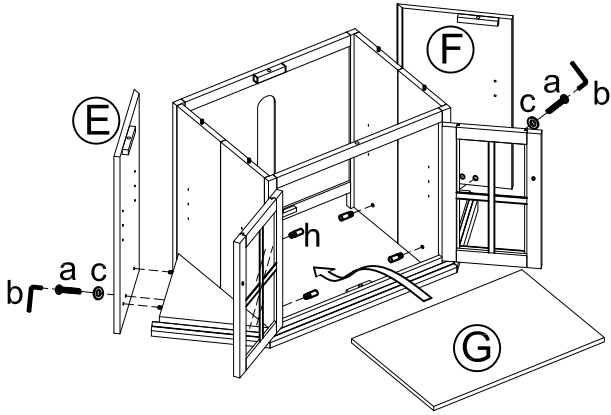 
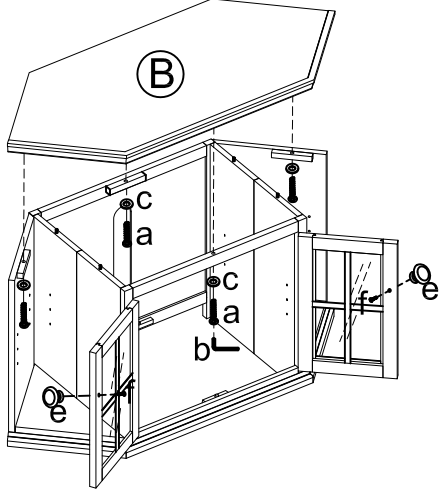 
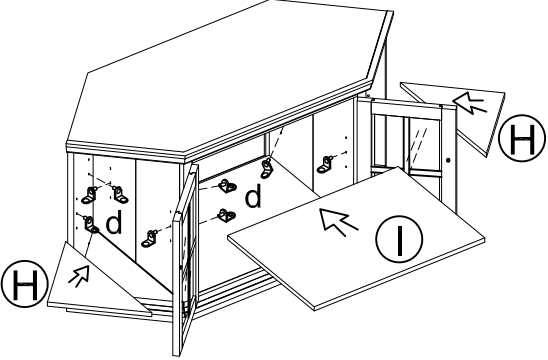 
Item	Description	Qty
a	 Bolt 1/4" X 1-1/8"	8PCS
b	 Allen wrench	1PC
c	 Washer 1/4" X 12mm	8PCS
d	 Flat Shelf Supports	12PCS
e	 Door Pull	2PCS
f	 Machine screw for door pull 5/32" X 3/4"	2PCS
g	 Wood screw #8 X 1"	2PCS
h	 Rounded Shelf Supports	4PCS

Parts List

Item	Description	Qty
	Cabinet	1PC
	Top Panel	1PC
	Left Side Bottom Panel	1PC
	Right Side Bottom Panel	1PC
	Left Side Back Panel	1PC
	Right Side Back Panel	1PC
	Middle Bottom Panel	1PC
	Side Adjustable Shelf	2PCS
	Middle Adjustable Shelf	1PC

Assembly Instructions

Two person assembly recommended.

<p>step 1 Unfold Cabinet.</p> 	<p>step 2 Insert the side bottom panels and fasten with bolts.</p> 
<p>step 3 Screw-in four round shelf supports onto side panels, then insert the middle bottom panel. Insert the side back panel and fasten with bolts.</p> 	<p>step 4 Fasten the top with 4 bolts. DO NOT OVER TIGHTEN. Install the door pulls.</p> 
<p>step 5 Install the flat shelf supports and insert shelves.</p> 	<p>step 6 Fasten two side back panels with two screws into the cabinet.</p> 