



LOS FLEXI  
CRAFTING YOUR HOME STORY



Y1 / Y2

# User Manual

Smart Toilet

[www.losflexi.com](http://www.losflexi.com)

[cs@losflexi.com](mailto:cs@losflexi.com)

(+1) 662-502-5099

# Contents

## Getting Started

Function Overview.....	<a href="#">3</a>
Product Information.....	<a href="#">4</a>

## Operation

Operating Procedure .....	<a href="#">7</a>
Remote Controls .....	<a href="#">8</a>
Before Use.....	<a href="#">9</a>
During Use.....	<a href="#">10</a>
After Use .....	<a href="#">12</a>
Foot Sensor Control.....	<a href="#">13</a>
Radar Sensor Control.....	<a href="#">13</a>
Side Lever / Knob Control .....	<a href="#">14</a>

## Care & Support

Cleaning & Maintenance .....	<a href="#">15</a>
Troubleshooting .....	<a href="#">16</a>
Limited Warranty Coverage.....	<a href="#">18</a>

# Function Overview



**Y1 Model**



**Y2 Model**



	Functions	Y1 Model	Y2 Model
<b>Clean</b>	Rear Wash	About 2 Minutes	About 2 Minutes
	Feminine Wash	About 2 Minutes	About 2 Minutes
	Child Wash	✓	✓
	Oscillating Wash	✓	✓
	Unlimited Wash	✓	✓
	Massage Wash	✓	✓
<b>Comfort</b>	Nightlight	✓	✓
	Heated Seat	✓	✓
	Warm Air Dryer	About 3 Minutes	About 3 Minutes
	Off-seat Flush	✓	✓
	Automatic Open/Close Lid	✓	✓
	Adjustable Water Temperature	4 Levels	4 Levels
	Adjustable Water Pressure	4 Levels	4 Levels
	Adjustable Seat Temperature	4 Levels	4 Levels
	Adjustable Air Temperature	4 Levels	4 Levels
	Adjustable Spray Wand Position	✓	✓
<b>Hygiene</b>	Self-Cleaning Spray Wand	✓	✓
	UV Sanitization	✓	✓
	Automatic Deodorization	✓	✓
<b>Advanced Features</b>	Foot Sensor	✓	✓
	Remote Control	✓	✓
	Side Panel Control	✓	✓
	LED Display Screen	✓	✓
	Battery-operated Backup Flush	✓	✓
	Built-in Water Tank	✓	✓
	Flushing Technology	Pump Assisted	Pump Assisted



# Product Information


## Essential Features:



Heated Seat



Warm Air  
Dryer

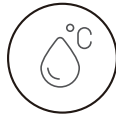

Adjustable Water  
Temperature




Feminine  
Wash



Rear Wash



Auto Lid  
Opening

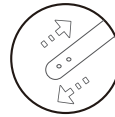

Adjustable  
Spray Wand



Side LED  
Light



Night  
Light



LED Screen

## Additional Features:




Foam  
Shield



UV  
Sterilization



Auto  
Flush

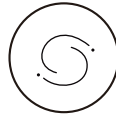

Pre-  
Wetting



ECO  
Mode



Standby  
Mode



Sedentary  
Reminder



User  
Memory  
\*Only on Y2 Model

## Control Methods:




Foot Sensor



Remote Control




Toilet Knob/Lever

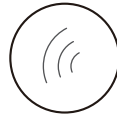


Radar Sensor

**Y1 Model**

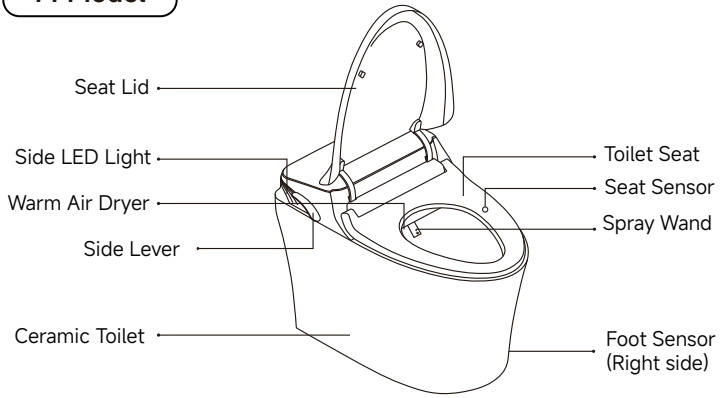


**Side View**


Temperature range  
(Seat/Water temperature are only displayed when adjusting)

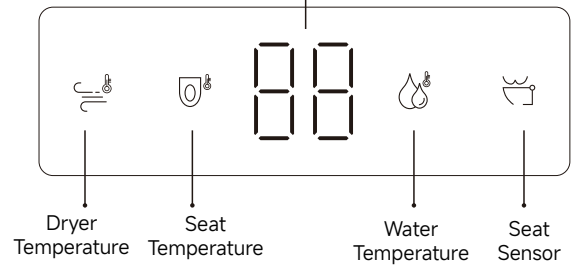

**Toilet LED Screen**

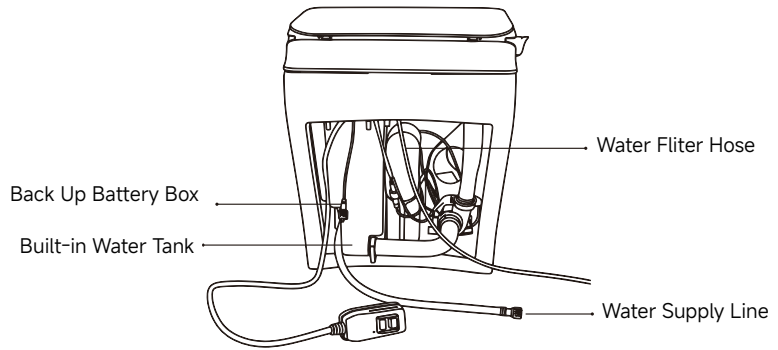


**Back View**

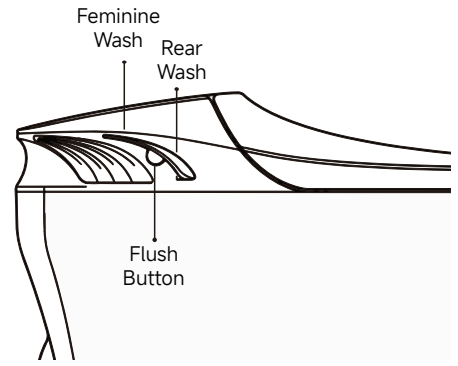


**Side Lever**




## Y2 Model

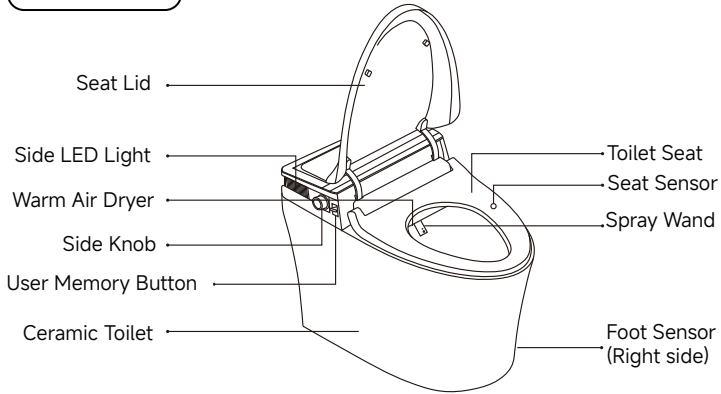


**Side View**

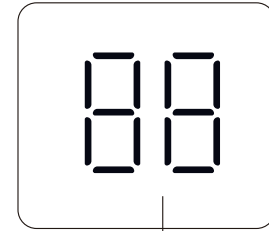

**Toilet LED Screen**

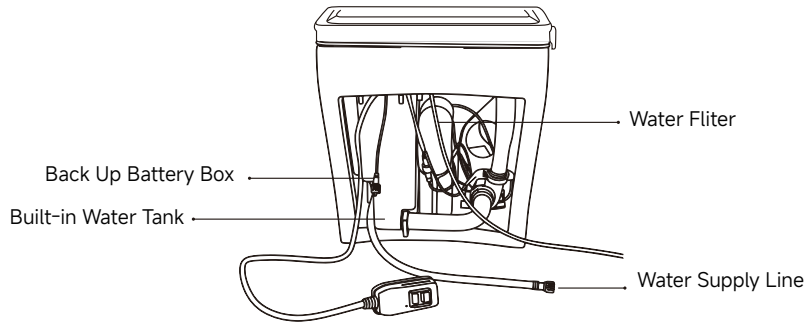

**Back View**

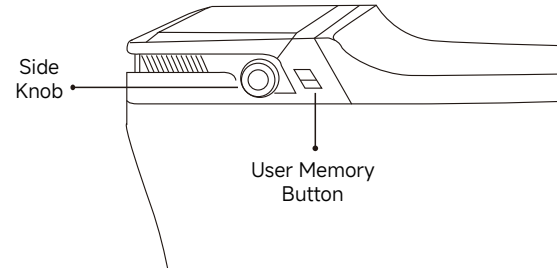


**Side Knob**



# Operating Procedure

## For Standing Use

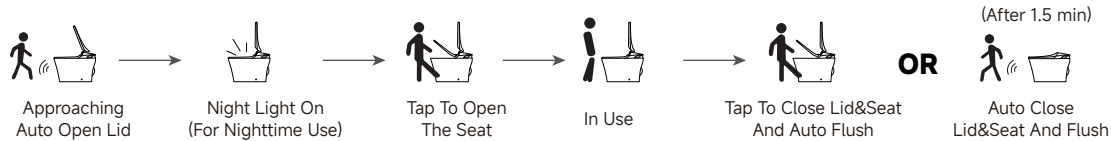

## For Sitting Use




### Note:

- All washing functions are optional and activated only when seated.
- Functions can be stopped at any time during use. You do not need to wait for the function to stop automatically.



# Remote Controls

The following images use the Y1 model as an illustrative example.

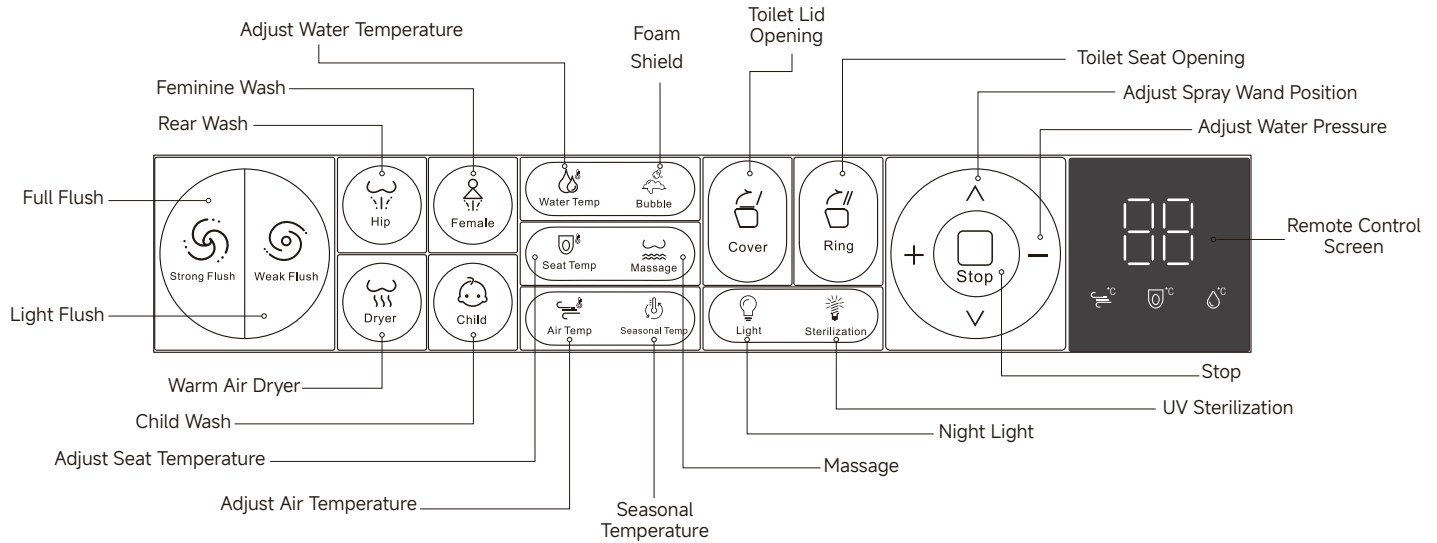

## Note:

 
Please refer to the Installation Guide for detailed remote control installation steps.





# Before Use

## ■ Heated Seat

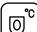

Press  button to open seat heating.

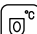 Press  button again to adjust the temperature. There are 4 adjustable levels:

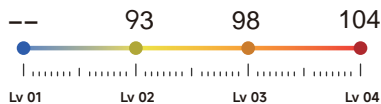


Press  button to turn it off.

## ■ Foam Shield





Press  button to release the foam shield.



Press and hold  button to turn the "Auto Foam Shield" on or off. When enabled, the foam shield is released when you sit on the toilet seat.


## ■ Automatic Lid Opening/Seat Opening




Press  button to open/close the toilet lid.


Press and hold  button to adjust the opening speed of the toilet lid and seat.


Press  or  to select the speed level, ranging from -5 to 5.

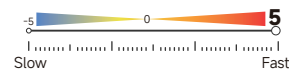

When finished, press the  button to set.




Press  button to open/close the toilet seat.

**Tip:** When the toilet lid is closed, press  button to open the lid and the seat.

## ■ Night Light



Press  button to open/close the night light.


Press and hold the  button to enable the "ECO Mode".


When enabled, the side LED light turns off, and the seat heating temperature is maintained at approximately 82 °F.





# During Use


## ■ Washing Functions

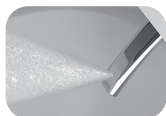


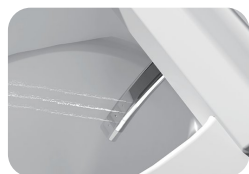
- Press  button to turn on the rear wash.

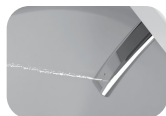

- Press  button to turn on the feminine wash.

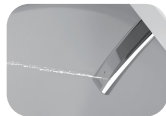






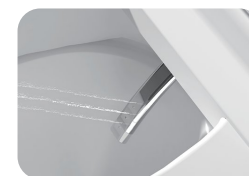
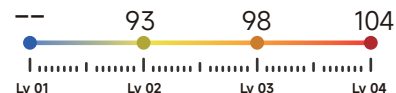
- Double-click  button to turn on the child wash. In this mode, the water pressure defaults to the lowest level.





- Press the same function button again to activate the oscillating wash. The spray wand moves back and forth during operation.
- Press the same function button a third time to stop the oscillating wash. The spray wand stops moving.

During washing, multiple settings can be adjusted.


- Press  and  button to adjust the spray wand position.
- Press  and  button to adjust the water pressure.
- Press  button to adjust the water temperature. There are 4 adjustable levels:



- Press  button on the remote control to activate massage mode. In this mode, the water pressure alternates between strong and weak. Press the button again to turn off the massage mode.
- Press  button to stop the washing function.







## ■ Flushing

Press  button to activate a full flush (about 1.28GPF).

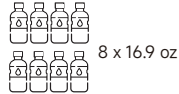


Press  button to activate a light flush (about 1.1GPF).




Press and hold the  button, then use the  and  buttons to turn the off-seat flush on or off.


When the toilet LED screen displays "00", the off-seat flush is off.  
When the toilet LED screen displays "01", the off-seat flush is on.


When finished, press the  button to set.

## ■ Warm Air Dryer




Press the  button to activate the warm air dryer.


Press the  button to adjust the temperature. There are 4 adjustable levels:

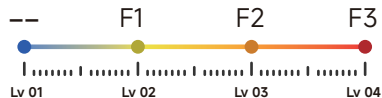

## ■ Automatic Wash & Dry Cycle

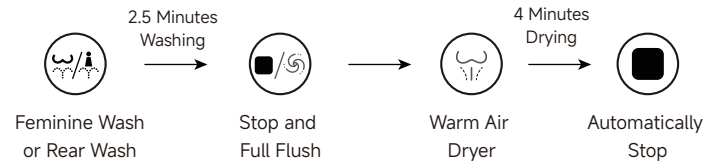

## ■ Sedentary Reminder

Press and hold  button to activate the sedentary reminder. When active, the toilet will "beep" five times if you sit for more than 20 minutes.

## ■ User Memory (Only On Y2 Model)

The Y2 model features a user memory button on the left side of the toilet that saves the user's water, air, and seat temperature settings during use.




Before use, push up and hold to save the settings to "User 1." Push down and hold to save the settings to "User 2." The settings are saved automatically after use.

To load the settings, push up to load the "User 1" settings. Push down to load the "User 2" settings.



# After Use


## ■ Seasonal Temp Button

Press  button on the remote control to activate seasonal temperature control. The following table illustrates this function in detail.

In this mode, the water, seat, and dryer temperatures are automatically adjusted based on the room temperature. To adjust the temperature manually, turn off this mode.


Room Temperature	Seat Temp	Water Temp	Dryer Temp
> 86°F	Off	93°F	95°F
77°F - 86°F	Off	98°F	113°F
59°F - 77°F	93°F	98°F	122°F
50°F - 59°F	98°F	104°F	131°F
< 50°F	104°F	104°F	131°F

## ■ Remote Control Mute

Press and hold  button to mute the remote control sound. Hold again to restore the sound.

## ■ Spray Wand Self-cleaning




Press and hold  button to extend the spray wand and start self-cleaning. You may wipe the wand if needed.

Then press  button to retract the wand.

**Note:** Before using this function, make sure you are not sitting on the seat and that the seat sensor is not activated.

## ■ UV Sterilization



Press  button to activate UV sterilization.

## ■ Standby Mode



Press and hold  button to enter standby mode. In this mode, all functions stop.

Press and hold  button again to exit standby mode.



# Foot Sensor Control

The toilet features a foot sensor control on the right side for hands-free operation.




Use your foot to activate the foot sensor and operate the toilet lid or seat.

**First Kick:** Opens the lid.

**Second Kick:** Raises the seat.

**Third Kick (within 10 seconds):** Lowers the seat onto the bowl.


**Third Kick (more than 10 seconds):** Closes the seat and lid and flushes.

Press and hold  button on the remote control to turn the foot sensor on or off.

When off, foot activation will not operate the toilet.


# Radar Sensor Control

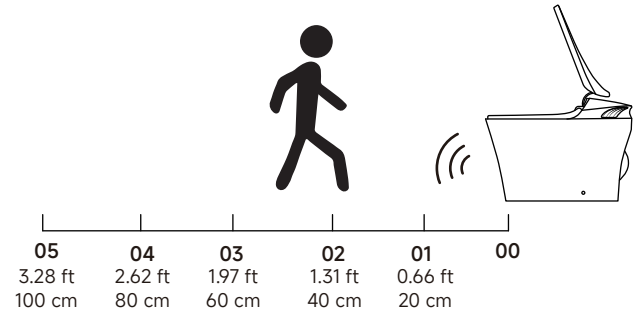

The radar sensor detects objects in front of the toilet for automatic operation.




When people or pets are within the radar sensor's range, the lid opens automatically. If no objects are detected for 1 minute and 30 seconds, the lid or seat closes, and the toilet flushes automatically.

Press and hold the  button twice to adjust the radar sensor range.

(Press and hold the  button once to adjust the opening speed of the toilet lid and seat.)

Press the  or  button to select the range level, ranging from 00 to 05. Please refer to the diagram above.

When finished, press the  button to set.



# Side Lever / Knob Control

## Y1 Model



On the left side, the Y1 model has a lever and a button for convenient washing functions.

### Rear Wash:

- Press the lever down for a rear wash.
- Press twice for oscillating wash (the spray wand moves back and forth).
- Press a third time to stop the oscillating wash.

### Feminine Wash:

- Lift the lever or press the end of the lever for a feminine wash.
- Lift twice for oscillating wash (the spray wand moves back and forth).
- Lift a third time to stop the oscillating wash.

During washing, press the button below the lever to stop.

Press the button to flush.

Press and hold the button to enter standby mode.

## Y2 Model



On the left side, the Y2 model has a knob for convenient washing functions.

### Rear Wash:

- Turn the knob counterclockwise for a rear wash.
- Turn twice for oscillating wash (the spray wand moves back and forth).
- Turn a third time to stop the oscillating wash.

### Feminine Wash:

- Turn the knob clockwise for a feminine wash.
- Turn twice for oscillating wash (the spray wand moves back and forth).
- Turn a third time to stop the oscillating wash.

Press the knob to flush.

Press and hold the knob to enter standby mode.

Turn the knob clockwise and hold to turn off the knob light.

The knob light changes color when different functions are activated. The table above explains the meaning of each color.

Color	Function
White	Child Wash
Green	ECO Mode
Pink	Feminine Wash
Dark Blue	Rear Wash
Red	Warm Air Dryer
Light Blue	Flushing



# Clean & Maintenance

## IMPORTANT SAFETY NOTICE

This product is an electronic appliance. Use caution during cleaning and maintenance to prevent water from entering the internal components. Keep the seat sensor area clean at all times.

Do not allow items (such as seat cover pads or wraps) to cover or obstruct the sensor area. Dirt or debris adhering to the sensor may cause malfunction or improper operation.

### • Exterior Plastic Surfaces

Most exterior components of the toilet are made of plastic. To prevent scratches, discoloration, or damage, follow the guidelines below: Wipe surfaces regularly using a soft cloth dampened with clean water. If necessary, use a mild, neutral household cleaner, then rinse with clean water. Since this is an electronic product, always dry all surfaces completely after cleaning to keep water from seeping inside. Always close the toilet shut-off (angle) valve and turn off the water supply before maintenance.

### • Cleaning the Spray Wand

① With the seat unoccupied, press the "Feminine Wash" button to automatically extend and rinse the spray wand.  
② Use a soft-bristle brush or toothbrush to gently clean the spray wand surface and remove scale or debris.  
(The self-cleaning mode will automatically stop after 90 seconds. You can press the "Stop" button to end the cycle earlier if needed; Do not forcibly push or pull the spray wand during operation)

### • Winterization / Freeze Protection (When room temperature is below 39.2°F)

If the toilet will not be used for an extended period (such as during travel or business trips), follow these steps to prevent freezing and cracking:

- ① Close the toilet shutoff valve, press the flush button on the remote control to flush and empty the water tank.
- ② Activate the self-cleaning function to drain any remaining water inside the toilet.
- ③ Disconnect the water supply hose at the shutoff valve and drain any remaining water from the pipe.
- ④ Turn off the power supply to the toilet.

(Note: For pulse-type smart toilets, turn off the water supply near the end of the flushing cycle after initiating the flush, before draining.)

After storing the product in a low-temperature environment for a long time, if the unit has been stored in freezing conditions, allow it to sit at room temperature for at least 30 minutes before reconnecting water or power to ensure internal components thaw naturally and prevent damage. If the toilet or supply lines are frozen, wrap the affected hose or connections with a cloth soaked in warm (not boiling) water to thaw them gradually. Never pour hot water directly onto the product or use high-heat sources, such as heat guns or hair dryers, on the toilet body or water supply system, as this may cause permanent malfunction.



# Troubleshooting

If the product shows any abnormalities, try the following troubleshooting methods. If the problem persists, please contact the sales team or after-sales service center.

Product Features	Phenomenon	Inspection items	Exclusion method
Machine body	Not working at all	Is the power turned on	Turn on the power
		Is the power plug plugged in properly	Reconnect the power plug
		Is there a power outage	Check again after restoring power supply
Washing Functions	No water from the spray wand	Is the seat sensing area sensing	Adjust the seating position to ensure that the seat sensor detects the human body
		Is the water supply angle valve open	Check the water supply of the angle valve
		Whether to stop water supply	Wait until the water supply is restored before enabling it
		Is there any object blocking the spray wand	Clean objects from the wand and unblock the wand
	Low cleaning water pressure	Is the water pressure level in the weak range	Reset water pressure
		Is the water inlet channel unobstructed	Clean the angle valve filter
	Halfway water outage	Is the seat sensor detecting a user	Adjust the seating position and confirm that the sensor detects human seating
		Does the cleaning function automatically stop	Restart the cleaning function
		Whether to stop water supply	Recheck after restoring water supply
	Water temperature is low	Is the water temperature range in the lowest level	Press the remote control "water temperature" button to adjust the water temperature
Warm air drying	Low wind temperature	Is the wind temperature gear in the lowest level	Press the remote control "wind temperature" button to adjust the wind temperature
	Halfway stop	Is the seat sensor detecting a user	Adjust the seating position and confirm that the sensor detects human seating
		Does the drying function automatically stop	Restart the drying function



Product Features	Phenomenon	Inspection items	Solutions
Seat heating	Low seat temperature	Does the sensor sense	Adjust the seating position and confirm that the sensor senses human seating
		Is the seat temperature range in the lowest range	Press the remote control "seat temperature" button to adjust the seat temperature
Automatic flushing	Unable to flush clean	Is the flushing pipe bent	Adjusting the position of the water pipe
	Leave the seat without flushing	Is there any object blocking the sewage pipeline	Dredging toilets/sewage pipes
		Whether to turn off automatic flushing	Enable automatic flushing function
Remote controlbody	Remote control not responding	Low Battery	Replacing the battery
		Whether there is water ingress/soaking	Wipe dry/air dry before attempting

**Warning:** Except for professional maintenance personnel, please do not disassemble, repair, or modify the product without authorization



# Limited Warranty Coverage

## ONE YEAR LIMITED WARRANTY

Los Flexi products are crafted with superior materials and impeccable workmanship, offering our customers reliable and long-lasting products. If defects in materials or craftsmanship are detected under standard use within the first year of installation, Los Flexi will either supply replacement parts at no charge or, if deemed necessary, replace the product or its parts. This warranty is exclusive to the original purchaser, and proof of purchase is mandatory for any claim.

- This Warranty Will Be Voided If:
- The product's installation did not follow our recommendations.
- The product was relocated from its initial installation site.
- The product underwent any modifications from its original condition.
- The product suffered from neglect, misuse, chemical overuse, accidents, or any other damages.

Los Flexi does not imply that our products adhere to local building or plumbing codes. Consumers must ascertain local code compliance before and during installation. This warranty is strictly for the original purchaser and first consumer.

Los Flexi won't be held responsible for any consequential damages linked to the product's installation, replacement, return, or usage. This includes, but is not limited to, freight charges, labor, downtime, home damages, and other associated costs (e.g., professional services, investigations, audits, legal fees).

This Los Flexi warranty clearly delineates our liability. Items not specified in this warranty fall outside Los Flexi's responsibility. In states with variations concerning implied warranties, our compliance is ensured.

For any queries or concerns, feel free to reach out to us at

Email: [cs@losflexi.com](mailto:cs@losflexi.com)

Phone: (+1) 662-502-5099

Site: [www.losflexi.com](http://www.losflexi.com)

Scan the QR code for the High-resolution User Manual

