 


ASSEMBLY INSTRUCTION

36INCH MIRROR CABINET

NIVÉAL

 
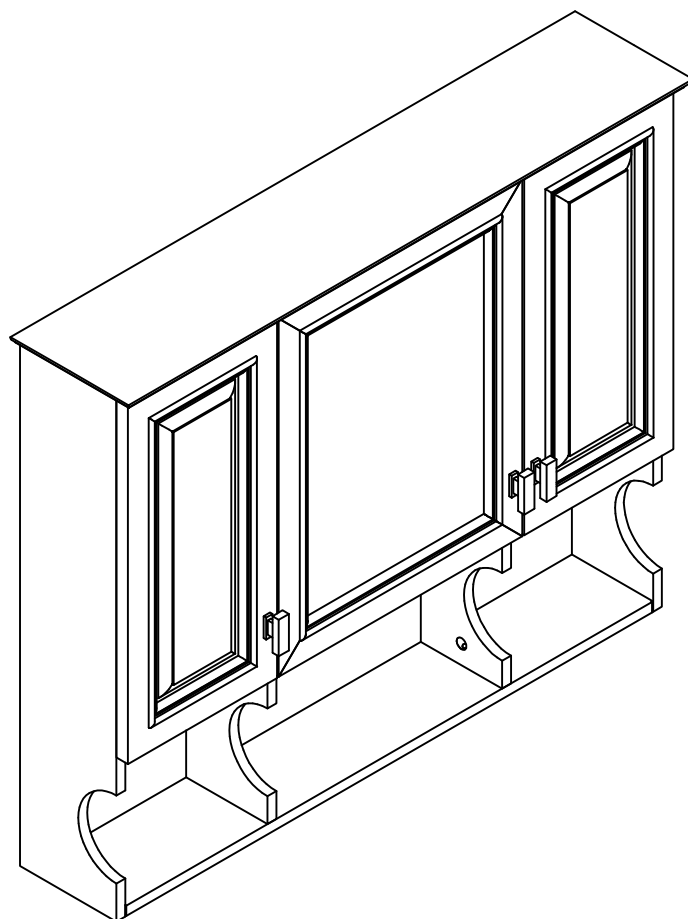 


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

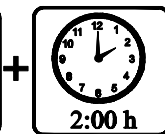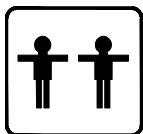

Tools Required

 

(Not included)

 

(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions









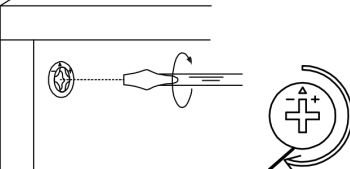 
	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

 Detail View - CABINET

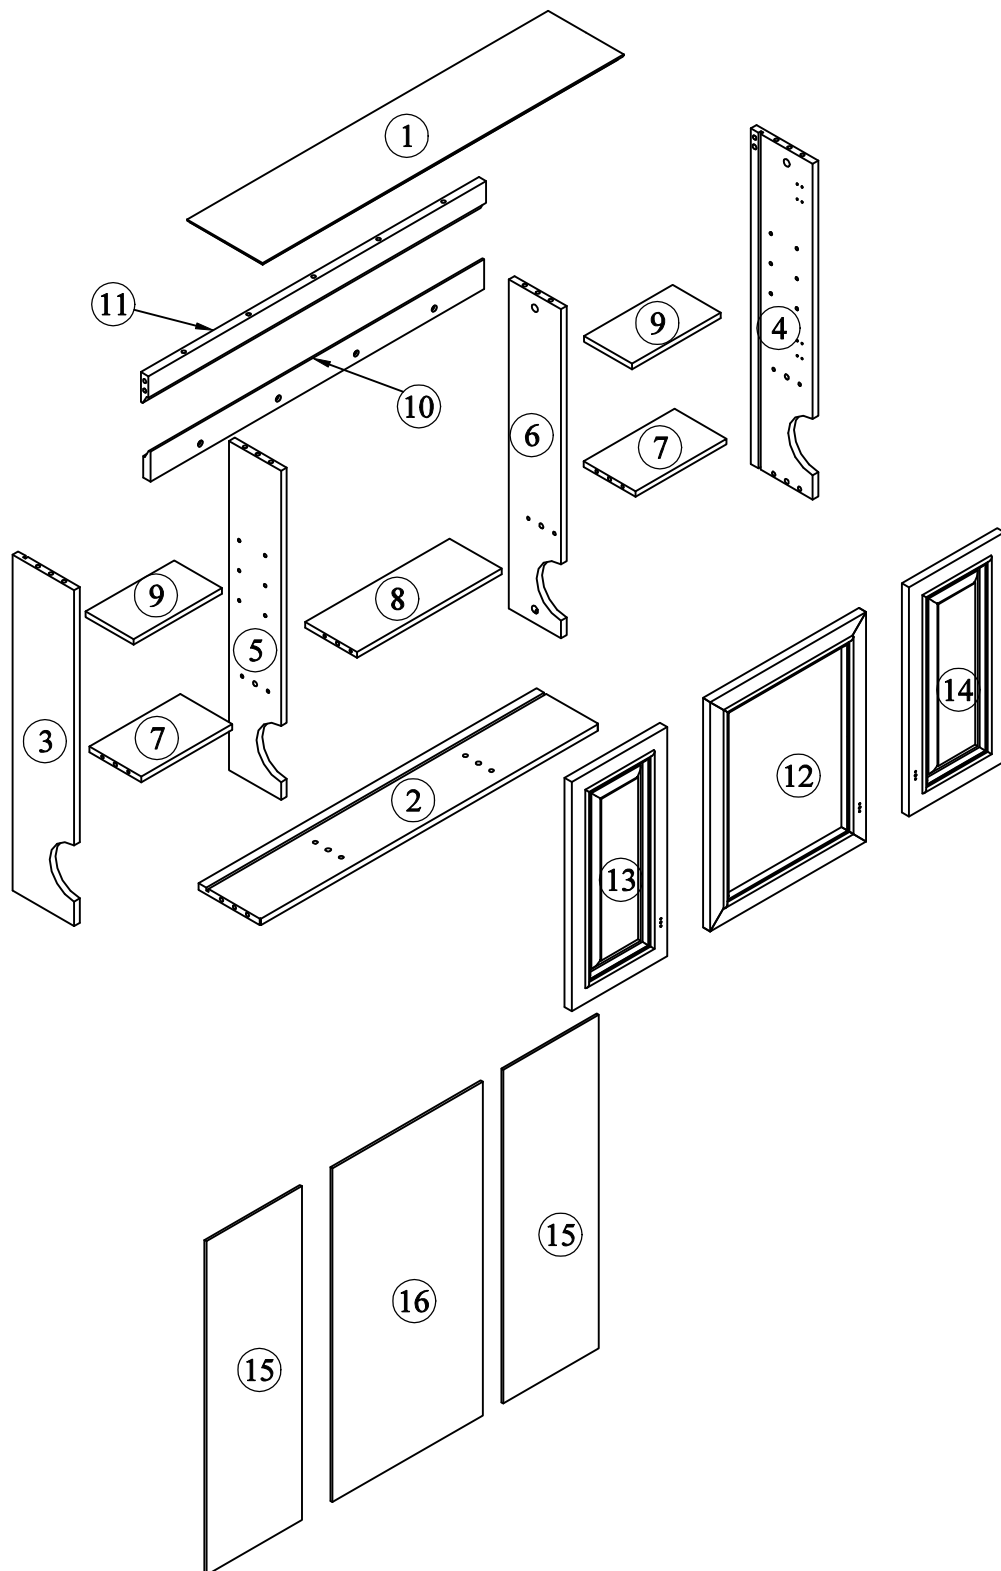

Identifying the Hardware -Identify the hardware using the illustrations below.

         Part List - N710P209443

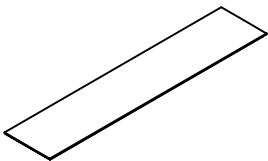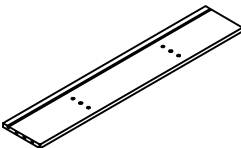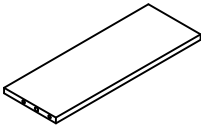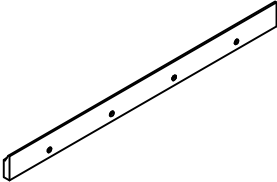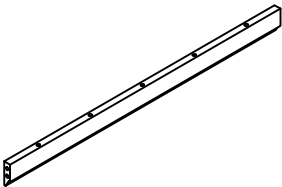1		2	
	Top Panel - 1pc		Bottom Panel - 1pc
3		4	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
5		6	
	Mid Panel (L) - 1pc		Mid Panel (R) - 1pc
7		8	
	Panel Left + Right - 2pcs		Mid Panel - 1pc
9		10	
	Adjustable Shelf - 2pcs		Connect Bar - 1pc
11		12	
	Top Rear Bar - 1pc		Mid Door - 1pc
13		14	
	Left Door - 1pc		Right Door - 1pc

Part List - N710P209443

15



 
 
 
 
 
Left +Right Back Panel - 2pcs

16




Mid Back Panel - 1pc

Hardware List

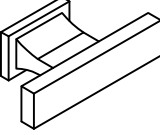

A  ø6x35mm	B  ø14.5x12mm	C  ø14.5x9.5mm
Three in one bolts (19pcs)	Three in one lock (13pcs)	Three in one lock (6pcs)
D  ø10xø5x50mm	E  ø12x55mm	F 
Flat head screw (4pcs)	Plastic stopper (4pcs)	Handle (3pcs)
G  ø5/32"x25mm	H 	I  ø7xø3.5x15mm
Handle screw (3pcs)	Damping hinge (6pcs)	Flat head screw (36pcs)
J 	K  ø8x30mm	L  ø6x30mm
Laminate pad (8pcs)	Wood dowel (20pcs)	Wood dowel (12pcs)
M  ø7xø3.5x15mm Round head screw (4pcs)		

STEP: 1

 
A




19PCS

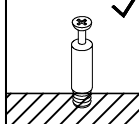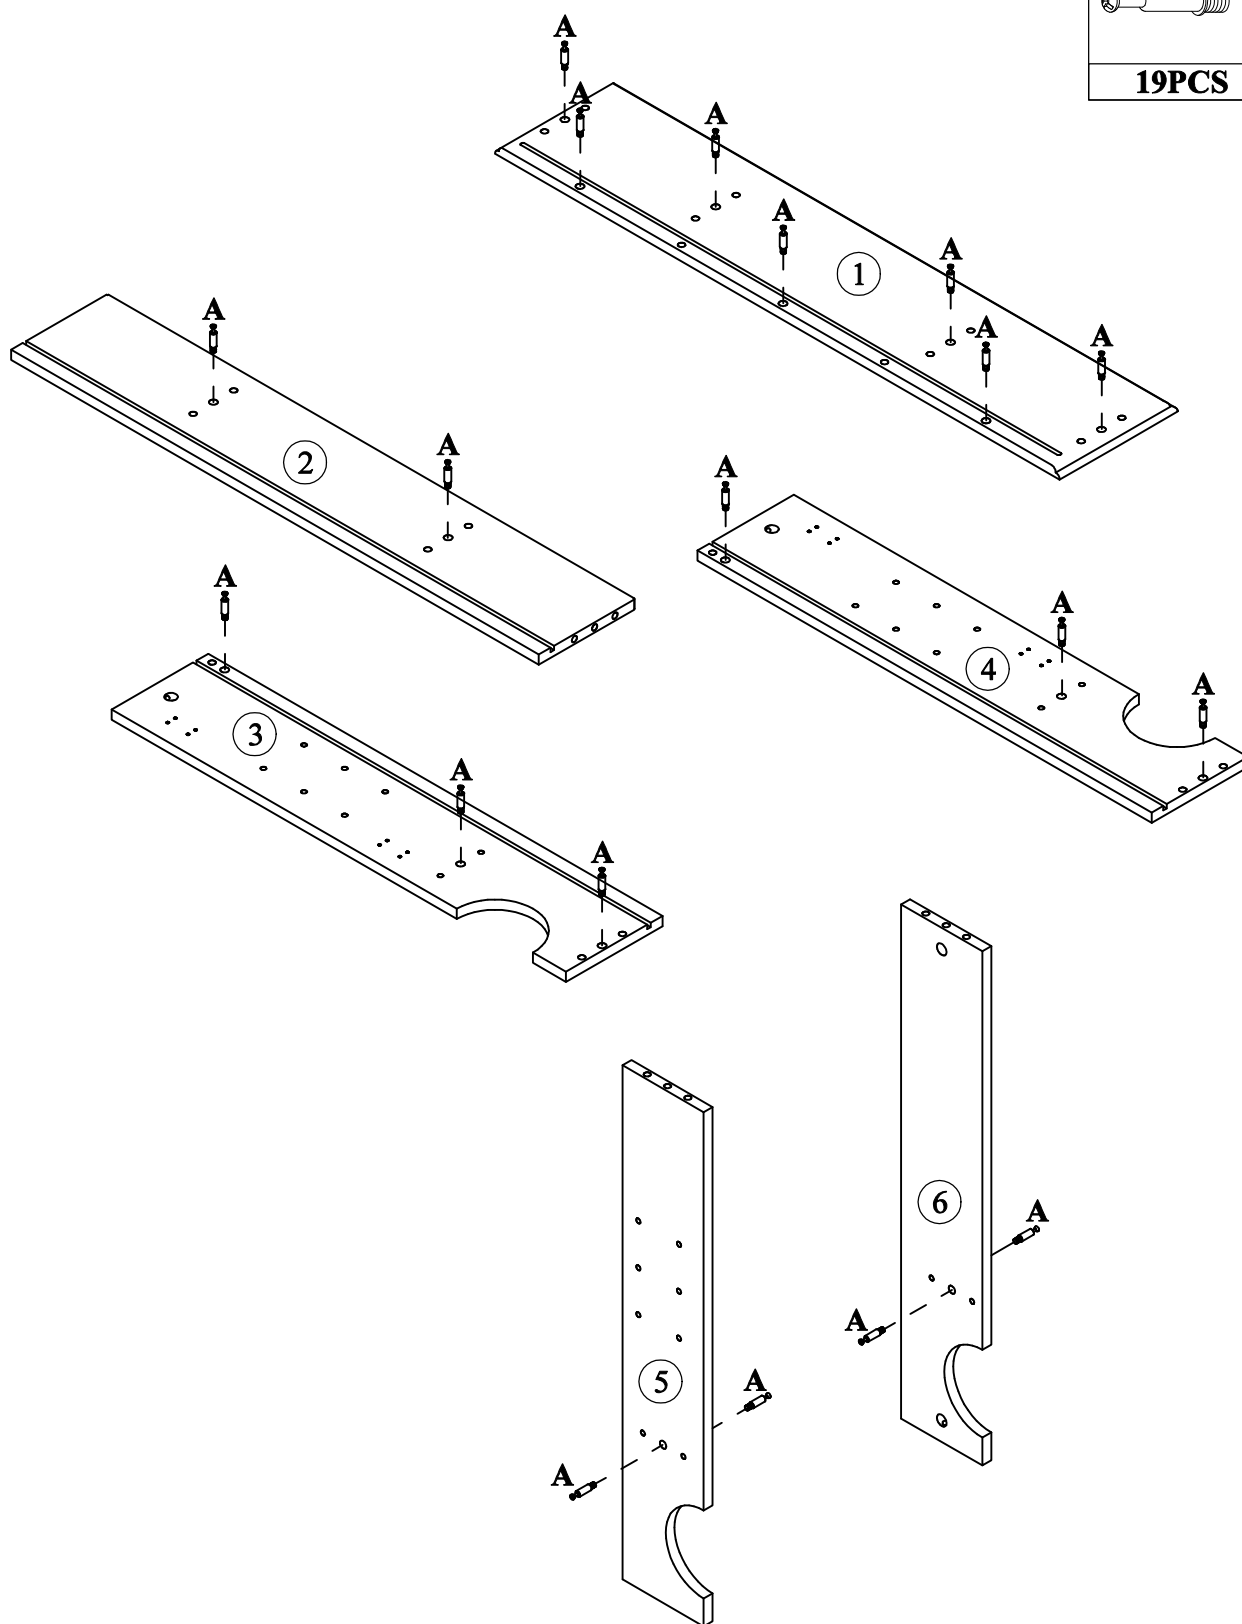  


Don't lean

 

Don't over tighten

 



STEP: 2

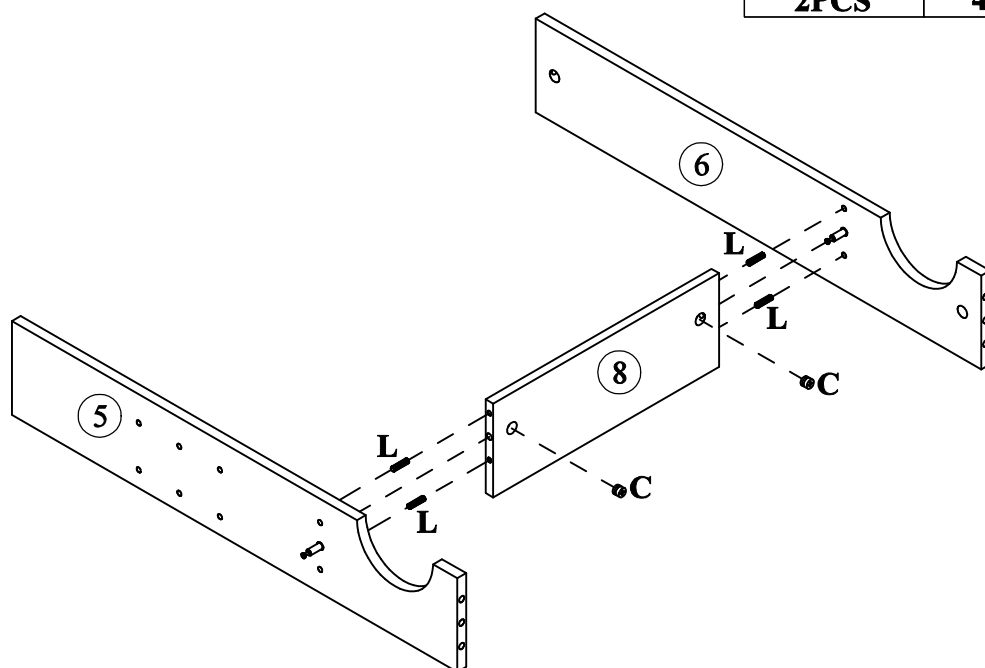 



C		L	
2PCS		4PCS	

  
STEP: 3

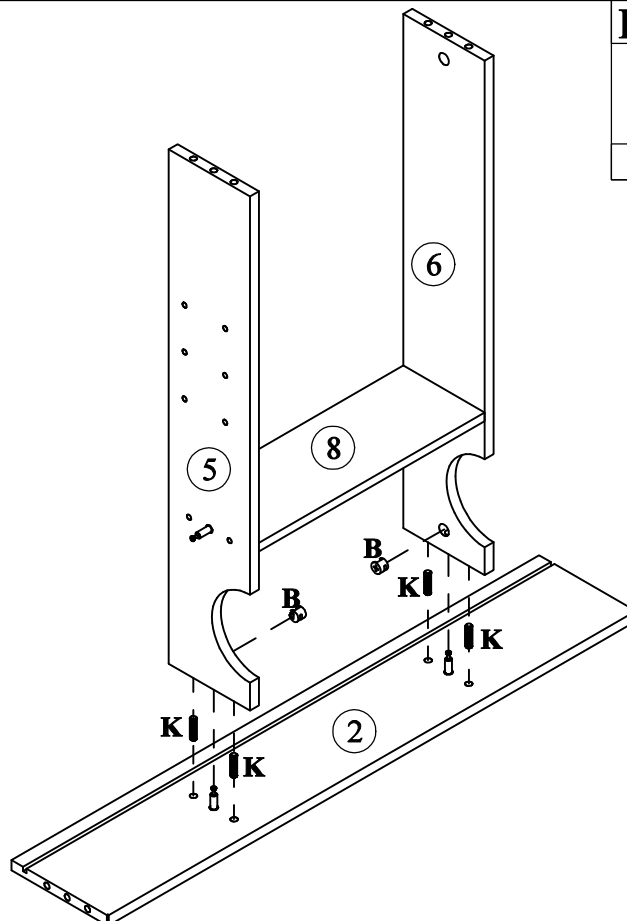


B		K	
2PCS		4PCS	

  STEP: 4


B	C	K	L
			
4PCS	4PCS	6PCS	8PCS

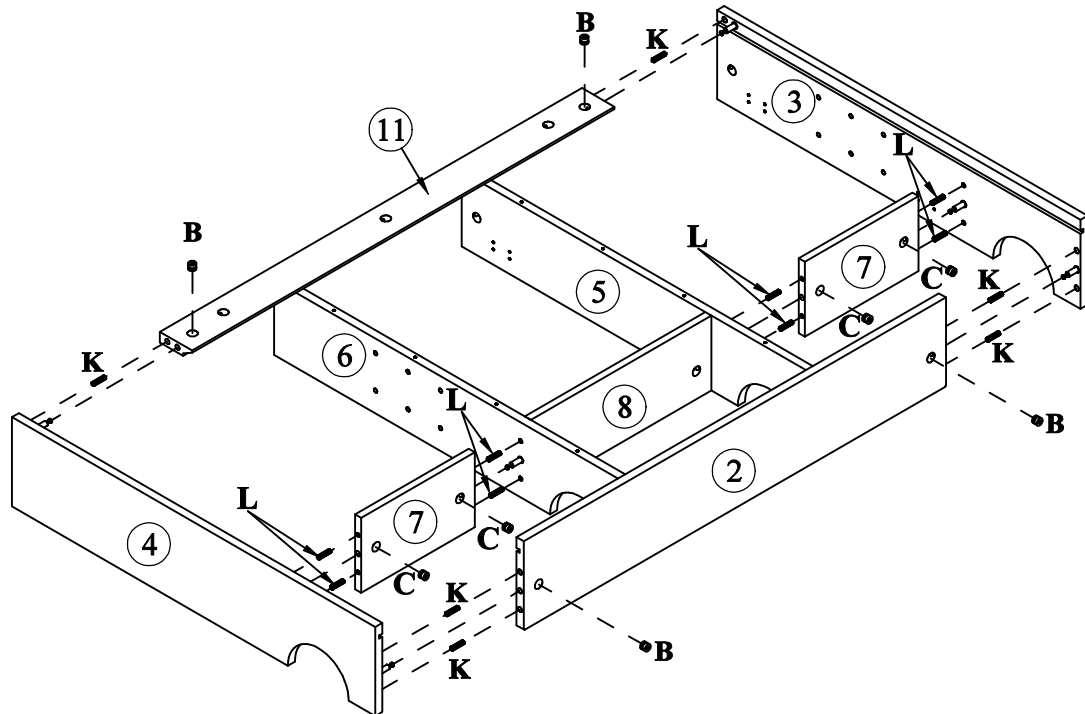 


STEP: 5

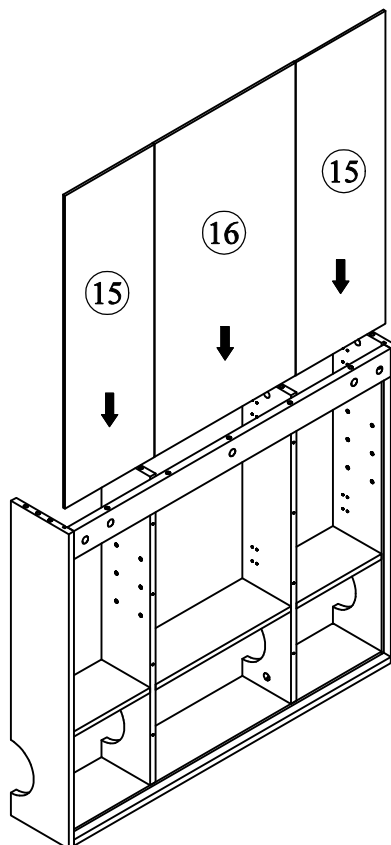 


STEP: 6

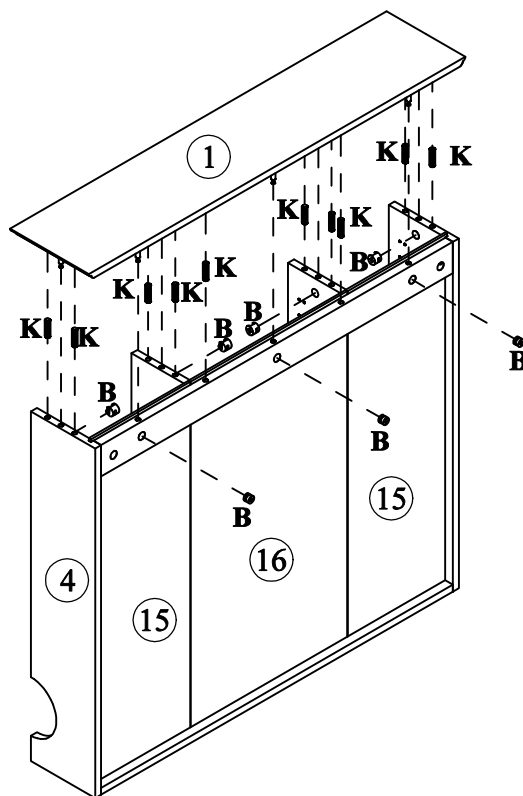 

 
B		K	
7PCS		10PCS	

 STEP: 7

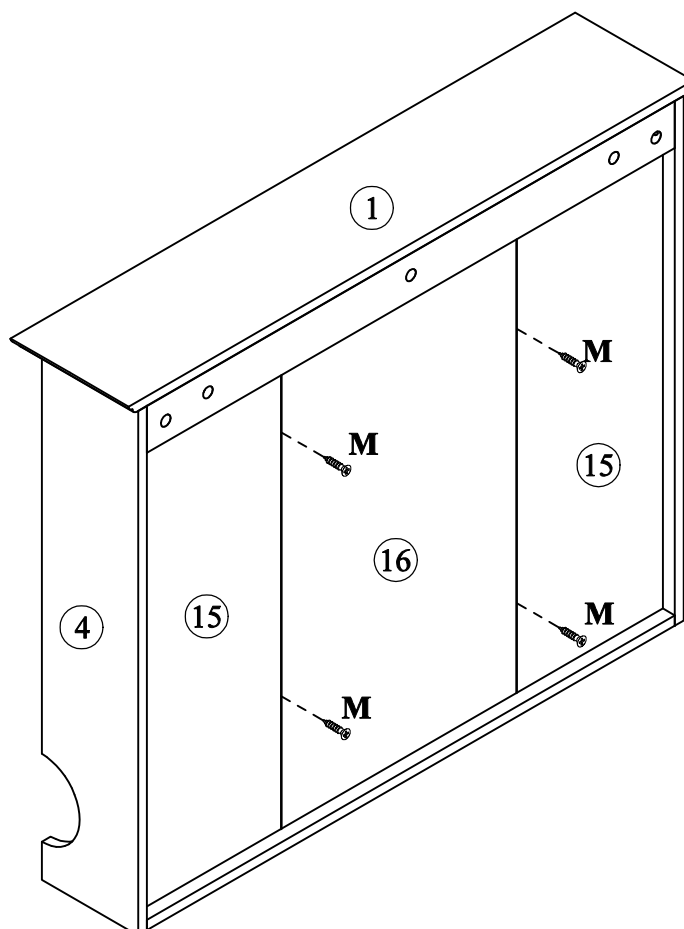


M	
4PCS	

 
STEP: 8


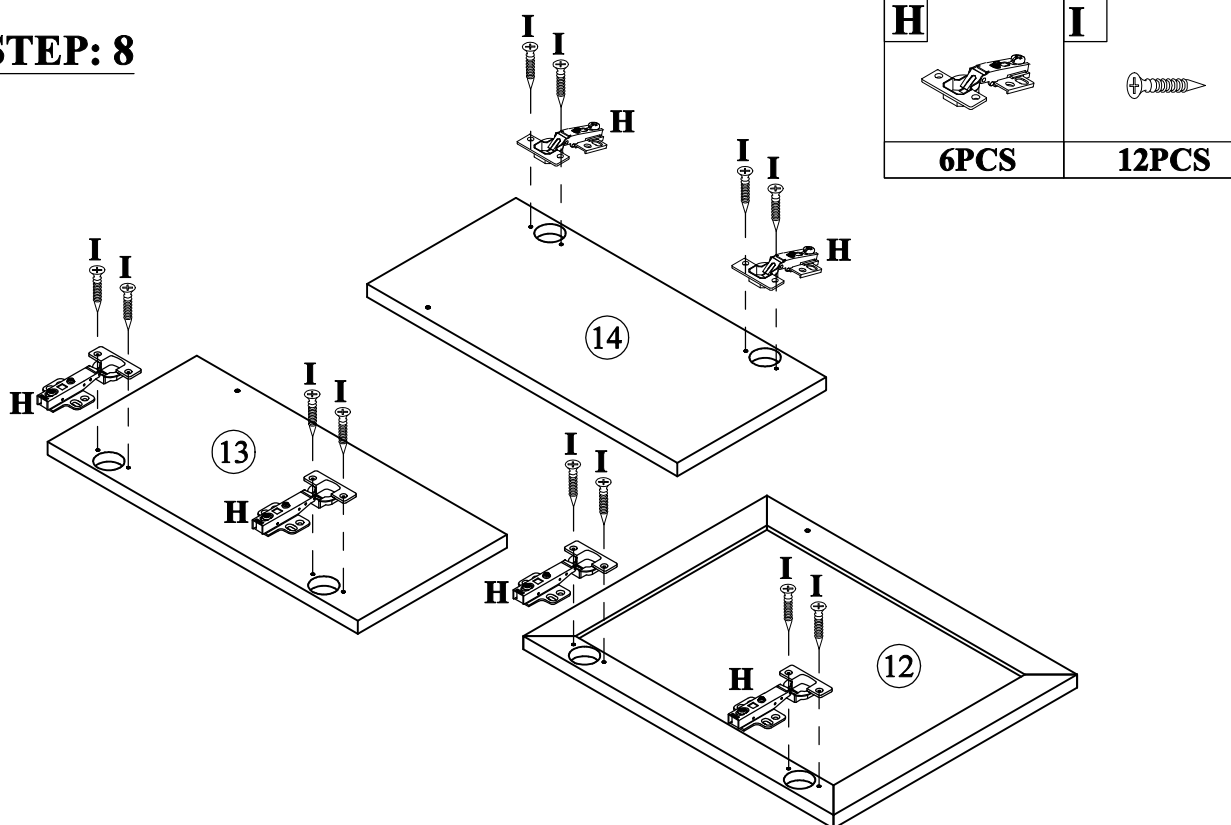



STEP: 9

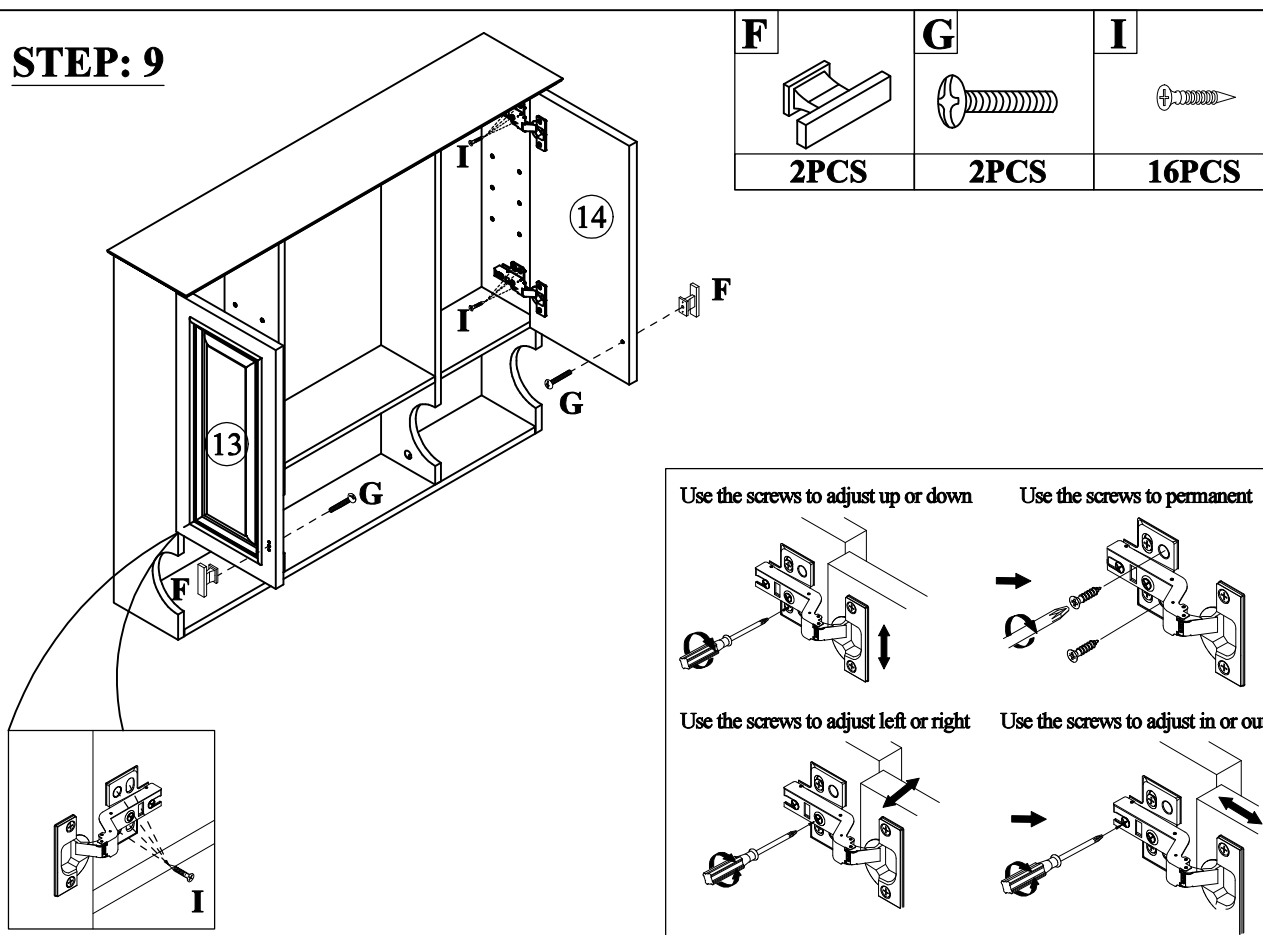 


STEP: 10

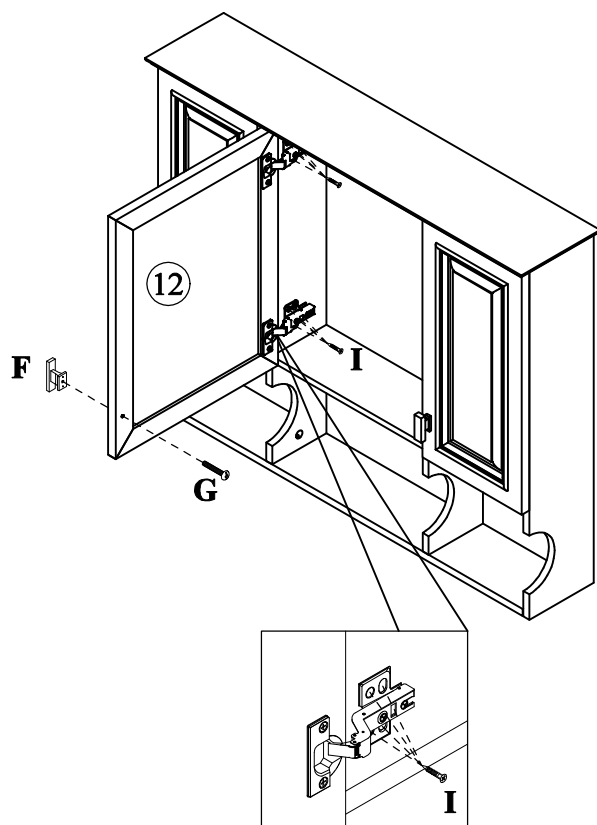 

  F	G	I
		
1PC	1PC	8PCS

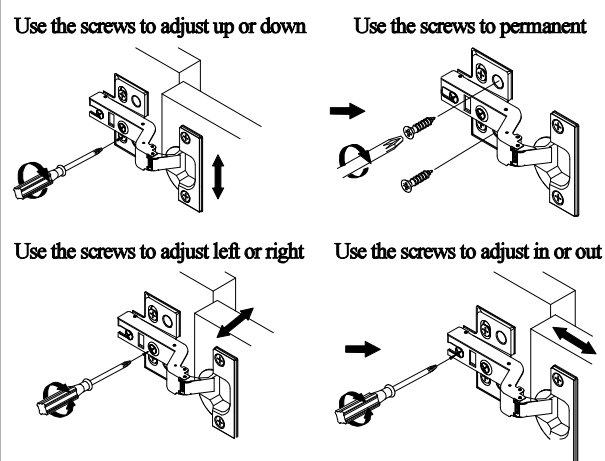 


STEP: 11

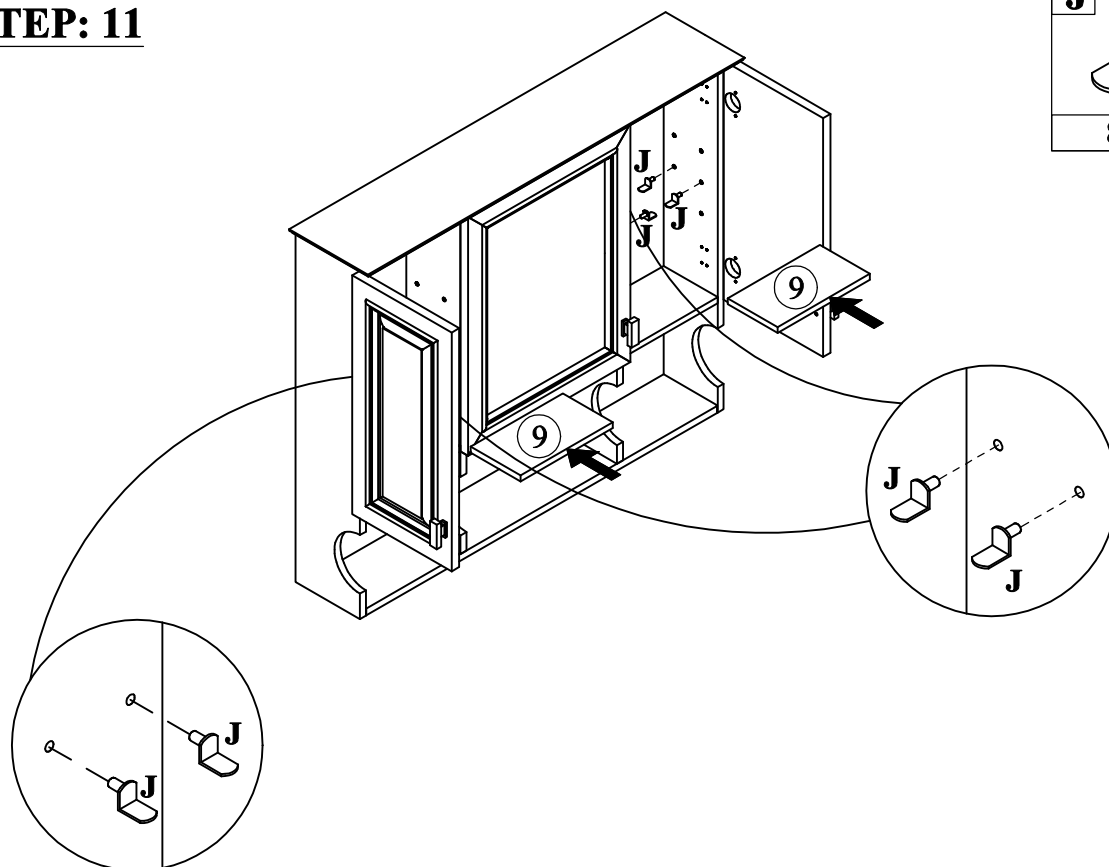 



J

8PCS

  STEP: 12

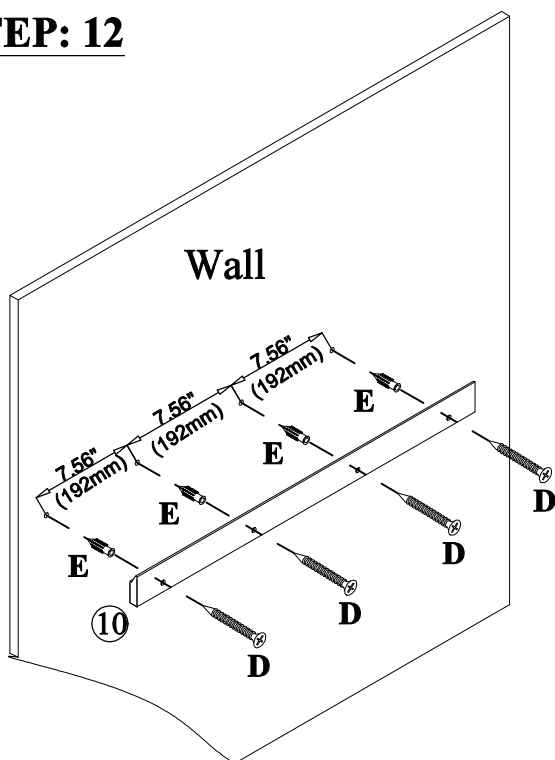


D	E
	
4PCS	4PCS

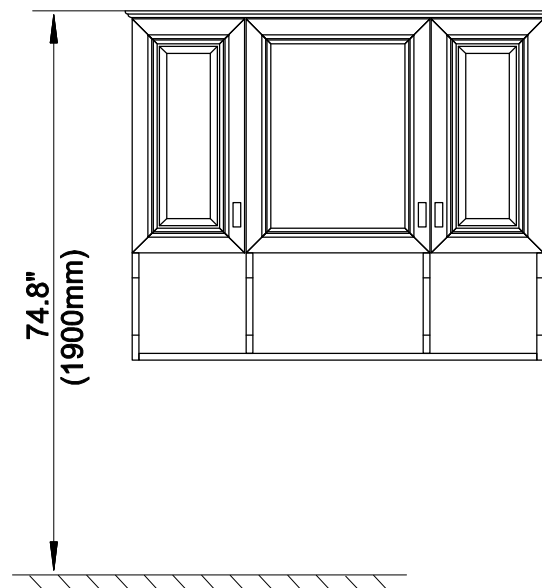 


Draw the spacing between the walls and the No.10, punch holes in the wall, and fix the No.10 to the wall with screws.

Note: Appropriate distance from the top of cabinet to the ground is 74.8".

 
STEP: 13

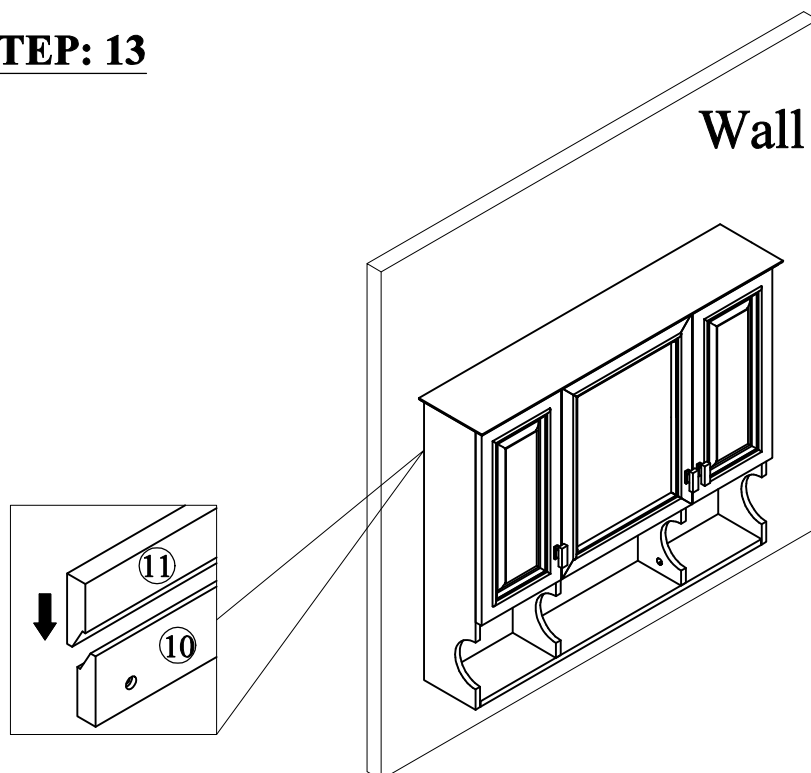

STEP: 14

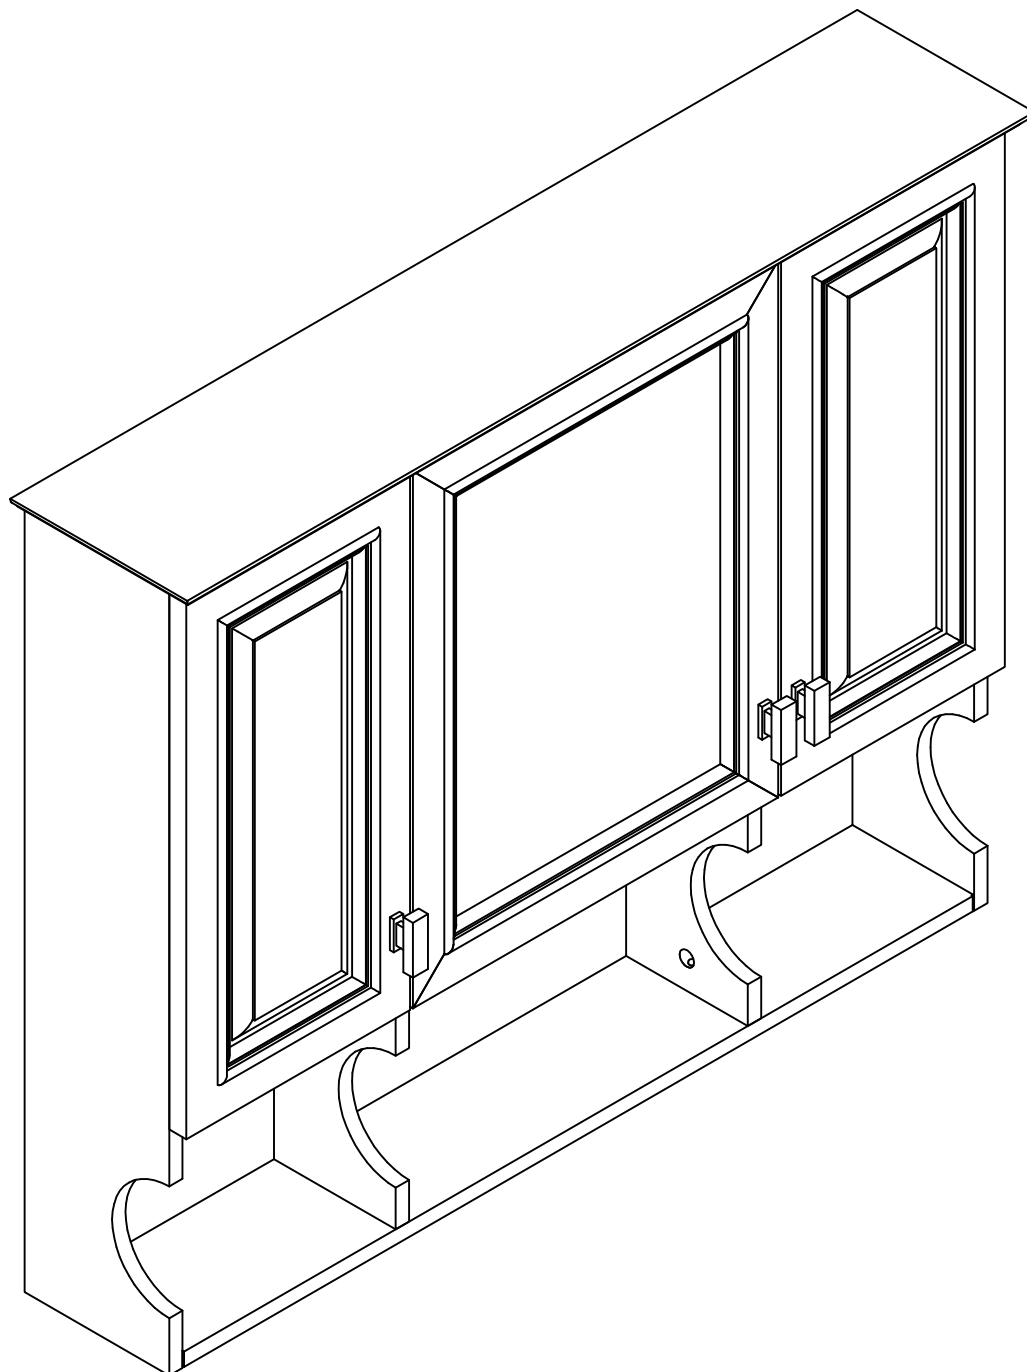 

HINGE ADJUSTMENTS

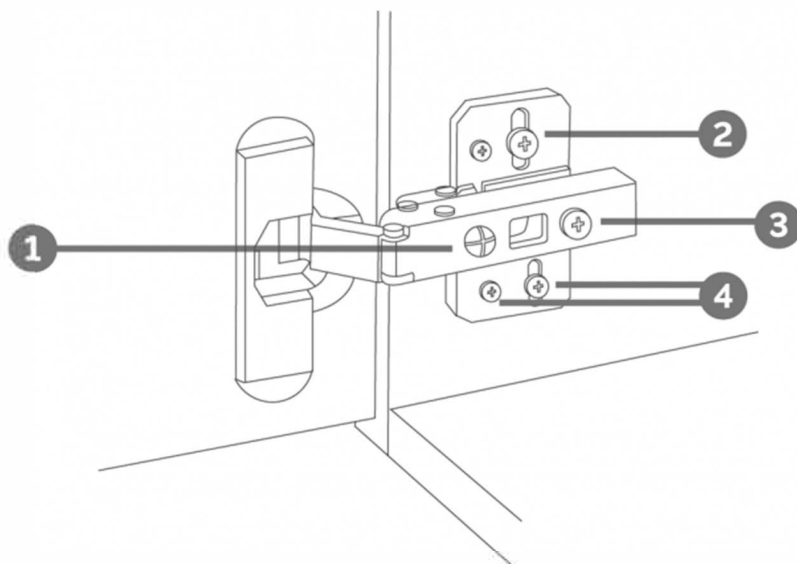 


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

 anticlockwise to move the door closer to the side of the cabinet

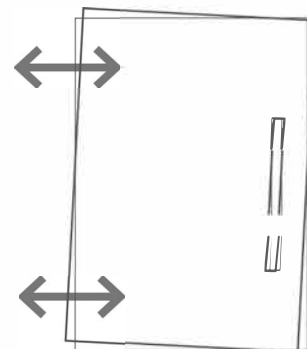


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

 anticlockwise to move the door down

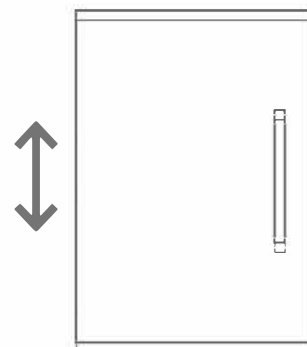

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

