

















Product Name:	Snowman Family Trio Indoor and Outdoor Holiday Decoration with Lights
SKU #:	WHHD2068

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

CARTON CONTENTS:

Description	Quantity	Sketch
Mother Head	1	
Father Head	1	
Mother Body	1	
Mother Body	1	
Mother Back Supporting	1	
Father Back Supporting	1	
Parent Hands	4	
Child Snowman	1	
Child Hands	2	
Child Back Supporting	1	
R Bolt	6	
Zip Tie	20	
Ground Stakes	6	
Lead Wire	1	
Child Base	1	
Parent Base	2	

Product Name:	Snowman Family Trio Indoor and Outdoor Holiday Decoration with Lights
SKU #:	WHHD2068




Before You Start

1. Decide on an appropriate location for your product, please read assembly and Instruction procedure carefully.
2. Retain the instructions for future use and save the carton for storing your snowman decoration.




Assembly and Instruction Procedure:

Remove all packaging (i.e., cardboard or plastic) before beginning. We suggest unpacking the snowman decoration on a large cloth.

1.

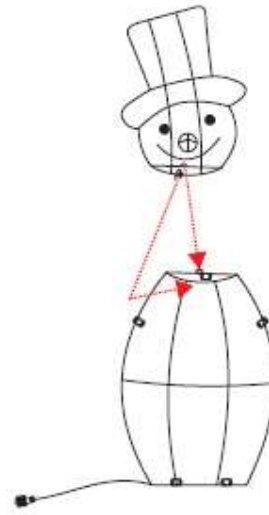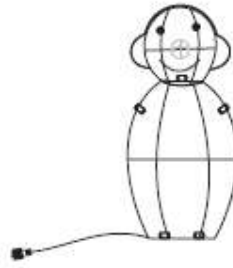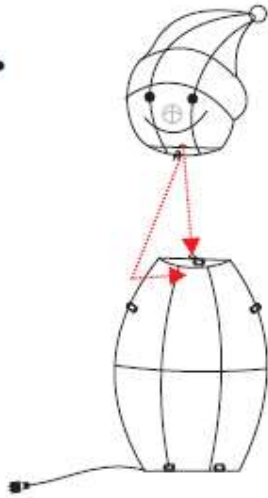


2.

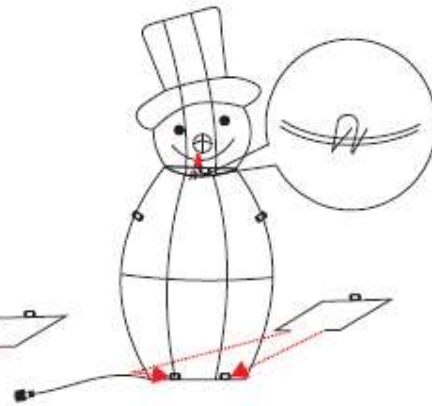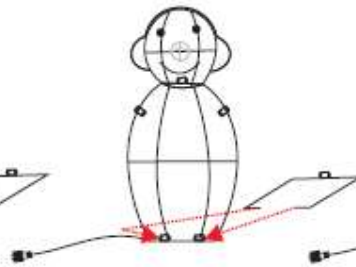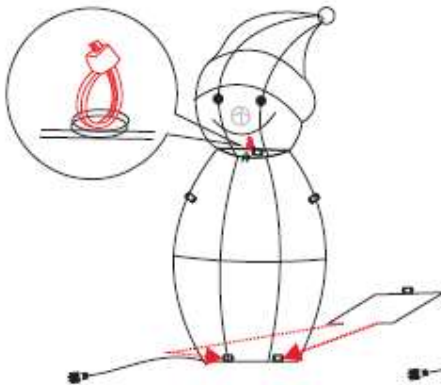


Product Name:	Snowman Family Trio Indoor and Outdoor Holiday Decoration with Lights
SKU #:	WHHD2068


3.

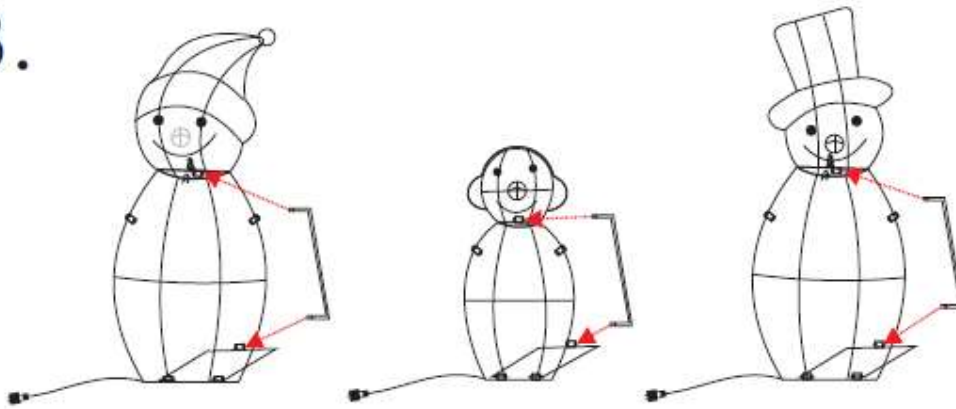

4.

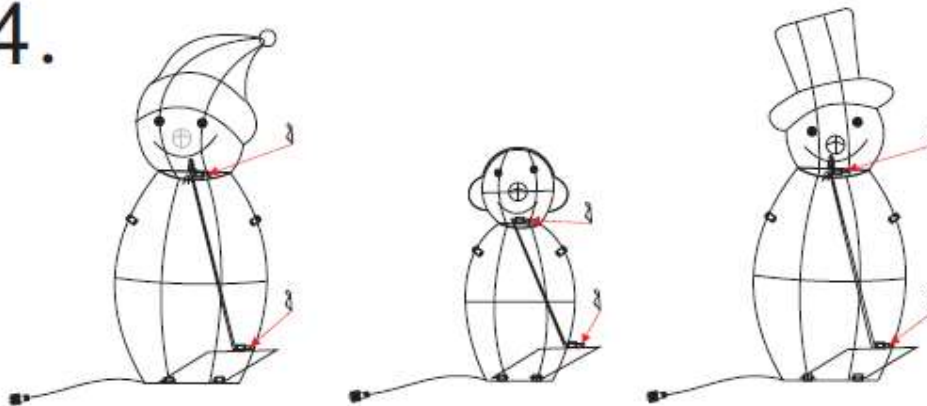


5.

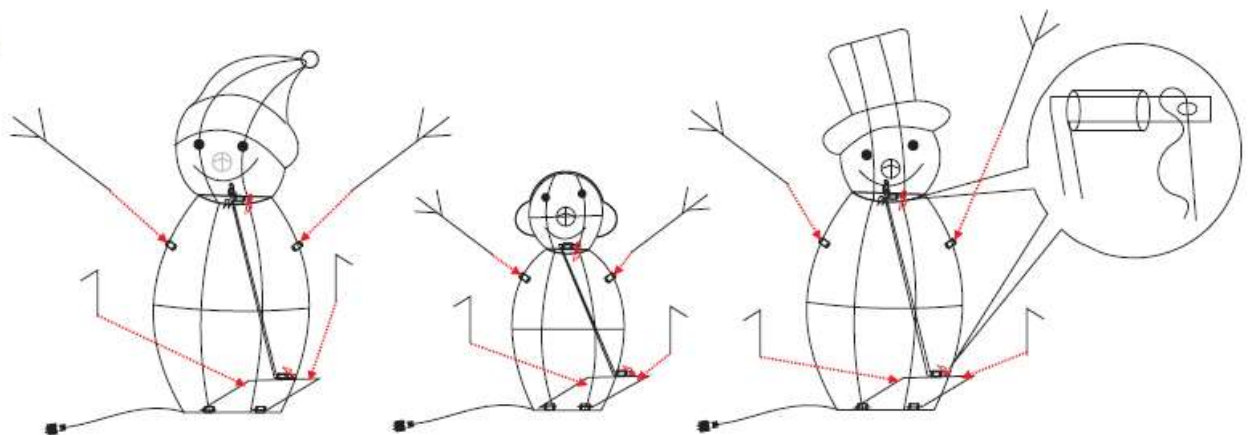


Product Name:	Snowman Family Trio Indoor and Outdoor Holiday Decoration with Lights
SKU #:	WHHD2068

6.

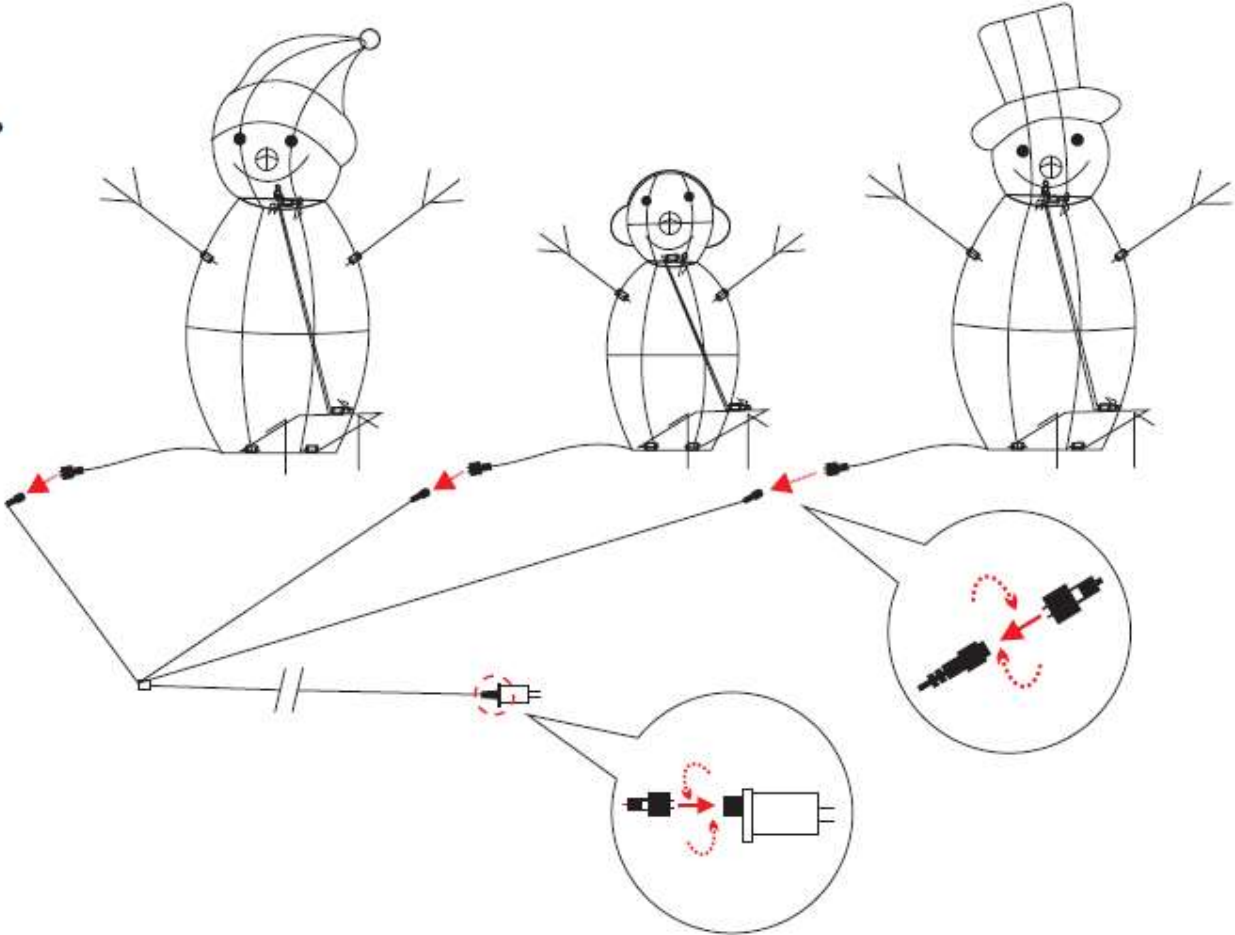

Product Name:	Snowman Family Trio Indoor and Outdoor Holiday Decoration with Lights
SKU #:	WHHD2068

7.

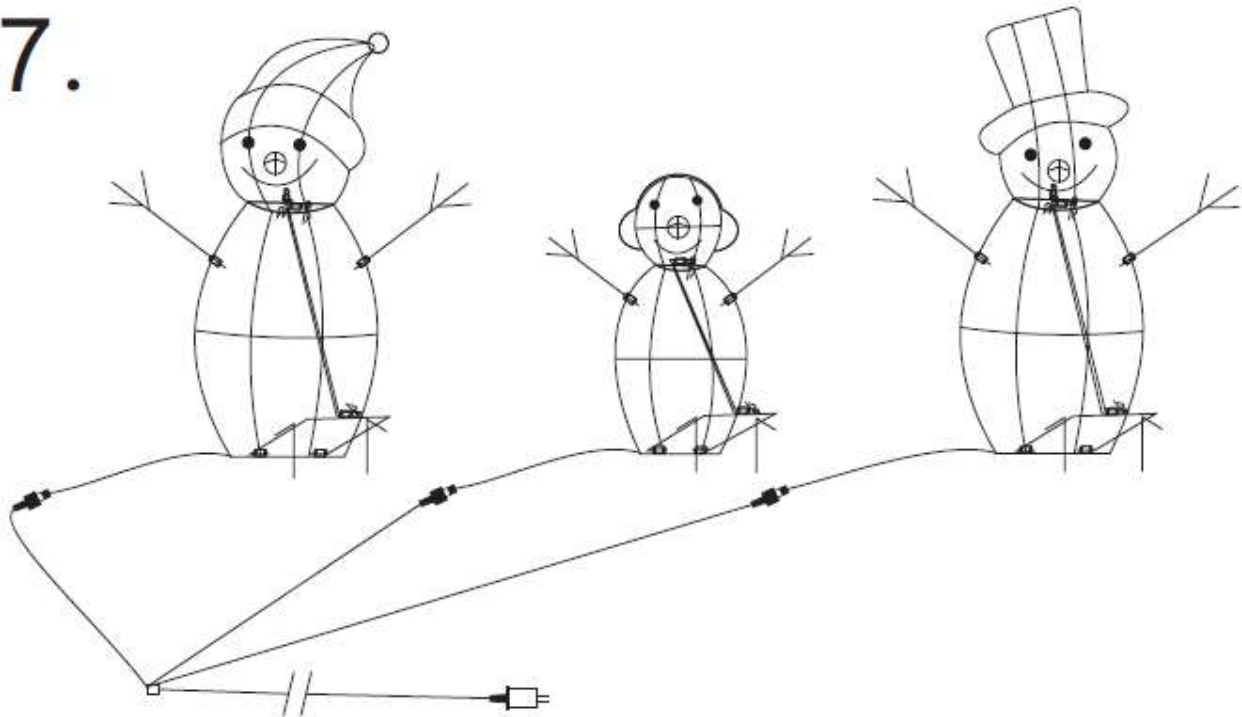

Warnings:

1. Do not place the snowman decoration near fireplaces, candles, outdoor heaters, or other similar sources of heat.
2. Do not install near pools, fountains, tubs, sinks, or other areas of standing water that the snowman may fall or blow into.
3. This product is for decoration use only. Not to be used by children as a toy. Keep out of reach of small children.

Storage:

1. Disassemble each part by reverse steps of the assembly.
2. Place the snowman back into the carton.
3. Store the product in a cool, dry location protected from sunlight where the temperature does not exceed 35°C (95°F).