


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.


NOTES:

1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save these instructions.
3. Always switch off the electricity supply and allow to cool for 10 minutes before changing the light bulbs.

2-LIGHT OUTDOOR WALL SCONCE

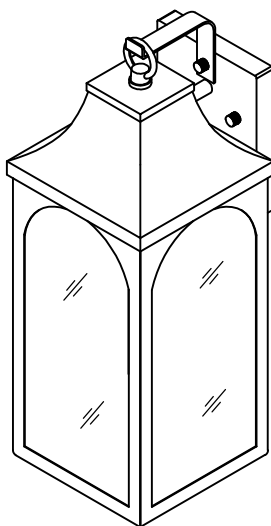


TOOLS REQUIRED

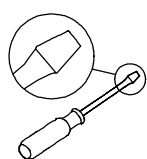


Flathead
Screwdriver



 Phillips
Screwdriver



Ladder

 


Wire Strippers



Pliers



 Electrical
Tape



Wire Cutters



Safety Glasses

PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product. When the lamp is not installed finish, please don't throw away the package, so as not to leave the parts in the package.

PART LIST AND HARDWARE LIST

PIECE	DESCRIPTION	QUANTITY
A	Wire nut	3
B	Mounting plate	1
C	Outlet box screw	2
D	Green ground screw	1
E	Rubber pads	3
F	Decorative nuts	3
G	Fixture body	1
H	Screw	1
I	Bent metal strip	1
J	Loop	1
K	Rubber pads	1

INSTALLATION

1. Attach the Mounting plate (B) to the junction box with outlet box screw (C) then fix it.
2. First, insert the rubber pad (K) to the tooth tube of the fixture body (G), and then twist it into the Loop (J). The lifting ring should be consistent with the fixture body (as shown in the figure)
3. Take out the metal elbow (I) and hook the short end into the lifting ring, aligning the long end hole with the wall plate hole. Secure with screws (H), rubber pads (E), and decorative nuts (F)
4. Install two maximum 40W B-type light bulbs (not included) onto the lamp holder
5. Attach the supply circuit ground wire (green or bare copper wire) to the fixture ground wire, black to (black) and white to (white).
6. Insert the fixture body (G) into the mounting plate (B). Lock with two decorative nuts (F) and two rubber pads (E)

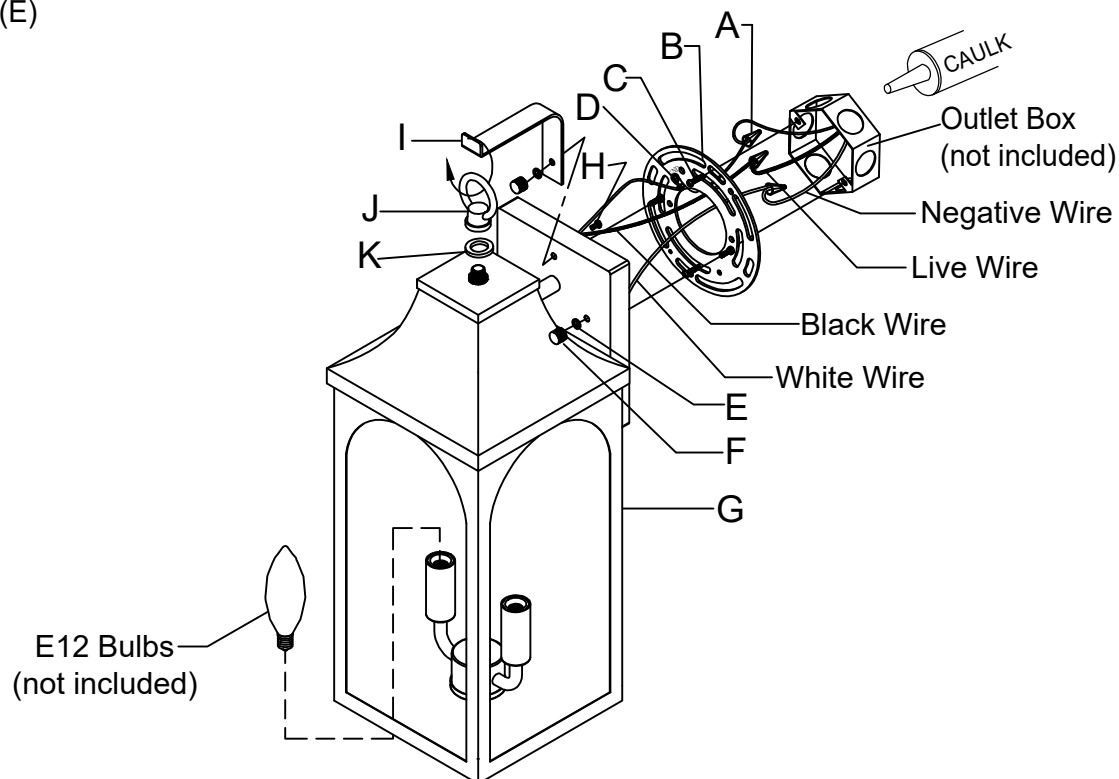

If you have any issues with use this product, please email us. Be sure to include your order number and photos of the issues. This will help us provide you with faster support and solve your problem.