


Assembly Manual

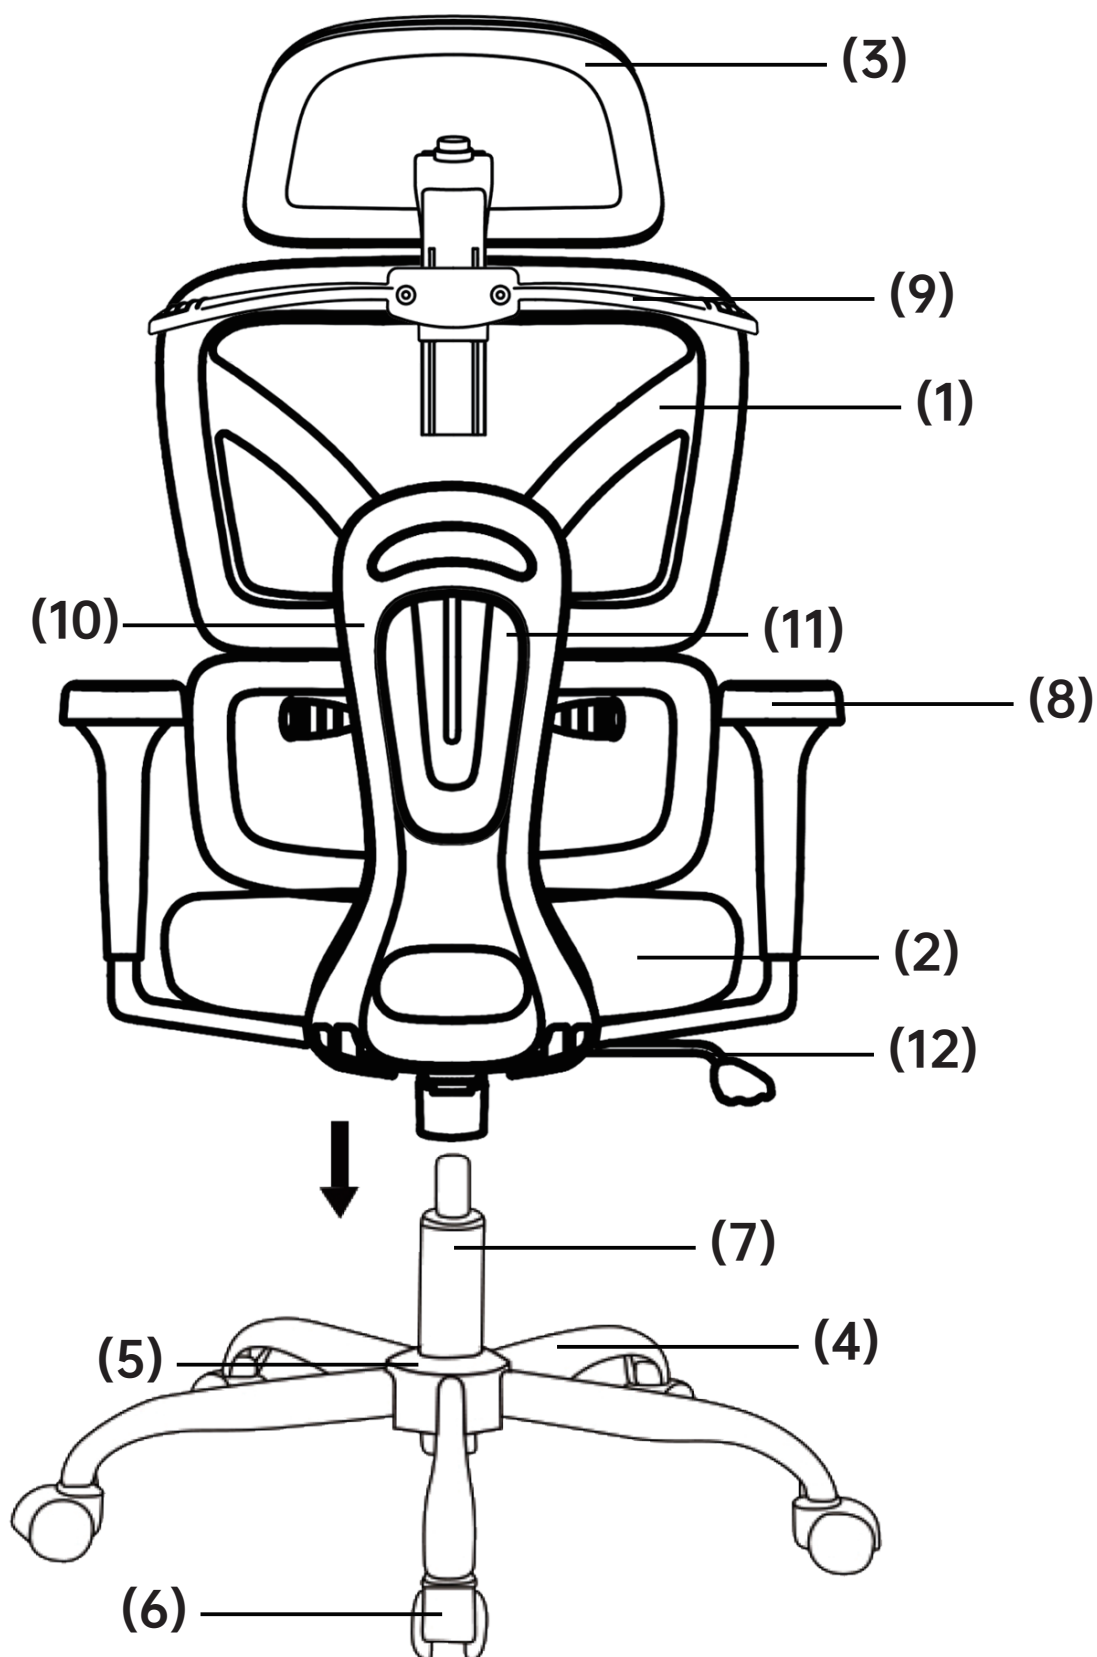








 

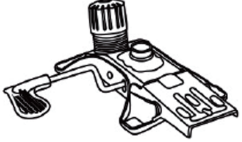

 

 
 

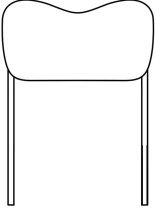
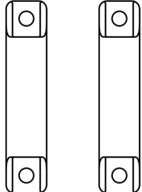


OFFICE CHAIR



Product Overview

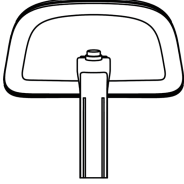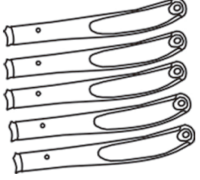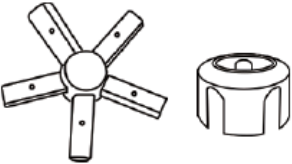

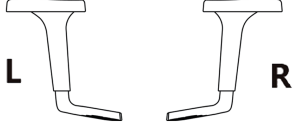
Accessories List

<p>(1) Backrest</p> 	<p>(2) Seat Cushion</p> 	<p>(3) Headrest</p> 	<p>(4) 5 Split Base Tube</p> 
<p>(5) Central Base Tube</p> 	<p>(6) 5 Castors</p> 	<p>(7) Air Rod</p> 	<p>(8) 2 Armrests</p> 
<p>(9) Clothes Rack</p> 	<p>(10) Backrest Support Shaft</p> 	<p>(11) Backrest Decorative</p> 	<p>(12) Base Plate</p> 
<p>(13) 5 Screws (M6X20mm)</p> 	<p>(14) 6 Screws (M6X25mm)</p> 	<p>(15) 2 Decoration Caps</p> 	<p>(16) 6 Screws (M6X30mm)</p> 
<p>(17) 8 Screws (M6X20mm)</p> 	<p>(19) 3 Screws (M8X35mm)</p> 	<p>(21) Footrest</p> 	<p>(22) 2 Footrest Mounting Slot</p> 
<p>(18) 1 Screws (M5X10mm)</p> 	<p>(20) Hexagon Wrench</p> 		

Assembly Instruction


STEP 1

First, remove the plastic cover from the wheel hub. Then insert each of the five chair legs into the hub and secure them with screws.

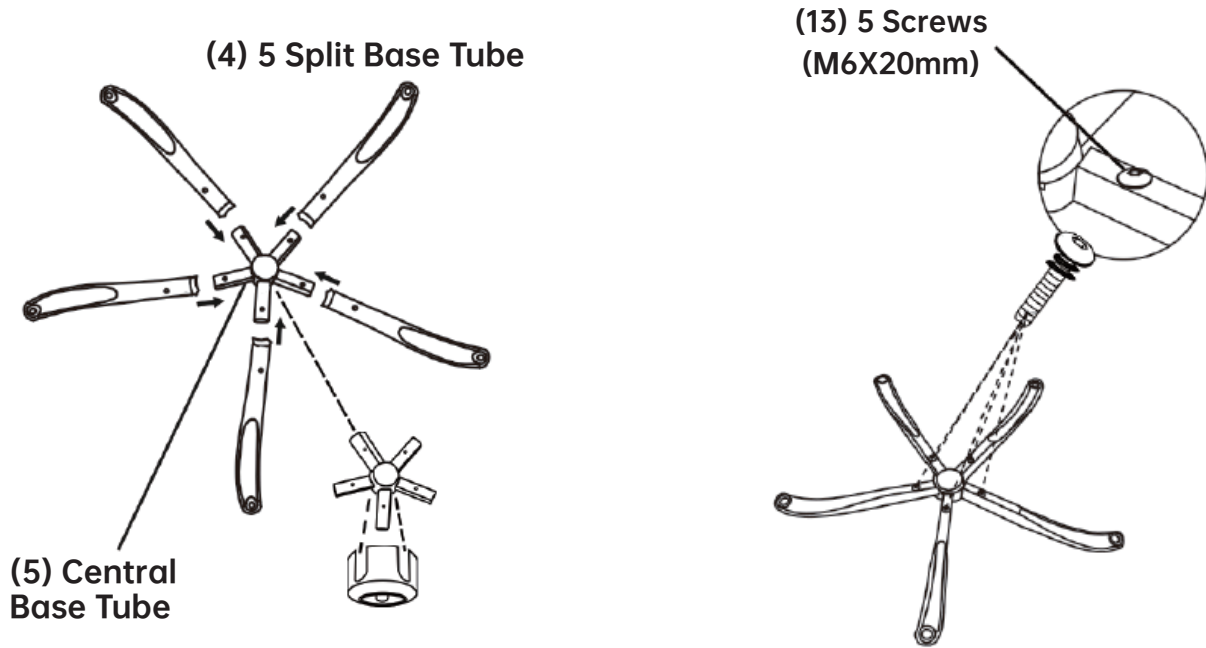

STEP 2

Insert the 5 castors onto the chair legs fitted in Step 1, then replace the plastic slot covers over the castor hubs. Finally, insert the pneumatic lift mechanism into the hub.

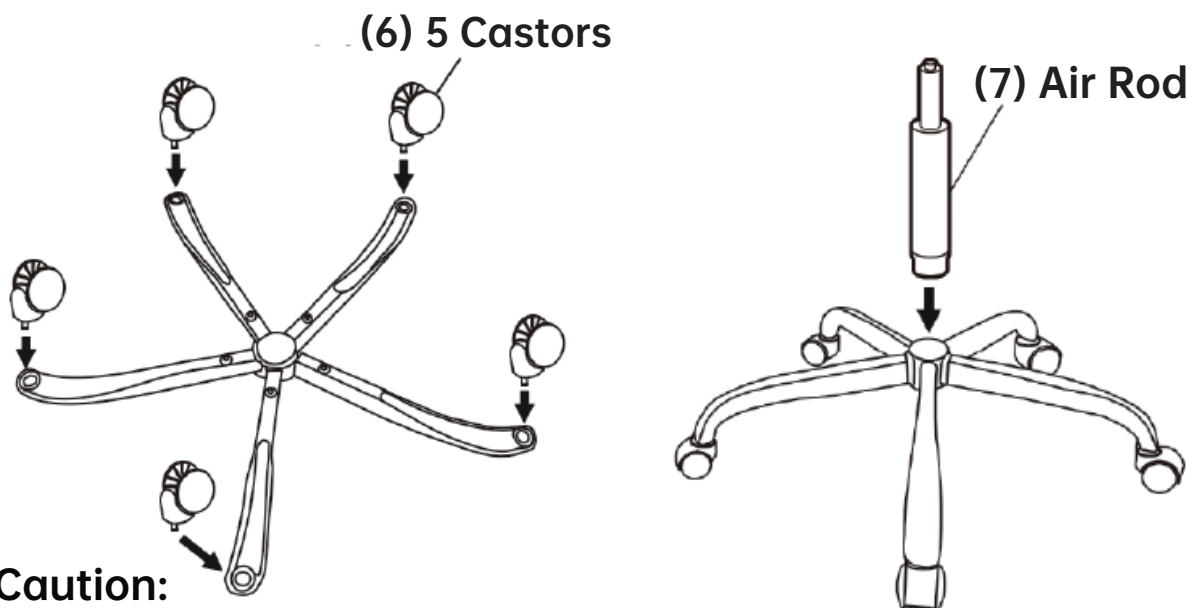


Caution:

Confirm Castors must be inserted deeply. (Press the castors in with more force)

Assembly Instruction


STEP 3

Secure armrests to seat cushions; install the footrest mounting slot; avoid full bolt tightening until all are aligned with their holes to allow necessary assembly adjustments.

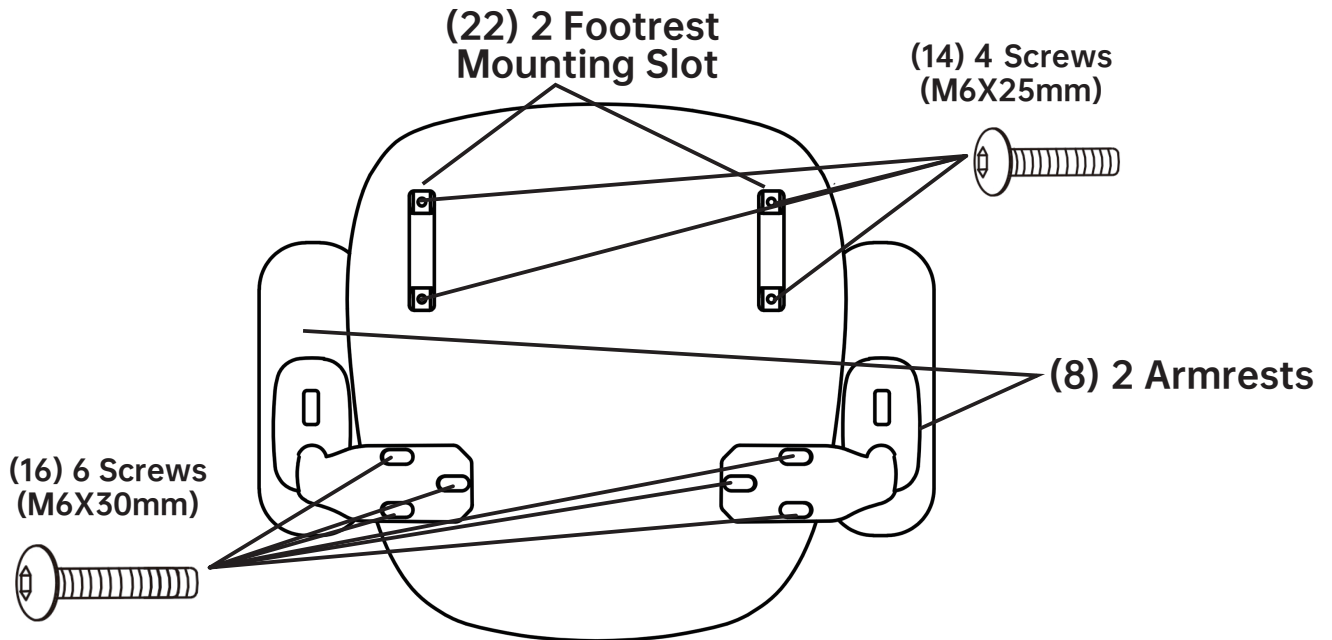

STEP 4

Secure base plate to backrest support shaft; avoid full bolt tightening until all are properly positioned to allow necessary assembly alignment tweaks.

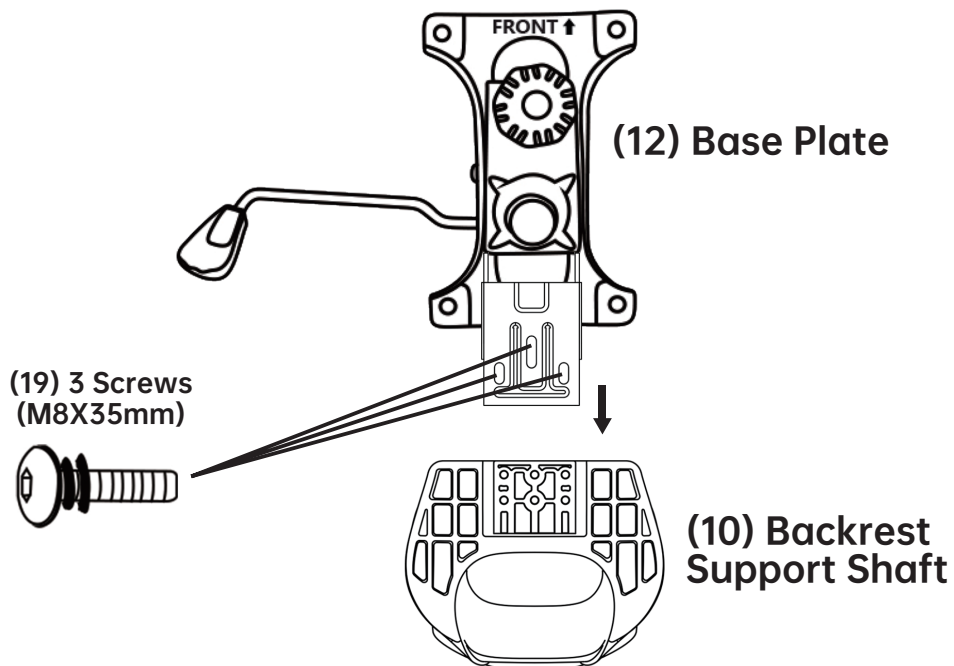

Assembly Instruction


 
STEP 5

Fasten Step 4-installed components to the seat cushion; avoid full bolt tightening until all are aligned with their corresponding holes to allow necessary assembly adjustments. Insert the footrest bar into the two corresponding slots on the base, securing one side with a screw.

(20) Hexagon Wrench





(17) 4 Screws
(M6X20mm)

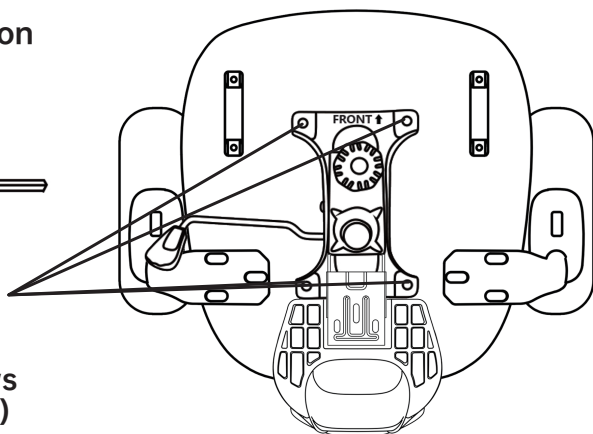

(21) Footrest


 
(18) 1 Screws
(M5X10mm)

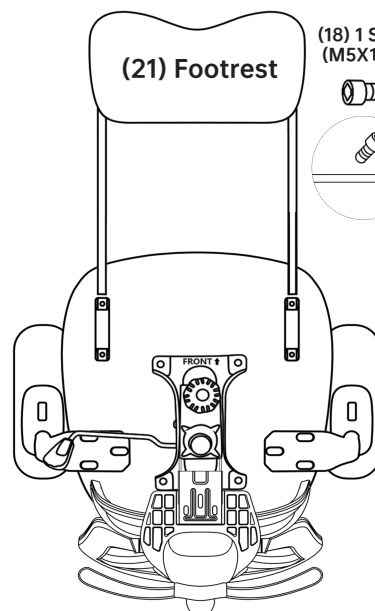

STEP 6

Fasten the backrest to Step 5's installed assembly; avoid full bolt tightening until all are properly positioned to allow necessary assembly alignment tweaks.

(17) 4 Screws
(M6X20mm)

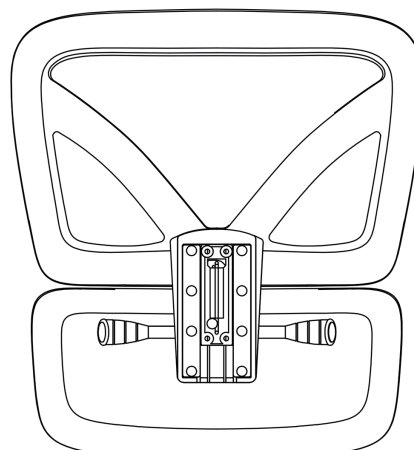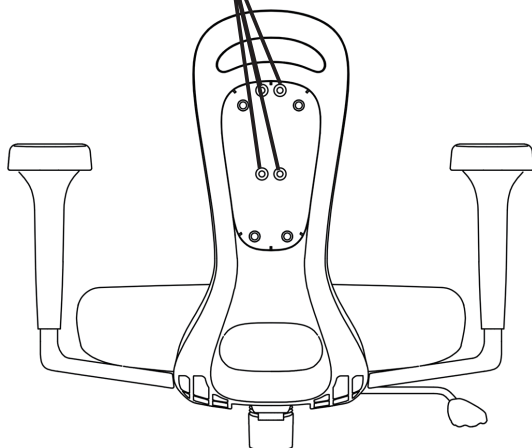


(1) Backrest

Assembly Instruction


STEP 7

Fasten the headrest and clothes rack to Step 6's backrest; avoid full bolt tightening until all are properly positioned to allow necessary assembly placement tweaks.

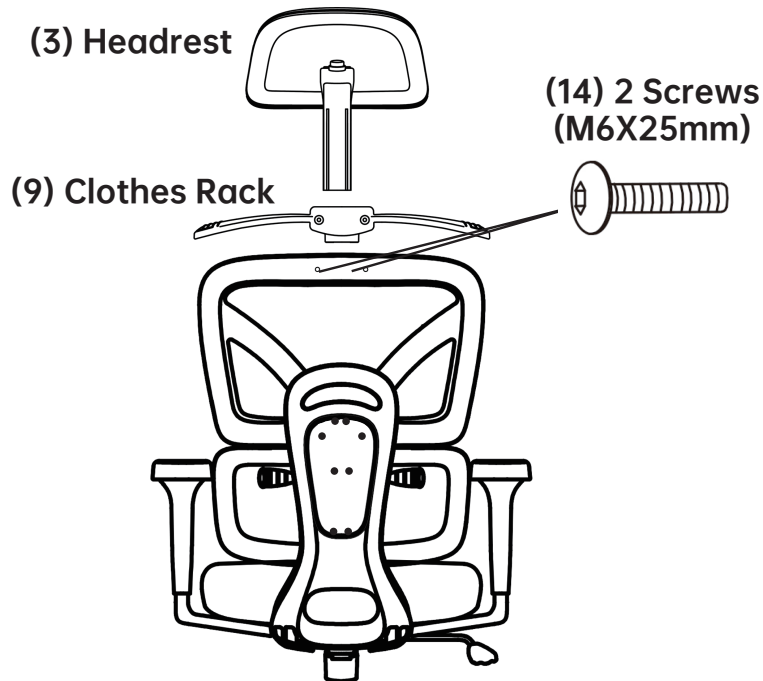

STEP 8


Insert Step 2 base's air rod into Step 7 seat base plate (central hole); then snap backrest and clothes hanger decorative caps into place.

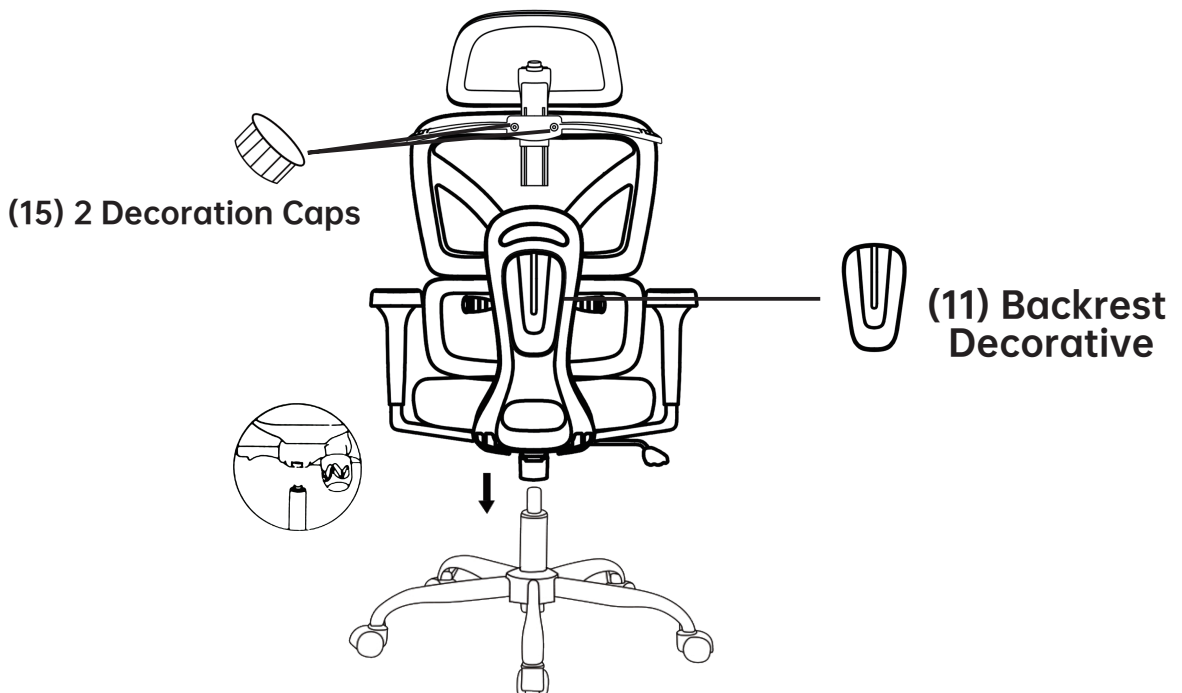

Assembly Instruction

STEP 9

Adjust height via the base's right lift lever: Lift while seated to lower; lift when standing to raise.

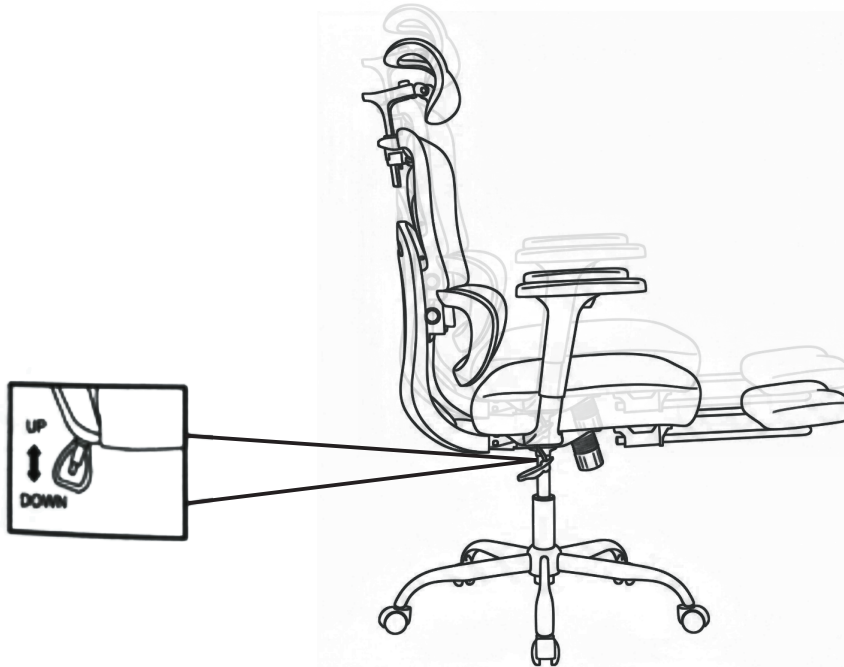

STEP 10

Control tilt angle by pushing/pulling the base's right lift lever. Adjust knob tension to change tilt force: clockwise loosens (easier backward tilt); counterclockwise tightens (more force needed).

