


INSTRUCTION MANUAL

for

REPLACING RETRACTABLE AWNING ARMS

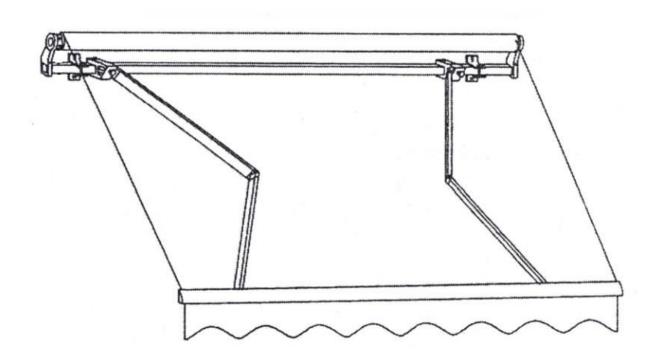



www.ALEKOPRODUCTS.com

WARNING:


FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN PERSONAL INJURY!

www.ALEKOPRODUCTS.com

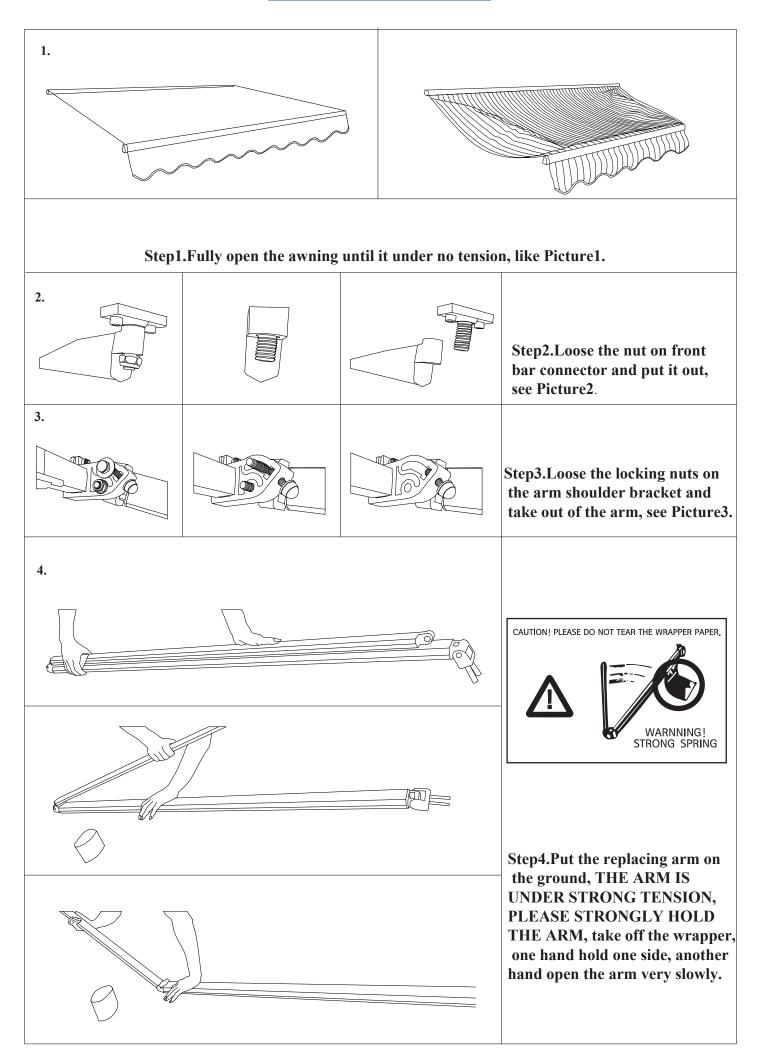

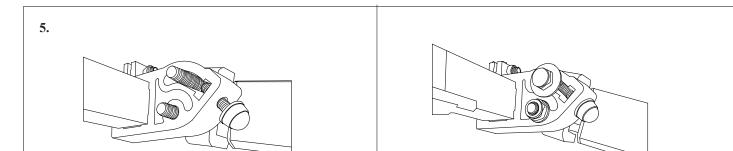

Step5. Then insert the big arm side into arm shoulder bracket and fasten the two locking nuts.

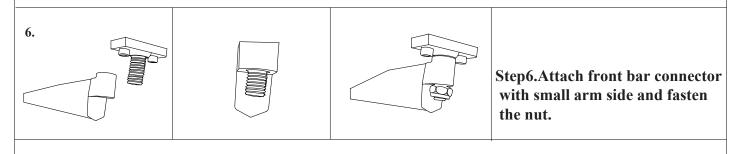


If you are happy with the height and level of the front bar, that' great!

You are done with the installation. Relax, and enjoy your awning.

If not, you can adjust the pitch or angle of each arm separately.

- 1. Fully open the awning using your crank or remote transmitter on motorized awning, unplug the power cord from the outlet after opening the awning.
- 2. Using 17mm wrench to loosen the two locking nuts on the side, and then use 14mm wrench to loose or tighten the jack bolt to adjust the angle. To make it easy, please ask your helper to lift the front bar up or pull down to your required height
- 3. Finally tighten the two locking nuts.
- --SeePicture7

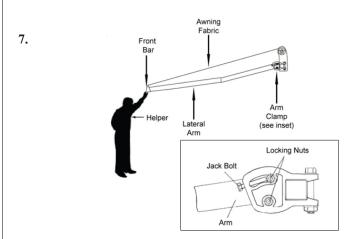

WARNING: RAISING THE FRONT BAR WILL REDUCE THE PITCH (ANGLE) OF THE FABRIC THUS INCREASING THE RISK OF RAIN WATER POOLING ON THE FABRIC. TO PREVENT THE AWNING FROM COLLAPSING DUE TO RAIN WATER LOAD, YOU MUST RETRACT THE AWNING WHEN UNATTENDED. FAILURE TO DO SO COULD RESULT IN PERSONAL INJURY.