 


Assembly Instructions

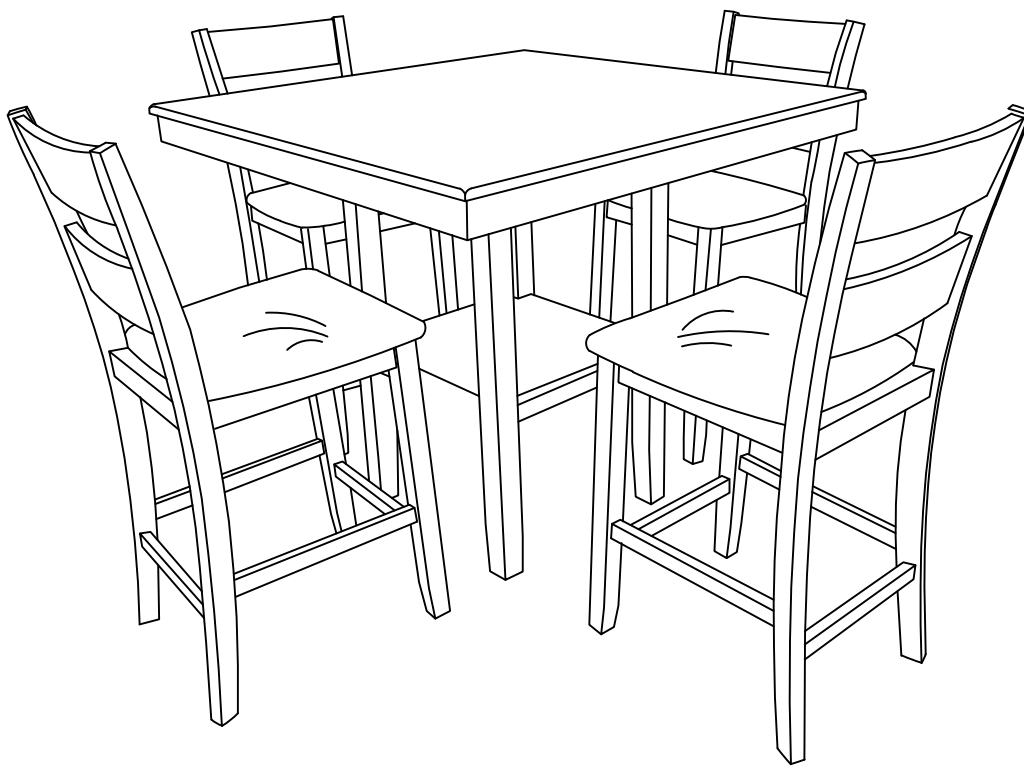

 
ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT


Tools Required For Assembly:

Allen Wrench



(Included)

 Wrench



(Included)

Phillips Screwdriver



(Not Included)

 


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

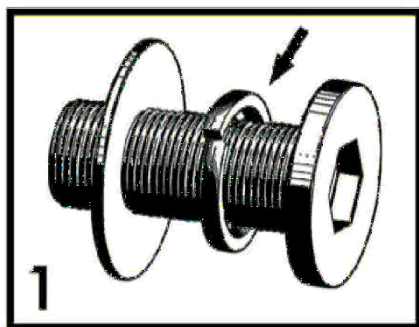

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

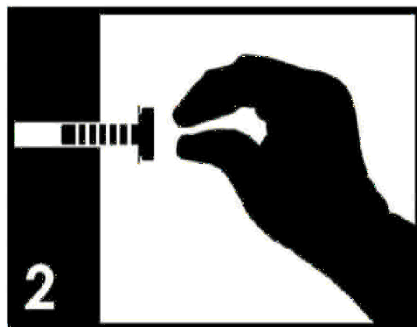

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

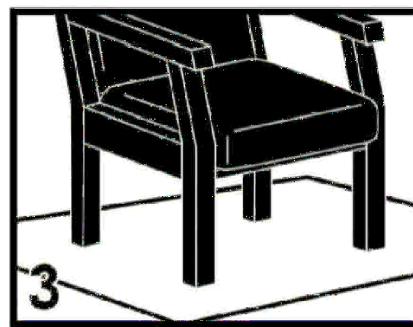

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

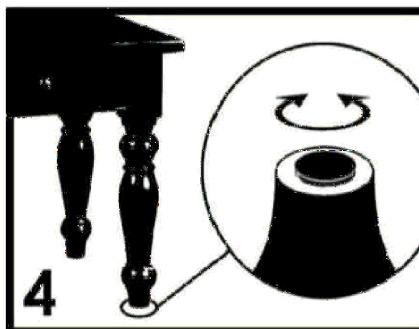

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

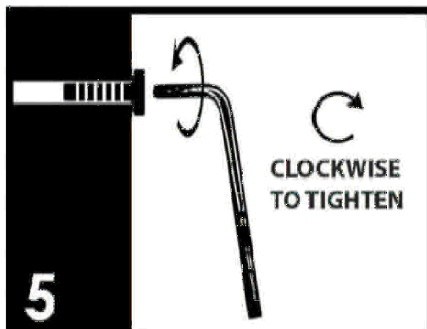

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

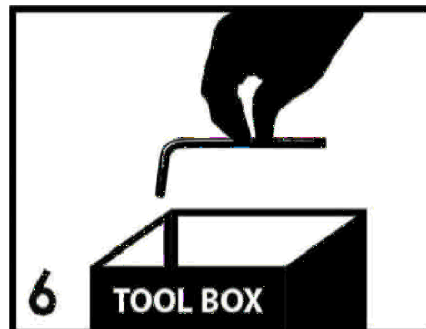


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 
FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

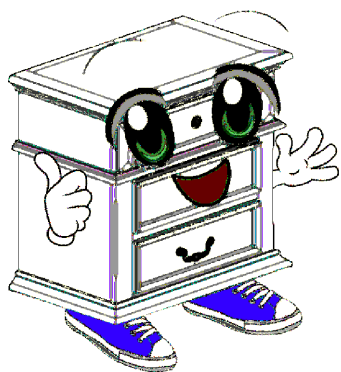

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

 Parts List



#1 x 1pc
Table Top



#2 x 4pcs
Table Leg



#3 x 1pc
Apron



#4 x 1pc
Middle Shelf



#5 x 2pcs
Connect Board

Hardware List



#A x 12pcs
Bolt Ø1/4" x 1-15/16"



 
#B x 12pcs
Lock Washer Ø1/4"



#C x 28pcs
Flat Washer Ø1/4"




#D x 1pc
Allen Key M4




#E x 16pcs
Wood Screw #4 x1-3/16"


  
#F x 2pcs
Wood Dowel #10 x 3/4"


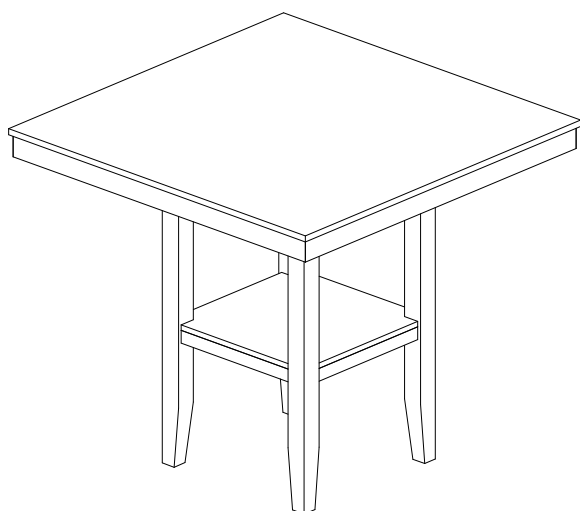


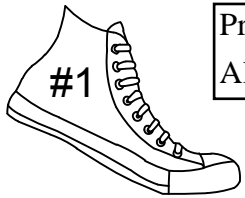

#1

Prepare 8 bolts assembly by inserting lock washer (#B), then flat washer (#C) onto bolts (#A).
Align legs (#2) to the holes of the apron (#3) and middle shelf (#4). Secure with bolts (#A).

  
#A x 8pcs
#B x 8pcs
#C x 8pcs

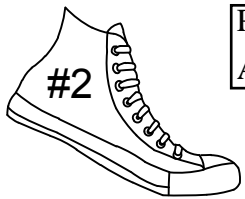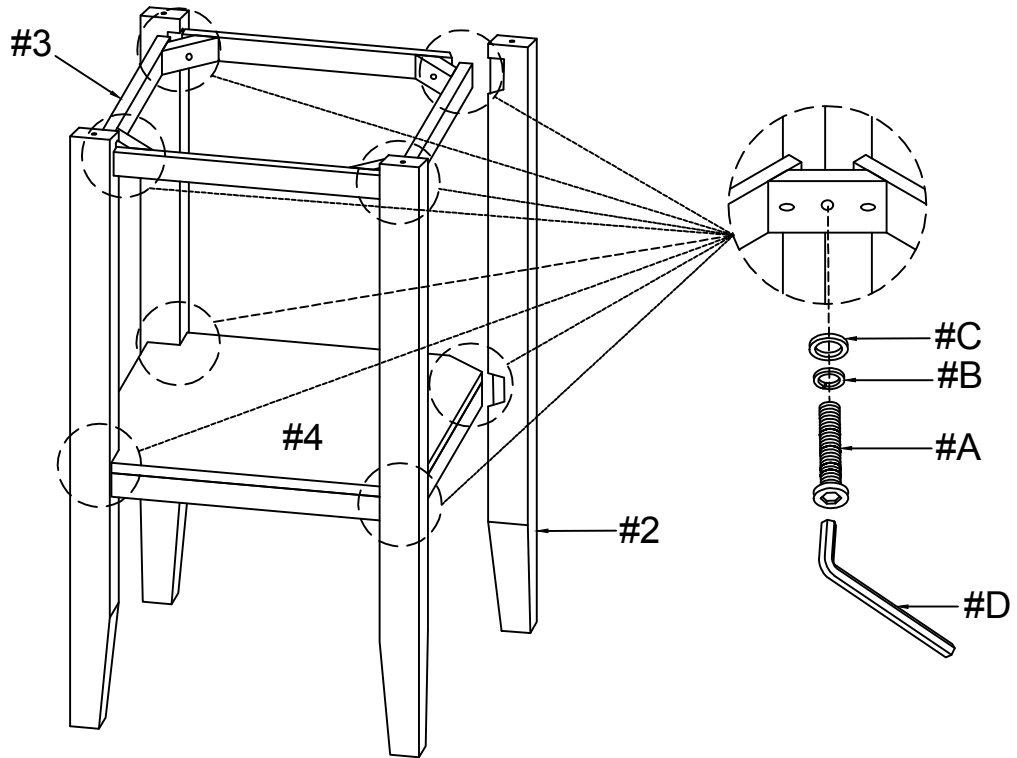

#2

Prepare 4 bolts assembly by inserting lock washer (#B), then flat washer (#C) onto bolts (#A).
Align connect board (#5) to the holes on the top of the legs (#2). Secure with bolts (#A).




 
#A x 4pcs
#B x 4pcs
#C x 4pcs

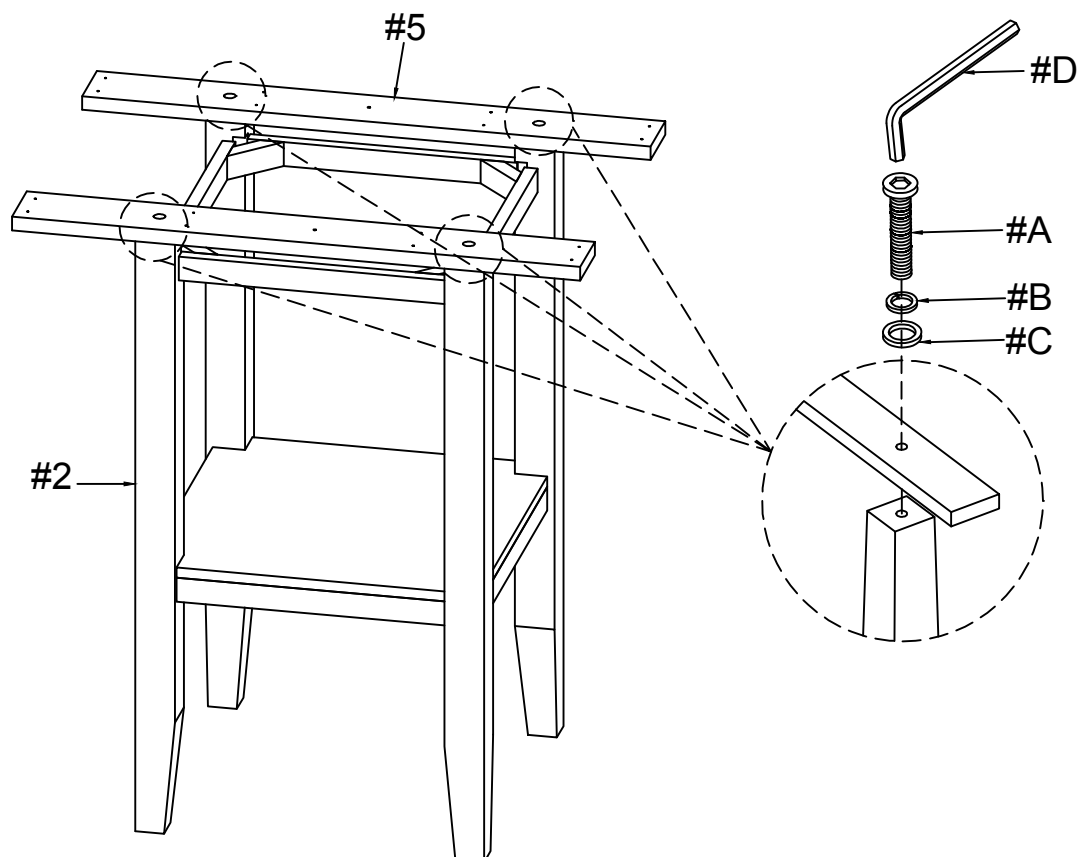




Prepare 16 screws assembly by inserting flat washer (#C) onto screws (#E).
Insert wood dowels (#F) to the center holes of the connect board (#5). Align
connect board to the holes of the table top (#1). Secure with screws (#E).

#C x 16pcs
#E x 16pcs
#F x 2pcs

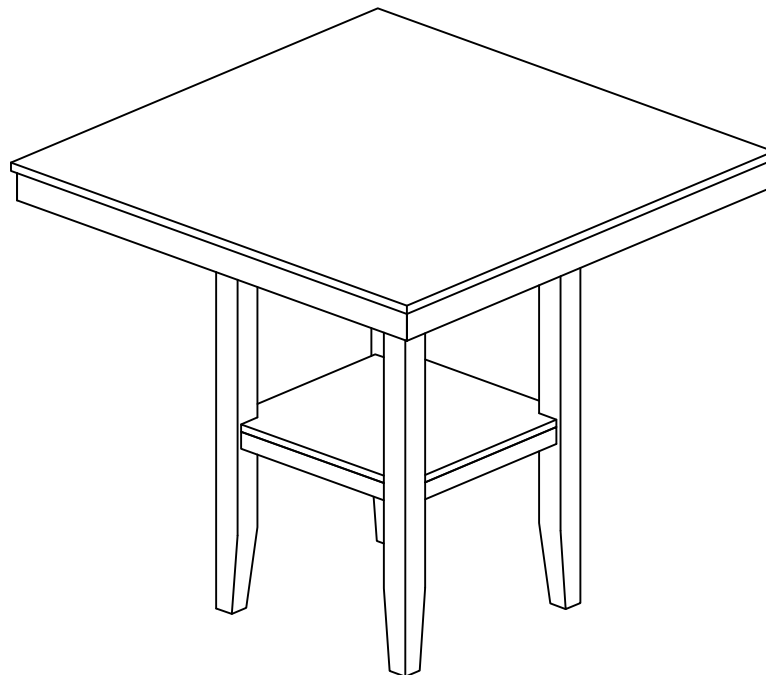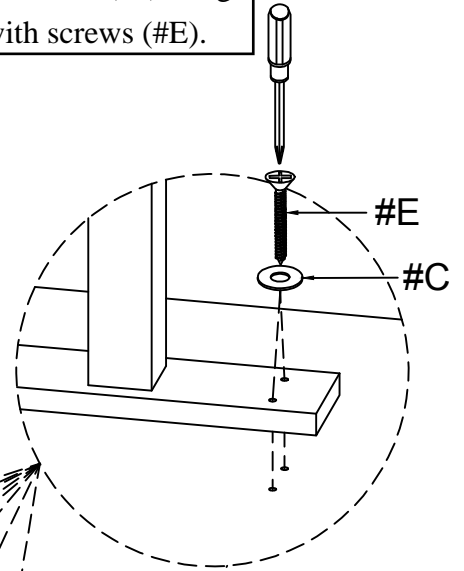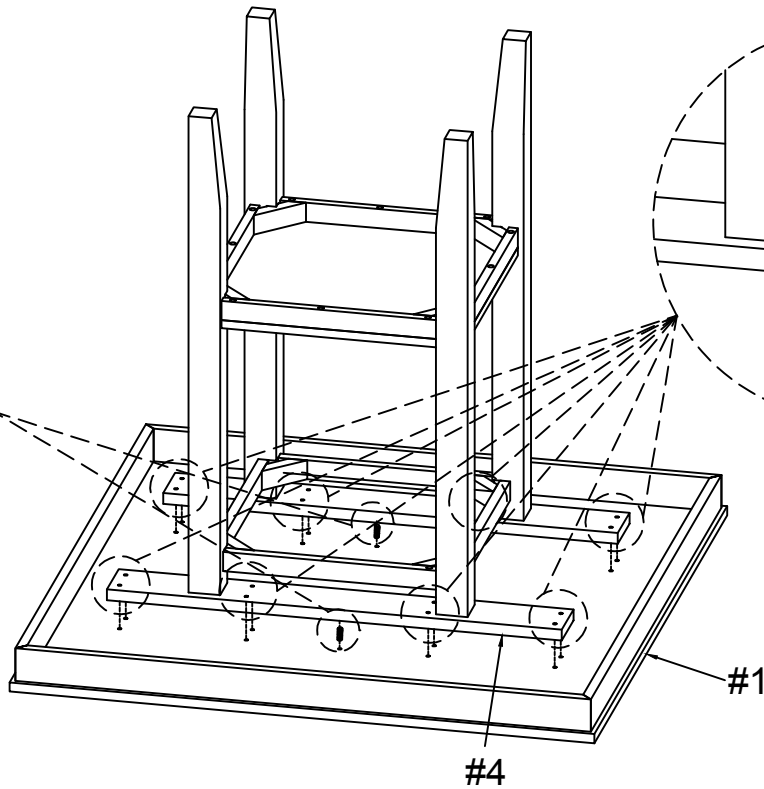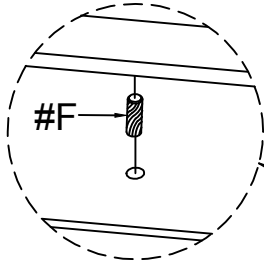    


ASSEMBLY IS COMPLETED

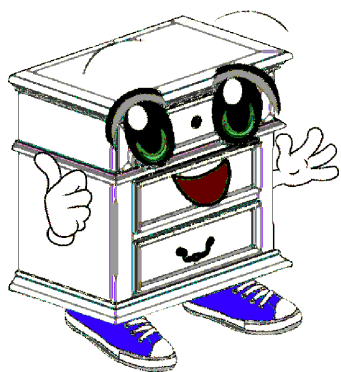 


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

 
Parts List




#1 x 1pc x 4
Chair Back

 


#2 x 1pc x 4
Cushion Seat

 


#3 x 1pc x 4
Leg (L&R)

 

#4 x 1pc x 4
Front Stretcher

 

#5 x 2pcs x 4
Stretcher (L&R)

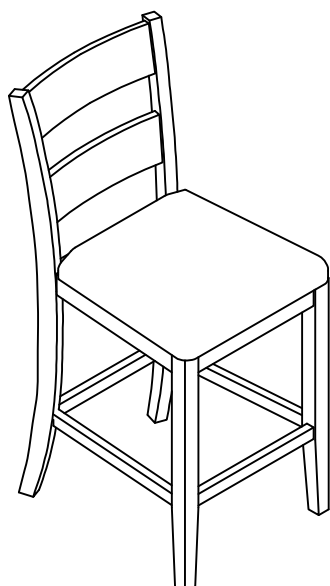 


x 4

Hardware List



#A x 4pcs x 4
Bolt Ø1/4" x 3-1/8"

 

#B x 2pcs x 4
Bolt Ø1/4" x 1-1/2"



 
#C x 10pcs x 4
Lock Washer Ø5/16"



#D x 10pcs x 4
Flat Washer Ø5/16"




#E x 4pcs x 4
Hex Nut Ø5/16"



#F x 6pcs x 4
Wood Screw #4 x1-1/2"



 
#G x 1pc
Open Wrench Ø5/16"




#Hx 1pc
Allen Key M4



 
#B x 2pcs
#C x 2pcs
#D x 2pcs

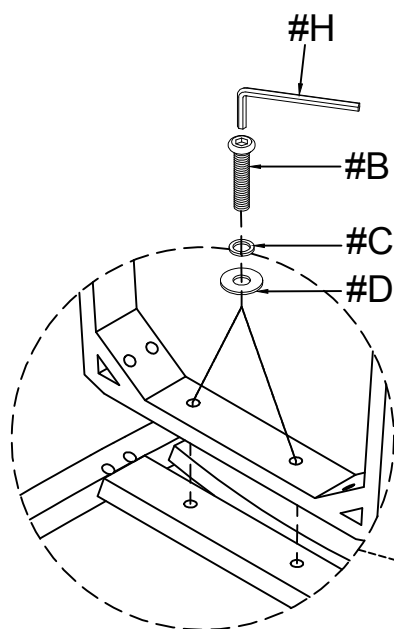

 
Prepare 2 bolts assembly by inserting lock washer (#C), then flat washer (#D) onto bolts (#B). Align chair seat (#2) to the holes of the chair back (#1). Secure the middle two holes with bolts (#B).

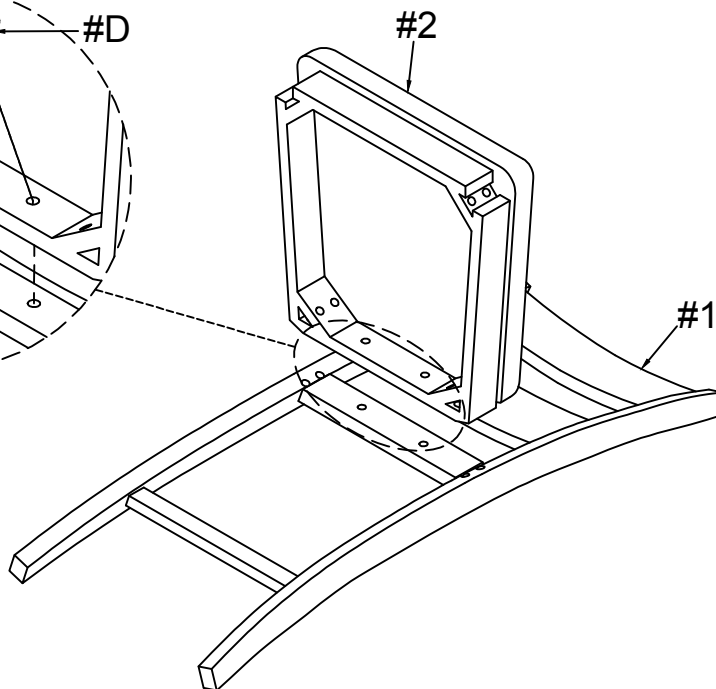

#A x 4pcs
#C x 4pcs
#D x 4pcs

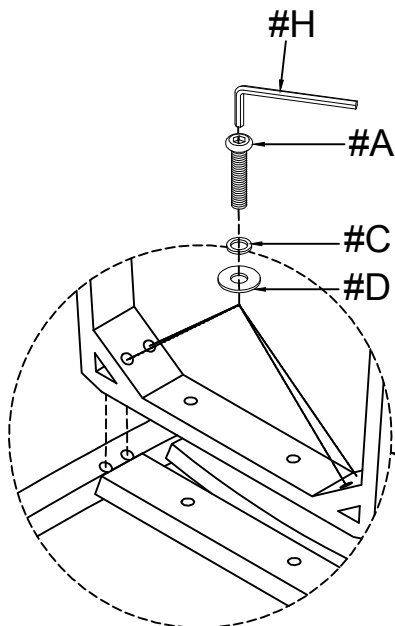 

 Prepare 4 bolts assembly by inserting lock washer (#C), then flat washer (#D) onto bolts (#A). Secure corner holes of chair seat (#2) with bolts (#A).

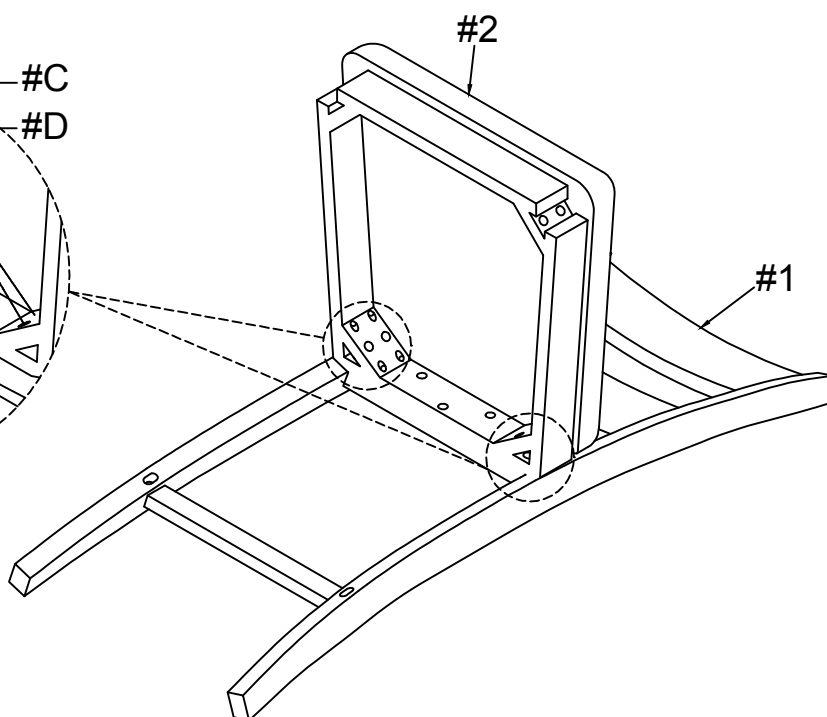




1) Align the front legs (#3L/R) to the holes of the chair seat (#2). Insert flat washer (#D), then lock washer (#C) onto threaded bolts of legs (#3L/R). Secure with hex nut (#E), but do not tighten.

2) Insert front stretcher (#4) and left/right stretchers (#5) to the legs as shown in the picture. Tighten hex nut (#E) of the front legs.

#C x 4pcs
#D x 4pcs
#E x 4pcs

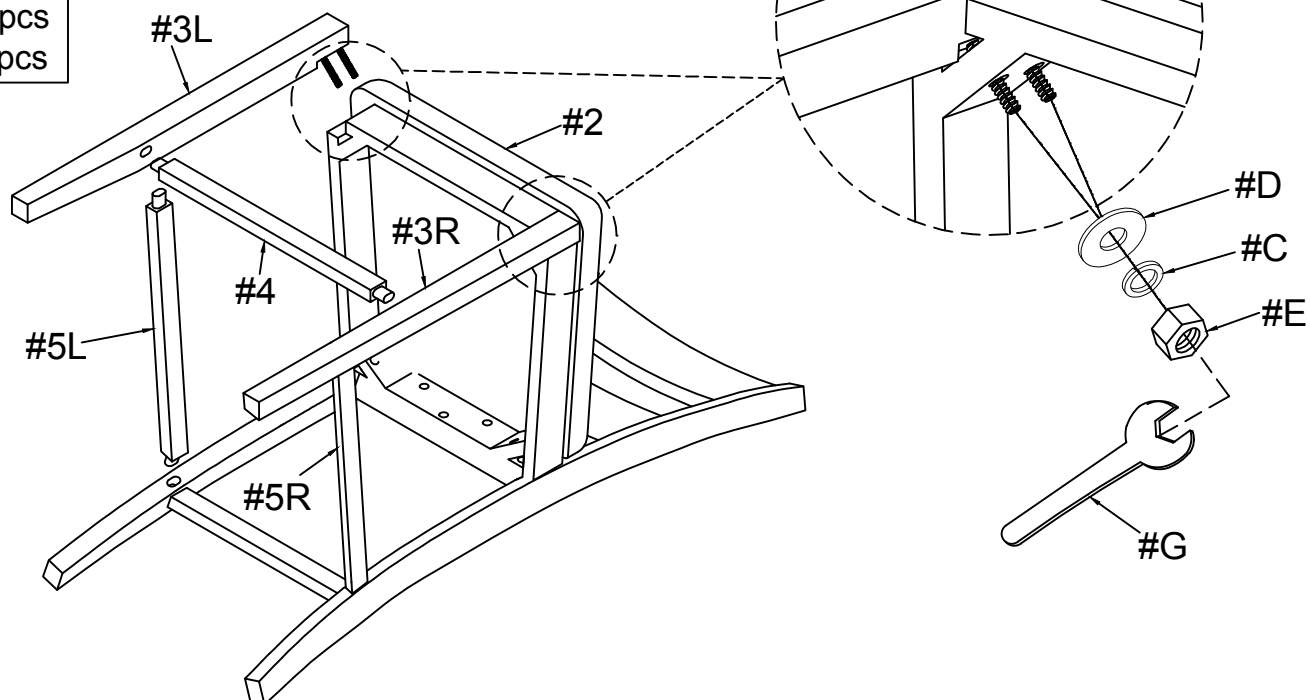 

Secure stretchers (#4,5) with screws (#F).

#F x 6pcs

