


Instruction Manual

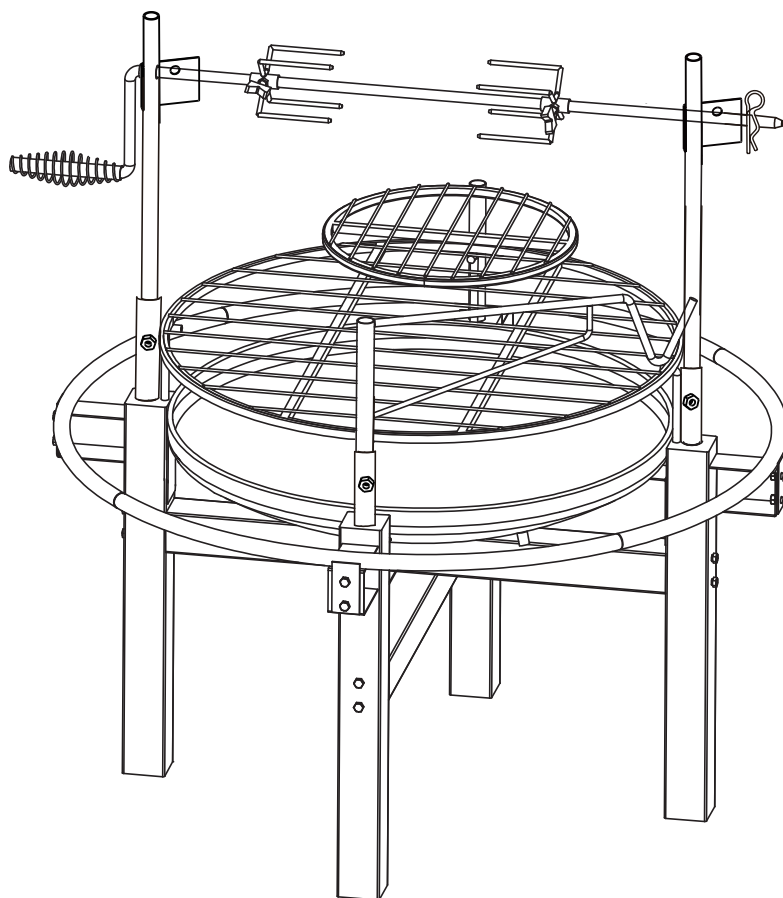

Care and safe use guidelines

SAFETY INFORMATION

WARNINGS:

- This appliance will become very hot in use, do not move it during operation.
- Always use heat resistant gloves when adding fuel or when using any safety tool (where supplied).
- Do not use this appliance in a confined and/or habitable space e.g. houses, tents, caravans, motor homes or boats. Danger of carbon monoxide poisoning fatality.
- Keep children and pets away.
- Do not use this appliance as a furnace.

 
FIRE HAZARD:

- This appliance must be installed on a secure level base before use.
- Do not use this appliance on wooden decking or any other flammable surfaces such as dry grass, wood chips, leaves or decorative bark, etc.
- Do not use this appliance on artificial grass or other surfaces that are not heat resistant.
- Hot embers may be emitted whilst in use.
- Ensure that this appliance is positioned at least 2 meters away from any flammable materials and has a minimum clearance of 2 metres from overhead and adjacent surroundings.

CARE & USE

- When lifting or moving this appliance, never drag it; seek assistance as necessary.
- As this appliance has components made from steel and/or cast iron, the surface will age and develop surface rust over time once it is exposed to natural weather elements. This is to be expected and does not constitute an appliance fault.
- For safety reasons, it is recommended to inspect this appliance before each use for signs of fatigue and damage.


Parts List:



A: 1PCS



 
B: 2PCS



C: 2PCS




D: 2PCS

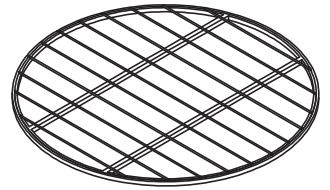


E: 1PCS



 F: 1PCS




G: 4PCS

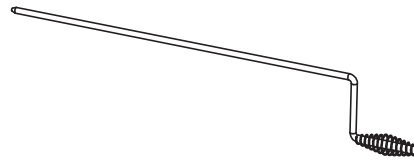


H: 1PCS



 I: 2PCS




J: 2PCS

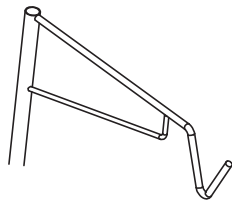

K: 1PCS



 AA: M6*45
8PCS



BB: M10*130
1PCS



CC: M10
1PCS



DD: M6*15
8PCS




FF: M6*15
4PCS




GG: 1pcs

Step 1: Attach the tube(D) x 2pcs using bolt BB x 1pc and nut CC x 1pc.

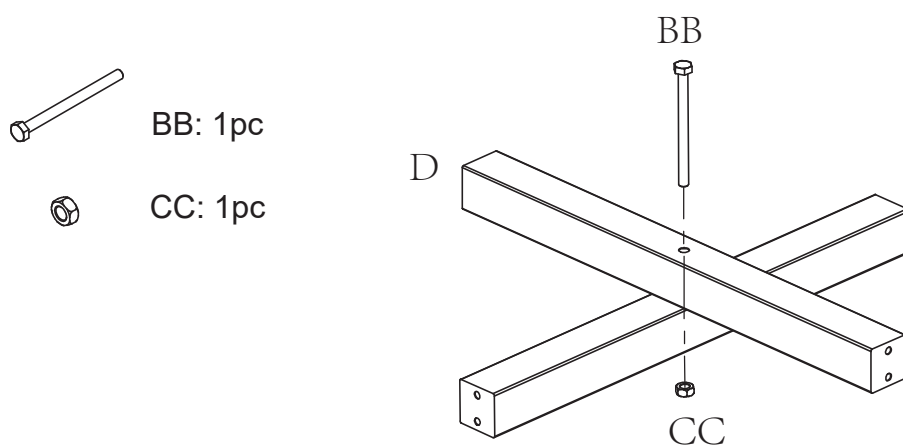


Step 2: Attach legs(B) x 2pcs and legs(C) x 2pcs to tube(D) using bolt AA x 8pcs.

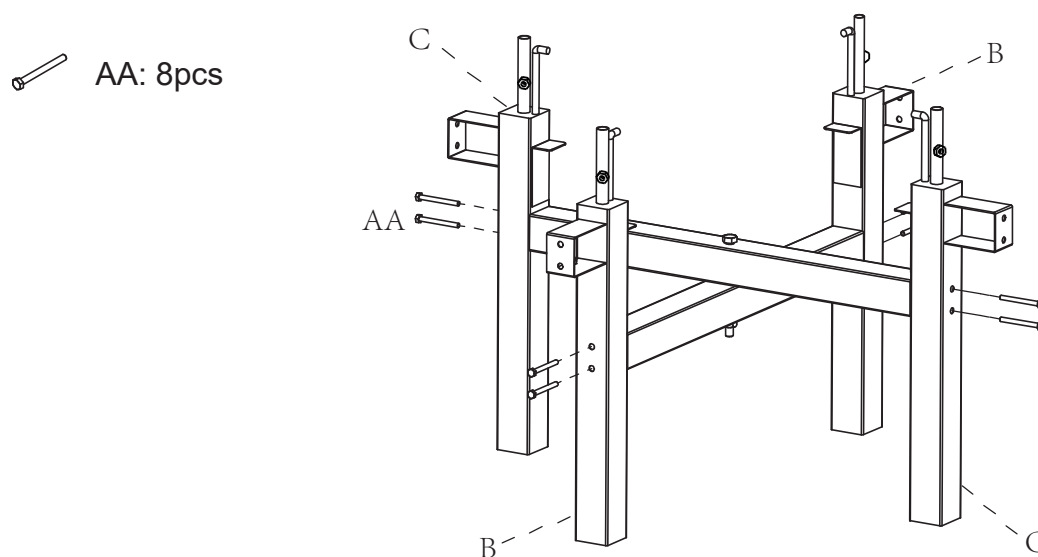

Step 3: Attach the ring(G)x 4pcs to legs(B,C) using bolts DD X 8pcs.


 DD: 8pcs

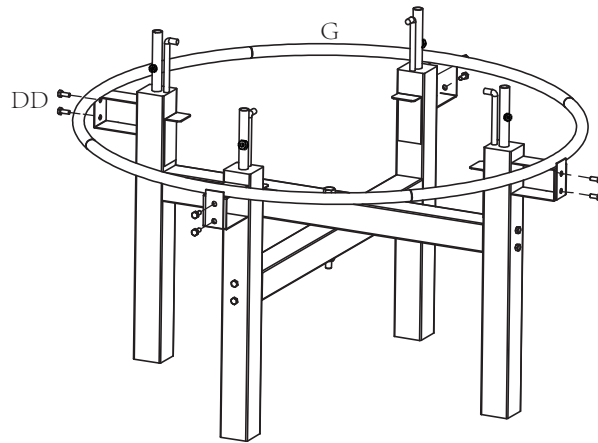

Step 4: Place the fire bowl(A) and cooking grid(E) on the legs.
Place the warming grid(F) and kettle shelf(K) to the suitable height, then tighten bolt FF.
Place rotisseries rack(J) to the suitable height, then tighten bolt FF.
Insert rotisserie kit into the rack and tighten pre-assembled bolt, then using GG to lock it to avoid sliding.

 FF: 4pcs

 GG: 1pc

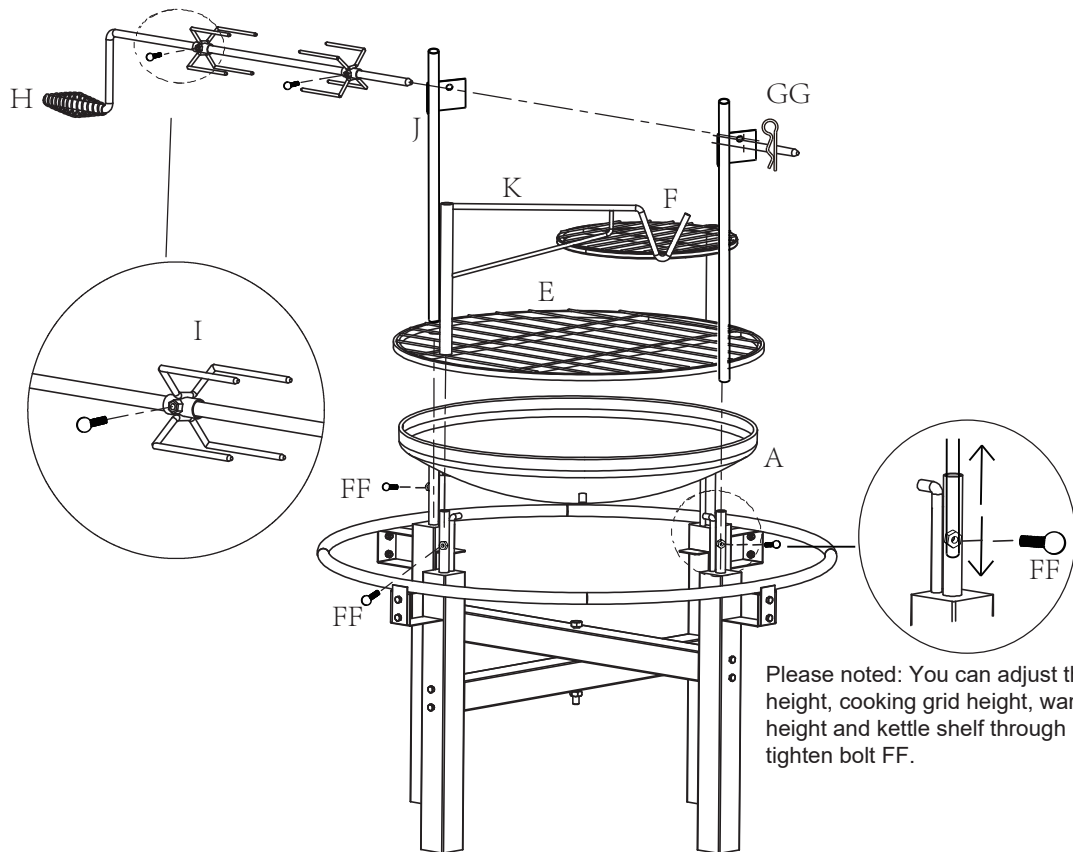

Please noted: You can adjust the rotisserie height, cooking grid height, warming grid height and kettle shelf through loss and tighten bolt FF.