

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance


- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.




- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in chair seat for hardware packs and legs.

ACCENT CHAIR

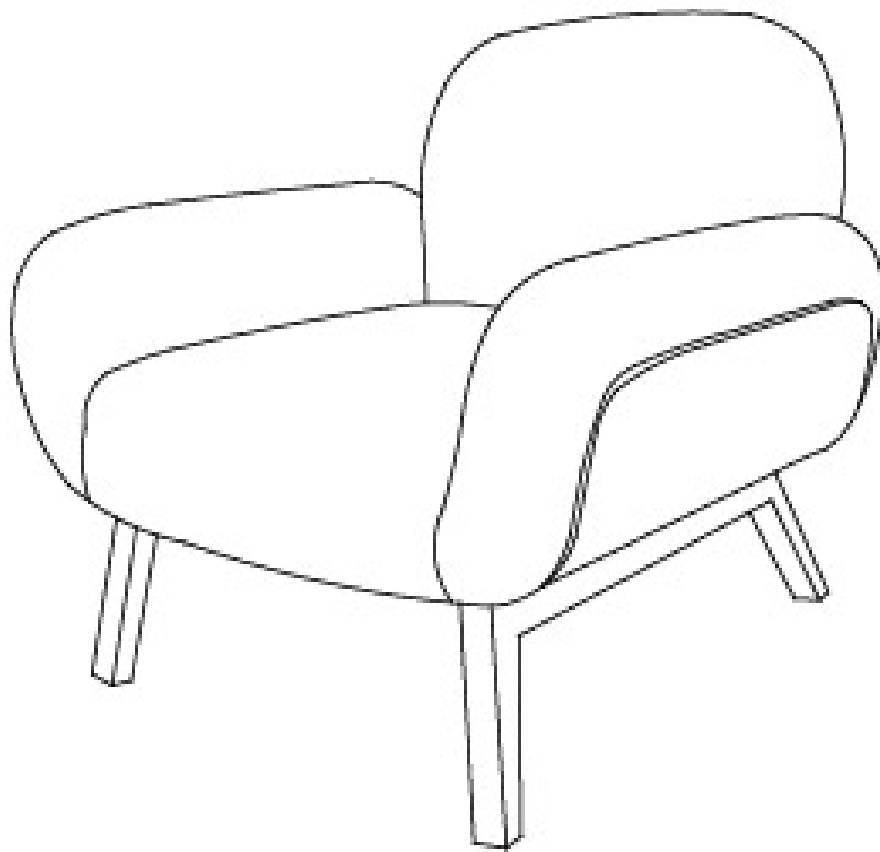

Parts List

 Label	Picture	Description	QTY
A		Chair Base	1
B		Chair Backrest	1
C		Right Leg	1
D		Left Leg	1

Hardware List

Label	Picture	Description	QTY
①		Bolt (M6*40mm)	5
②		Bolt (M6*20mm)	5
③		Washer (8*22mm)	10
④		Spring Washer	5
⑤		Allen Wrench	1

Assembly Preparation

 
Before
Beginning
Assembly:



A



B



D



C

①  X5

④  X5

②  X5

⑤  X1

③  X10



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

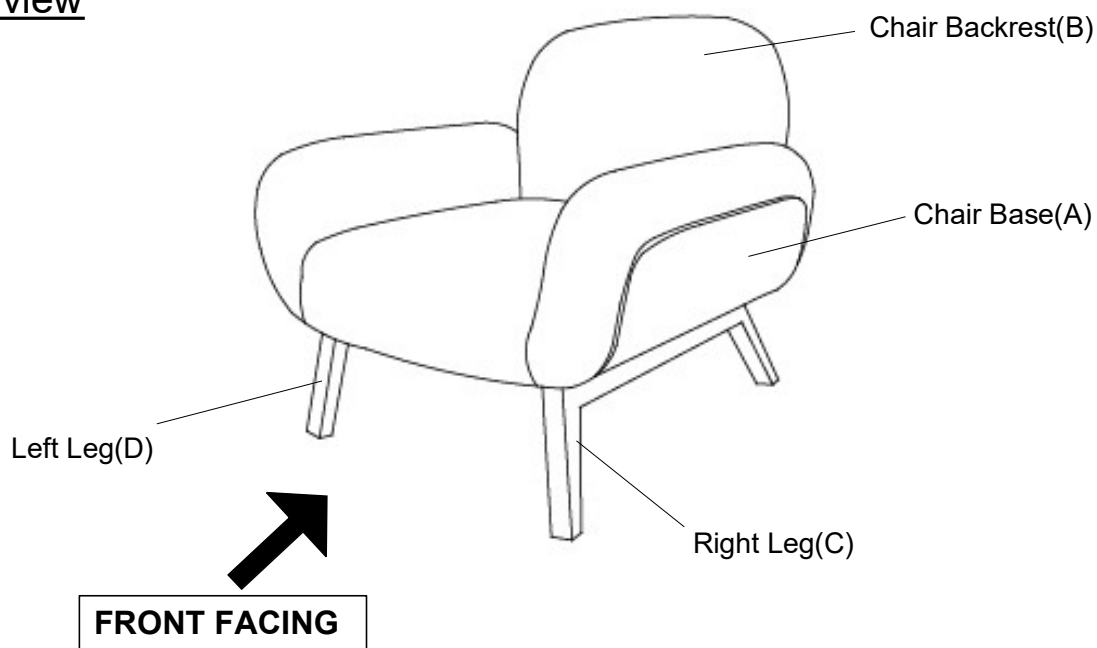


This ACCENT CHAIR has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

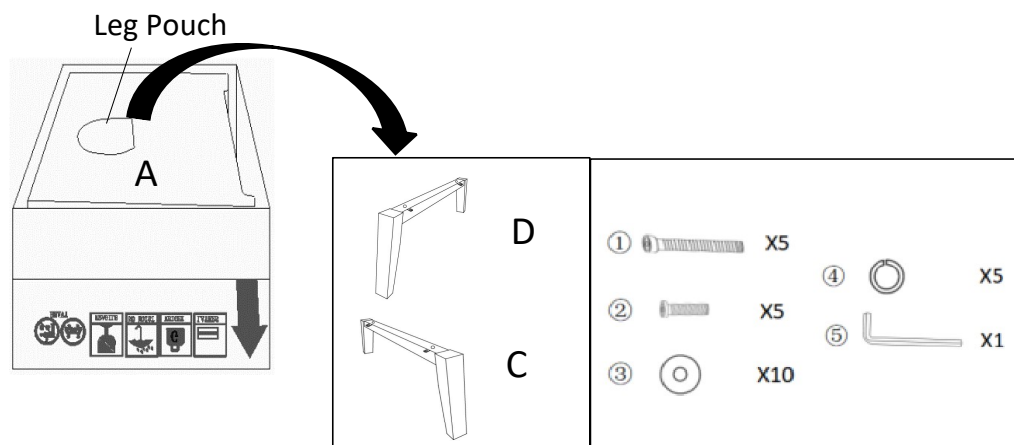

Take out the Legs(C&D) and Hardware Pack from the Leg Pouch.

Step 2

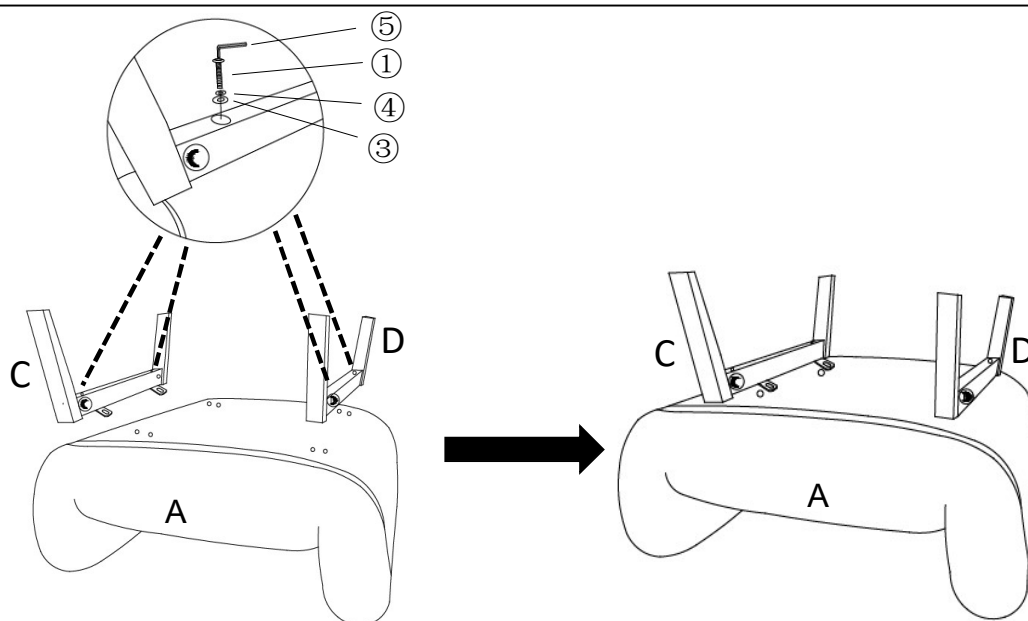


Invert the Chair Base(A) and place it on a clean ground.

Place the Legs(C&D) in the same position as shown in the picture, with the end labeled with "C"&"D" facing forward.


Attach the Legs(C&D) to the Chair Base(A) using 4 Bolts(1), 4 Spring Washers(4) and 4 Washers(3) with the Allen Wrench(5).

Step 3

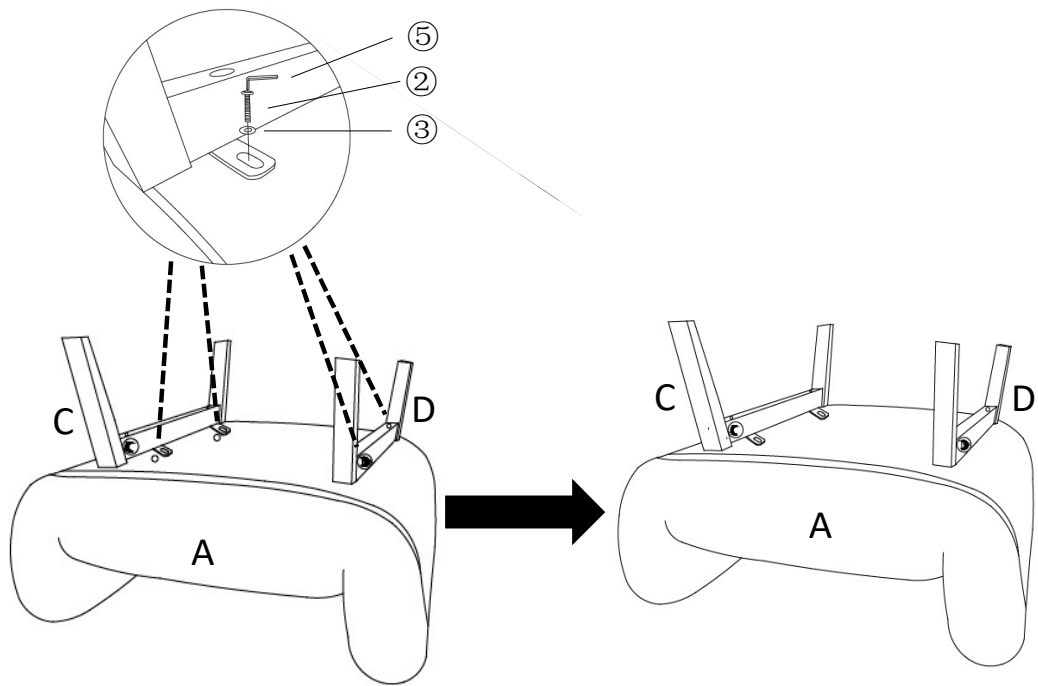

Use an Allen Wrench(⑤), 4 Bolts(②) and 4 Washers(③) to connect the iron plate on the edge of the Leg (C&D) to the Chair Base (A).

Step 4

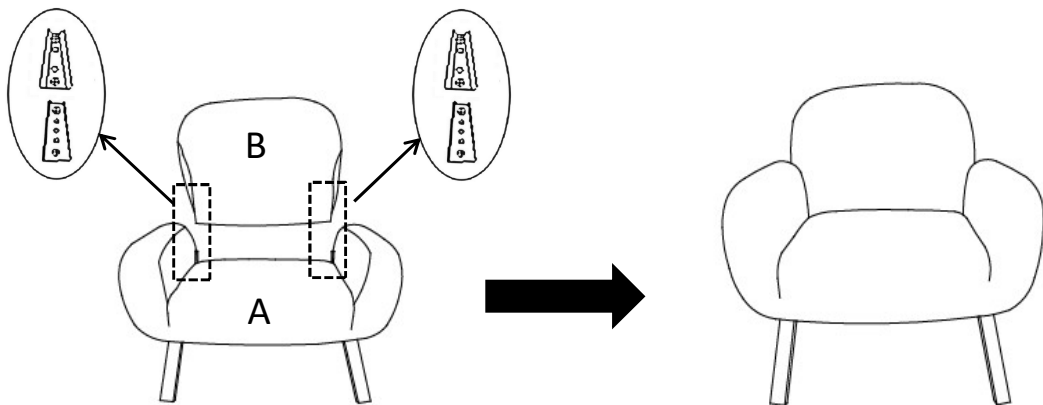


With assistance from your adult partner, hold up the Chair Backrest(B), while standing behind the Club Chair.

Align the Mounting Brackets on both sides of the Chair Backrest(B) with those on the Chair Base(A)

Then slide Chair Backrest(B) downward by hand to make sure it locks into place as pictured.

Step 5

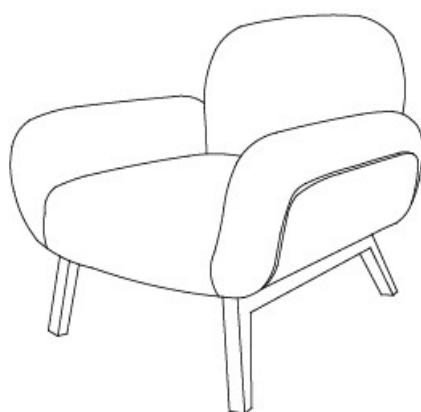

Now your Chair is ready for use.
This Chair can only be used on a flat, level surface.