




 



ASSEMBLY INSTRUCTIONS

DINING CHAIR

IMPORTANT NOTE :

- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- * DO NOT TIGHTEN ALL SCREWS UNTIL THE CHAIR IS FULLY SET-UP.

HARDWARE LIST		
A	JCBC M6 x 25mm + S/W M6 + F/W M6 x 13mm 	4PCS
B	JCBC M6 x 45mm + S/W M6 + F/W M6 x 13mm 	4PCS
C	ALLEN KEY M4 	1PC
D	L BRACKET 	4PCS
E	CSK SCREW M3.5 x 12mm 	8PCS
F	WOOD DOWEL M8 x 25mm 	2PCS
G	WOOD BUTTON Ø14.5 	4PCS

PART LIST		
1	RIGHT SIDE FRAME	1PC
2	LEFT SIDE FRAME	1PC
3	FRONT STRETCHER	1PC
4	BACK STRETCHER	1PC
5	TOP REST	1PC
6	CUSHION SEAT	1PC


CAUTIONS :

(1) **DO NOT FULLY-TIGHTEN THE NUT OR NUT BOLTS INITIALLY UNTIL ALL NUTS OR BOLT IS READY ASSEMBLED.**

(TO AVOID CAUSING DAMAGES TO THE THREAD, DO NOT **OVER-TIGHTEN** THE NUTS OR BOLTS.)


(2) **KEEP ALL HARDWARE PART OUT OF REACH OF CHILDREN.**

STEP 1

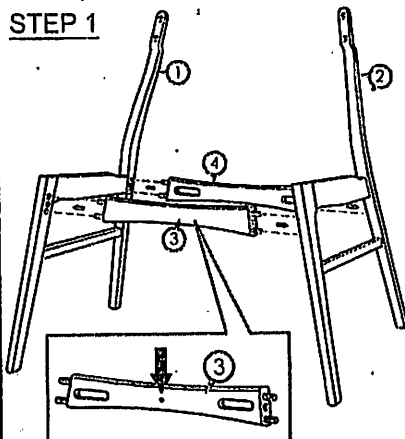


Front Stretcher has a small hole for identification.


STEP 2

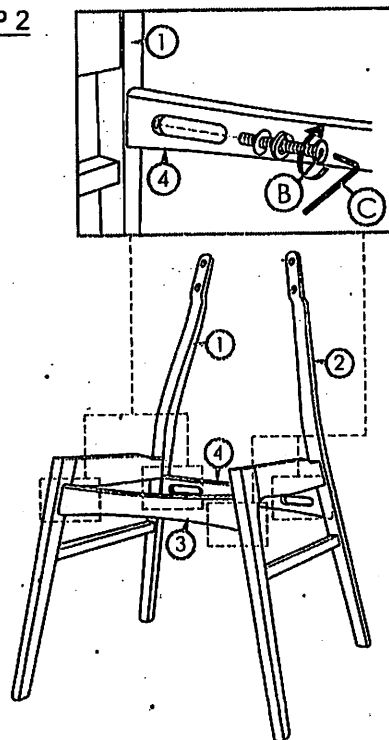


STEP 3

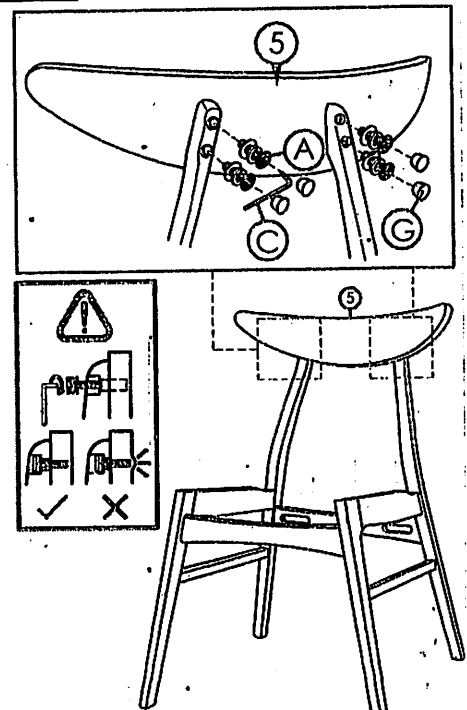

STEP 4

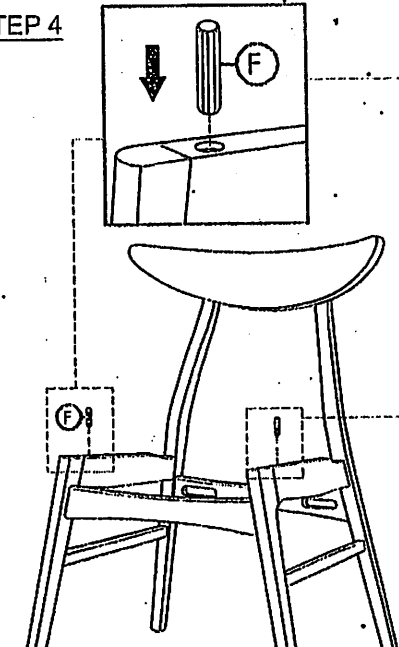

STEP 5

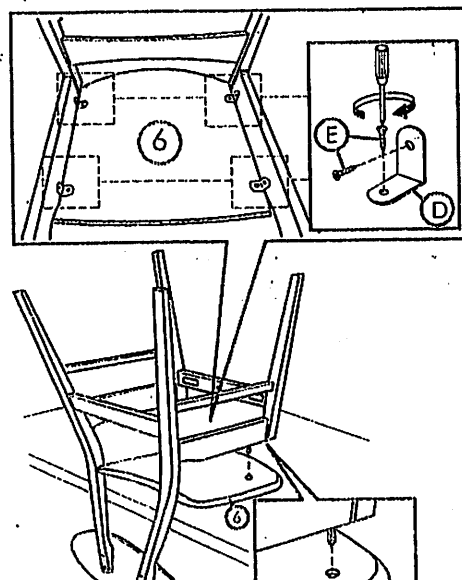

STEP 6

