




1

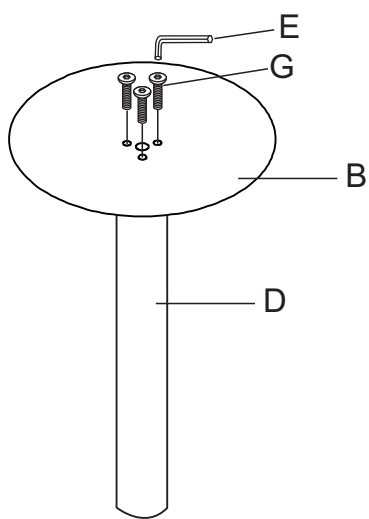


2

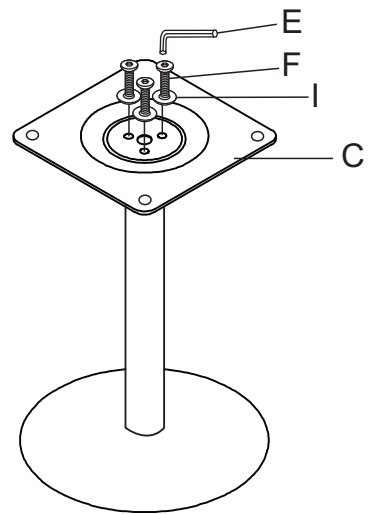

3

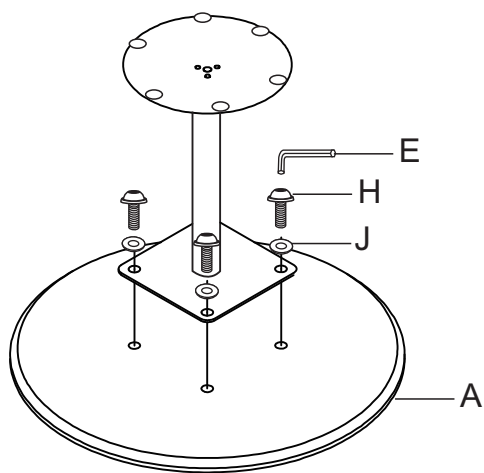

4

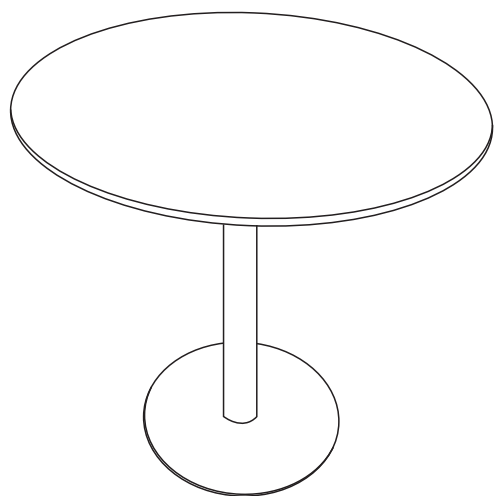

| | | | | |
|--------------------------|--------------------|--------------------|-----------------------|-----------------------|
| Ax1 | Bx1 | Cx1 | Dx1 | Ex1 |
| Fx3 M8x30mm | Gx3 M8x25mm | Hx4 M6x16mm | Ix3 8x18x1.5mm | Jx4 6x16x1.5mm |
| SPARE Ersatzteile | | | | |
| Fx1 M8x30mm | Gx1 M8x25mm | Hx1 M6x16mm | Ix1 8x18x1.5mm | Jx1 6x16x1.5mm |