ASSEMBLY INSTRUCTION BM160199

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



:

Warning!!


- 1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION (A) LEFT SIDE FRAME (G) LEFT SIDE PANEL 1 PCS 1 PC (B) RIGHT SIDE FRAME 1 PC (H) RIGHT SIDE PANEL 1 PC (C) BOTTOM PANEL 1 PC 1 PC (I) TOP BOARD (D) FRONT DECORATE BAR 1 PC (J) BACK PANEL 1 PC (E) LEFT FRONT BAFFLE 1 PC 1 PC (K) DRAWER (F) RIGHT FRONT BAFFLE (L) DRAWER FRONT PANEL 1 PC 1 PC


Z	HARDWARE PACKAGE		
NO	DESCRIPTION	FIGURE	Q'TY
1	CAM BOLT L=29mm		12 pcs
2	CAM LOCK ∅15mm		12 pcs
3	SHORT WOODEN DOWEL Ø8×25mm		6pcs
4	LARGE WOOD SCREW \$\infty\$4x50mm	WILLIAM)	2pcs
5	SMALL WOOD SCREW Ø4x25mm	<0.000(#)	4pcs
6	FULL-THREAD ROD Ø8x70mm	0	4pcs
7	CONNECTING PIECE	@	4pcs
8	OPEN END WRENCH M13	8	1pc
9	NAIL	()	14pcs
10	LARGE WOODEN DOWEL \$6 \times 30mm		2pcs
11	ANTI-TIP HARDWARE		1 pc
12	MEDIUM WOOD SCREW ∅5×40mm	(S)mmmmmp>	1 pc
13	PLASTIC WALL ANCHOR Ø8×40mm		1 pc
14	GLUE 10g		1 pc

:

①10 drop 14 and insert D, screw 6 into A, B. ② Align A,B with C,D; put 7 into C and screw down with 8.

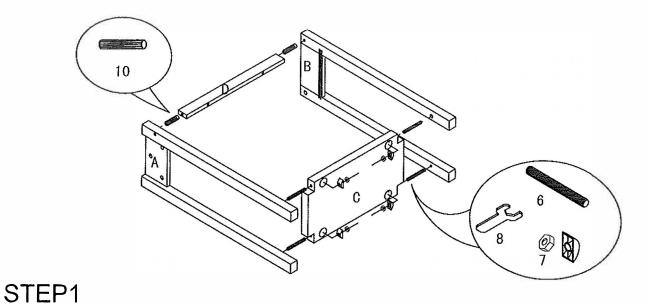



STEP2

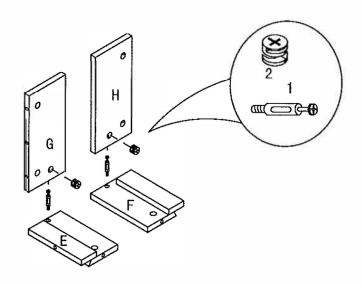

①Screw 1 into E, F.

② Align E,F with G,H; put 2 into G and screw down.

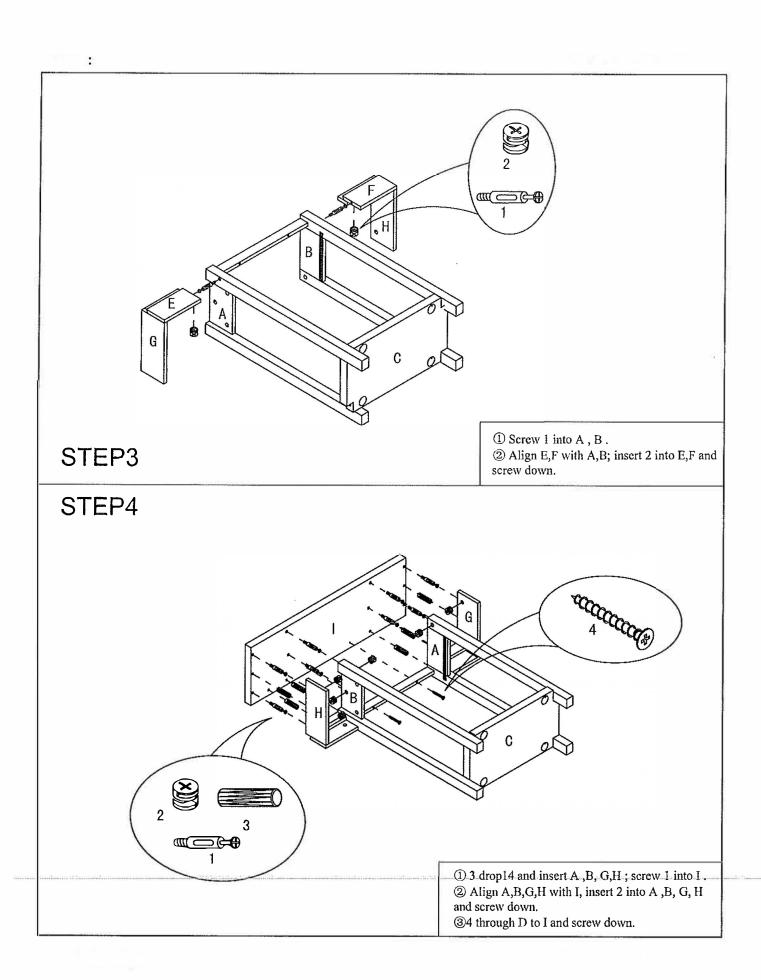

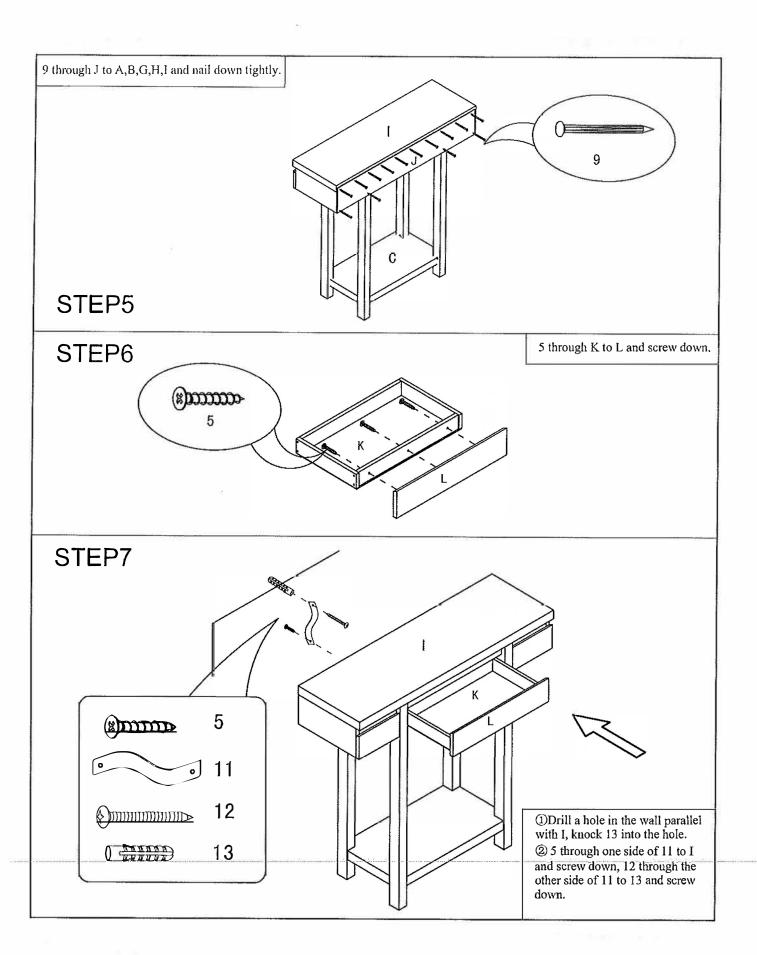

page 6 of 6